




User Manual

Direct cool Refrigerator

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)

1. Parts identification.	01
पाटर्स की पहचान	
2. Technical and commercial product information	02
तकनीकी और व्यावसायिक प्रॉडक्ट विवरण	
3. Installation	03-04
इंस्टॉलेशन	
4. Operation	05-09
कार्य पद्धति	
5. Cleaning.....	10
सफाई	
6. Useful suggestions for storage and operation.	11
रखने और कार्य पद्धति से जुड़े उपयोगी सुझाव	
7. Before calling for service and Frequently asked questions	12
सर्विस के लिए कॉल करने से पहले और अक्सर पूछे जाने वाले प्रश्न	
8. Safety precautions	13-14
सुरक्षा संबंधी सावधानियाँ	
10. Warranty	15
वॉरंटी	


Parts Identification / पार्ट्स की पहचान

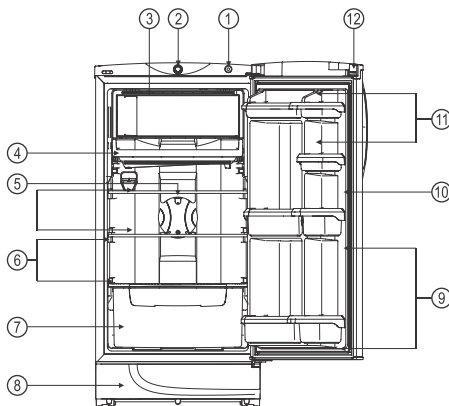

1. Light Switch
2. Thermostat (Temperature control) and Defrost Button
3. Ice Making Compartment*
4. Easy Slide Shelf
5. Lamp
6. Adjustable Shelves
7. Vegetable Tray
8. Dry Storage
9. Bottle Shelves
10. Step Utility Shelves
11. Utility Shelves
12. Door Lock

Applicable for Edge, Edge SX and Edge Pro models.

Image shown is representative only. Some parts are specific to certain models. Hence, there could be some parts which are not in your refrigerator.

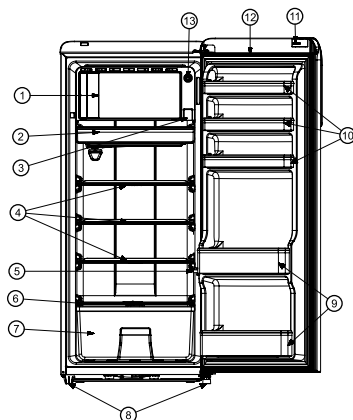


1. Ice Making Compartment
2. Easy Slide Shelf
3. Light Bulb
4. Toughened Glass Shelves
5. Light Switch
6. Vegetable Tray cover
7. Vegetable Tray
8. Levelling Leg*
9. Bottle Shelves
10. Utility Shelves
11. Door Lock
12. Door Gasket
13. Thermostat (Temperature control) and Defrost Button

Applicable for Edge Neo, Edge Rio, Edge Rio+, Edge Jazz, Edge Marvel models and Edge Impress.

*Features may vary by models

Technical And Commercial Product Information

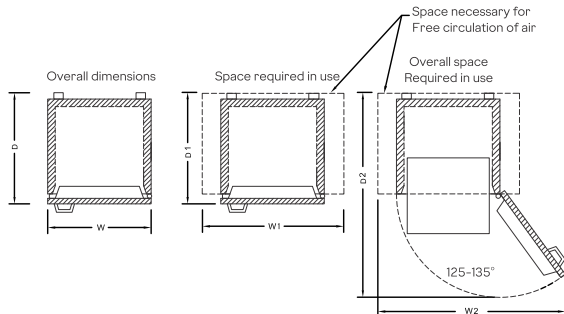

Platform	Total Volume (L)*	Product Dimension (mm)**					Space Required in Use (mm)**			Overall Space Required in Use (mm)**	
		Height (H)		Width (W)	Depth (D)		Depth (D1)		Width (W1)	Depth (D2)	Width (W2)
		W/o Drawer	With Drawer		W/o Handle	With Handle	W/o Handle	With Handle			
Edge pro	185	1250	1250	577	640	667	640	667	877	1144	1095
	205	1340	1340	577	640	667	640	667	877	1144	1095
	234	1480	1480	577	640	667	640	667	877	1144	1095
Jazz	180	1190	-	580	607	-	607	-	880	1119	1103
Neo	180	1190	1300	575	627	660	627	660	872	1145	1130
Rio	180	1190	1310	575	625	640	625	640	875	1138	1110
Rio plus	180/183	1260	1260	575	626	660	626	660	875	1145	1120
Marvel	184	1190	1310	575	625	640	625	640	875	1138	1110
	194	1245	1353	575	-	664	-	664	875	1154	1110
	207	1312	1420	575	-	664	-	664	875	1154	1110
	238	1442	1553	575	-	680	-	680	875	1170	1110
	268	1585	-	575	-	680	-	680	875	1170	1110
Edge	175	1176	1176	574	622	645	622	645	874	1140	1020
	180	1176	1176	574	622	645	622	645	874	1140	1020
	186	1256	1256	574	622	645	622	650	874	1140	1170
	206	1360	1360	574	622	645	622	650	874	1140	1170
	233	1500	1500	574	622	645	622	650	874	1140	1170
Champ	97	850	-	487	568	-	568	-	787	1002	972
Impress	194	1252	1360	575	-	664	-	664	875	1154	1110
	207	1319	1427	575	-	664	-	664	875	1154	1110

Due to continuous improvements happening in products the specification mentioned in above table may change without prior notice.

* Height will be same in Space Required in use and Overall Space required in use.

Installation

1. Select the right location

- Avoid extreme heat and cold. Place your refrigerator away from direct sunlight and heat sources such as cooking stove and air drafts like windows and fans. Keep away from the gas cylinder.
- Place your refrigerator close to an electric outlet. Do not use extension cord.
- For safety purposes, remove all packaging related material like thermocol, polythene etc. before installation.
- Refrigerators should operate in rated climate class (T) for better performance (+16°C to +43°C).
- If the refrigerator operates outside the climate class (ambient temperature range) for which it is rated then it may not be able to maintain satisfactory internal temperatures.

2. While installing

- Provide at least 6 inches space on both sides to ensure adequate air circulation.
- Install the refrigerator on a flat and firm surface.
- If the floor is not level, use packing to keep your refrigerator stable.
- In models with levelling legs, rotate the front two legs to level the refrigerator. For safety purposes, adjust the front side a little higher than the back side.
- In case of model with levelling leg, keep legs such that it supports auto closure of door.

3. Connect

- Your refrigerator operates on AC 230 V, 50 Hz power supply. A voltage stabiliser is advisable if there is a wide fluctuation in supply voltage. Connect the plug to a 3 pin, 5 amps socket. **Ensure the wall socket is properly earthed by a qualified electrician.** It is safe to use a socket with a fuse and a switch.
- Wires should be kept off the floor to prevent short circuits in case of water leakage.
- Switch on the power supply. Set the temperature at maximum setting and let the machine run for about 4 hours. Then turn the knob to adjust your desired setting.
- Please switch off the refrigerator to stop its operation. Remove the plug

4. Recycle

- After installing, recycle/reuse the corrugated box fitments and polythene cover/straps to help the environment.

इंस्टॉलेशन

1. सही जगह चुनें

- बहुत ज्यादा गर्मी और ठंड से दूर रखें। अपने रेफ्रिजरेटर को खुली धूप और कुकिंग स्टोव जैसे गर्मी के स्रोतों और खिड़कियों, पंखों जैसे हवा के स्रोतों से दूर रखें। गैस सिलिंडर से दूर रखें।
- अपने रेफ्रिजरेटर को इलेक्ट्रिक आउटलेट के पास रखें। एक्सटेंशन कॉर्ड का इस्तेमाल न करें।
- सुरक्षा के लिए, थर्मोकॉल, पॉलीथीन जैसी सभी पैकेजिंग संबंधी सामग्रियों को इंस्टॉलेशन से पहले हटा दें।
- रेफ्रिजरेटर को बेहतर परफॉर्मेंस के लिए रेटेड क्लायमेट श्रेणी (T) में चलाया जाना चाहिए। (+16°C +43°C)
- यदि रेफ्रिजरेटर उस जलवायु वर्ग (परिवेश तापमान सीमा) के बाहर काम करता है जिसके लिए उसे रेट किया गया है, तो यह संतोषजनक आंतरिक तापमान बनाए रखने में सक्षम नहीं हो सकता है।

2. इंस्टॉल करते समय:

- हवा का पर्याप्त बहाव बनाए रखने के लिए दोनों तरफ कम से कम 6 इंच की जगह रखें।
- रेफ्रिजरेटर को एक समतल और कठोर सतह पर इंस्टॉल करें
- अगर फर्श समतल नहीं है, तो रेफ्रिजरेटर को स्थिर रखने के लिए पैकेजिंग का इस्तेमाल करें।
- लेबेलिंग लेस वाले मॉडल्स में, रेफ्रिजरेटर को समतल करने के लिए आगे के दो लेस को घुमाएं।
- सुरक्षा के उद्देश्य से, आगे के हिस्से को पीछे से थोड़ा सा ऊपर रखें।
- लेबलिंग लेग वाला मॉडल होने पर लेस को इस तरह रखें, कि यह यह रेफ्रिजरेटर की अपने-आप बंद होने में सहायता करे।
- लेबलिंग लेग वाले मॉडल के मामले में, पैरों को इस प्रकार रखें कि यह दरवाजे को स्वतः बंद करने में सहायक हो।

3. जोड़ें:

- आपका रेफ्रिजरेटर AC 230 V, 50 Hz पावर सप्लाय पर काम करता है। अगर सप्लाय वोल्टेज में बहुत ज्यादा उतार-चढ़ाव होता है, तो एक वोल्टेज स्टेबिलाइजर का इस्तेमाल करना चाहिए। प्लग को एक 3 पिन, 5 एम्पेस सर्किट में लगाएं। **सुनिश्चित करें कि दीवार का सर्किट एक सुशिक्षित इलेक्ट्रिशियन द्वारा सही तरीके से अर्थ किया गया है।**
- तारों को फर्श से दूर रखा जाना चाहिए, ताकि पानी का रिसाव होने पर शॉर्ट सर्किट न हो।
- पावर सप्लाय को ऑन करें। तापमान के सप्लाय को अधिकतम सेटिंग पर रखें और मशीन को लगभग 4 घंटे तक चलने दें। इसके बाद नॉब को अपनी मनचाही सेटिंग पर एडजस्ट करें।
- कृपया रेफ्रिजरेटर का काम चैकने के लिए उसका मेन रिवच ऑफ कर और प्लग निकाल दें।


4. रीसाइकल (पुनर्चक्रण) करें:

- इंस्टॉल करने के बाद, पर्यावरण की सहायता के लिए कोरगेटेड बॉक्स फिटमेंट्स और पॉलीथीन कवर/पट्टियों को रीसाइकल (पुनर्चक्रित) करें या उनका दुबारा इस्तेमाल करें।

Operations


1. Temperature Setting

- Set the temperature control knob towards maximum/coldest during peak summer hours or more food load. Set it to minimum during winters or less food load.
- Temperature is affected by several factors like refrigerator location, room temperature, door openings, humidity etc. So, adjust temperature accounting to these factors.
- Do not set the temperature colder than required as it will increase energy consumption.
- Do not open the door frequently. Ensure the door is closed properly after every use to avoid cooling loss and other safety hazards.
- To achieve the optimal ICE formation in Ice tray, place the tray at Freezer/Evaporator floor ensuring direct contact.



2. Defrosting

- Regular defrosting helps remove excess frost and in proper cooling. It reduces running time and therefore power consumption.
- Remove all stored items from the ice making compartment before you defrost.
- To defrost, press the button on the temperature control knob. The frost will melt and drip into the evaporation tray, from where it will eventually evaporate.
- After defrosting is finished, the refrigerator will restart automatically.
- Defrosting should be done after every 3 days. Hot and humid conditions will lead to faster frost formation, needing frequent defrosting. Frost should not exceed 6mm. Delay in frosting would lead to water spilling in the refrigerator. Do not use sharp objects to remove ice from the ice making compartment. Avoid opening the door during defrosting.





कार्य पद्धति

1. तापमान की सेटिंग



- बहुत ज्यादा गर्मी के दिनों में या ज्यादा लोड के दिनों में तापमान के कंट्रोल नॉब को अधिकतम/सबसे ठंडे स्तर पर रखें। सर्दियों या कम लोड के दिनों में इसे न्यूनतम पर रखें।
- तापमान कई घंटों से प्रभावित होता है, जैसे रेफ्रिजरेटर की जाह, कमरे का तापमान, दरवाज़ा का खुलना, ह्यूमिडिटी (आर्द्रता) इत्यादि। इसलिए इन चीज़ों को ध्यान में रखते हुए तापमान को एड्जस्ट करें।
- तापमान को जरूरत से ज्यादा ठंडा न रखें। इससे बिजली की खपत बढ़ जाएगी।
- बार-बार दरवाज़े को न खोलें। कूलिंग के मुकामन और अन्य सुखा संबंधी खतरों से बचने के लिए हर बार इस्तेमाल के बाद सुनिश्चित करें कि दरवाज़ा अच्छी तरह बंद है।
- आइस ट्रे में इक्कम बर्फ निर्माण प्राप्त करने के लिए, ट्रे को फ्रीजर के पर्शों पर रखें और फ्रीजर पर्शों के साथ सीधा संर्कष सुनिश्चित करें।

2. डीफ्रॉस्टिंग

- नियमित डीफ्रॉस्टिंग अतिरिक्त फ्रॉस्ट को निकालने में मदद करती है और उचित कूलिंग देती है। यह चलाने का समय कम करती है, जिससे बिजली की बचत होती है।
- डीफ्रॉस्ट करने से पहले सभी चीज़ों को आइस मैकिंग कंपार्टमेंट से हटा लें।
- डीफ्रॉस्ट करने के लिए, टेम्प्रेचर कंट्रोल नॉब पर दिया गया बटन दबाएं। फ्रॉस्ट पिघल कर एवैपोरेशन ट्रे में चली जाएगी, जहाँ से यह अंत में इवैपोरेट यात्रि कि वाष्पीकृत हो जाएगी।
- डीफ्रॉस्टिंग पूरी हो जाने के बाद, रेफ्रिजरेटर अपने आप चालू हो जाएगा।
- डीफ्रॉस्टिंग हर तीन दिन बाद की जानी चाहिए। गर्म और नम तापमान में फ्रॉस्ट ज्यादा जल्दी जमती है, जिसके लिए ज्यादा बार डीफ्रॉस्टिंग करनी पड़ती है। फ्रॉस्ट 6mm से ज्यादा नहीं जमनी चाहिए। फ्रॉस्टिंग में किसी भी तरह की देरी होने पर रेफ्रिजरेटर से पानी छलकने लगेगा। आइस मैकिंग कंपार्टमेंट से बर्फ निकालने के लिए मुकीली चीज़ों का इस्तेमाल न करें। डीफ्रॉस्टिंग के दौरान दरवाज़े को न खोलें।



How to Use Controls:

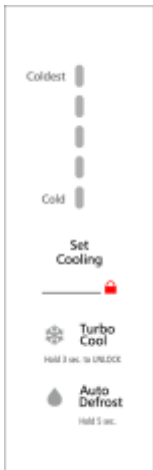

Unlock Control Panel :

- Your Refrigerator control panel will be in Locked condition.
- Icon will glow Red.
- In order to Unlock Control Panel, Touch & Hold "Turbo Cool" for 3 Sec.

Set Cooling:

- Use this key to adjust the cooling levels from Cold to Coldest
- The currently selected level will be indicated by a glowing light
- Each press of the button will incrementally increase the cooling level, giving you precise control over the temperature.
- After selecting your desired level, wait for 3 seconds to confirm and store the setting.

Turbo Cool:

- This feature rapidly cools the ice making compartment, ideal for quickly chilling food or making ice .
- To activate Turbo cool touch and hold ' ' until ' ' LED turns ON and Cooling levels will advance from cold to coldest till Control panel is ON.
- To deactivate turbo cool touch and hold ' ' until ' ' turns OFF.
- Note: We recommend using Turbo Cool mode for fast cooling or Pull down purposes to get best results.

- Caution : Note that activating Turbo Cool mode while in Defrost mode will interrupt the defrosting process and may lead to ice built up in ice making compartment, affecting performance.



Defrost :

- Defrost technology defrosts the Ice making compartment and prevents excess ice formation.
- This Refrigerator provide you option to select "Auto Defrost" or "Manual Defrost" mode.
- Default Factory setting will be "Manual Defrost" mode. In this mode, you can Defrost the refrigerator by touching "Turbo Cool" & "Auto Defrost" together for 3 sec. In "Manual Defrost" mode it is recommended to defrost refrigerator every third day or whenever you see excess ice in Ice making compartment for better cooling performance.
- Caution: During Manual defrosting mode, The " " LED will blink a till defrosting process is completed or Defrosting is terminated manually. Post defrost " " LED will stop blinking and it will go OFF.
- To toggle between "Auto Defrost" & "Manual Defrost" mode, Touch "Auto Defrost" for 5 Sec.
- If you select "Auto Defrost" Mode, The refrigerator will automatically Defrost Ice making compartment at regular interval. Continuous glow of " " LED indicates "Auto Defrost" mode is ON.



* AUTO DEFROST icon blinking indicates refrigerator defrosting in progress.

Operations / Controls

- (In Auto Defrost mode, you may observe icicles inside and below ice making compartment. After defrost, wipe off condensed water with dry cloth from inside and bottom of ice making compartment to prevent formation of icicles.)
- Note: In Auto Defrost Mode, The "❖" LED will blink till defrosting process is completed or Defrosting is terminated manually. Post defrost, The "❖" LED will start glowing continuously. If you want to deactivate defrosting, press and hold ' Turbo Cool ' & "Auto Defrost" for 3sec until turns "❖" OFF. During defrosting, The Set cooling display and cooling levels turns OFF and you can not adjust the temperatures.
- Caution : Be aware that activating Defrost while in Turbo Cool mode will override Turbo Cool and cause the temperature inside to rise temporarily. override Turbo Cool and cause the temperature inside to rise temporarily.

RECOMMENDED COOLING SETTING



Cooling Level Setting Recommendation :

- The image indicates season wise cooling level setting to achieve best results
- + If UI display is not in use, it will automatically get locked after 7 sec and 🔒 turns ON (Red).
- Note: While opening the door by user, if palm touches the UI, lock icon will blink twice.

Overflow Of Water From Evaporation Pan:

- Clean the water evaporation area periodically. You can unplug the pan to clean it properly.
- Ensure proper replugging as the defrosted water might leak on the floor if not done properly.




Door Alarm:

- Door alarm will be activated if the door is kept open for more than 2 minutes.

कार्य पद्धति/नियंत्रण :(Operations/Controls)

नियंत्रण का उपयोग कैसे करें:

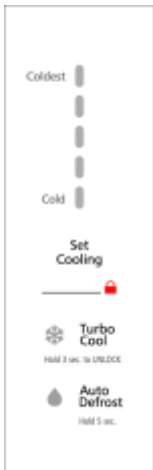

नियंत्रण पैनल अनलॉक करें:



Set Cooling



नियंत्रण पैनल अनलॉक करें:

• आपका रेफ्रिजरेटर नियंत्रण पैनल लॉक स्थिति में होगा।

• आइकन लाल चमकेगा।

• नियंत्रण पैनल अनलॉक करने के लिए, 'टर्बो कूल' को 3 सेकंड के लिए स्पर्श करें और दबाए रखें।

कूलिंग सेट करें:

• इस कुंजी का उपयोग करके शीतलन स्तर को ठंडे से सबसे ठंडे तक समायोजित करें

• वर्तमान में चयनित स्तर को एक चमकती हुई रोशनी द्वारा दर्शाया जाएगा

• बटन को हर बार दबाने पर शीतलन स्तर धीरे-धीरे बढ़ेगा, जिससे आपको तापमान पर सटीक नियंत्रण मिलेगा।

• अपना वांछित स्तर चुनने के बाद, सेटिंग की पुष्टि और भंडारण के लिए 3 सेकंड तक प्रतीक्षा करें।

टर्बो कूल:

• यह सुविधा बर्फ बनाने वाले डिब्बे को तेजी से ठंड करती है, जो भोजन को जल्दी से ठंड करने या बर्फ बनाने के लिए आदर्श है।

• टर्बो कूल को सक्रिय करने के लिए 'Turbo Cool' को तब तक दबाकर रखें जब तक *❄️* एलईडी चालू न हो जाए और कूलिंग का स्तर ठंड से सबसे ठंडे स्तर तक बढ़ता रहेगा जब तक कि नियंत्रण पैनल चालू न हो जाए।

• टर्बो कूल को निष्क्रिय करने के लिए 'Turbo Cool' को तब तक दबाकर रखें जब तक *❄️* बंद न हो जाए।

• टिप्पणी: हम तेजी से ठंड करने के लिए टर्बो कूल मोड या सर्वोत्तम परिणाम प्राप्त करने के लिए फुल उजन मोड का उपयोग करने की सलाह देते हैं।

• सावधानी: ध्यान दें कि डिफ्रॉस्ट मोड में टर्बो कूल मोड को सक्रिय करने से डिफ्रॉस्टिंग प्रक्रिया बाधित हो सकती है और बर्फ बनाने वाले डिब्बे में बर्फ जम सकती है, जिससे प्रदर्शन प्रभावित हो सकता है।

डिफ्रॉस्ट:

• डिफ्रॉस्ट तकनीक बर्फ बनाने वाले डिब्बे को डिफ्रॉस्ट कर देती है और अतिरिक्त बर्फ बनने से रोकती है।

• यह रेफ्रिजरेटर आपको ऑटो डिफ्रॉस्ट या मैनुअल डिफ्रॉस्ट मोड चुनने का विकल्प प्रदान करता है।

• डिफ्रॉस्ट फॉरवर्ड सेटिंग - मैनुअल डिफ्रॉस्ट - मोड होगी। इस मोड में, आप 'टर्बो कूल' और 'ऑटो डिफ्रॉस्ट' को एक साथ 3 सेकंड के लिए दबाकर रेफ्रिजरेटर को डिफ्रॉस्ट कर सकते हैं। • मैनुअल डिफ्रॉस्ट - मोड में, बेहतर कूलिंग के लिए हर तीसरे दिन या जब भी आपको आइस मेकिंग कम्पार्टमेंट में अतिरिक्त बर्फ दिखाई दे, रेफ्रिजरेटर को डिफ्रॉस्ट करने की सलाह दी जाती है।


• सावधानी: मैनुअल डिफ्रॉस्टिंग मोड के दौरान, *❄️* एलईडी तब तक चमकती रहेगी जब तक डिफ्रॉस्टिंग प्रक्रिया पूरी नहीं हो जाती या डिफ्रॉस्टिंग मैनुअल रूप से समाप्त नहीं हो जाती। डिफ्रॉस्ट होने के बाद *❄️* एलईडी चमकना बंद कर देगी और बंद हो जाएगी।

• 'ऑटो डिफ्रॉस्ट' और 'मैनुअल डिफ्रॉस्ट' मोड के बीच टॉगल करने के लिए, 5 सेकंड के लिए 'ऑटो डिफ्रॉस्ट' को स्पर्श करें।

• यदि आप 'ऑटो डिफ्रॉस्ट' मोड चुनते हैं, तो रेफ्रिजरेटर नियमित अंतराल पर बर्फ बनाने वाले कम्पार्टमेंट को स्वचालित रूप से डिफ्रॉस्ट कर देगा। *❄️* एलईडी का लगातार जलना यह दर्शाता है कि 'ऑटो डिफ्रॉस्ट' मोड चालू है।

• ('ऑटो डिफ्रॉस्ट मोड में, आप बर्फ बनाने वाले कम्पार्टमेंट के अंदर और नीचे बर्फ के टुकड़े देख सकते हैं। डिफ्रॉस्ट के बाद, बर्फ के टुकड़े बनने से रोकने के लिए बर्फ बनाने वाले कम्पार्टमेंट के अंदर और नीचे से सूखे कपड़े से संचयित पानी को पोछ दें।)

• नोट: ऑटो डिफ्रॉस्ट मोड में, *❄️* एलईडी तब तक चमकती रहेगी जब तक डिफ्रॉस्टिंग प्रक्रिया पूरी नहीं हो जाती या डिफ्रॉस्टिंग मैनुअल रूप से बंद नहीं हो जाती। डिफ्रॉस्ट होने के बाद, *❄️* एलईडी लगातार चमकने लगेगी। यदि आप डिफ्रॉस्टिंग को निष्क्रिय करना चाहते हैं, तो 'टर्बो कूल' और 'ऑटो डिफ्रॉस्ट' को 3 सेकंड तक दबाकर रखें जब तक कि *❄️* बंद न हो जाए। डिफ्रॉस्टिंग के दौरान, सेट कूलिंग डिस्टेंस और कूलिंग लेवल बंद हो जाते हैं और आप तापमान को समायोजित नहीं कर सकते।

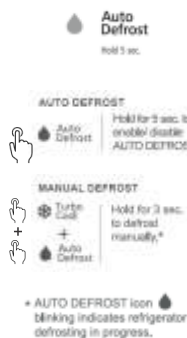

कार्य पद्धति/नियंत्रण : (Operations/Controls)

- सावधानी: ध्यान रखें कि टर्बो कूल मोड में डीफ्रॉस्ट को सक्रिय करने से टर्बो कूल ओवरराइड हो जाएगा और अंदर का तापमान अस्थायी रूप से बढ़ जाएगा।



शीतलन स्तर सेटिंग अनुशंसा:

- छवि सर्वोत्तम परिणाम प्राप्त करने के लिए मौसम के अनुसार शीतलन स्तर सेटिंग को दर्शाती हैं + यदि U। डिस्पले उपयोग में नहीं है, तो यह 7 सेकंड के बाद स्वचालित रूप से लॉक हो जाएगा और चालू हो जाएगा (लाल)।
- नोट: उपयोगकर्ता द्वारा दरवाजा खोलते समय, यदि हथेली U। को फ्लूटी है, तो लॉक आइकन दो बार झपकेगा।

इवोपोरेशन पानी से पानी का अतिप्रवाह:

- पानी के इवोपोरेशन वाले क्षेत्र को समय-समय पर साफ करते रहें। आप पैन को अच्छी तरह से साफ करने के लिए उसका प्लग निकाल सकते हैं।
- सुनिश्चित करें कि प्लग को सही तरीके से दोबारा लगाया जाए क्योंकि अगर ठीक से नहीं लगाया गया तो पिघला हुआ पानी फर्श पर रिस सकता है।



दरवाजा अलार्म:

- यदि दरवाजा 2 मिनट से अधिक समय तक खुला रखा जाए तो दरवाजा अलार्म सक्रिय हो जाएगा।

Cleaning

- Use a mild soap solution and wipe gently to clean both interior and exterior. Dry with clean cloth and leave the door open to dry. Clean oil stains and any spilled liquid immediately to avoid any damage to the refrigerator.
- Do not let water go into the light bulb and other electrical components. Never use any chemicals or abrasives for cleaning.
- Cockroaches and insects can only go in through the door. So, close it properly after every use.
- Keep the exterior dry to avoid rusting, especially the lower front edge and the bottom surfaces of the door.
- Periodic cleaning of your refrigerator, especially gaskets, will prevent it from getting loose and having to replace the same.
- Keeping the gasket unclean may negatively affect your refrigerator's performance. Always ensure that the gasket is installed properly after cleaning.
- Spillage of liquids (fruit juices/cold-drinks/sweet syrups/lassi) or solid sweet food substances on the refrigerator's external/internal surfaces or the gasket may make the surfaces or gasket sticky during usage. Customers are advised to immediately clean up with normal water and then wipe it with a dry cloth
- It is advisable to clean your refrigerator once a month.
- **Following actions to be taken when the refrigerating appliance is switched off and taken out of service temporarily or for an extended period (examples, emptied, cleaned, and dried and the door(s) or lid(s) propped ajar);**
 - **Remove all food items.**
 - **Switch off and unplug the refrigerator.**
 - **Remove all accessories of refrigerator.**
 - **Clean and wipe dry the refrigerator.**

सफाई

- एक सौम्य साबुन के घोल का इस्तेमाल करें और इंदीरियर तथा एक्सटीरियर दोनों को हल्के हाथों से पोंछ कर साफ करें। साफ कपड़े से पोंछ कर सूखने के लिए दरवाज़े को खुला छोड़ दें। तेल और किसी भी छल्ले हुए लिक्विड के दागों को साफ कर लें, ताकि रेफ्रिजरेटर को कोई नुकसान न पहुंचे।
- लाइट बल्ब या और अन्य बिजली के हिस्सों के भीतर पानी न जाने दें। सफाई के लिए कभी भी किटरी केमिकल या अम्लिय (घिसावट पैदा करने वाले पदार्थ) का इस्तेमाल न करें।
- कॉक्रोचेज़ (तिलचट्टे) और कीड़े सिर्फ दरवाज़े से ही भीतर जा सकते हैं। इसलिए हर बार इस्तेमाल करने के बाद उसे अच्छी तरह बंद करें।
- जंग से बचने के लिए एक्सटीरियर को सूखा रखें। खास तौर पर सामने के निचले किनारों और दरवाज़े के निचले हिस्सों का ध्यान रखें।
- रेफ्रिजरेटर, और खास तौर पर गार्सेट्स की समय-समय पर सफाई उसे ढीला नहीं होने देगी और उसे बदलने की जरूरत नहीं पड़ेगी।
- गार्सेट को याद रखना परफॉर्मेंस पर नकारात्मक प्रभाव डाल सकता है। और सफाई के बाद सुनिश्चित करें कि गार्सेट सही तरीके से लगा हुआ है।
- रेफ्रिजरेटर की भीतरी/बाहरी सतह पर पेय पदार्थ (फलों का रस/कोल्ड ड्रिंक्स/मीठे रस/लस्सी) या ठोस मीठे खाद्य पदार्थों के छल्ले करने से गार्सेट इस्तेमाल के दौरान चिपचिपा हो सकता है। ग्राहकों को सलाह दी जाती है कि वे तुरंत इसे सादे पानी से साफ करें और फिर सूखे कपड़े से पोंछ दें।
- आपके रेफ्रिजरेटर को महीने में एक बार साफ करना अच्छा होता है
 - सभी खाद्य पदार्थ हटा दें.
 - रेफ्रिजरेटर का स्विच बंद करें और उसका प्लग निकाल दें।
 - रेफ्रिजरेटर के सभी सामान हटा दें।
 - रेफ्रिजरेटर को साफ करें और पोंछकर सुखा लें।

Useful Suggestions For Storage And Operation

- All food should be fresh before refrigeration, as food can be preserved, not rejuvenated.
- Frozen foods are not safe for freezing if they are thawed before storing in the fridge.
- It is better to freeze meat in bigger pieces. Avoid mincing the meat in advance.
- All frozen foods should either be packed in containers or wrapped in polythene bags or aluminum foil.
- Bread, cake and pastries should be properly wrapped in containers.
- Butter, margarine and other fats can be stored in their original wrappings and in covered containers if in use.
- Loosely wrap all vegetables, especially leafy vegetables in polythene bags.
- Fruits and vegetables with strong odour should be wrapped tightly.
- Certain vegetables like fresh beans and lady fingers should not be washed before storing. If fruits and vegetables are washed, drain all the water before storing as it increases the possibility of spoilage and decay.
- Mushrooms, melons and peaches can only be chilled and not preserved.
- Hot food/Boiled milk should be cooled down to room temperature before storing.
- Ginger, garlic and red-chillies paste can stay in the ice making compartment and chutneys in the main fridge compartment
- Ice creams should always be stored in the ice making compartment with max cooling settings. It may still stay slightly soft as the retailers store ice creams in deep freezers.
- Bottles containing water and other liquids should be tightly capped. Should not be stored in the ice making compartment section.
- Unopened canned food need not be stored in the refrigerator.

स्टोरेज और इस्तेमाल के लिए उपयोगी सुझाव

- सभी खाद्य पदार्थ रेफ्रिजरेशन से पहले ताज़े होने चाहिए। खाद्य पदार्थों को खराब होने से बचाया जा सकता है, लेकिन खराब चीज़ों को फिर से ठीक नहीं किया जा सकता।
- फ्रोजन फूड्स जमाने के लिए सुरक्षित नहीं होते, अगर उन्हें फ्रिज में रखने से पहले पिघलाया गया हो।
- मांस को बड़े टुकड़ों में फ्रिज करना बेहतर होता है। पहले से मांस का कीमा न बनाएं।
- सभी फ्रोजन फूड्स को या तो डब्बों में पैक किया जाना चाहिए या पॉलीथीन बैग्स या अल्युमिनियम फॉइल में लपेटा जाना चाहिए।
- ब्रेड, केक और पेस्ट्री को डब्बों में अच्छी तरह बंद किया जाना चाहिए।
- मक्खन, मार्गरीन और अन्य फैट्स (वसाओं) को उनकी वास्तविक रैपिंग्स में रखें और इस्तेमाल में होने पर बंद डब्बों में रखें।
- सभी सब्जियों को, खास तौर पर पतियों वाली सब्जियों को पॉलीथीन बैग्स में ढीला बांध दें।
- तेज़ गंध वाले फलों और सब्जियों को अच्छी तरह लपेटा जाना चाहिए।
- ताज़ी बीन्स और मिंडी जैसी कुछ सब्जियों को रखने से पहले धोना नहीं चाहिए। अगर फलों और सब्जियों को धोया गया है, तो रखने से पहले पानी को निकाल लें, क्योंकि इससे उनके खराब होने और सड़ने की संभावना बढ़ जाती है।
- मशरूम, तरबूज-खरबूज और आड़ को सिर्फ ठंडा किया जा सकता है, सुरक्षित नहीं रखा जा सकता।
- गर्म चीज़ों/उबले हुए दूध को रखने से पहले ठंडा करके कमरे के तापमान पर लाया जाना चाहिए।
- अदरक, लहसुन और लाल मिर्च के पेस्ट को आइस मैकिंग कम्पार्टमेंट में और चटनी को मेन फ्रिज कम्पार्टमेंट में रखा जा सकता है।
- आइस क्रीम को आइस मैकिंग कम्पार्टमेंट में अधिकतम कूलिंग सेटिंग्स पर रखना चाहिये। इसके बाद भी उनके थोड़े नर्म रहने की संभावना होती है, क्योंकि रीटेलर्स आइस क्रीम को डीप फ्रीज़र में रखते हैं।
- पानी और अन्य लिक्विड्स वाली बोतलों पर कस कर ढक्कन लगाया जाना चाहिए। इन्हें आइस मैकिंग कम्पार्टमेंट सेक्शन में नहीं रखा जाना चाहिए।
- नहीं खोले गए कैन्ड फूड (डिब्बाबंद खाद्य पदार्थ) को रेफ्रिजरेटर में रखने की आवश्यकता नहीं होती।

Before Calling For Service

If your refrigerator is not working properly, check the following before you call for service assistance:

1. Power plug is connected properly.
2. Fuse is intact and power supply is normal.
3. Temperature control knob is set correctly.
4. Defrosting has been done to eliminate excess frost.
5. Refrigerator is not crowded with little space between food items, blocking the air circulation inside.

To replace the lamp: Switch off the refrigerator. Disconnect the plug. Gently remove the bulb cover. Turn the lamp anti-clockwise to remove it. Replace it with the new 15W normal bulb/1.5W LED bulb and fit the lamp cover back.

Note: You may find water droplets on opening the door. This is normal condensation and not a defect.

सर्विस के लिए कॉल करने से पहले

अगर आपका रेफ्रिजरेटर सही तरीके से काम नहीं कर रहा है, तो सर्विस संबंधी सहायता के लिए कॉल करने से पहले निम्नलिखित की जाँच करें।

1. पावर प्लग सही तरीके से लगा हुआ है
 2. फ्यूज़ सही है और पावर सप्लाय सामान्य है
 3. टेम्परेचर कंट्रोल नॉब को सही तरीके से सेट किया गया है
 4. अत्यधिक फ्रॉस्ट निकालने के लिए डीफ्रॉस्टिंग की गयी है
 5. रेफ्रिजरेटर में खाने की चीजों को बहुत ज़्यादा ढ़ूस कर नहीं रखा गया है, जिससे भीतर की हवा बाधित हो रही हो।
- लैम्प बदलने के लिए:** रेफ्रिजरेटर को बंद करें। प्लग को निकाल लें। धीरे से बल्ब कवर को निकालें। लैम्प को निकालने के लिए उसे घड़ी की विपरीत दिशा में घुमाएं। इसकी जगह 15 W का सामान्य बल्ब/1.5 W LED बल्ब लगा दें और लैम्प कवर फिर से फिट कर दें।

ध्यान दें: आपको दरवाज़ा खोलने पर पानी की बूँदें दिखाई दे सकती हैं। यह सामान्य कंडेंसेशन (द्रवण) है, और कोई खराबी नहीं है।

Frequently Asked Questions

- Q. How often should I defrost my refrigerator?
- Ans. It is good to defrost the refrigerator every 3 days to avoid water spillage and ensure optimal cooling performance. You may need to do it more often depending on your temperature settings. It is a must to do at least once a week.
- Q. Is it ok to run my refrigerator on inverter or generator?
- Ans. You can use a generator if needed depending on its capacity, but inverters are not advisable.
- Q. How often should I clean my refrigerator?
- Ans. You should clean the refrigerator once a month as per instructions given in this guide.
- Q. Why is there moisture in the vegetable tray?
- Ans. As water in the vegetables evaporates, the vapours condense against the cold refrigerator tray surface resulting in water droplets.

अक्सर पूछे जाने वाले प्रश्न

- प्र. मुझे अपने रेफ्रिजरेटर को कितनी बार डीफ्रॉस्ट करना चाहिए?
- उ. पानी छटकने से बचने और कूलिंग का अच्छा प्रदर्शन सुनिश्चित करने के लिए रेफ्रिजरेटर को हर 3 दिन में डीफ्रॉस्ट करना अच्छा होता है। आपकी तापमान की रेटिंग के आधार पर आपको इसकी बारंबारता बढ़ानी पड़ सकती है। कम से कम साप्ताह में एक बार यह करना ज़रूरी है।
- प्र. क्या मेरे रेफ्रिजरेटर को इनवर्टर या जेनरेटर से चलाया जा सकता है?
- उ. क्षमता के आधार पर आप जेनरेटर का इस्तेमाल कर सकते हैं, लेकिन इनवर्टर के इस्तेमाल का सुझाव नहीं दिया जाता।
- प्र. मुझे मेरा रेफ्रिजरेटर कितनी बार साफ करना चाहिए?
- उ. आपको इस मार्गदर्शिका में दिए गए निर्देशों के अनुसार रेफ्रिजरेटर को साफ करना चाहिए।
- प्र. वेजीटेबल ट्रे में नमी क्यों है?
- उ. सब्जियों में से पानी वाष्पीकृत होने के कारण रेफ्रिजरेटर के ट्रे की ठंडी सतहों पर भाप जमने लगती है जिससे पानी की बूँदें बनती हैं।

Safety Precautions

When using the refrigerator, always exercise these basic safety precautions to avoid injury and property damage:

- Locate, install and use the refrigerator properly in accordance with the instructions given in this user's guide.
- Never unplug your refrigerator by pulling on the power cord. Always grip plug firmly and pull straight out from the wall socket after switching off the power supply.
- Repair/replace the power cord immediately if its frayed or damaged. Do not use a power cord that shows cracks or damage by abrasion, rodents etc.
- Do not splash water on or in the vicinity of the refrigerator. It could cause an electrical leak or malfunction.
- Young children should be supervised to ensure that they do not play with the appliance.
- After your refrigerator is in operation, do not touch the cold surfaces in the ice making compartment, particularly when hands are damp or wet. Skin may adhere to these extremely cold surfaces.
- Don't refreeze frozen foods which have thawed completely. Eating such refrozen food could harm your health. Even partial thawing and refreezing reduces the quality of foods, particularly fruits, vegetables and prepared food.
- Unplug your refrigerator before cleaning or making any repairs. We strongly recommend that any servicing be performed by a qualified technician
- Do not store flammable sprays, vapour or liquids like gasoline, lacquer and paint, volatile chemicals like benzene or ether, evaporating liquids like perfumes, nailpolish removers etc inside the refrigerator. It may damage the food and some of these could also cause an explosion. Avoid storing these near the refrigerator as well.
- Do not use lubricants (lubricating oils, sprays, kerosene, WD-40 etc) on the hinges of the refrigerator doors. Some lubricants chemically react with plastics resulting in damage to doors.
- Do not tamper with the electrical circuit or the refrigerant circuit of the refrigerator.
- Do not keep anything above the refrigerator - eg. lighted candles, cloth cover, electric equipment like TV and lamp, etc.
- Refrigerators contain refrigerants and insulation contains gases, which must be disposed off professionally, to avoid any safety hazards. Ensure the removal of doors and lids during disposal to prevent any entrapment.
- To prevent children from being locked inside; kindly ensure the keys be kept out of the reach of children and not in the vicinity of the refrigerating appliance.

Protection of Environment:



"Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that this product is not disposed as unsorted municipal waste.

This symbol is known as the "Crossed-out Wheelie Bin Symbol". It means that the product should not be disposed-off with your general house-hold waste. It should be disposed only through the company's collection centers with special treatment so as to prevent any damage to the environment. Please call: **080-6743-6743** or visit **www.godrejenterprises.com/green-think** for details about authorized collection centers or any applicable buy back arrangement.

'This product is RoHS compliant'

सुरक्षा संबंधी सावधानियाँ

रेफ्रिजरेटर का इस्तेमाल करते समय, चोट और संपर्क के नुकसान से बचने के लिए इन सामान्य सुरक्षा संबंधी सावधानियों का हमेशा पालन करें:

- इस उपभोक्ता निर्देशिका में दिए गए निर्देशों के अनुसार रेफ्रिजरेटर को रखें, इंस्टॉल करें और इस्तेमाल करें।
- कभी भी पावर कोर्ड खींच कर अपने रेफ्रिजरेटर को अनप्लग न करें। हमेशा पावर सप्लाय बंद करने के बाद प्लग को मजबूती से पकड़ें और सीधे वॉल सॉकेट से निकालें।
- अगर पावर कोर्ड मुड़ा हुआ या क्षतिग्रस्त है, तो तुरंत उसकी मरम्मत करें/उसे बदल दें। किसी भी ऐसे पावर कोर्ड का इस्तेमाल न करें, जो घिसावट, कतरने वाले प्राणियों के कारण क्षतिग्रस्त हो।
- रेफ्रिजरेटर पर या उसके आस-पास पानी न छलकाएं। इसके इलेक्ट्रिकल लीक या खराबी हो सकती है।
- छोटे बच्चों पर ध्यान देना चाहिए, ताकि वे उपकरण के साथ खेलें नहीं।
- जब आपका रेफ्रिजरेटर काम करने लग जाए, उसके बाद आइस मेकिंग कम्पार्टमेंट में ठंडी सतहों को छुएँ नहीं, खास तौर पर जब आपके हाथ नम या गीले हों। त्वचा इन बेहद ठंडी सतहों पर चिपक सकती है।
- फ्रोजन फूड्स (जमे हुए खाद्य पदार्थ) को दुबारा न जमाएं अगर वे पूरी तरह पिघल चुके हों। इस तरह की जमी हुई चीजें खाने से आपकी सेहत को नुकसान पहुंच सकता है। आंशिक रूप से पिघली हुई चीजों को भी दुबारा जमाने पर उनकी गुणवत्ता पर अस्तर पड़ता है, खास तौर पर फल, सब्जियों और तैयार खाने को।
- सफाई या मरम्मत करने से पहले अपने रेफ्रिजरेटर को अनप्लग करें। हम सुझाव देते हैं कि किसी भी प्रकार की सर्विसिंग किसी सुशिक्षित तकनीशियन द्वारा ही की जानी चाहिए।
- ज्वलनशील स्प्रे, भाप या गैसोलीन, लैकर और पेंट जैसे द्रव, बेजंजीन या ईथर जैसे अस्थिर रसायन, पर्फ्यूम, नेलपॉलिश रिमूवर जैसी वाष्पीकृत होने वाली चीजें रेफ्रिजरेटर में न रखें। इससे खाद्य पदार्थ को नुकसान पहुंच सकता है और इनमें से कुछ विस्फोट का भी कारण बन सकते हैं। इन चीजों को रेफ्रिजरेटर के आस-पास भी न रखें।
- रेफ्रिजरेटर के दरवाजों के हिंज (कब्जों) पर ल्युब्रिकेंट्स (ल्युब्रिकेटिंग ऑइल, स्प्रै, केरोसीन, थ्रू-40 इत्यादि) का इस्तेमाल न करें। कुछ ल्युब्रिकेंट्स प्लास्टिक के साथ रासायनिक प्रतिक्रिया करते हैं, जिससे दरवाजों को नुकसान पहुंचता है।
- रेफ्रिजरेटर की इलेक्ट्रिकल सर्किट या रेफ्रिजरेटर सर्किट के साथ छेड़छाड़ न करें।
- रेफ्रिजरेटर के ऊपर कोई चीज न रखें – जैसे जली हुई मोमबत्ती, कपड़े कवर, टीवी जैसे बिजली के उपकरण और लैम्प इत्यादि।
- रेफ्रिजरेटर में रेफ्रिजरेटर्स होते हैं और इंसुलेशन में गैस होती हैं, किसी भी तरह के सुरक्षा संबंधी खतरे से बचने के लिए इन्हें पेशेवर तरीके से निकाला जाना चाहिए। किसी भी प्रकार के फॉसने से बचने के लिए निपटन के दौरान दरवाजे और ढक्कन हट देना सुनिश्चित करें।
- बच्चों को अंदर बंद होने से बचाने के लिए कृपया सुनिश्चित करें कि चाबियाँ बच्चों की पहुंच से दूर रखी जाएं तथा उन्हें प्रशंसीतन उपकरण के आसपास न रखें।

पर्यावरण की सुरक्षा

“पर्यावरण की सुरक्षा” गोदरेज के मूल सिद्धांतों में से एक है और हम यह सुनिश्चित करने में आपके सहयोग की उम्मीद करते हैं कि इस उत्पाद को नारप्रायिका के अवर्गीकृत कूड़े के रूप में निष्कासित न किया जाए।

इस चिह्न को “क्रॉस-आउट व्हील बिन सिंबॉल” कहा जाता है। इसका मतलब है कि इस उत्पाद को आपके सामान्य घरेलू कूड़े के साथ निष्कासित नहीं किया जाना चाहिए। इसे रिफ़ कंपनी के कलेक्शन सेंटर के माध्यम से विशेष व्यवस्था के साथ निष्कासित किया जाना चाहिए, ताकि पर्यावरण को कोई नुकसान न पहुंचे। कृपया गोदरेज अप्लायंसेज के प्राधिकृत कलेक्शन सेक्स या किसी भी लायू बाय बैंक व्यवस्था की जानकारी के लिए कॉल करें: 080-6743-6743 या www.godrejenterprises.com/green-think देखें।



‘यह उत्पाद RoHS अनुरूप है’

Warranty / वॉरंटी

The Godrej Refrigerator comes with warranty* (refer Terms & Conditions for details) on COMPRESSOR and a ONE year warranty on all other parts (Except bulb, glass and add-on rubber and plastic parts) from the date of purchase, against defective material or workmanship. In case of any such defect found during the first year from date of purchase, Godrej & Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) will undertake repairs to the warranted part free of charge, subject to the terms and conditions below. In the warranty period beyond the first year from date of purchase, only the compressor will be provided free of cost. However, the appliance will be repaired on payment of necessary charges

Instructions for the customer

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorized company Service Center for obtaining warranty service and provide the defect, model details & serial no.
4. Earthing of the appliance is necessary to ensure safety.
5. Product will function between +/-5% of the rated voltage. For any fluctuation beyond the specified limit, company shall not be responsible, and the warranty stands terminated.
6. Frequency must be between 5% variation of 50 Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock etc. and in turn, the warranty stands terminated.
7. The product must be maintained to ensure hygiene. If there are any insects, rodents etc. in it, obstructing the functioning of the product, the company shall not be responsible and in turn, the warranty stands terminated.
8. If you are moving house, it is essential that a company service representative inspects the refrigerator at the time of re-installation at the new address. The warranty on the product/optional service contract for the sealed system of the refrigerator continues to be effective only if the product is found to be in working condition. The re-inspection will be done on the payment of necessary charges. We would also recommend that the product be insured against damage in transit.
9. Please follow the guidelines given regarding refrigerator usage.
10. House wiring related issues are not covered under warranty and such calls will be chargeable to customer.

Terms and Conditions

1. *Compressor warranty applicable basis the following criteria :

Warranty On Compressor	Applicable Products
Five Year	All Direct cool models with total volume less than 175 Litres
Ten Year	All Direct Cool models with total volume equal to and more than 175 litres

(Please refer to the total volume mentioned on the Star Rating label of your refrigerator)

- Repairs and replacements of parts will be carried out through the authorised Customer Service Centre.
- All transportation and handling expenses incurred while repairing will be payable by the customer.
- For any appliance installed beyond the municipal limits of the jurisdiction of the authorised customer service centre, charges towards technician's visit will be borne by the customer.
- While the company will make every effort to carry out the repairs at the earliest, it however is made expressly clear that the company is under no obligation to do so in a specified period of time.
- The company/its authorised personnel will collect any parts, compressor or other components replaced during warranty period only.
- Warranty does not cover accessories of the appliance.
- Sealed system gas charging and consumables will be charged for any such repairs after one year from the date of purchase.
- The company's obligation under this warranty shall be limited to repair or providing replacement of parts only. The maximum claim/s if entertained by the company will be subject to the maximum retail price of the product purchased or purchase price, whichever is lower.
- In the event of any unforeseen circumstances, and spares not being available, the company's prevailing depreciation rules will be binding on the purchaser to accept as a commercial solution in lieu of repairs.
- Warranty is not applicable in case the original number (Serial No. Sticker) is removed, obliterated or altered from the machine or cabinet.
- Warranty automatically expires after the stipulated period from the original date of purchase, even if the refrigerator was not in use for anytime for whatever reasons.

For any further assistance.

Call	WhatsApp
080-6743-6743	Text 'hi' To 9321665511 On Whatsapp

24 X 7 Call Centre • Weekend Service

Website: www.godrejenterprises.com/support
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677

[illegible]

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
Customer copy

Model no. _____

Unit sr. No. _____

Date of Purchase _____

Customer's name & address

Tel. _____

Dealer's name & address

Tel. _____

Customer's Signature:

Overall warranty also stands null and void if:

1. The warranty card is not completed properly at the time of the purchase. 2. The completed warranty card is not presented to the authorised personnel at the time of service of the product. 3. The refrigerator is not operated according to instructions given in the User's Guide. 4. Defects are caused by improper use, which shall be determined by the company personnel. 5. Damage is caused to the refrigerator or any parts due to transportation or shifting. 6. Defects are caused by reasons beyond control, like abnormal voltage, acts of God, or while in transit to service center or purchaser's residence. 7. The serial number is deleted, defaced or altered.