


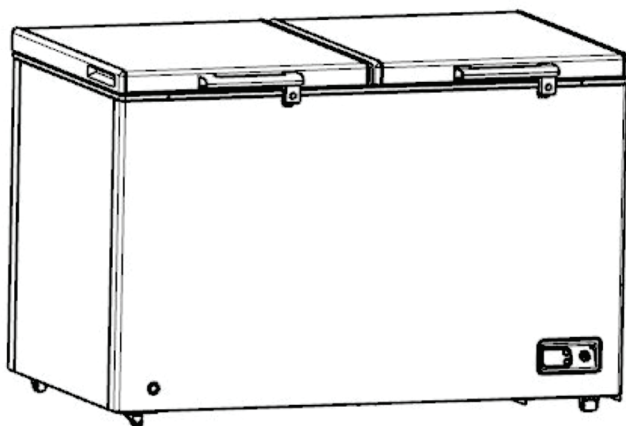

USER MANUAL

FREEZER / COOLER CONVERT,
2 IN 1 FREEZER COOLER CONVERT
& FREEZER COOLER COMBO
DEEP FREEZER

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)

CONTENT

1	Safety Warnings	3
	• Meaning of safety warning symbols	3
	• Electricity related warnings	3-4
	• Warnings related to use	4
	• Safety warnings	4
	• Warnings related to placing items	4
	• Warnings related to disposal	5
	• Proper use of the freezer	5
2	Model Specifications	6
3	Important Instructions	6-7
4	Transportation Instructions	8
5	Installation Instructions	8-9
6	Freezer / Cooler Operation	9
7	2 in 1 Freezer Cooler Convert Operation	10
8	Freezer Cooler Combo	11-12
9	Maintenance of Freezer/Cooler	
	• Cleaning	13
	• Do's and Don'ts	14
10	Problem Solving/Trouble Shooting	15
11	Handle Installation	15
12	Installation Instruction	16
13	Branches/Service Connect	17
14	Warranty	18

Dear Customer,

Welcome to Godrej family! Thank you for buying this freezer and giving us an opportunity to serve you. To ensure that you get the best results from your new freezer, please take time to read through the simple instructions in this user manual. If you need any further assistance at any time, feel free to call us on 080-6743-6743 or write to us at smartcare@godrej.com.

We urge you to ensure that the packing material is disposed off in accordance with the current environmental requirements. When disposing off any freezer equipment, please contact your local waste disposal department for advice on safe disposal.

This appliance must only be used for its intended purpose.


We thank you again for giving us the privilege to serve you, and look forward to a long and delightful association.

SAFETY WARNINGS

• Meaning of safety warning symbols

	This symbol indicates prohibited matters and behaviors that are forbidden. Non-compliance with the instructions may result in product damage or endanger the personal safety of users.
	This symbol indicates matters that must be followed, and behaviors that must be strictly executed in line with the operation requirements. Non-compliance with the instructions may result in product damage or endanger the personal safety of users.
	This symbol indicates matters that need attention. Due precautions are needed or injuries / damages will be caused.

• Electricity related warnings

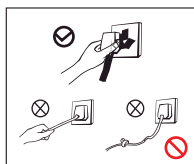


- Please firmly grasp the plug and pull it out from the socket directly.
- Do not pull the power cord while removing the power plug of the freezer.
- Do not damage the power cord under any condition, so as to ensure safety use. Do not use freezer when the power cord is damaged or the plug is worn.
- Worn or damaged power cord shall be replaced in manufacturer-authorized service technician.



- Please use a dedicated three-pin power socket which is 5A or more.
- The power cord should be firmly contacted with the socket to prevent fire. Please ensure that the grounding electrode of the power socket is equipped with a reliable grounding line.




- The freezer adopts 230V/50Hz AC power. Voltage fluctuations over the range of 230V+/-10% will cause malfunctioning or even damage. Hence, an appropriate automatic voltage must be installed in concert with the AC power.
- In case of gas leakage, please open the doors and windows. Do not unplug the deep freezer and other electrical appliances, considering that any spark may cause a fire.

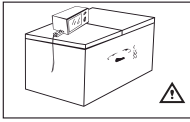


- To ensure safety, it is not recommended to place regulators, rice cookers, microwave ovens or other appliances on top of the freezer.

• Warnings related to use

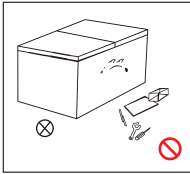


- Demolition or renovation of the deep freezer is prohibited. It is forbidden to damage the refrigerant lines. The repair and maintenance of the deep freezer must be carried out by professionals.
- Damaged power cord must be replaced by authorized service technician.

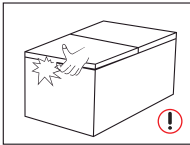


- The surroundings of the freezer should not be obstructed in order to maintain proper ventilation around the appliance. Keep a minimum space of 30cm all around the freezer.
- The gaps between doors and freezer frame are small. Please do not put your hand in these areas to prevent squeezing of fingers.

• Safety warnings

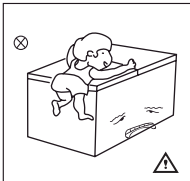


- Do not allow children to enter or climb the freezer to avoid injury.
- Do not spray or wash the freezer. Do not put the freezer in moist places as this may affect the electrical safety of the freezer.

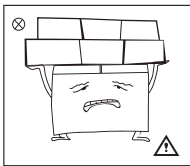


- Do not place heavy objects on top of the freezer considering that the object may fall when opening or closing the door, and accidental injuries might be caused.
- Please unplug the appliance while cleaning.
- Avoid switching ON/OFF the appliance consecutively to prevent damage to the compressor.

• Warnings related to placing items

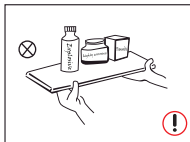

- Do not put flammable, explosive, volatile and highly corrosive items in the freezer to prevent damage to the product or cause fire.

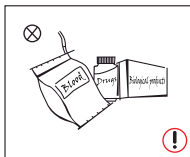

- This product is a freezer and is suitable only for the storage of frozen foods. According to standards, when using for commercial purpose freezers shall not be used for other purposes, such as storage of blood, drugs or biological products.



- Do not place items such as bottled or sealed containers of fluid like bottled beers and beverages under freezer mode to prevent bursts and other losses.

• Warnings related to disposal

- The freezer's R600a/R290 refrigerant and Cyclopentane foam material are combustible material and the discarded freezer should be isolated from fire sources. It cannot be burned. Please transfer the freezer to qualified professional recycling companies for processing in order to avoid damage to the environment or other hazards.
- Please remove the door and baskets of the freezer and place them away to avoid accidents if children enter and play in the freezer.

• Proper use of the Freezer

	Keep away from heat and direct sunlight. Do not place the freezer in moist or wet places to prevent rust or reduction of insulating effect.
	The space between the top of the freezer shall be greater than 30cm. The distance from both sides and the back shall be more than 30cm. This facilitates the opening & closing and heat dissipation. Wipe the freezer inside and outside with a warm moist rag (add a small amount of detergent in the warm water. Use plain water for the final cleanse).
	Do not switch ON the connection power until 6 hours after transporting not moving the freezer. The refrigerant needs time to settle. Before placing frozen foods in your freezer, turn the freezer ON and wait for 6 hours to make sure it is working properly and to allow the freezer to chill down to the optimum temperature.

MODEL SPECIFICATION

FREEZER/COOLER CONVERT

DESCRIPTION	225L	325L	425L	525L	625L
Climate Class	T	T	T	T	T
Rated Voltage	230V AC	230V AC	230V AC	230V AC	230V AC
Rated Frequency	50Hz	50Hz	50Hz	50Hz	50Hz
Refrigerant	R290/R600a	R290	R290	R290	R290
Foam Blowing Agent	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane	Cyclopentane

2 IN 1 FREEZER COOLER CONVERT / FREEZER COOLER COMBO

DESCRIPTION	375L	475L
Climate Class	T	T
Rated Voltage	230V AC	230V AC
Rated Frequency	50Hz	50Hz
Refrigerant	R290	R290
Foam Blowing Agent	Cyclopentane	Cyclopentane

IMPORTANT INSTRUCTIONS

To obtain the best possible performance and trouble free operation from your appliance it is very important to read these instructions carefully.

- Don't connect the appliance to the electricity supply until all packing and transit protectors have been removed.
- Switch ON the machine at least for 6 hours before initial loading or after long power off.
- If you are discarding an old product, remove or break the lock as a safety measure, to avoid children from getting trapped inside.
- This freezer must only be used for its intended purpose i.e. the storing and freezing of edible foodstuff.
- Do not dispose off the appliance in fire.
- Take care not to damage the cooling circuit/pipes of the appliance in transportation and in use. In case of damage, do not expose the appliance to fire or potential ignition source and immediately ventilate the room where the appliance is kept.
- On delivery, check to ensure that the product is not damaged and that all the parts and accessories are in perfect condition.
- We do not recommend the use of extension boards and multi-way adapters.
- Failure to observe these instructions may invalidate your right to free service during the warranty period.
- Do not place heavy objects/body weight on the center beam as it may result in deformation & cooling leakage from the gaskets.
- It is normal to observe water droplets & ice on center beam due to very low temperature of this freezer.

IMPORTANT INSTRUCTIONS


- Do not use any sharp objects on the inner liner as it may result in damage/leakage.
- Do not drop heavy objects into the Deep freezer as this may result in damage to the liner bottom.
- We suggest you keep this instruction booklet in a safe place for easy reference.

WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended.


WARNING! Do not damage the refrigerant circuit.

WARNING! Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended.


FREEZER / COOLER CONVERT

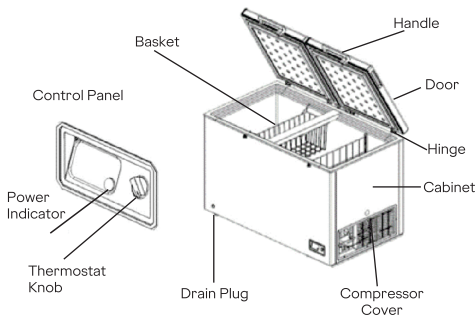

2 IN 1 FREEZER COOLER CONVERT

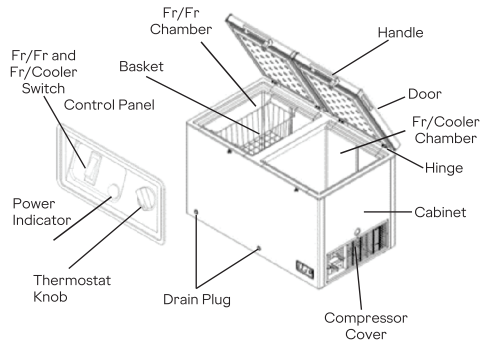

FREEZER/COOLER COMBO

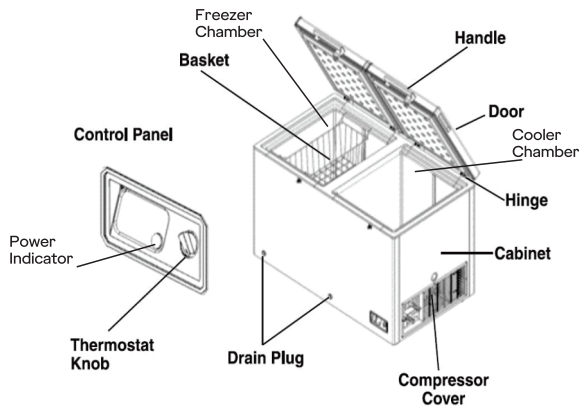

TRANSPORTATION INSTRUCTIONS

The appliance should be transported only in an horizontal position. The packing as supplied must be intact during transportation.

1. Failure to comply with the above instructions could result in damage to the appliance. The manufacturer will not be held responsible if these instructions are not followed.
2. The appliance must be protected against rain, moisture and other atmospheric influences.

IMPORTANT: Care must be taken while cleaning/carrying the appliance.

IMPORTANT: This appliance is not designed for stacking with any other appliance. Do not attempt to sit or stand on top of your appliance as it is not designed for such use. You could injure yourself or damage the appliance.

IMPORTANT: Make sure that the mains cable is not caught under the appliance during and after carrying / moving the appliance, to avoid the mains cable getting cut or damaged.

When positioning your appliance take care not to damage your flooring, pipes, wall coverings etc. Do not move the appliance by pulling by the lid or handle. Do not allow children to play with the appliance or tamper with the controls. Godrej declines to accept any liability if the instructions are not followed.

3. During transportation, the angle between the component body and the ground should not be more than 45deg and you should never place the freezer upside down.

INSTALLATION INSTRUCTIONS

1. Avoid placing the appliance near cookers, radiators or in direct sunlight as this will cause the compressor to run for long periods.
2. Make sure that sufficient space is provided around the appliance to ensure free air circulation.
3. The appliance should be installed on a flat surface.
4. Don't spray water on the freezer since it will weaken the insulation and cause electricity leakage.
5. Please refer 'Cleaning and Care' section for daily maintenance of your freezer.
6. If the Freezer is installed in areas with high humidity; for e.g. basements, garages etc. in cold weather, then there are chances of water droplet formation on the outer surface due to condensation. This is quite normal and is not a fault. Remove the condensation by wiping with a dry cloth.

Operation


Before you start using the product, please go through the blow mentioned guidelines to get optimum performance from your appliance

1. The interior needs to be dry.
2. Clean the interior as recommended under 'CLEANING AND CARE'. (See page no.14)
3. Insert the plug into the wall socket and switch ON the electricity supply the red light will switch on.
4. You will hear a noise as the compressor starts up. The liquid and gases sealed within the refrigeration system may also give rise to noise, whether the compressor is running or not which is quite normal.
5. Do not load the appliance immediately after it is switched ON. Wait until the correct storage temperature has been reached. We recommend that you check the temperature with an accurate thermometer. (See page no.10 and 11)

Important Notes:

- Avoid opening the door in case of a power failure. It will lead to cooling loss. If the failure lasts longer, then the food should be checked.
- If you find that the door of the freezer is difficult to open just after you have closed it, don't worry. This is due to the pressure difference which will equalize and allow the lid to be opened normally after a few minutes. Do not use a knife or any sharp objects to open door or break vacuum at such

FREEZER / COOLER OPERATION

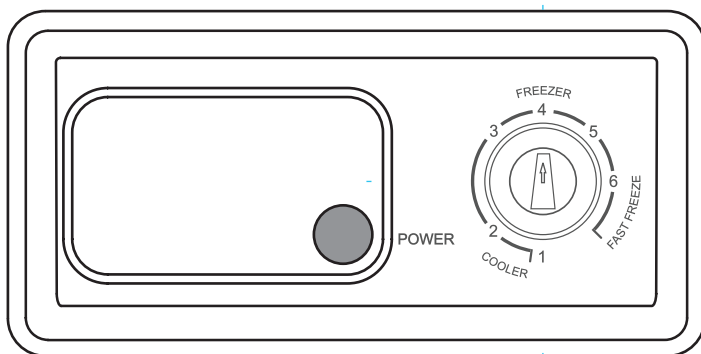

Temperature adjustment

The temperature of the chamber is adjusted through the thermostat knob. The user can choose the right temperature zone according to their needs.


For Cooler Mode the temperature control knob needs to be set at 1 and 2, For Freezer Mode the temperature control knob needs to be set at 4, 5, 6 and Fast Freeze.

Indicator light

The indicator light-set is placed on the front side of the freezer for easy visibility.

- Red Light - Shows that the appliance is supplied with electric supply.

2 IN 1 FREEZER COOLER CONVERT OPERATION

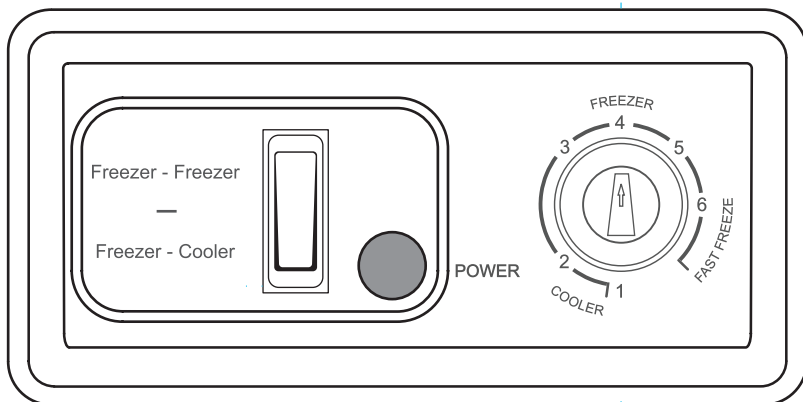

Temperature adjustment

Connect the Freezer/Cooler to power supply. Red light indicates Power supply ON


The temperature of both the chambers is adjusted through the thermostat knob. The switch position indicates the chamber mode (Freezer/Cooler)

- When the Freezer/Freezer mode is switched ON – both the chambers are in freezer mode.
- When the Freezer/Cooler mode is switched ON – one chamber is in freezer mode and the other chamber is in refrigerator mode.

The number “1,2,3,4,5,6, Fast Freeze” do not mean a specific temperatures, the higher the number the cooler is the chamber temperature and vice versa. The user can choose the right temperature zone according to their needs. Do not fast freeze for more than 4-5 hours as it is not recommended and not good for refrigeration system.

In freeze/Cooler mode, use “Fast Freeze” thermostat settings to store ice cream in the freezer compartment & beverages in the cooler compartment.

FREEZER COOLER COMBO OPERATION

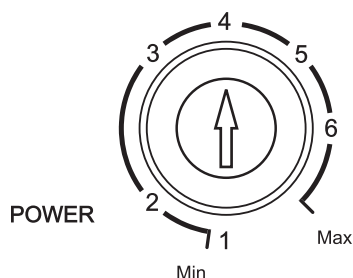

Temperature adjustment

The temperature of the chamber is adjusted through the thermostat knob. The user can choose the right temperature zone according to their models.

STORING FROZEN FOOD

Pre-packaged commercially frozen food should be stored in accordance with the frozen food manufacturer's instructions. To ensure that high quality is achieved by the frozen food manufacturer and the food retailer, please remember the following things:

1. After purchase, put packets in the freezer as quickly as possible to prevent defrosting.
2. Don't exceed the expiry dates of the food products.
3. There must be space between the foods stored in the cabinet, between the foods and the inner surface of the cabinet, to keep good ventilation of cold air and freeze evenly.

FREEZING FRESH FOOD

For freezing fresh food, store it near the side walls & away from already frozen food. This ensures fast freezing.


Do not freeze too large a quantity at a time.

The quality of the food is best preserved when it is frozen right through to the center as quickly as possible.

Take special care not to mix already frozen food and fresh food.

DEFROSTING

- Defrost twice a year or when a frost layer of around 7mm (1/4") has formed.
- You can defrost by switching OFF the freezer at the socket outlet and pulling out the power plug.
- Extract the water from drain plug and put a water container to collect the drained water.
- 6 hours before the defrosting, please set the thermostat knob at 'MAX' position to make sure the food is at the lowest temperature when you get it out. All food should be wrapped in several layers of paper and stored in a cool place.
- Remove the freezer basket. Leave the lid open. Containers of warm water may be placed carefully in the freezer to speed up the defrosting.
- Never use hair dryers, electrical heaters or other such electrical appliances for defrosting. When defrosting has finished, drain out the defrost water which collects at the bottom of the freezer.

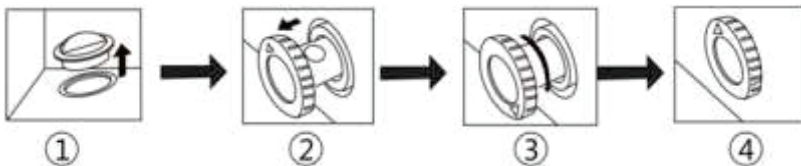

1. There is a drain plug at the bottom of the freezer. When defrosting, remove the inner plug, defrosted water will flow out of the hole.

(NOTE: PLEASE REMOVE THE PLASTIC PLUG(CAP) DURING THE DEFROSTING AND PUT IT BACK AFTER DEFROSTING IS DONE)

2. Remove the outer plug until the water hole can be seen.
3. Twist the outer drain plug until the arrow points downward.
4. After defrosting is done, make sure there is no more water coming out from drain plug before putting it back in place. Once the drain plug has been put in place make its arrow point upward.

MAINTENANCE OF THE FREEZER

CLEANING AND CARE

- We recommend that you switch OFF the freezer from the main power outlet and pull out the mains plug before cleaning.
- Never use any sharp abrasive instrument, soap, household cleaner, detergent or wax polish for cleaning.
- Use Lukewarm water to clean the cabinet of the freezer and wipe it dry.
- Excess deposit of ice should be removed on a regular basis using a plastic ice scraper available. Large accumulation of ice will affect the performance of the freezer as it acts as an insulation.
- If the freezer is not going to be used for a long period of time, switch it OFF, remove all food and clean it.
- Check lid seals (gasket) regularly to ensure they are clean and free from food particles.

Important Notes:

1. Never use water to wash the compressor.

FROST

2. Small amounts of frost will accumulate inside the freezer, depending upon the frequency & duration of the lid operation or the amount of moisture inside. It is essential to ensure that no frost or ice is allowed to form on places that will affect the close fitting of the lid, which might allow air to penetrate the cabinet, thus causing continuous running of the compressor.

DO'S AND DON'TS

Do's

- Ensure that there is adequate air circulation on all sides and at the rear of the freezer.
- Ensure that Freezer is completely closed after each use.
- Defrost frozen meat completely before cooking.
- Close the lid gently.
- Check contents of the freezer at regular intervals.
- Clean and defrost your freezer regularly (See 'Defrosting').
- Adhere to 'Best Before', 'Use By' dates when you store.
- Store commercially frozen food in accordance with the instructions given on the packets.
- Always choose high quality fresh food and be sure it is thoroughly clean before you freeze it.
- Prepare foodstuff for freezing in small portions to ensure rapid freezing.
- Wrap all foods in aluminum foil or freezer quality plastic bags make sure to remove as much air as possible.
- Store only frozen food
- Store items below load line limit sticker only.
- The load stored should be packed in plastic bags to avoid odours being mixed & moisture being lost and to reduce frost at the wall.
- Switch ON the freezer at least 6 hours before operating.
- The freezer must be connected with earthing.
- You should adjust the temperature control knob according to the required temperature.
- Store small items in the basket provided.
- Remove ice cream from the freezer about 10 minutes before serving.
- Store items below load line limit sticker only.



Don'ts


- Don't leave the door open for long periods as this will make the freezer costlier to run and cause excessive ice formation.
- Don't use pointed or sharp edged objects such as knives, forks etc. to remove the ice.
- Don't put hot food in the freezer.
- Don't put liquid-filled bottles or sealed cans containing carbonated liquids into the freezer as they may burst.
- Don't store poisonous or dangerous substances in the freezer. The freezer has been designed for the storage of edible foodstuffs only.
- Don't consume ice-cream and ice-cubes directly from the freezer. The low temperature may cause 'cold burns' on lips.
- Don't remove items from the freezer with wet hands.
- Don't shut the door with force.
- It is advisable not to turn OFF the deep freezer during the night

PROBLEM SOLVING/TROUBLE SHOOTING

SYMPTOMS	POSSIBLE CAUSES	SUGGESTED REMEDY
Not freezing	Temperature control knob is at the lowest position.	Adjust the temperature.
	Plug and power outlet not connected well.	Make proper connection.
Compressor not cycling off	Temperature control is at the highest position.	Adjust the temperature.
	Too much load stored in one time	Reduce the quantity stored.
	Thick frost	Defrost
	Too many door-openings	Reduce the door-opening
	Too near to the wall	Move away from the well.
	Near the heat source or sun	Change the place
	Ground not flat	Change the place
Noise	Refrigerating tubes touching	Separate them
Not working	The power plug not inserted properly in the socket.	Insert supply cord properly and turn ON the main power supply.
	Main distribution switch has been turned off.	ON main distribution/MCB Switch.


INSTRUCTION FOR HANDLE INSTALLATION

Step1

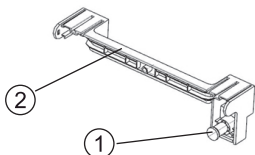


Take out Lock assembly ① and handle back ② from the bag and Insert Lock Assembly 1 in the handle back part 2.

Step2

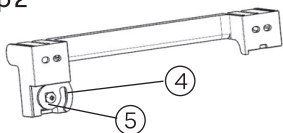


Fix lock lever ④ in the position as shown, at the back side with the small screw ⑤ provided in the bag

Step4

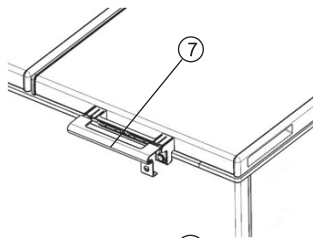


Insert handle front cover ⑦ in the handle back part ② until a click at end.

Step5

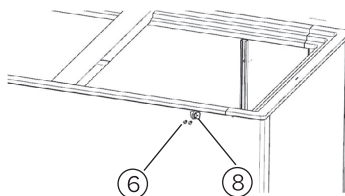


Screw the lock bracket ⑧ on the freezer cabinet with the help of another 2 long screws ⑥


Step 3

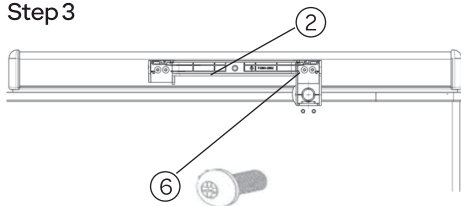

Fix handle back part ② on lid using four long screws ⑥ provided in the bag




Use key ⑨ for the lock operation

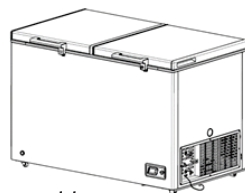


Complete assembly
with handle

INSTALLATION INSTRUCTION

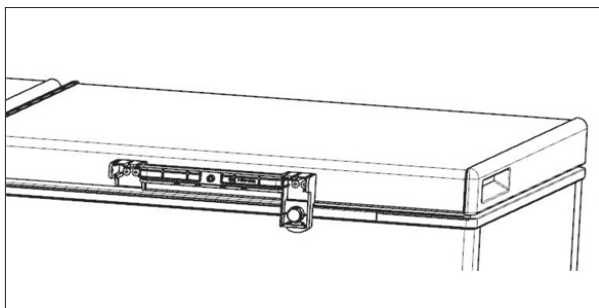

1. Fix the handle on the door with screws.

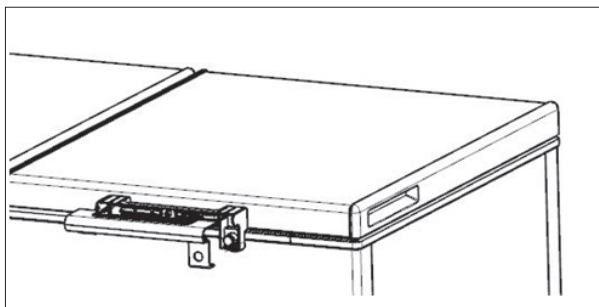

2. Put each side of the handle into the slot, then push the center of the cover to fix the handle

BRANCHES / SERVICE CONNECT

For any further assistance, please contact our nearest branches office or service centre:

BRANCHES			
Ahmedabad	Chennai	Guwahati	Mumbai
Bangalore	Coimbatore	Hyderabad	Nagpur
Bhopal	Delhi	Jaipur	Patna
Bhubaneswar	Faridabad	Kochi	Pune
Chandigarh, Mohali	Ghaziabad	Lucknow	Raipur
Kolkata		Vijayawada	Ranchi

24 X 7 CALL CENTRE • VISIT UP TO 9 PM • WEEKEND SERVICE*

CALL	WHATSAPP
080-6743-6743	TEXT 'HI' TO 9321665511 ON WHATSAPP

*(Select Areas)

Website: www.godrejsmartcare.com & www.godrejenterprises.com
E-mail: smartcare@godrej.com SMS: <godrejcare> to 56677

WARRANTY

The Godrej Chest Freezer comes with a FIVE year warranty on COMPRESSOR and a ONE year warranty on the appliance from the date of purchase, against defective material or workmanship. In case of any such defect found during the first year from date of purchase, Godrej and Boyce Manufacturing Company Ltd. (a part of Godrej Enterprises Group) will undertake repairs to the warranted part free of charge, subject to the terms and conditions below. In the warranty period beyond the first year from date of purchase, only the compressor will be provided free of cost. However, the appliance will be repaired on payment of necessary charges.

INSTRUCTIONS FOR THE CUSTOMER

1. Kindly ensure that the dealer fills the warranty card correctly and completely.
2. You should retain the warranty card for record and produce the same in the event of any warranty repairs.
3. In the event of a defect developing in the product, contact the nearest authorized Godrej Service Centre for obtaining warranty service and provide the defect, model details & serial no.
4. Earthing of the appliance is necessary to ensure safety.
5. Product will function between +/-5% of the rated voltage. For any fluctuation beyond the specified limit, company shall not be responsible and the warranty stands terminated.
6. Frequency must be between 5% variation of 50Hz. Beyond this, the company shall not be liable for any unforeseen hazards like fire, shock etc. and in turn, the warranty stands terminated.
7. The product must be maintained to ensure hygiene. If there are any insects, rodents etc. in it, obstructing the functioning of the product, the company shall not be responsible and in turn, the warranty stands terminated.
8. If you are moving house, it is essential that a Godrej service representative inspects the chest freezer at the time of re-installation at the new address. The warranty on the product/optional service contract for the sealed system of the appliance continues to be effective only if the product is found to be in working condition. The re-inspection will be done on the payment of necessary charges. We would also recommend that the product be insured against damage in transit.

TERMS AND CONDITIONS

1. Atmospheric condition or hard/ contaminated water causing corrosion/ rusting, scaling will not be covered in warranty.
2. Repairs and replacements of parts will be carried out through the authorized Customer Service Centre.
3. All transportation and handling expenses incurred while repairing will be payable by the customer.
4. For any appliance installed beyond the municipal limits of the jurisdiction of the authorized customer service centre, charges towards technician's visit will be borne by the customer.
5. While the company will make every effort to carry out the repairs at the earliest, it however is made explicitly clear that the company is under no obligation to do so in a specified period of time and will not be held liable for any loss in case of delay.
6. The company/its authorized personnel will collect any parts, compressor or other components replaced.
7. Warranty does not cover accessories to the appliance.
8. Sealed system gas charging and consumables will be charged for any such repairs after one year from the date of purchase.
9. The company will take all necessary steps to repair the appliances supplied under the warranty and keep sufficient stock of the spare parts of the Appliance with them. However, in certain cases where the appliance cannot be repaired due to non availability of the spare parts, the company, at its sole discretion, may offer a replacement of the appliance to the purchaser of such an appliance, under a replacement offer. The replacement offer is subject to change from year to year and any discount given shall be applicable on the MRP of the product to be purchased as a replacement. A table giving the details of the replacement offer is available on www.godrejsmartcare.com.
10. The liability of the company is limited only to the chest freezer, and it would not be responsible for any goods being spoilt due to non-functioning of the product.
11. The decision of the company shall be final with respect to any disputes that arise in interpretation of the above terms. The courts of Mumbai shall have exclusive jurisdiction in case of any disputes

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)
CUSTOMER COPY

MODEL NO.
UNIT SR. NO.

DATE OF PURCHASE

CUSTOMER'S NAME & ADDRESS

DEALER'S NAME & ADDRESS

TEL. _____

TEL. _____

Customer's Signature:

This warranty is valid only if it is filled in and stamped by our authorized dealer on the date of purchase. Overall warranty stands null and void if

1. The warranty card is not completed properly at the time of the purchase. 2. The completed warranty card is not presented to the authorized personnel at the time of service of the product. 3. The appliance is not operated according to instructions given in the User's Guide. 4. Defects are caused by improper use, which shall be determined by the company personnel. 5. Unauthorized person carries out any repair work. 6. Defects are caused by reasons beyond control, like abnormal voltage, acts of God, or while in transit to service centre or purchaser's residence. 7. The serial number is deleted, defaced or altered. 8. Damage is caused to the appliance or any parts due to transportation or shifting.

Warranty automatically expires after the stipulated period from the original date of purchase, even if the appliance was not in use for any time for whatever reasons.



Protection of Environment:

Protection of environment" is one of the core values of Godrej and we seek your co-operation to make sure that the product, packaging and plastic material is not disposed as unsorted municipal waste.



This symbol is known as the "Crossed-out Wheellie Bin Symbol". It means that the product should not be disposed of with your general house-hold waste.

It should be disposed of only through the company's collection points with special treatment so as to prevent any damage to the environment. Please call: 080-6743-6743 for applicable buy back arrangement or visit: www.godrejenterprises.com/green-think for details about authorised collection points.

All products are ROHS Compliant.

Godrej and Boyce Manufacturing Company Ltd.
(a part of Godrej Enterprises Group)