




PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

SOP – LEAD MICRO FANUC Robot Homing

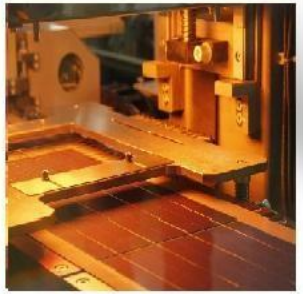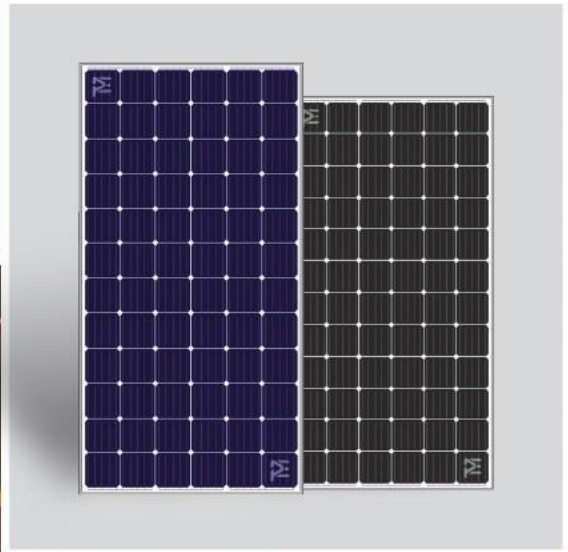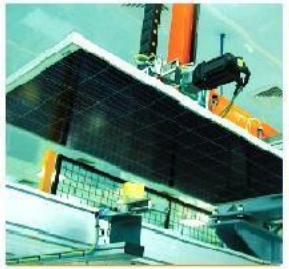

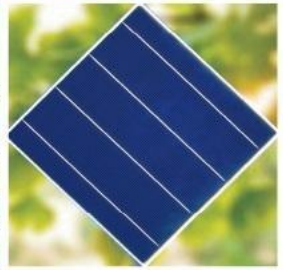


PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

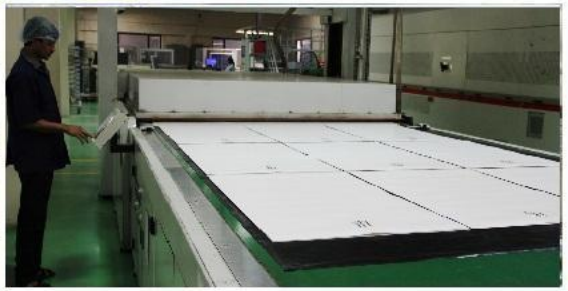



Step 1: Turn the nobe into “T1” from “AUTO” in robot contoller

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)






Step 2: Turn the nobe into “ON” from “OFF” in robot teach pendent.

Prepared By : Chandrakala



Step 3: Hold the dead man switch. Located at the backside of teach pendent


Step 4: Click “RESET” button until the FAULT LED turns off.

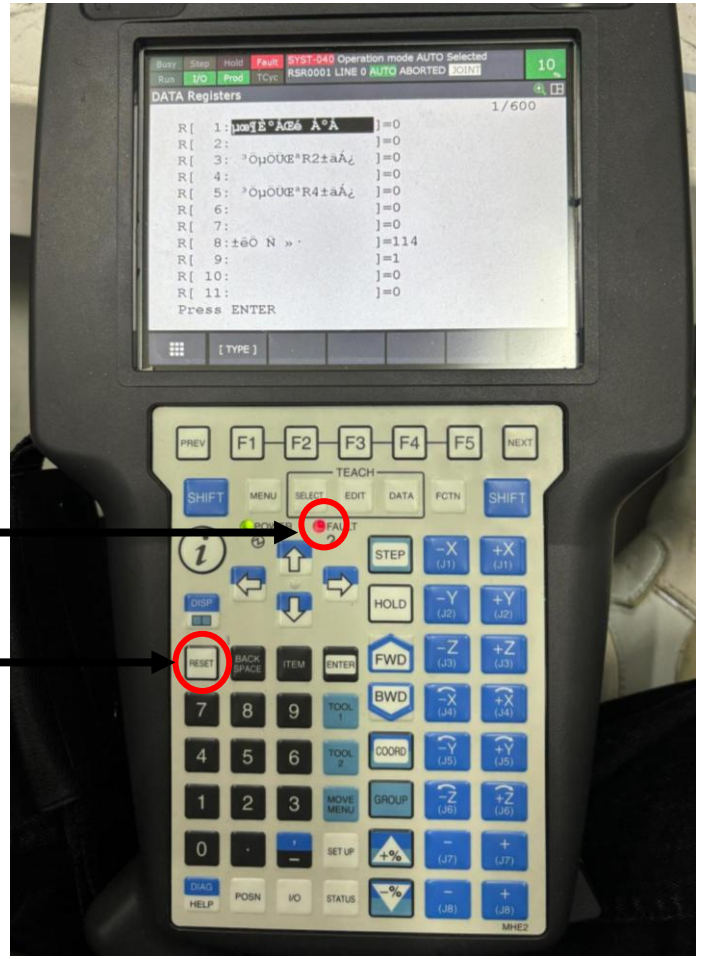

NOTE : DEADMAN switch should be hold continuously until the functioning is completed.

Prepared By : Chandrakala


PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

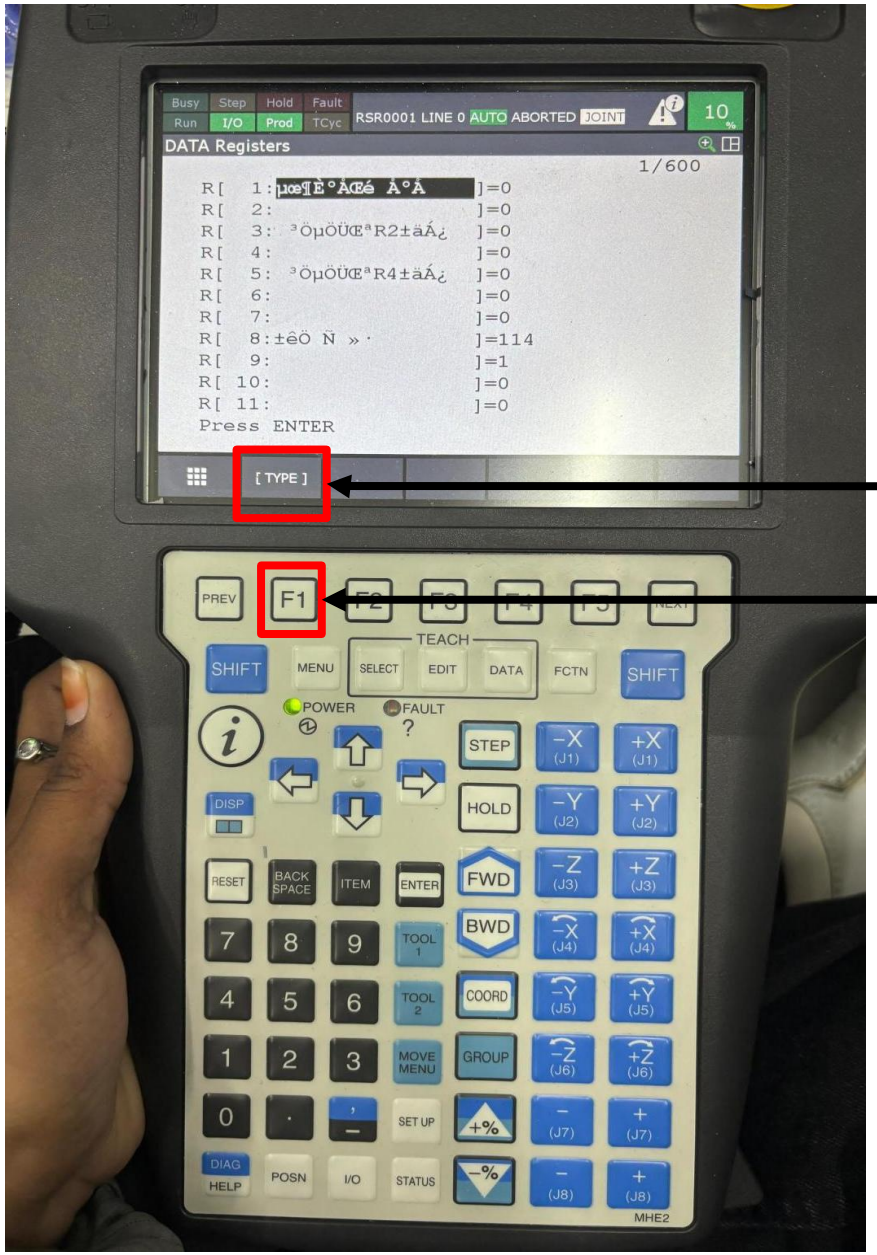

Step 5: Click “F1” button to display the [TYPE] where we can access the robot homing line.

Prepared By : Chandrakala


PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

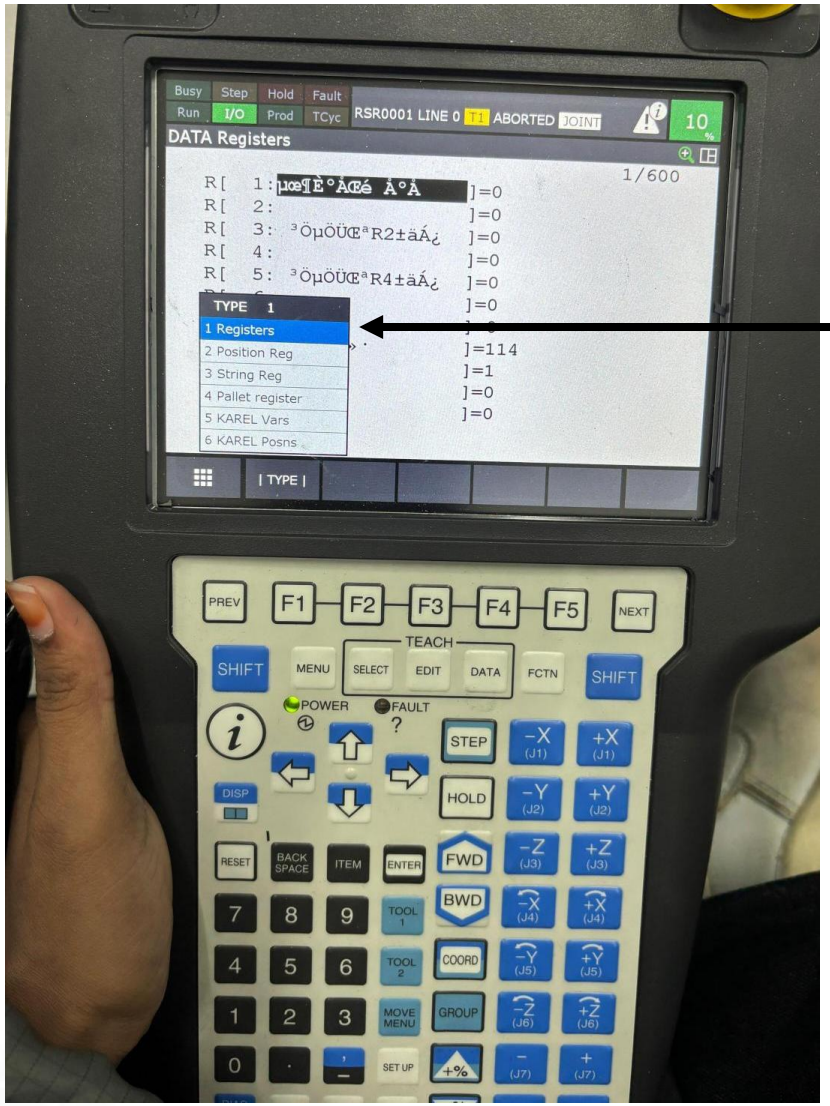

The [TYPE] options are displayed.


Step 6: Navigate down and select “POSITION REG” and click “ENTER”

Step 7: Click “ENTER” to open the selected type.

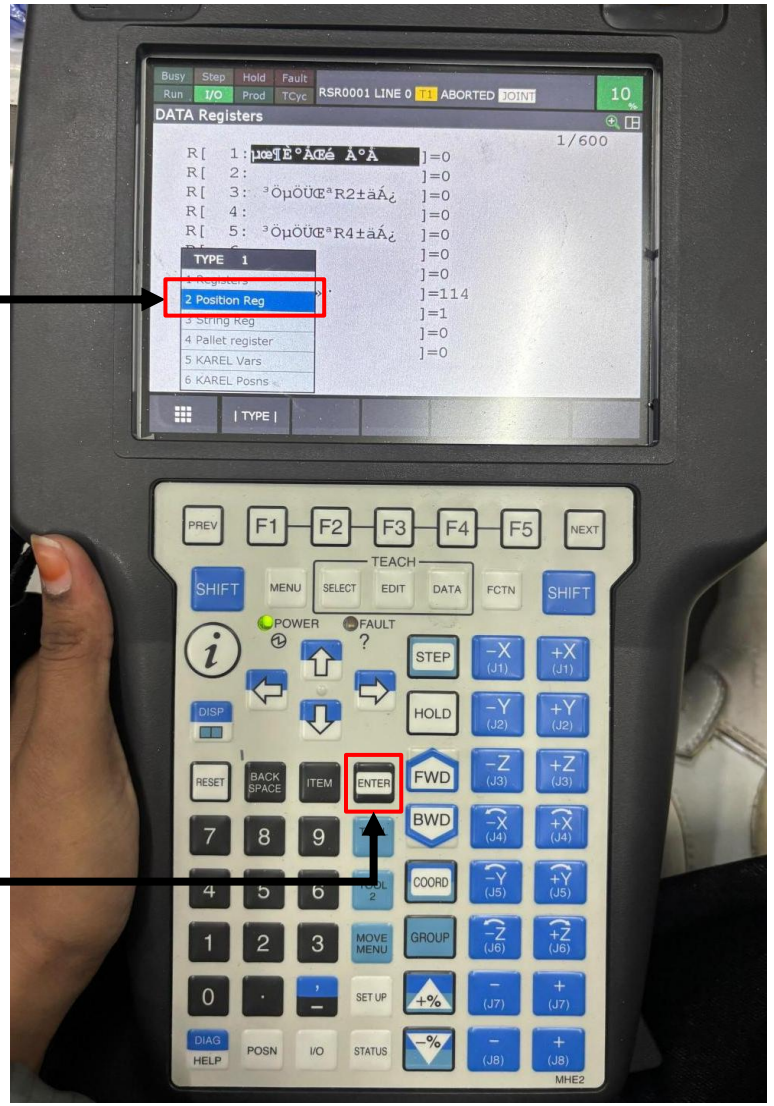

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

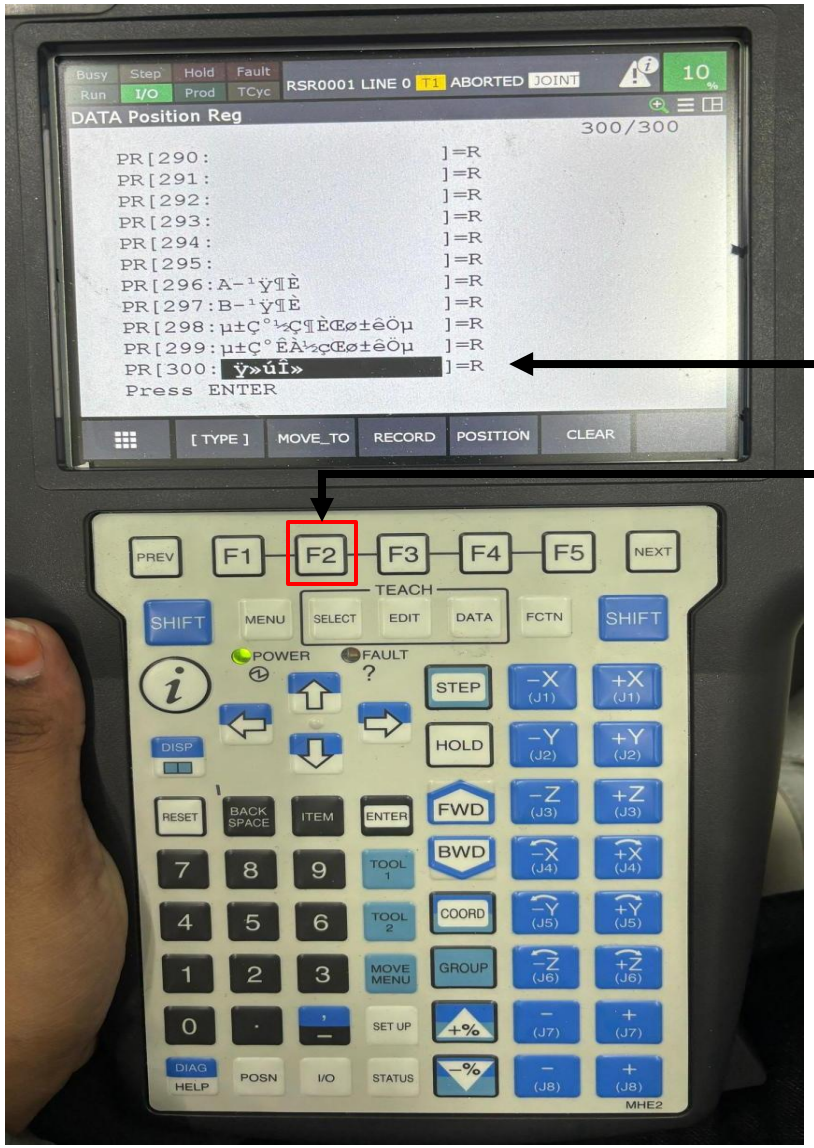

PR[296: A-side Robot Homing line.
PR[297: B-side Robot Homing line.
PR[300: Robot Homing line.

Step 8: Select the PR[300 line for robot homing.

Step 9: Click “F2” to run the selected line.

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)






Step 10: Turn the nobe into “OFF” from “On” in robot teach pendent.

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

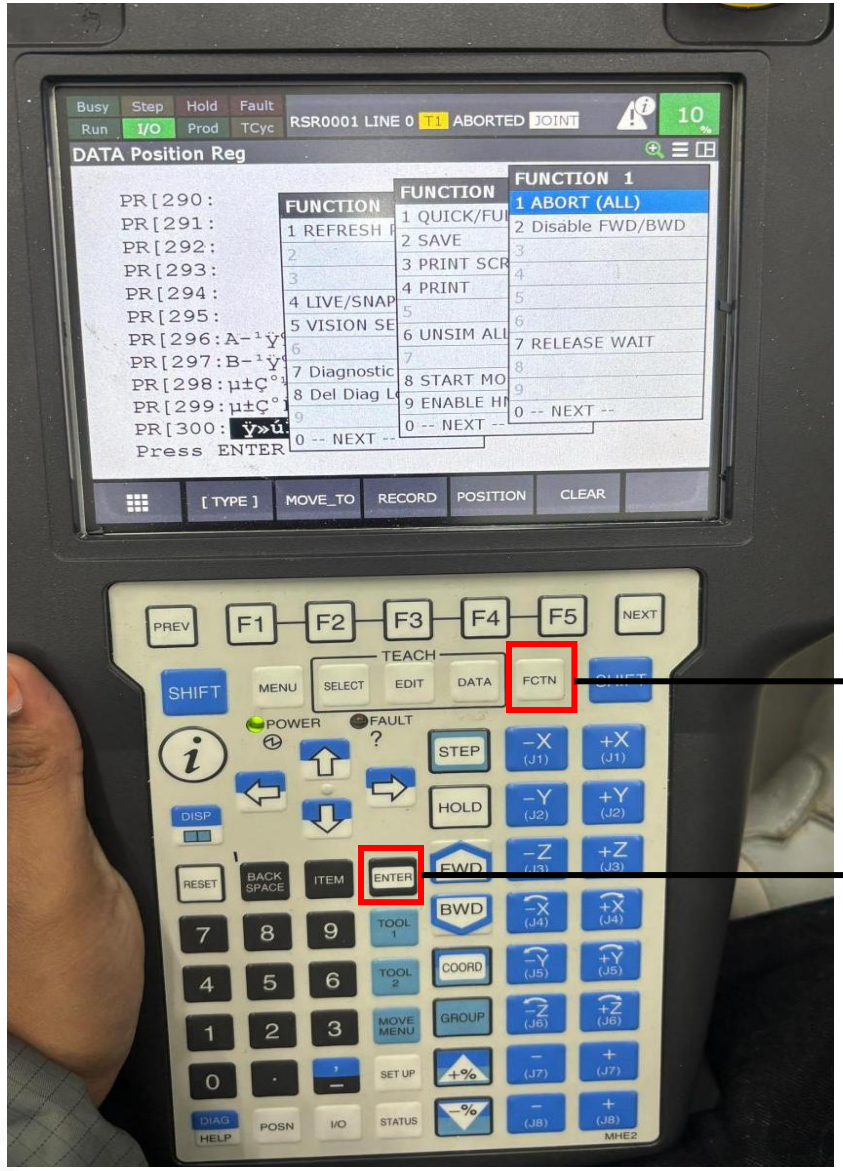

Step 11: Click “FCTN” button and click “ENTER” to refresh all the robot functions. (Repeat it 3-4 times)

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

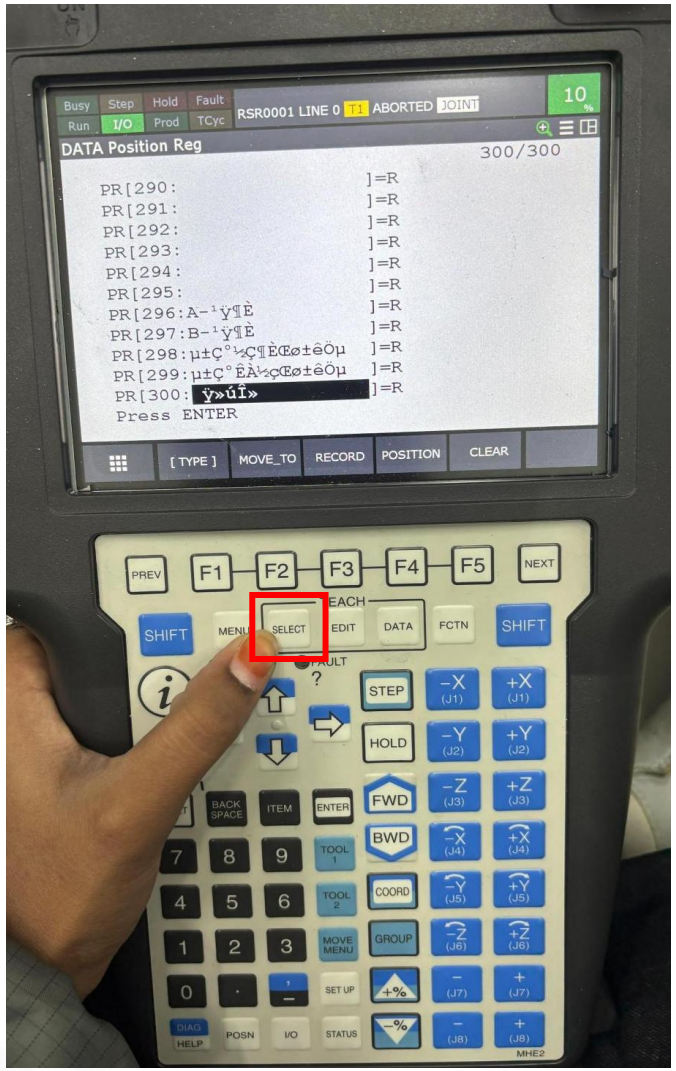


Fig: 12.1

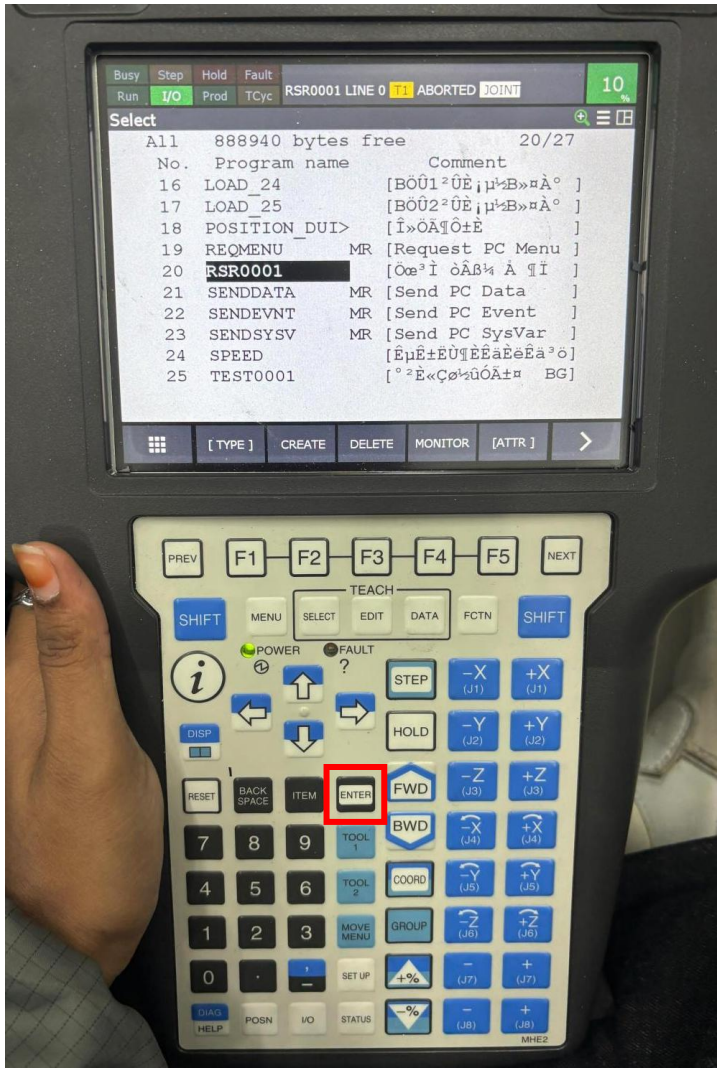


Fig: 12.2

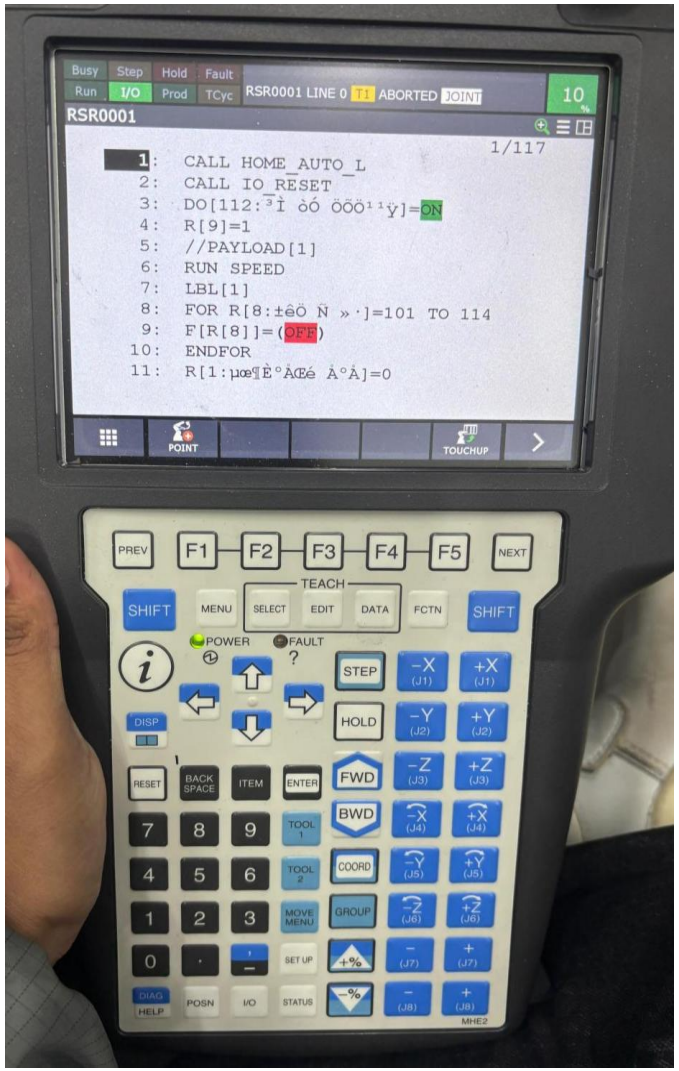


Fig: 12.3

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

Step 12:

After homing successful, Click on “SELECT” for programs list (Fig: 12.1)

Select the main program - RSR0001 from the programs list displayed. (Fig:12.2)
Use the Arrow keys on the teach pendent to navigate through the list.

Open the main program by clicking on “ENTER” button (Fig:12.3)


PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)






Step 13: Turn the nobe into “AUTO” from “T1” in robot controller.

Prepared By : Chandrakala

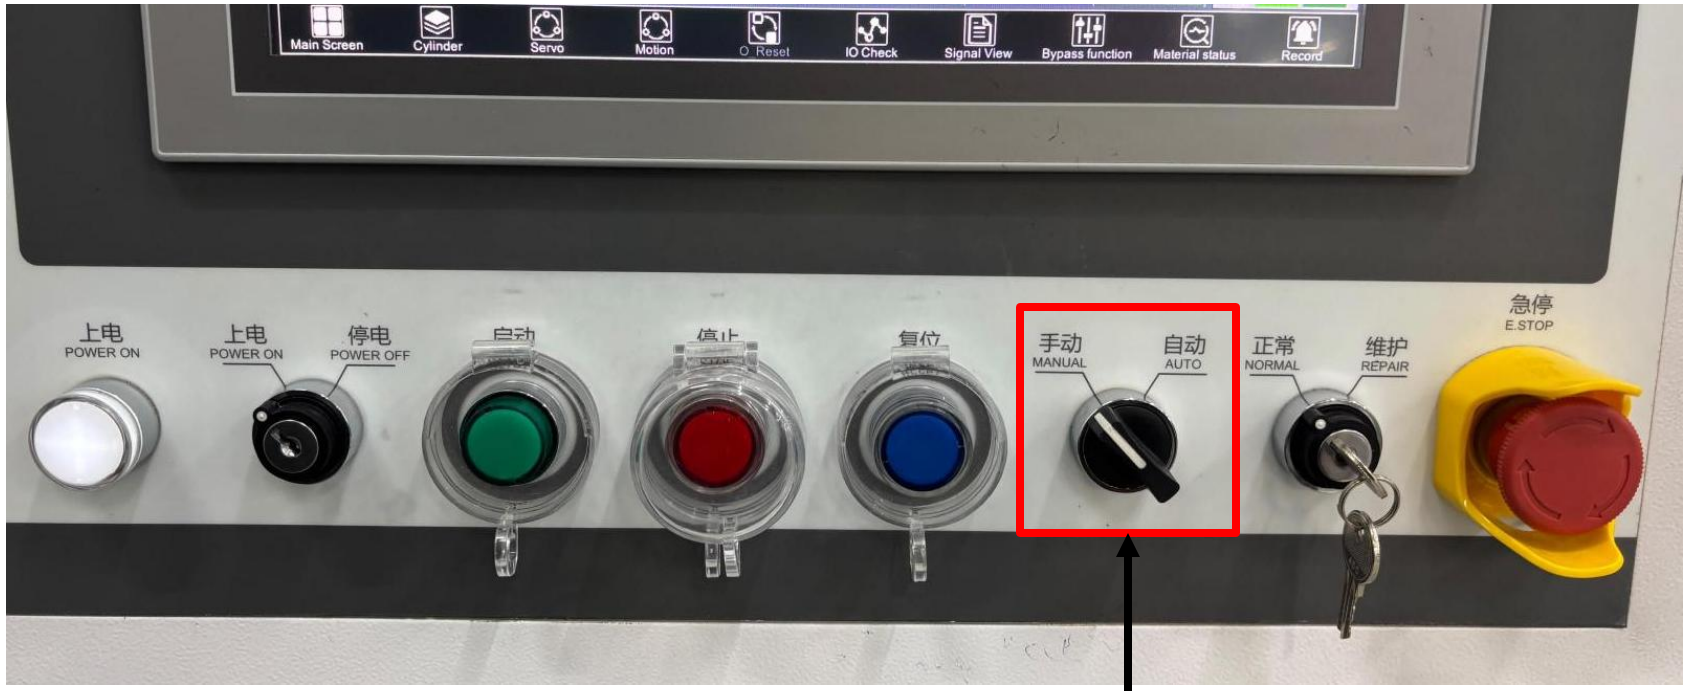


Step 14: Turn the nobe into "Manual" from AUTO of the HMI

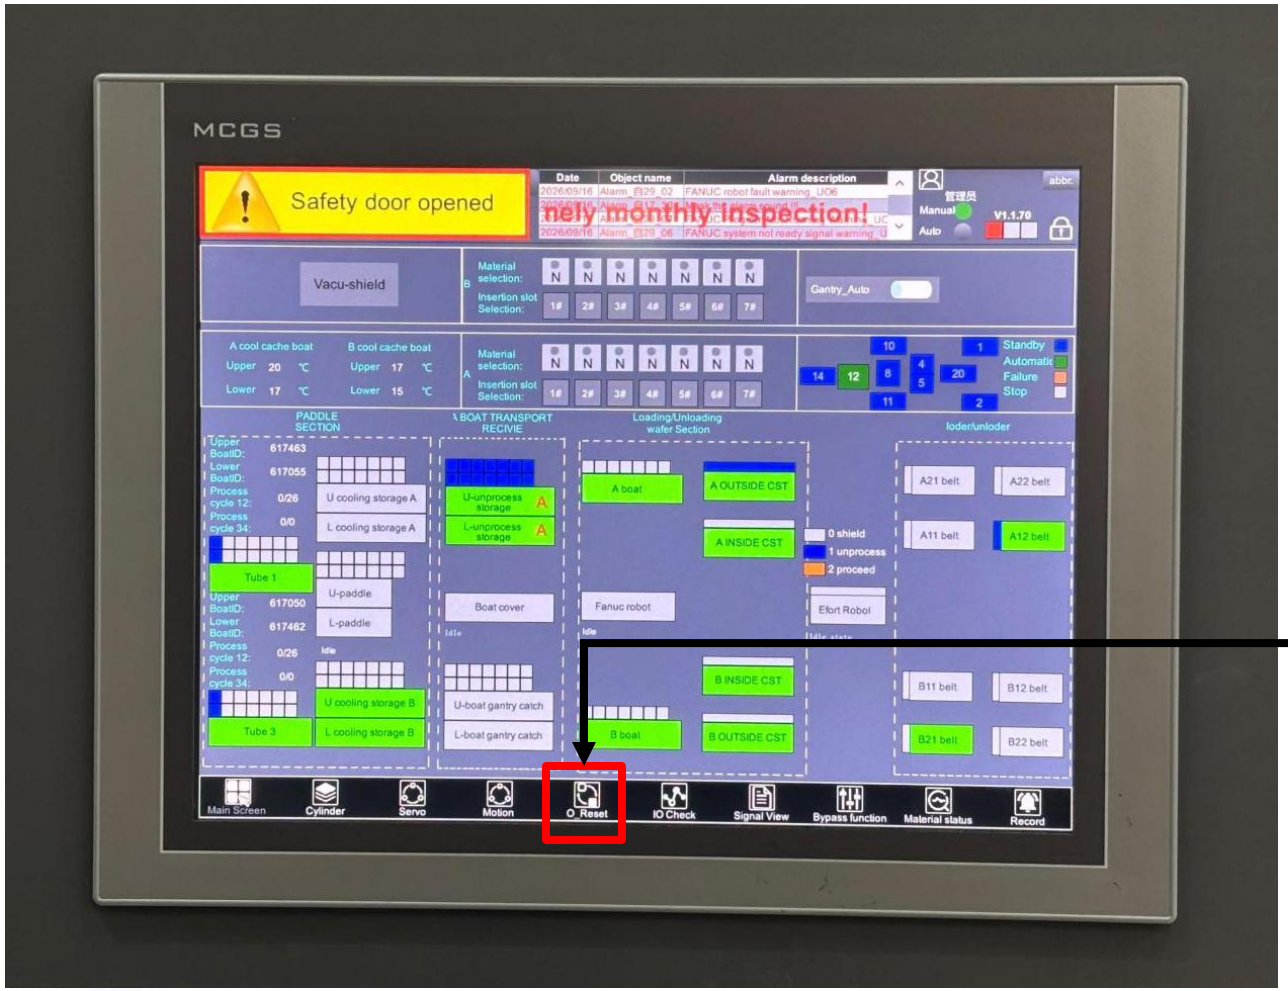

Step 15: Select “O_Reset” in the HMI.

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

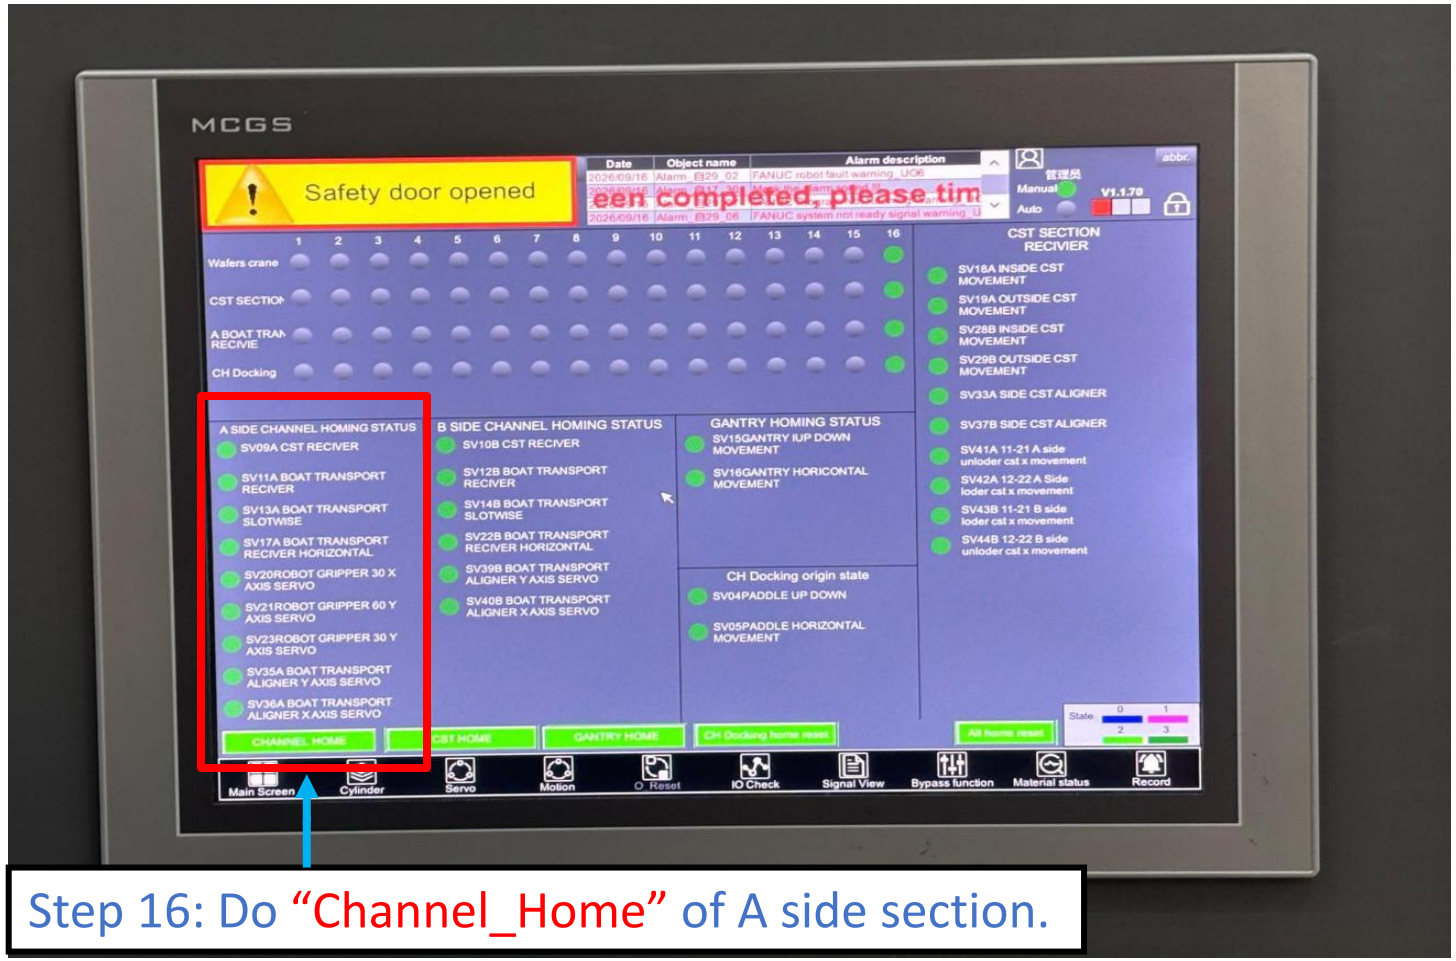

Step 16: Do “Channel_Home” of A side section.

Turn the machine into “AUTO” mode and run.

Prepared By : Chandrakala