




PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

SOP – JSG FANUC Robot Homing

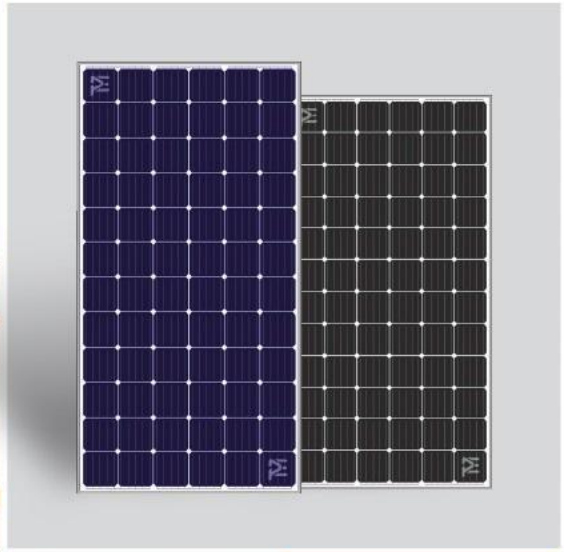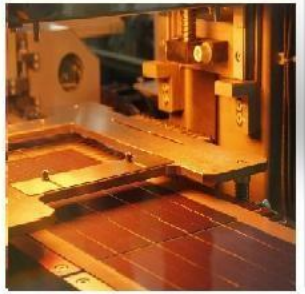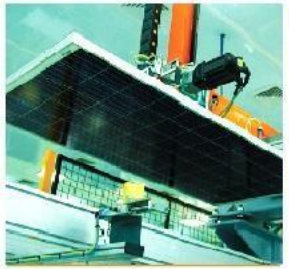

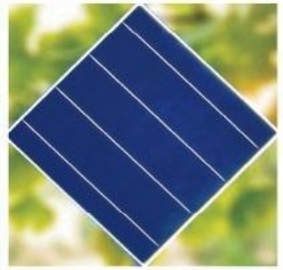

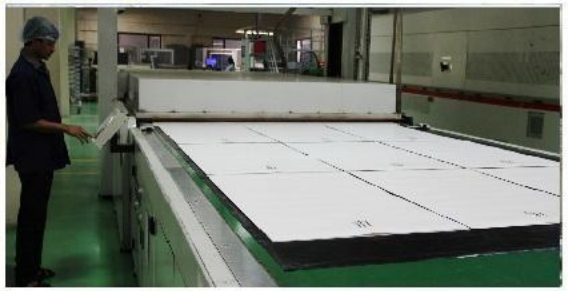


PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)





Step 1: Turn the nobe into “T1” from “AUTO” in robot contoller

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)






Step 2: Turn the nobe into “ON” from “OFF” in robot teach pendent.


Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

Step 3: Click “RESET” button until the FAULT LED turns off.

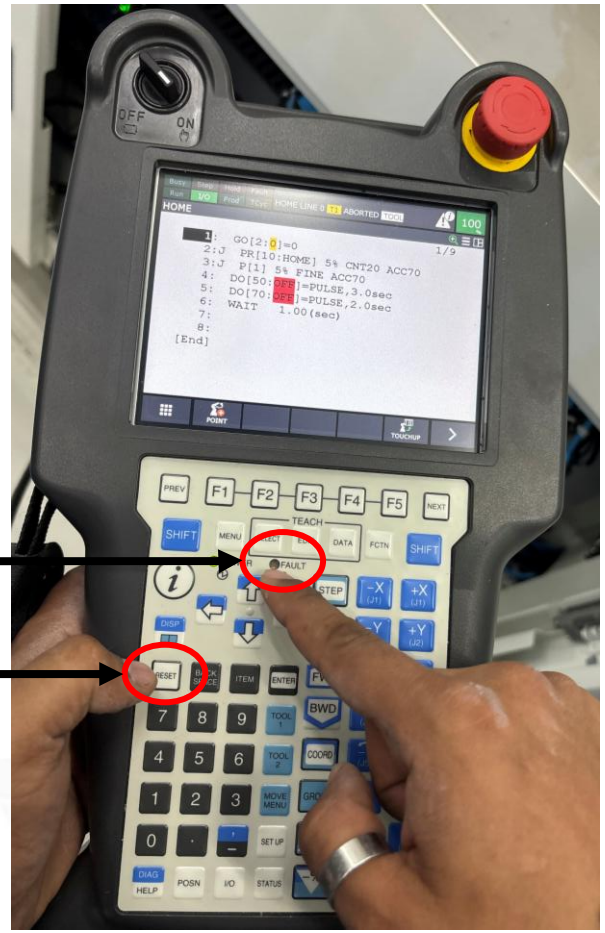

Step 4: Click “SELECT” button to display the program list.

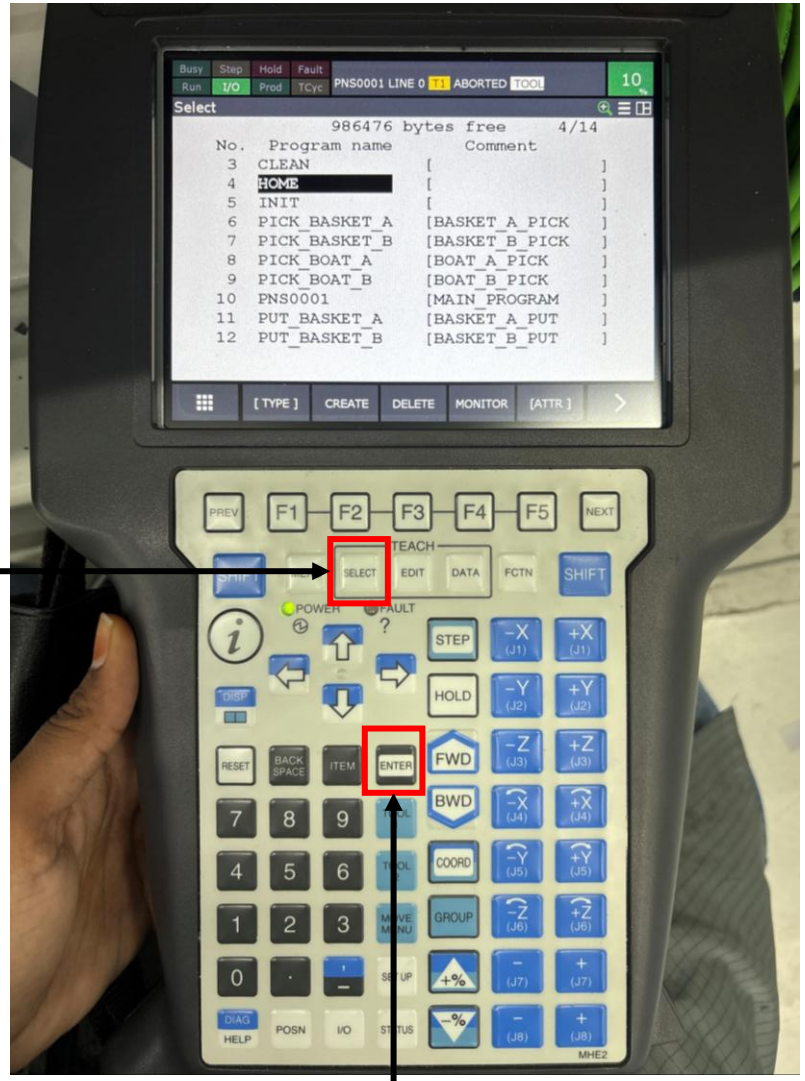


Select the “HOME” program from the programs list displayed.
Use the Arrow keys on the teach pendent to navigate through the list.

Step 5: Click “ENTER” button to open the program.

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

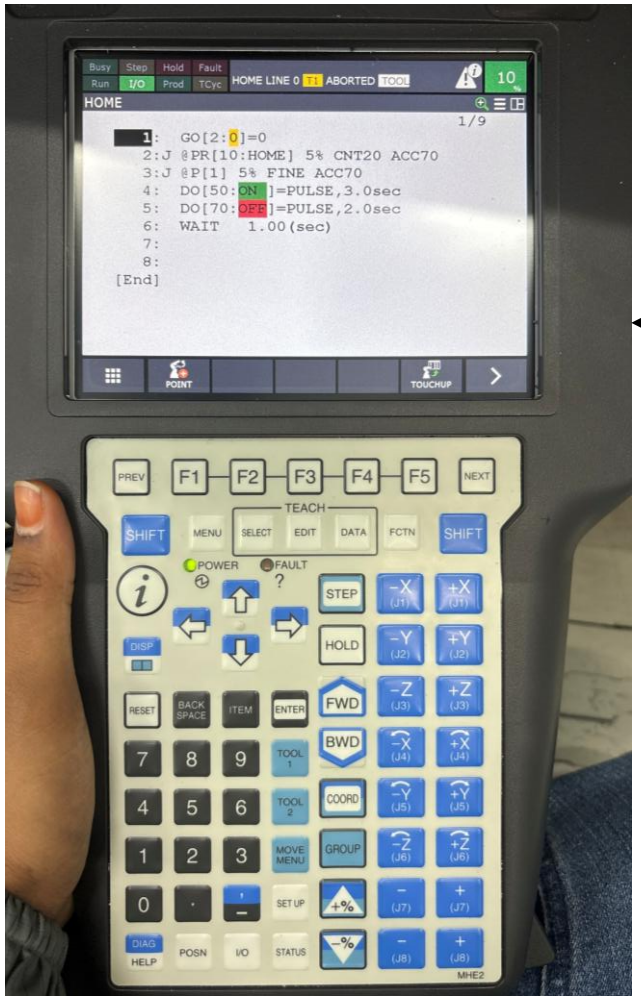

Step 6: The “HOME” program is displayed on the screen.



Step 7: Hold the dead man switch. Located at the backside of teach pendent


NOTE : DEADMAN switch should be hold continuously until the functioning is completed.

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

Step 8: By holding, DeadMan switch. Hold the “SHIFT” key and click “FWD” button.

Robot Homing done successfully.

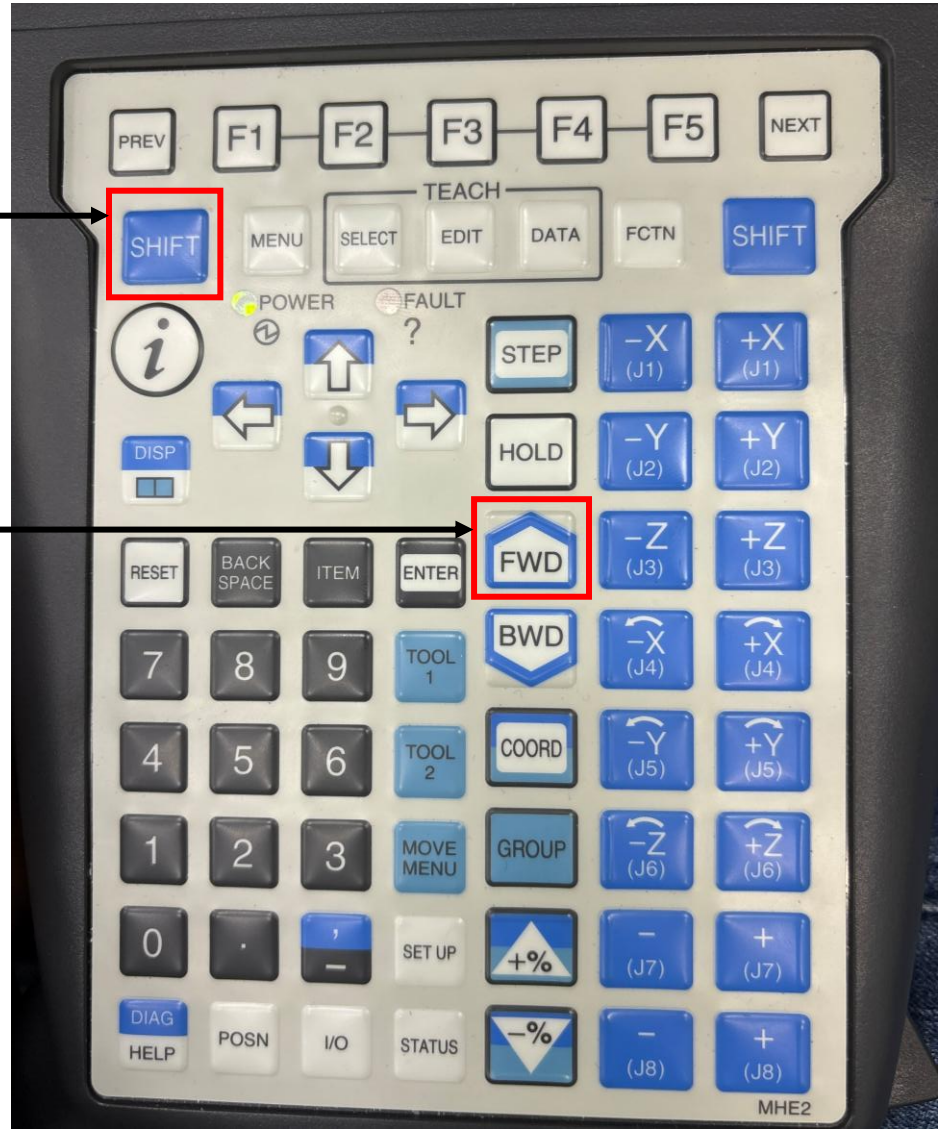

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

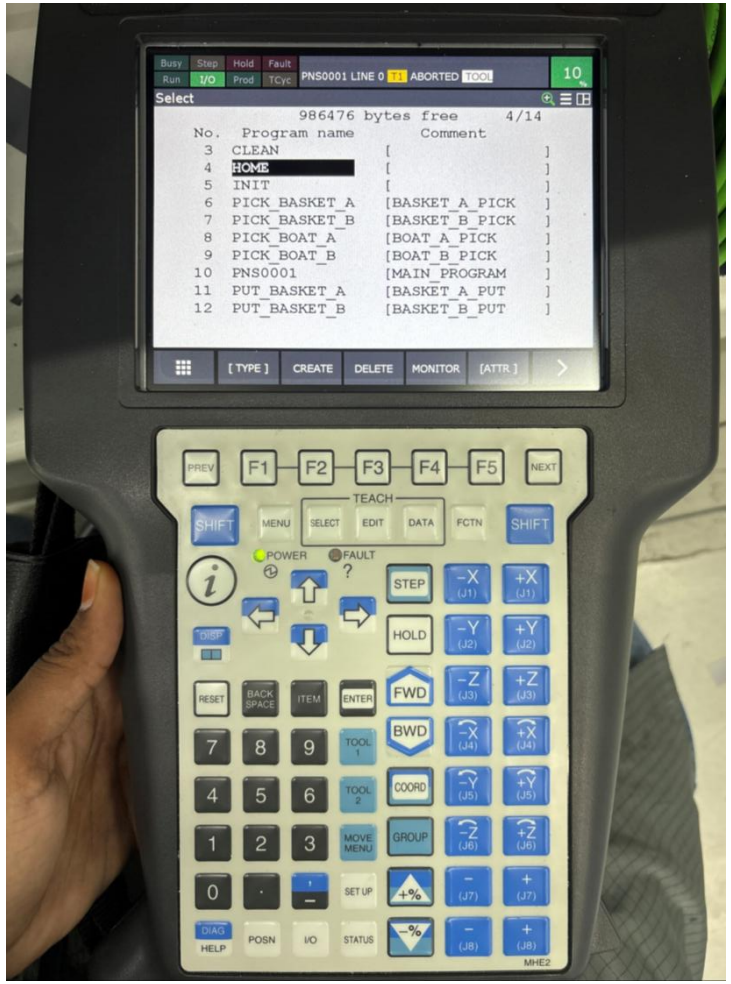


Fig: 9.1

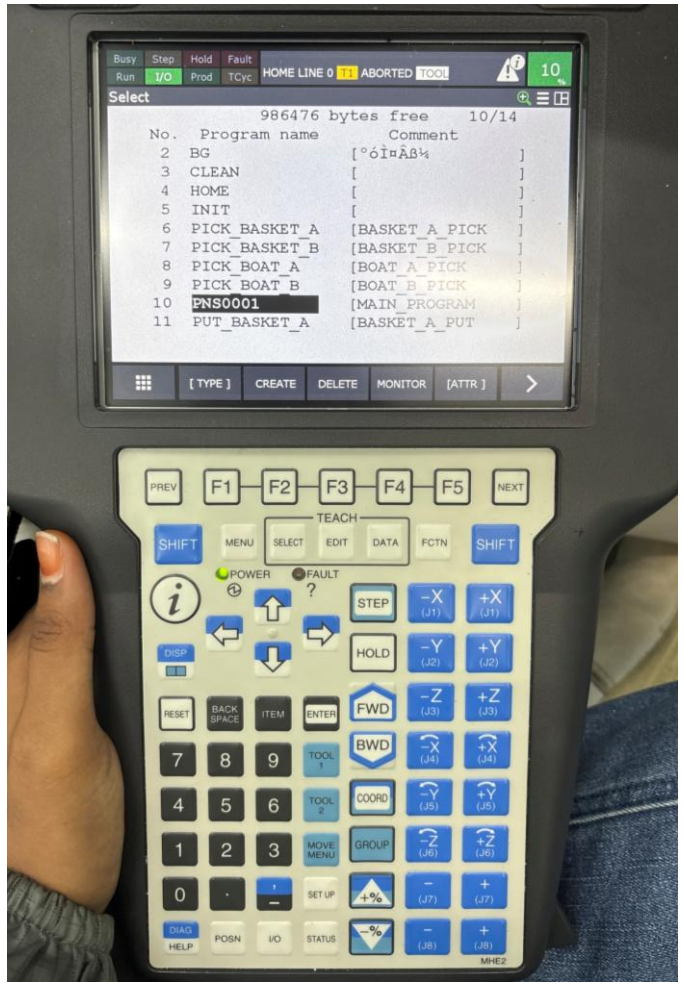


Fig: 9.2

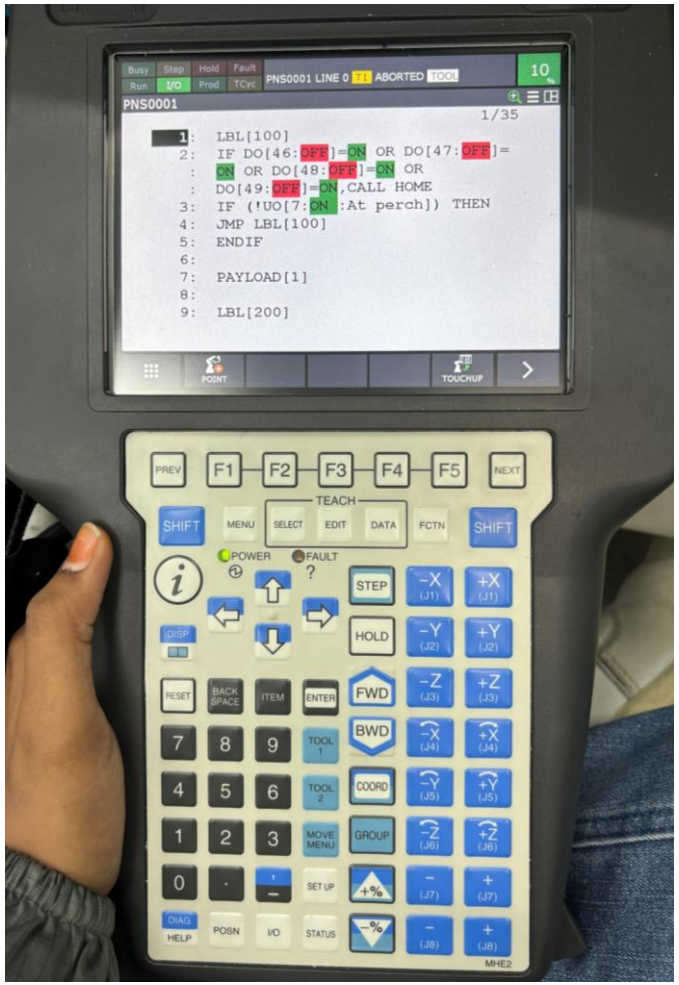


Fig: 9.3

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

Step 9:

After homing successful, Click on “SELECT” for programs list (Fig: 9.1)

↓


Select the main program (Fig:9.2)

↓

Open the main program by clicking on “ENTER” button (Fig:9.3)

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

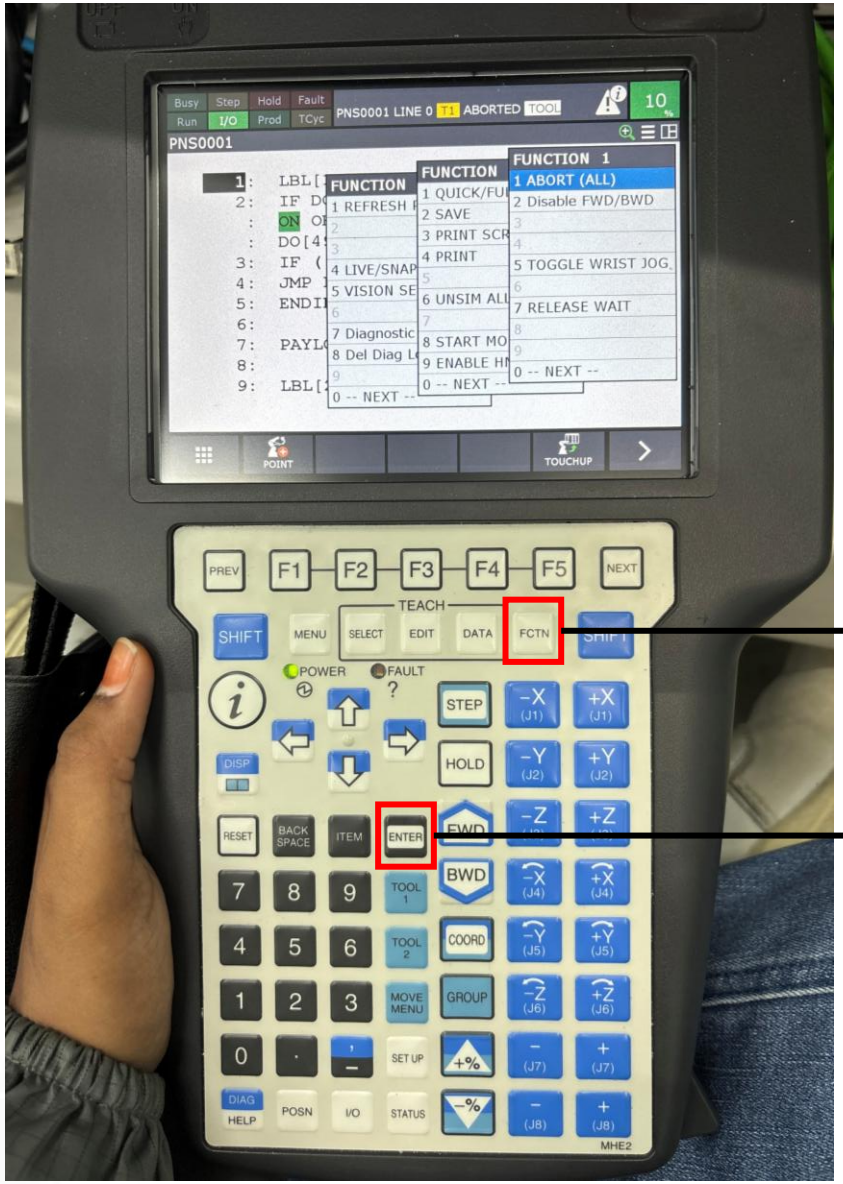

Step 10: Click “FCTN” button and click “ENTER” to refresh all the robot functions. (Repeat it 3-4 times)

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)





Step 11: Turn the nobe into “OFF” from “On” in robot teach pendent.

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)





Step 12: Turn the nobe into “AUTO” from “T1” in robot controller.

Prepared By : Chandrakala




Step 13: In HMI, Select the “Function Control”.

Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)


Step 14: Select “Initialization”.

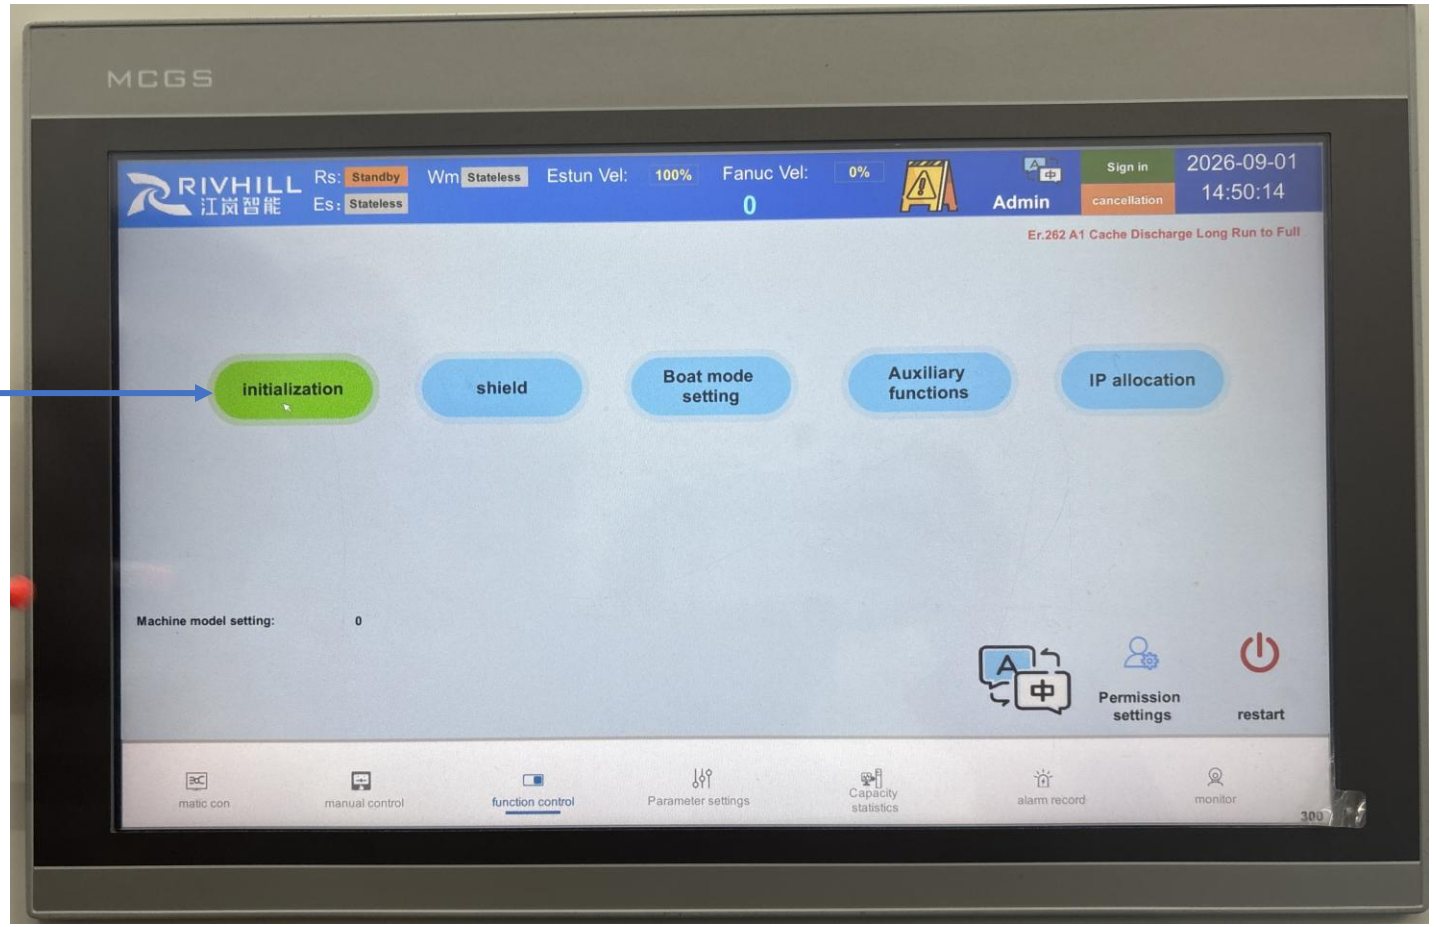


Prepared By : Chandrakala

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)

Step 15: Click and hold “Suction cup” for 2.5sec to complete the initialization.

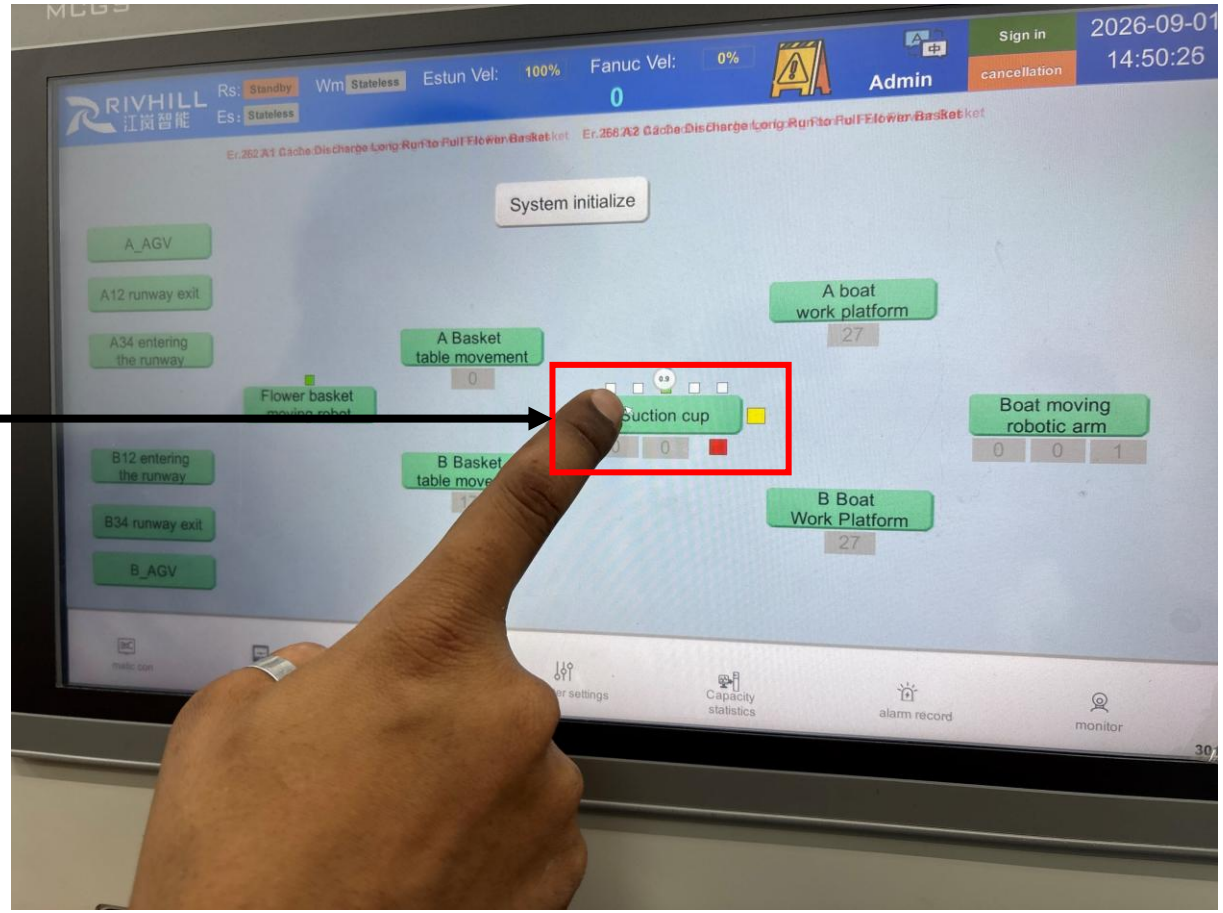

Prepared By : Chandrakala

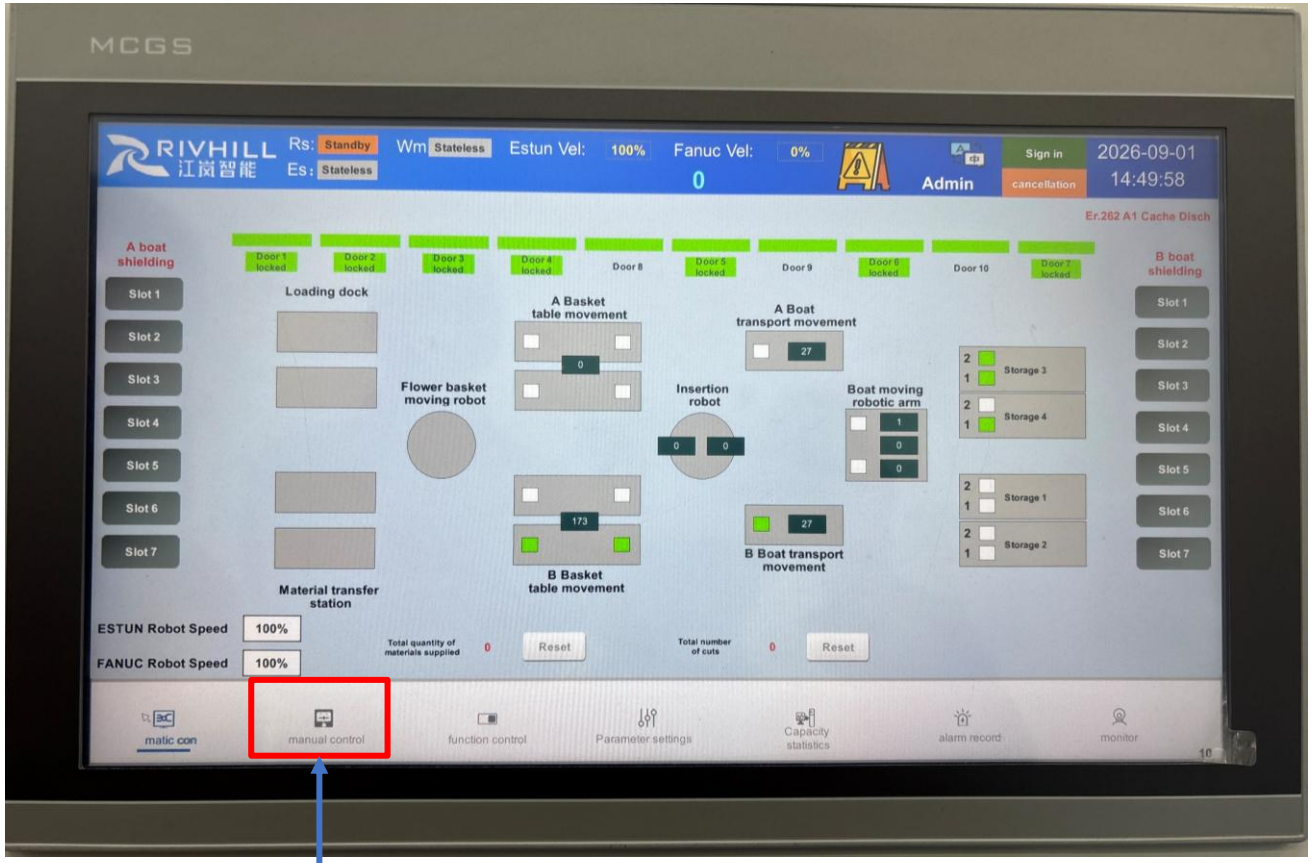

Step 16: Select the “Manual Control”.

PREMIER ENERGIES
(FORMERLY PREMIER SOLAR SYSTEMS)



Step 17: Click “Sucker” → “Suction cup vaccum”.
Tap on “Suction vaccum” and “Break the vaccum” of both sucker A&B.

Turn the machine into “AUTO” mode and run.

Prepared By : Chandrakala