


To centre the PWM output around 0 (and between $+/-VM$), the PWM pin is kept constant, while the direction is flipped using a differential pair.

I think it's called 'Locked-Antiphase'

CS_DIS pulled high to disable. Setting pin3 to low will enable it.

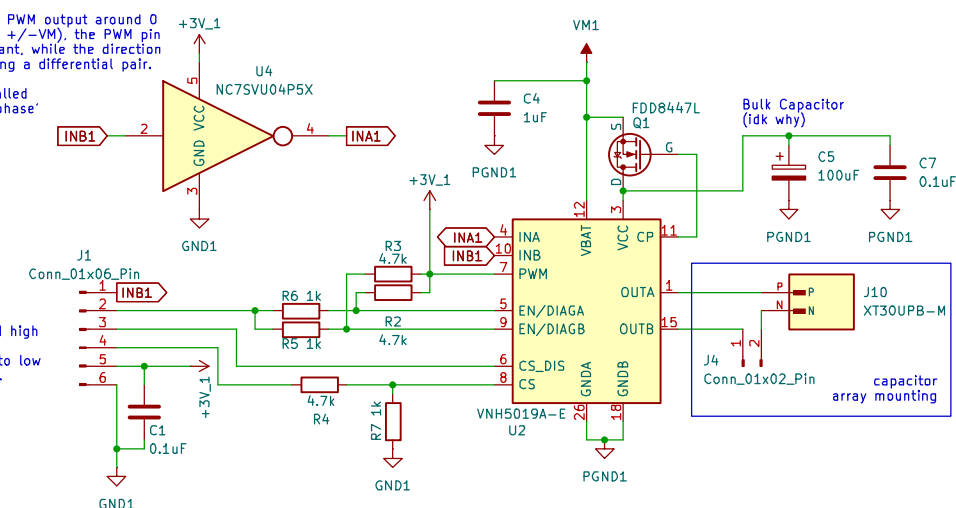

This is the pulse-width modulation (PWM) driver designed to actuate the magnetic coil arrays for the aerial robotics platform. To achieve the required magnetic field strength, the system was specified to drive a continuous current of 2 A per coil at a nominal voltage of 12 V. Consequently, to support the four-coil cluster architecture, each driver unit was engineered to sustain an aggregate continuous current load of 8 A.

Wei Yue, Divij Muthu, Tofic Esses
Kevin Ying, Nikita Lukhanin
UC Berkeley, Liwei Lin Lab

Sheet: /
File: PWM_amp.kicad_sch

Title: Two-Channel Magnetic Coil PWM Driver

Size: A4
Date: 2026-03-04
KiCad E.D.A. 9.0.2

Rev: 1
Id: 1/1