



E-17 pressure alert

Field inspection guide / Cooling circuit

PRIORITY 2

Estimated check: 8 min



Condition summary

An E-17 event can appear when the inlet pressure sensor connection is interrupted after a restart. Keep the unit stopped while completing this visual check.



Before you begin

Confirm the AX-400 is in maintenance mode. Do not open sealed electrical compartments. This demonstration procedure does not replace site safety rules.

1

Confirm the display

Verify that E-17 is active and record the inlet pressure shown on the operator panel.

2

Inspect connector C4

Locate the lower-right sensor connector. Check that the collar is aligned and fully seated.

3


Restart the sensor check

After the connector is secure, run the panel check and confirm pressure returns above 2.0 bar.



Connector C4 verification

Use the visual references below before returning the unit to service.

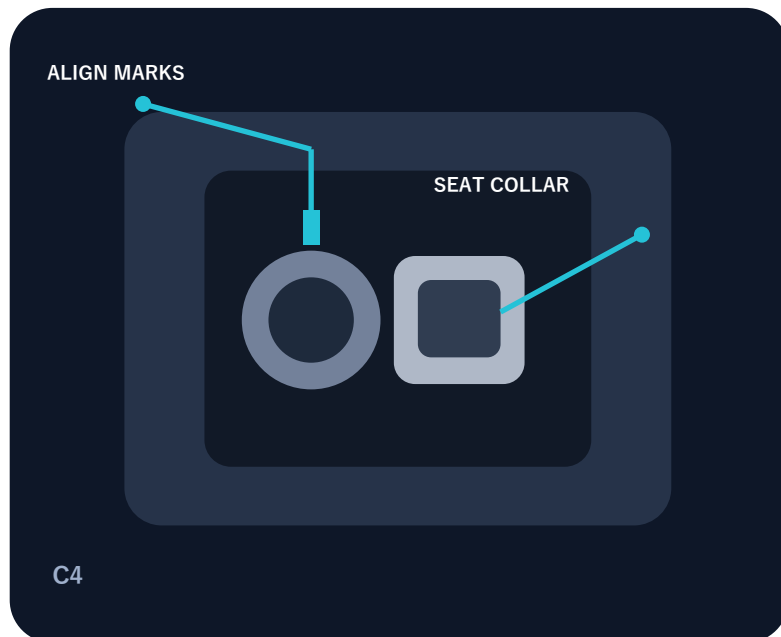

Expected signal

Stable green indicator / pressure above 2.0 bar

PRESSURE READING

1.4 bar

Before check

2.2 bar

After reset

Completion criteria

If E-17 clears and the reading remains stable for 30 seconds, return the unit to standby. If the alert remains, keep the unit stopped and escalate with the panel photo attached.



Translated support thread

Reference this bulletin in the RelayBridge case so the technician, engineer and customer receive the same localized instructions.