英语

LED Display
Product Manual

Contents

Product Overview (3)
Display Ports and Operation (4)
OSD Operation Description(1) (5)
OSD Operation Description(2) (6)
OSD Operation Description(3) (7)
Products Connection (8)
Display Mode (9)
Display Orientation (10)
Mac OS Display Setting (11)
Compatible Devices (12)
Common Problemsand Solutions (13)
Safe Use & Precautions (14)
Product Guarantee (15)

Product Overview

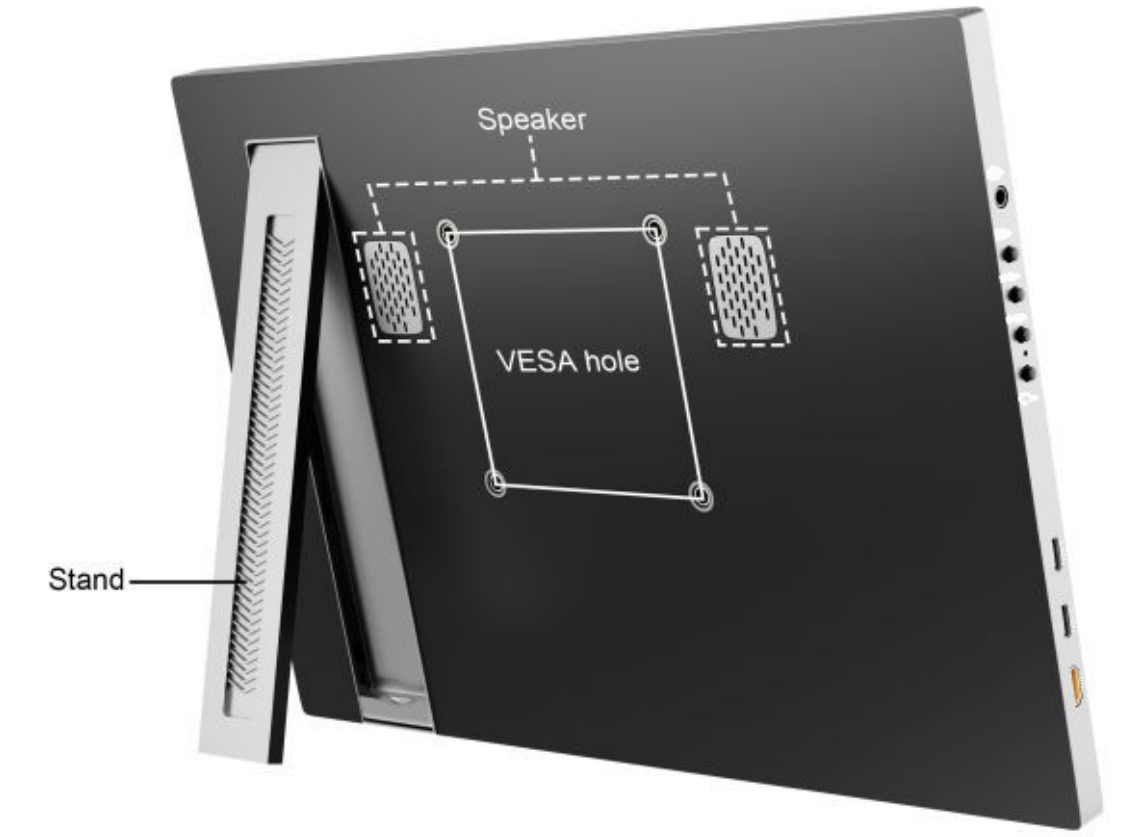

Accessories List

Power supply


Mini HDMI to HDM


Type-C to Type-C


USB to Type-C

Display Ports and Operation

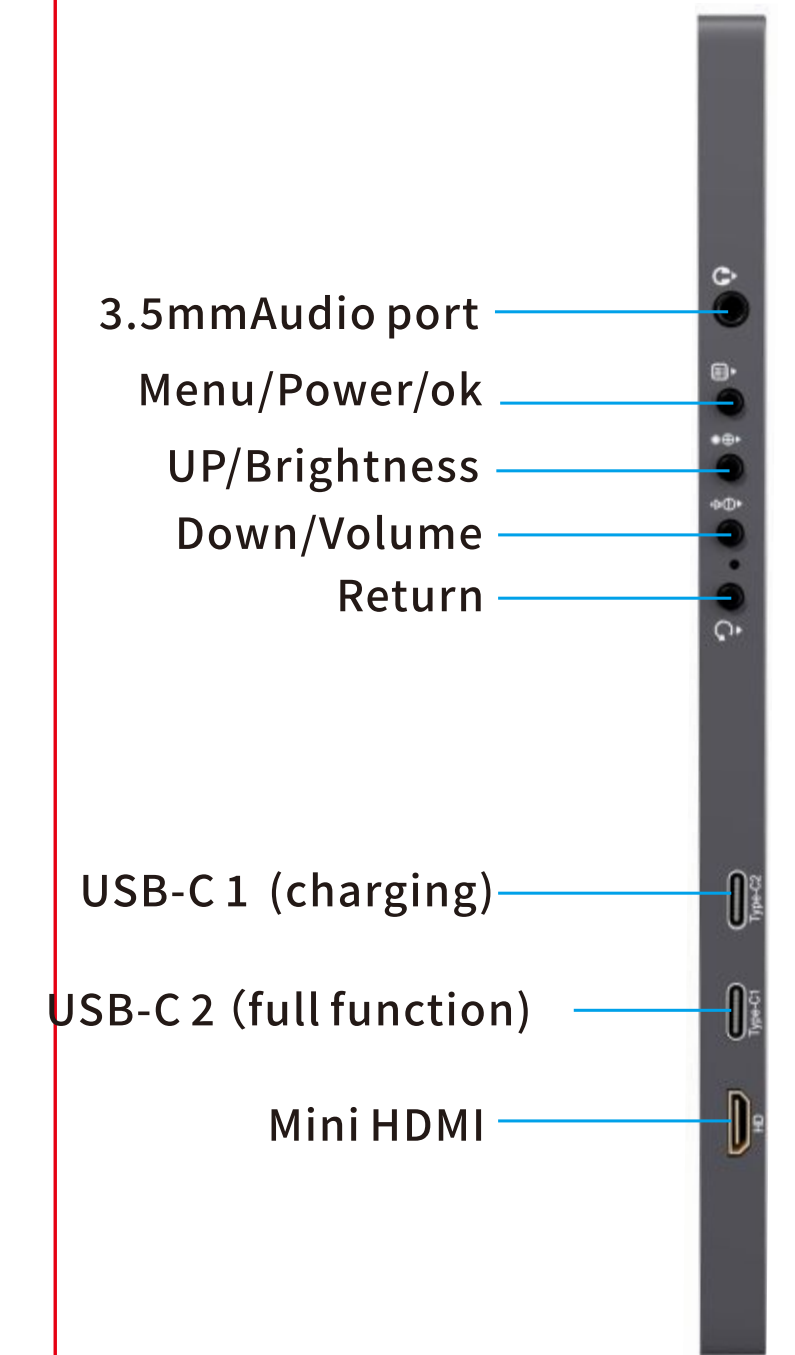

1.Turn on/ off monitor
Long press“power” button 5 seconds

2. Adjust brightness
Press shortcut key “ UP/Brightness”
or press “Menu”button to setting

3. Adjust Volume
Press shortcut key “ Down/Volume”
or press ”Menu“ button to setting

4.Setting Contrast/Color temp/other operation
Press “Menu”button to bring up the OSD panel to set

5. How to confirm/ withdraw the option setting
Press “Menu” button once, confirm setting
Press “Menu” button 2 seconds, withdraw current option setting

OSD Operation Description(1)

How to call up the Setting Menu

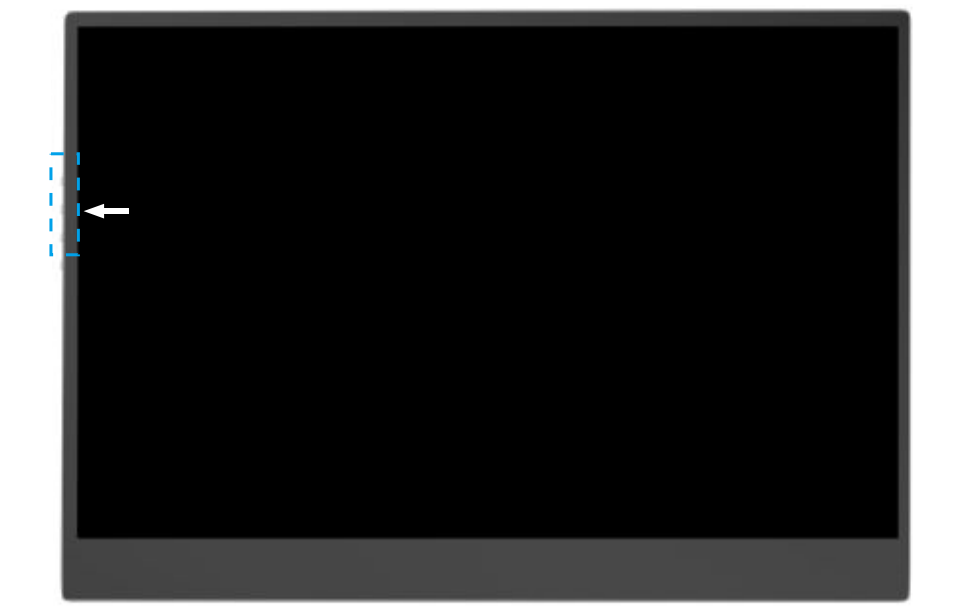

Please press the Menu Key to bring up the OSD menu and adjust the display parameters by keys

Main function icon

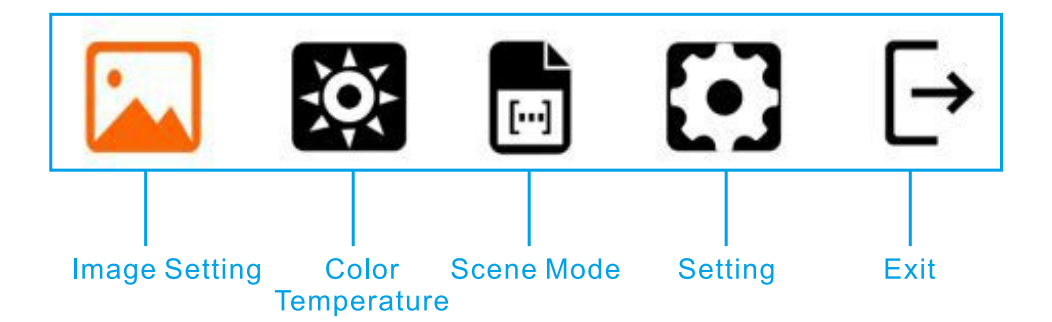

OSD Operation Description(2)

Brightness shortcut

1.Brightness

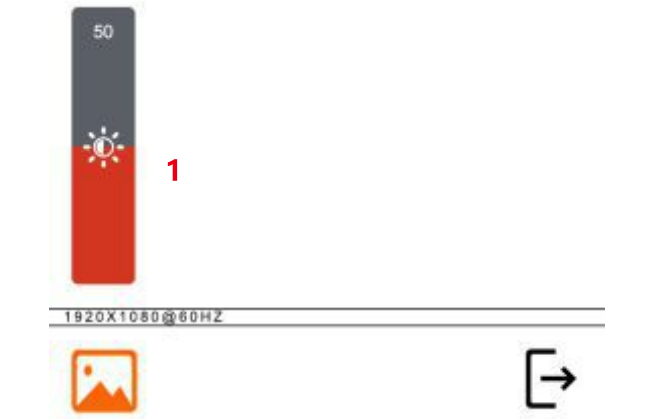

Volume shortcut

1.Volume

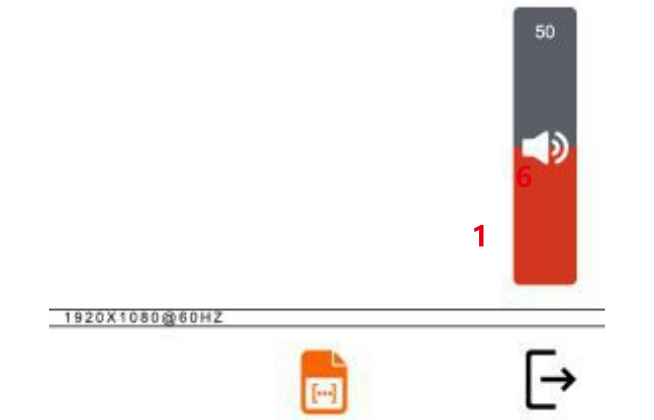

Image Setting

1.Brightness
2.Contrast
3.Saturation
4.Tones
5.Sharpness

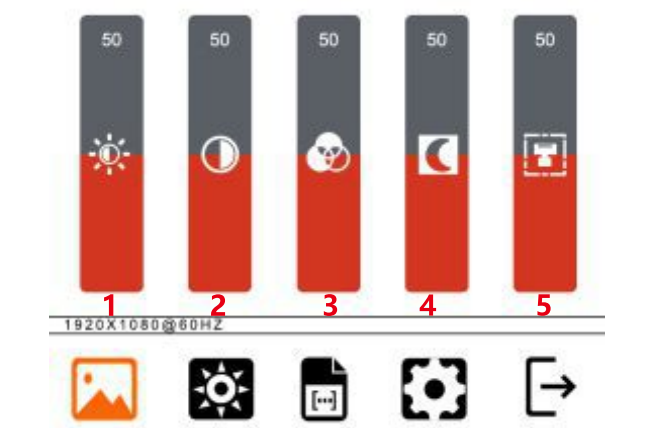

OSD Operation Description(3)

Color Temperature

1.Low Bluelight
2.Red
3.Green
4.Blue
5.Cool Tone
6.Warm Tone
7.User Define

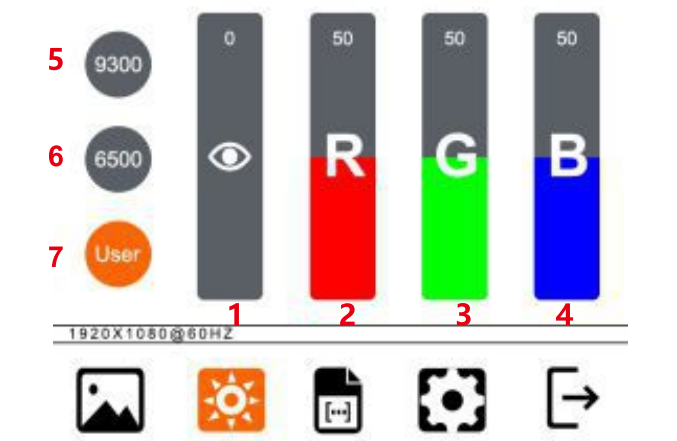

Scene Mode

1.TV Mode
2.Movie Mode
3.Picture Mode
4.Game Mode
5.Eye Protection Mode
6.HDR Mode
7.DCR Auto Brightness Mode
8.Volume Adjustment

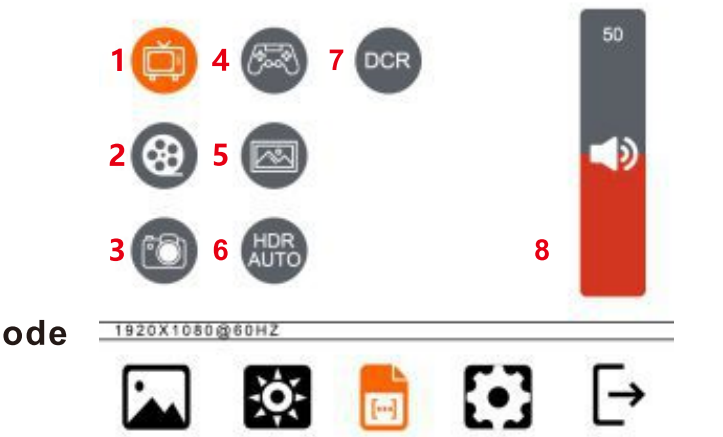

Setting

1.USB-C 1 Signal Source
2.USB-C 2 Signal Source
3.HDMI Signal Source
4.Freesync Mode
5.Reset

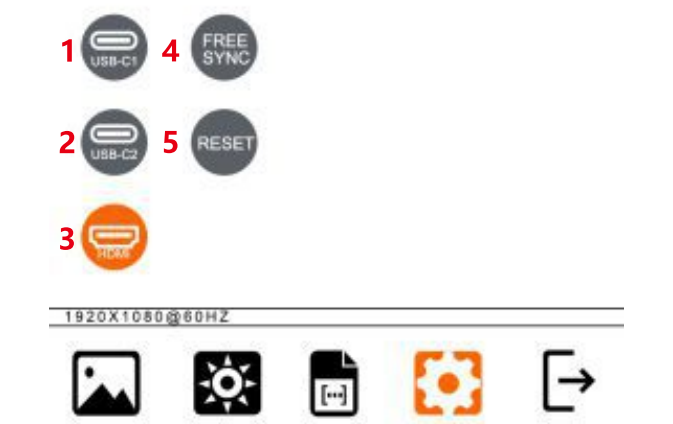

Product Connection(1)

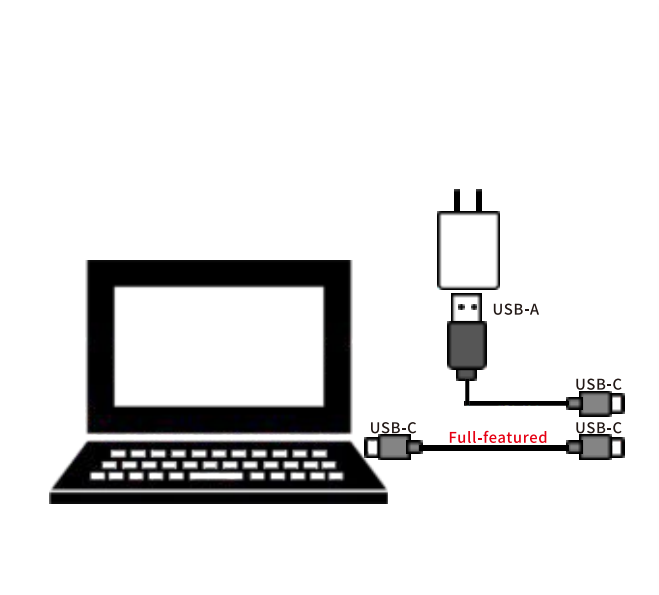

1.Connec via USB-C port
One cable to connect
If power insufficient, use power adapter charging for monitor

NOTE: this connect method require the laptop/ desktop/phone MUST have full featured port, otherwise don't work.

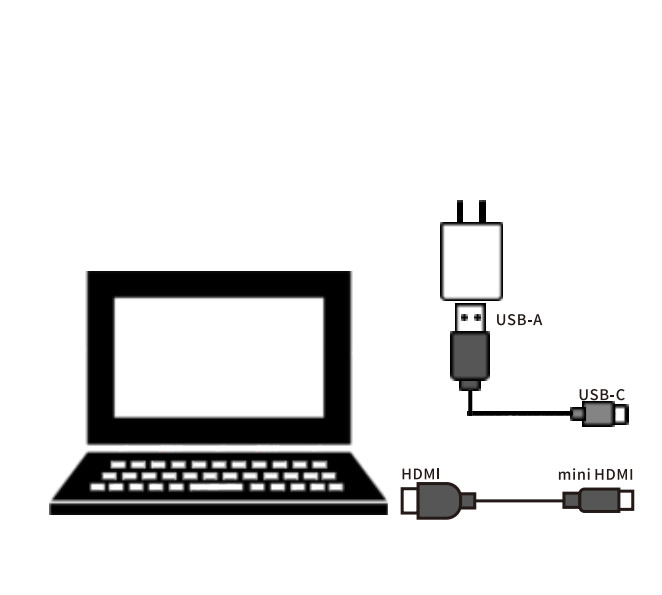

2.Connect via mini HDMI port
Two cable to connect
mini HDMI to HDMI
Charging cable

Display Mode

Computer display settings:
Right click the computer desktop> "Display Settings” > Right column option

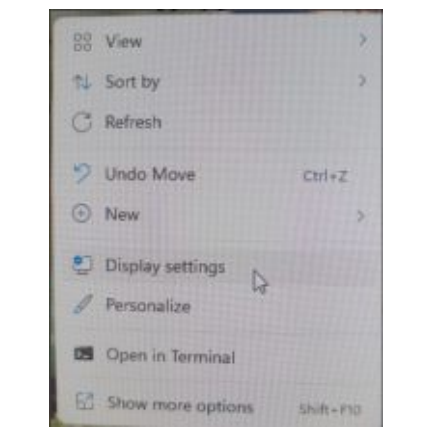

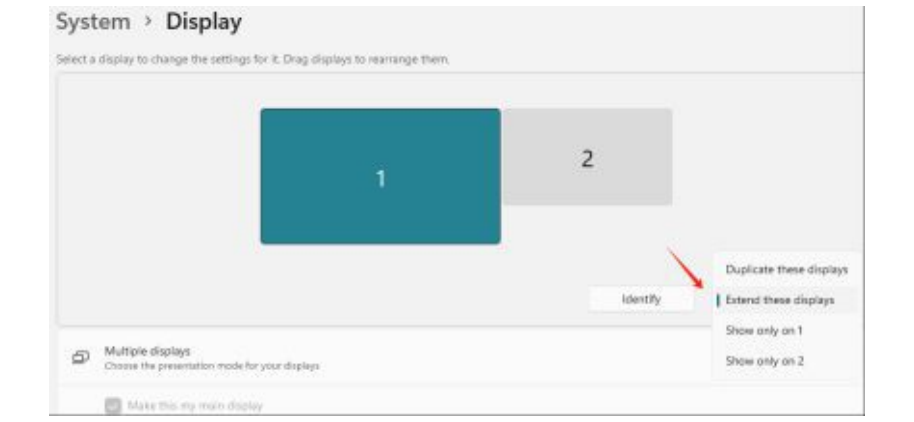

Select a display to change the settings for it. Drag displays to rearrange them.

How to extend a second screen on the left side

-Right click on the desktop and select "Display settings”.
-In the top section of that window, you will see an image of each screen with numbers.
-Press and hold the left mouse button and drag that image to the opposite side of the image on the right and release the mouse cursor.
-Click Apply.

Rearrange your displays

Select a display below to change the settings for it. Press and hold (or select) a display,then drag to rearrange it

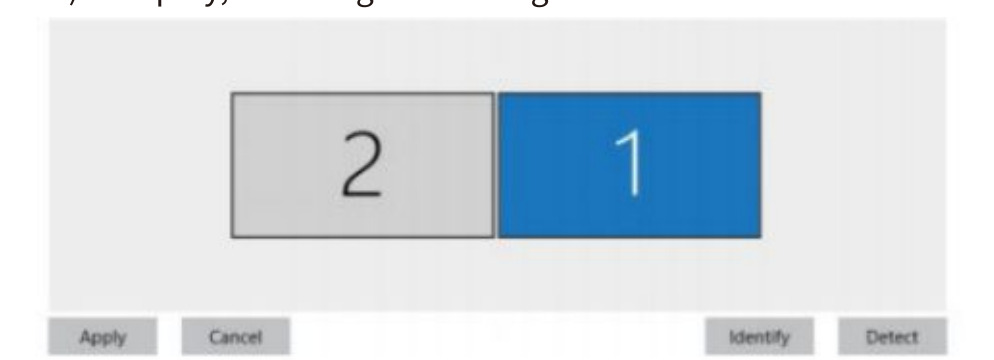

Display Orientation

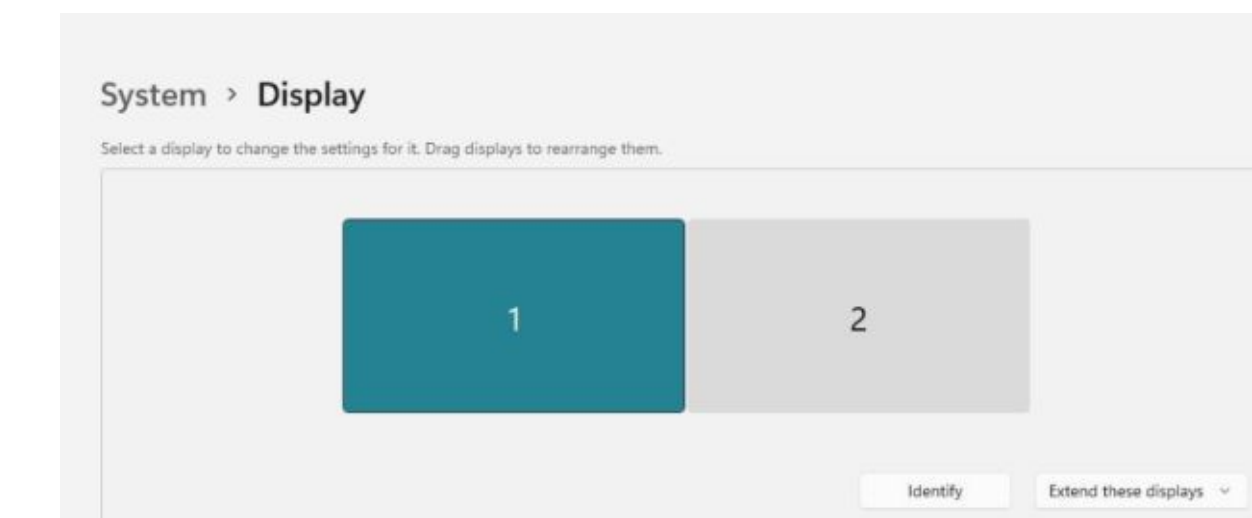

Select a display to change the settings for it. Drag displays to rearrange them.

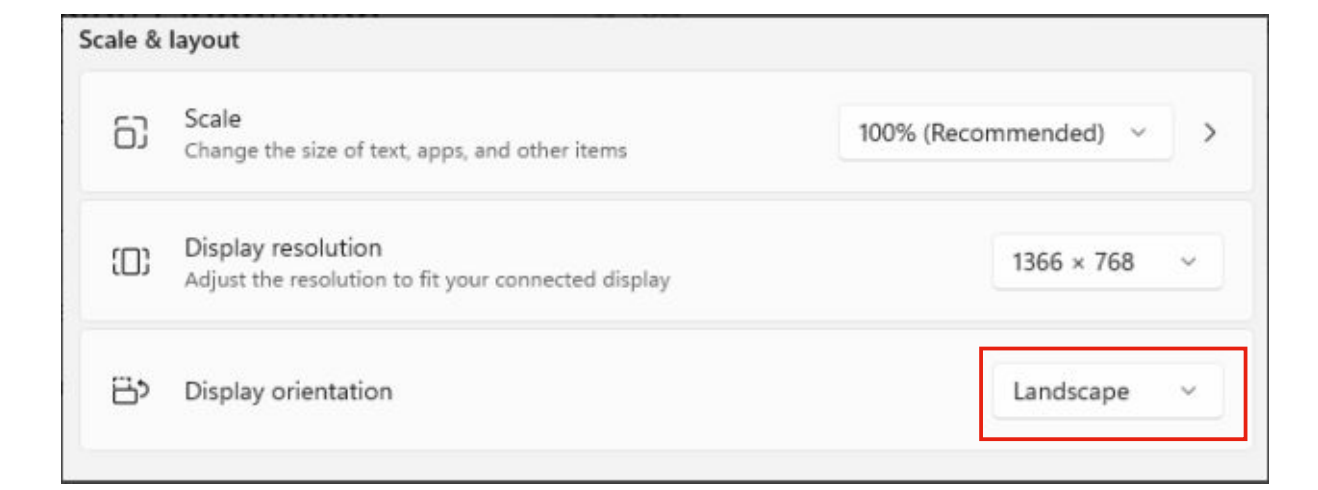

Scale & layout
Scale — Change the size of text, apps, and other items — 100% (Recommended)
Display resolution — Adjust the resolution to fit your connected display — 1366 × 768
Display orientation — Landscape

Right click the computer desktop> Display Settings > Scroll down to “ Scale&layout” > Display orientation> Right column option

1.Duplicate mode：
computer and monitor would synchronize display orientation

2. Extend mode:
choose “display 2” > scroll down “ Scale&layout” > Display orientation> Right column option , only “display 2 “ turn orientation

Mac OS Display Setting

Mac OS

- Choose Apple menu · > System Preferences, click Displays.
- Click the Arrangement tab.
- Make sure that the Mirror Displays checkbox isn't selected for Extend Mode or is selected for Mirror Mode.

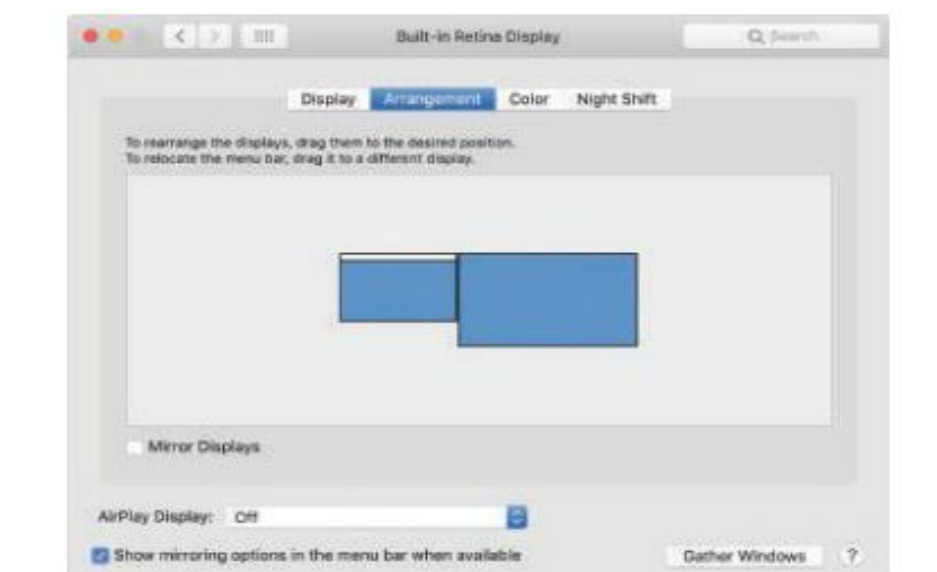

To rearrange the displays, drag them to the desired position.
To relocate the menu bar, drag it to a different display.
☐ Mirror Displays
AirPlay Display: Off
☑ Show mirroring options in the menu bar when available

Using the Portrait/Landscape Mode

Mac OS

- Choose Apple menu >System Preferences.
- Hold down the Cmd+Option(Alt) keys and click on "Displays
- Look for the newly visible Rotation' drop down menu.

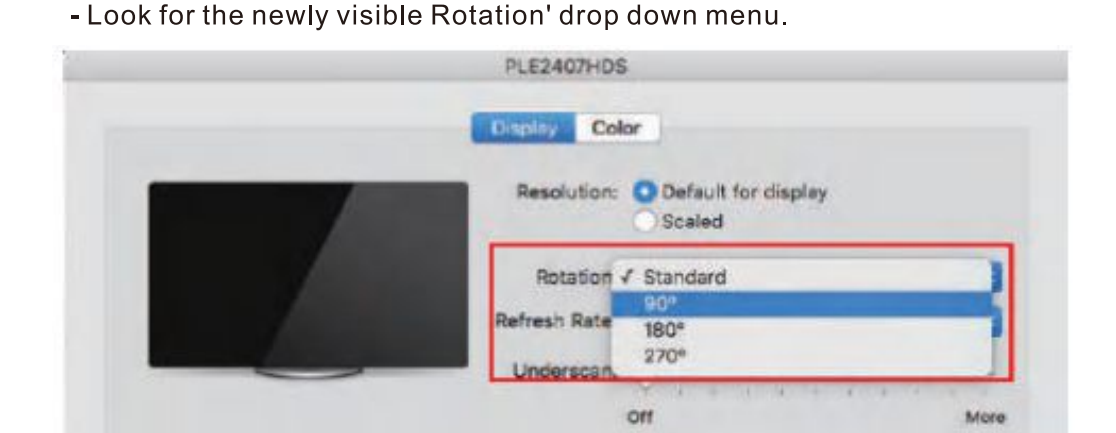

Resolution: ● Default for display ○ Scaled
Rotation ✓ Standard / 90° / 180° / 270°
Refresh Rate
Underscan

Compatible Devices

3. Connecting a Type-C device
Connect each end of the Type-C to Type-C cable to a display and a third-party device such as a Mac Book, smartphones, etc. to achieve a one-cable direct connection.
Note: This display only supports devices with a full-featured Type-C (USB 3.1) port. Some Type-C devices have Type-C ports for charging only and cannot support video and audio signal transmission. Therefore, if your device does not have a full-featured Type-C port, it may not be recognized by the display when connected.

4. Connecting headphones
This monitor comes with a 3.5mm audio output jack, which allows you to connect third-party audio devices to the monitor, such as headphones, Audio, etc.

Compatible Devices

DVD	monitor	Desktop PC	notebook
PS4/PS5	Switch	XBOX	mobile

Common Problems and Solutions

Please read and keep this instruction manual carefully, if you have any questions, please follow the product instructions operate this product.

Problem and solution

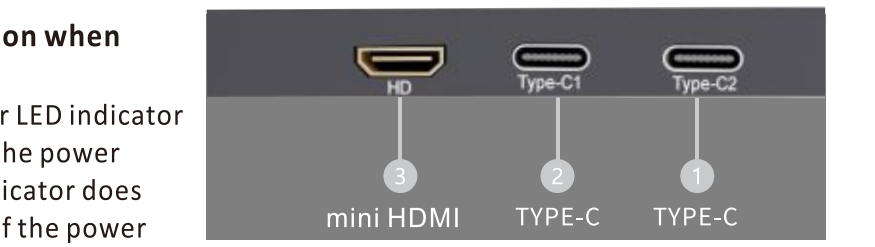

1. Display does not turn on when the power is connected
Please check if the monitor LED indicator lights up, red light means the power supply is normal. If the indicator does not light up, please check if the power supply is connected correctly or replace the power cord/power adapter to re-connect.

2. Display comes to sleep mode after connecting the power supply
Please check whether the power supply can provide the voltage and current to meet the normal running of the monitor.

3. Display shows no signal
Please check the device connected is on; check whether the signal transmission cable (HDMI, Type-C) is connected properly; try to connect other devices or use other signal cables to connect the display.

4. No sound after connecting other devices
Please check whether the volume of your device is not turned on; please check whether the audio output device has been connected by other devices, such as headphones, or other speakers; please check whether your device needs to change the default audio output device.

5. Connected Type-C phone/laptop, but cannot mirror the phone/laptop screen
Please check with your device manufacturer if the phone/laptop has a full-featured Type C interface. Since some mobile phone/laptop Type C interfaces are for charging only and cannot transmit audio/video signals, therefore it cannot compatible with this display.

6. Display screen flicking
Please check if both ends of the HD cable are connected properly. If it is, try to replace it with another HD cable to test the monitor; please check if there is any interference from other electronic devices near the monitor, or if the screen flicking is caused by insufficient power supply.

Safe Use & Precautions

Please read and keep this instruction manual carefully, and follow the instructions shown on the product itself operate this product. Please note the following instructions before use:

Install

01

Please place this product on a stable table
When using the holster, keep the holster steady.

02

Do not place this product in high temperature, humidity and sunlight Places that can be directly irradiated: e.g. indoor bathrooms, kitchens swimming pools etc.

03

The monitor screen is fragile, please do not press the screen hard easy to cause damage

04

If the monitor is damaged, do not disassemble it without permission

05

This product is a household product, not suitable for installation and in-vehicle Airplane and ship use

Product Guarantee

Product certification

product name		Executive standard	
model		Specification	
Origin	Longhua District, Shenzhen City, Guangdong Province		
inspector			

This product is allowed to leave the factory after passing the inspection

Certified company

warranty card

Purchase type		Warranty time	
user name		document number	
Purchase date		purchase shop	
Purchase model		Maintenance reason	

The shelf life of this product is 12 months, and the shelf life is calculated from the date of purchase; the following conditions are not within the scope of the Three Guarantees;

1. Exceeding the three-guarantee period
2. Damage caused by improper use.
3. Damage caused by dismantling by non-company maintainers and force majeure factors (such as earthquakes, tsunamis, mudslides...)

Compliance Statement

CAN ICES-003(B) / NMB-003(B)

English:
This Class B digital apparatus complies with Canadian ICES-003.

Français:
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Model: HD-140
Brand: Showscren
Manufacturer: Shenzhen Kenowa Electronics Co., LTD