



TORNADO

OWNER MANUAL

دليل المالك

LED TV Product

منتج تلفزيون ليد

ES3300E

ES3300G

ES3300X

US3300E

US3300G

US3300X

US5300E

US5300G

US5300X

Chapter 1: Introduction

Precautions	3
- Product	3
- Power and Plug	3
- Power Cord and Signal Cable	3
- Use Environment	3
- Cleaning	3
- Hanging the Apparatus on the Wall	3
- Batteries	3
- Apparatus Exterior Appearance.....	4
- Buttons on the Apparatus	4
- Sockets	4
Remote Control Functions	5

Chapter 2: Connections and Setup

Switching On	6
Switching Off	6

Chapter 4: Advanced Functions

Attention and Frequently Asked Questions	12
Reference section	12

Chapter 5: Other Information

Troubleshooting	13
Base Installation	13
Accessories	13
Important Notes.....	14

Chapter 6: Instruction

Important Instruction	14
-----------------------------	----

Life Time

ELARABY is committed inside Arab Republic of Egypt to provide maintenance and spare parts after the warranty period by a cost for 1 year.

Precautions

Read all of the instructions before operating the set. Keep these instructions well for future use.

Product

- Do not block or cover the ventilation openings on the back cover.
- Do not push objects of any kind into this unit through the cabinet slots as they could touch the current carrying parts or short-circuit parts, resulting in fire, electric shock or damage to the unit.
- Do not attempt to open the cabinet as this may cause damage. There are no parts inside you can service by yourself. Refer all maintenance to qualified personnel.
- Do not touch the screen surface with fingers as this may scratch or mar the apparatus screen.
- Do not impact the apparatus screen with hard pressure as this may damage the apparatus screen severely.

Power and Plug

- Unplug the set under the following conditions:
 - If the set will not be used for a long period of time.
 - If the power cord or the power outlet/plug is damaged.
- Follow the instructions to install and adjust the product. Adjust those controls that are covered in this operating instructions as improper adjustment of other controls may result in damage. If this happens, unplug the set and refer to the service personnel.
- If the set is subject to impact or has been dropped to have the cabinet damaged.
- Where the mains plug or an appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.

Power Cord and Signal Cable

- Do not allow anything to rest on or roll over the power cord and the signal cable.
- Protect the power cord and the signal cable from being trampled.
- Do not overload the power cord or the power outlet.
- Do not expose the power cord and the signal cable to moisture.

Use Environment

- Do not place the set on an unstable cart, stand or table.
- Place the set on a place that allows good ventilation.
- Do not use the set near damp and cold areas. Protect the set from overheating.
- Keep the set away from direct sunlight.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases shall be placed on the apparatus.
- Do not use the set near dust place.

Cleaning

- Dust the set by wiping the screen and the cabinet with soft, clean cloth or some special liquid cleaner.
- Do not apply excessive force to the screen when cleaning.
- Do not use water or other chemical cleaner to clean the screen as this may damage the surface of the apparatus screen.

Hanging the Apparatus on the Wall


Warning: This operation requires two people.

To ensure a safe installation, observe the following **safety notes:**

- Check that the wall can support the weight of the apparatus set and wall mount assembly.
- Follow the mounting instructions provided with the wall mount.
- The apparatus must be installed on a vertical wall.
- Make sure to use only screws suitable for the material of the wall.
- Make sure that the apparatus cables are placed so that there is no danger of tripping over them. All other safety instructions about our apparatuses are also applicable here.

Warning: To prevent injury, this apparatus must be securely attached to a stable surface/ Wall in accordance with the installation instructions. Install the TV in a horizontal, stable location.

- To secure the TV, use a sturdy strap from the Hook(s) on the rear of the TV to a wall stud, pillar or other immovable structure. Make sure the strap is tight, secure, and parallel to the floor.
- Never stand or climb on the TV. Educate children about the dangers of climbing on furniture to reach the TV or its controls. Be especially careful in households with children to prevent them from climbing on top of the TV. It may move, fall over, break, become damaged or cause an injury.

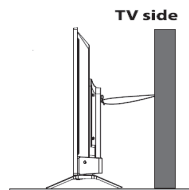


Batteries

- The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.
- Remove batteries when the remote control is not to be used for a long time. Batteries left in equipment may cause damage through deterioration and corrosive leakage, invalidating the guarantee.
- Risk of explosion if batteries are replaced by an incorrect type. Replace only with the same or equivalent type recommended by the equipment manufacturer.
- To protect the environment use local recycling facilities for battery disposal. Dispose of used batteries according to the instructions.

Apparatus Exterior Appearance

Note: The actual exterior of the apparatus may vary from image on the carton box, according to the apparatus model.

ES3300E

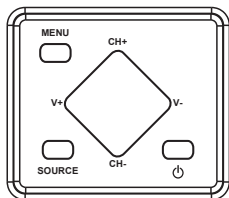

MENU button

Press it to display menu.

CH+/- button

Navigates up/down through the channel list.

V+/- button

Increases/decreases the volume.


SOURCE button

Press it to change input source.

⏻ button

- The apparatus is at ON mode .
- Press it for turning the apparatus to Standby mode.
- The apparatus is on Standby mode
- Press it for turning the apparatus to On mode.

US3300E/X/G & US5300E/X/G

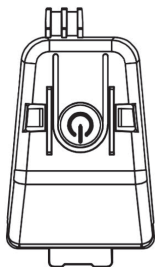

⏻ button

- The apparatus is at on mode:
Short press the button to select menu
(Power off, Inputs, Program up/down, Volume up/down) Long press to confirm the selected item.
- The apparatus is at Standby mode:
Short press to turn the TV on.



Sockets

Note: The location and names of the sockets on the apparatus may vary according to apparatus model and some sockets may not be available for some models.

AV IN (mini)

This socket can be used to connect a device such as video recorders, camcorders, decoders, satellite receivers, DVD players or games consoles. It provides composite video connection.

USB

This socket can be used to connect an USB device.

ANT IN (RF)

This socket can be used to receive the signal from your VHF/UHF antenna.

Satellite in

This Socket is Used to receive the signal from your outdoor satellite antenna

HDMI (High-Definition Multimedia Interface)

This socket can be used to connect a device such as Blu-ray player with a HDMI output for best picture quality. It also provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable.

Mini-plug cable.

RJ45 (LAN)

Connect an Ethernet cable to access a network or the Internet.

EARPHONE OUT


This socket can be used for connecting earphones to listen to the sound coming from the apparatus.

Note: Excessive sound pressure from earphones can Cause hearing loss.

DIGITAL AUDIO OUT

Use an Coaxial or Optical (The one that fits your TV) cable to Output your TV Audio signal to a compatible Audio Receiver

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

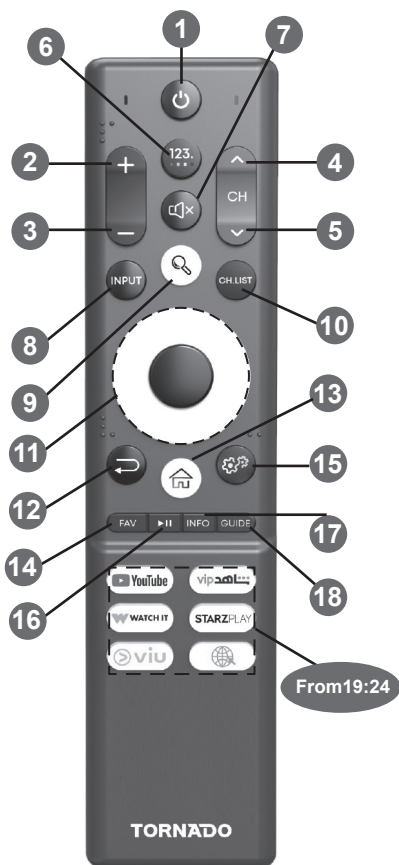


1. Power: Turn on / standby apparatuses
2. Volume UP: Increase the sound level
3. Volume Down: Decrease the sound level
4. Channel UP: Go to the channels UP
5. Channel Down: Go to the channels Down
6. Virtual Keyboard: Go to the Virtual Keyboard and Numbers.
7. Mute: Mute the Sound
8. INPUT : Access the Source
9. Search : Search in TV
10. CH.LIST : Access the TV channel List
11. Navigation Buttons (UP/Down/LEFT/RIGHT) : Navigate the Menu to select the content you need .
12. Back : Return to Upper-Level Content or Exit the Current Screen .
13. Home : Access the Home Screen .
14. Settings: access TV Settings .
15. Favorite: Access the favorite List, channels.
16. Pause and UNPAUSE the Content from USB or APP.
17. INFO : Get the live channel(RF&Satellite) information.
18. GUIDE : access the program Guide .
19. YouTube : Access YouTube APP
20. SHAHID : Access SHAHID APP .
21. WATCH IT : Access WATCH IT APP.
22. STARZPLAY : Access STARZPLAY APP.
23. VIU : Access VIU APP.
24. Browser : access Browser APP.

Switching On


This Page will appear as “Welcome to Your Smart TV”
 “Please choose Your Language”
 Please Press on English to Select the English Language.



This page will appear as “Terms of Services & Data Privacy”

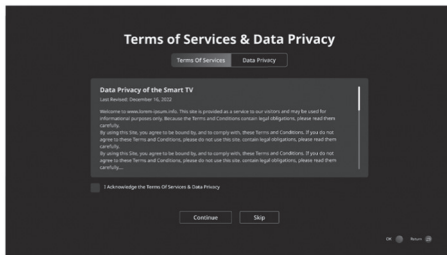


After Reading the Terms of Service & Data Privacy Please
 Select I acknowledge the Terms of Service & Data Privacy.
 Select Continue to Go to the Next Page.

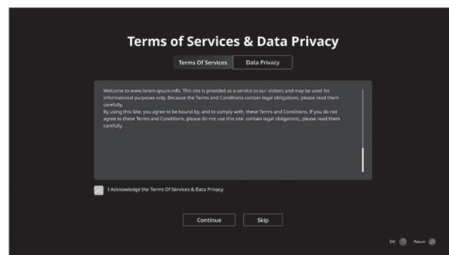


The below Page will appear as “Channel Scan & Tuning”
 Please select your signal type to start scanning & auto-tuning
 ing for channels.

Select Satellite to search for satellite channels.

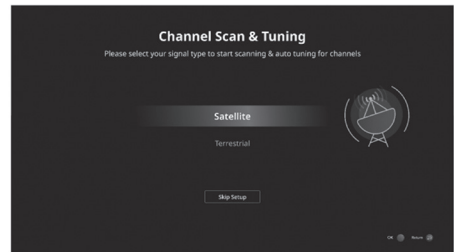


Select Terrestrial to search for Terrestrial Channels.

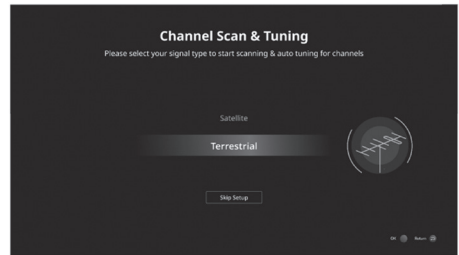


Below page will appear “Satellite channels”
 Please set preferences before you start a channel search


Please select LNB Type

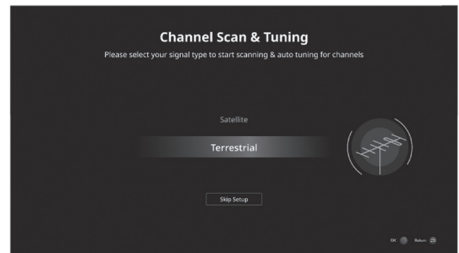


Please select the name of the satellite that you need to
 search for.

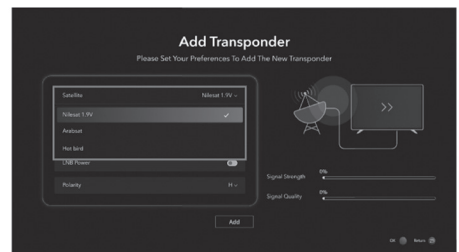


The below page will appear as “satellite channels”

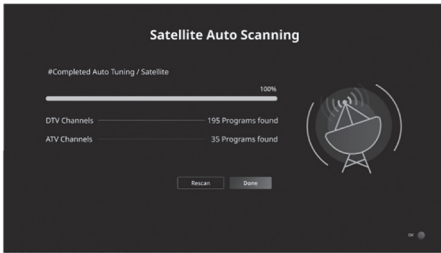


After Searching complete please press Done to save the channels.

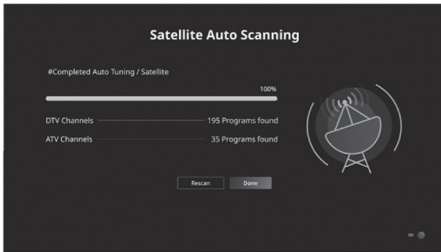

The Below Page will appear as “Satellite channels” you are all set!

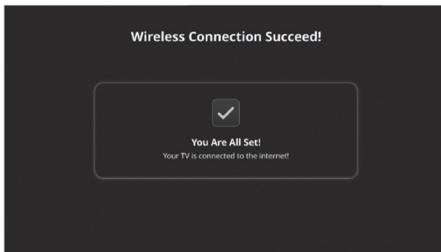


satellite scanning successfully completed
Press Continue setup to go to the Next Page
The Below Pages will appear in “Network Setup”
please select which type of Network you want to Install.

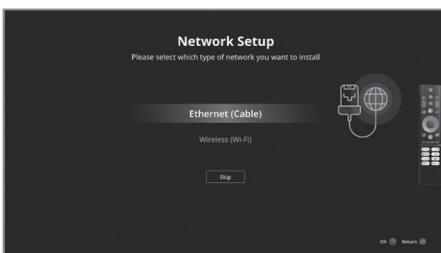


If you need to connect the Network through a cable
please select Ethernet (cable)
if you need to connect the network without a cable and
with the Wi-Fi
please select wireless (Wi-Fi)



The below Page will appear
Please Enter password for your Network

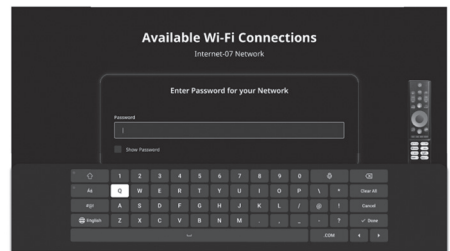

If you need to show Password press connect.

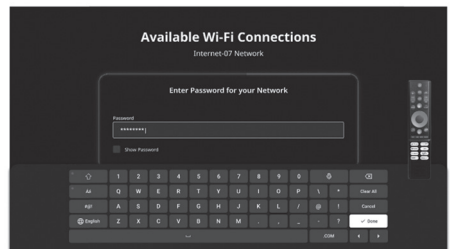

The below page will appear as “Wi-Fi Connection Successful!”
Press continue Setup if you want to complete your TV Setup
Press Switch Network if you need to change the selected network.

The Below Page will appear “Let’s Get You Connected!”
Please Follow the Steps below to activate your TV
Go To This Link on Your PC Or Mobile Device
Enter This Activation Code.

Or Scan this QR Code on your TV
Or call 19319 for Help



If you need to Skip This option and access it later from the Internal settings



After That Will Appear

• Home

Apps List will appear you can select from it.




The TV Inputs will appear you can select from them.



• Live TV

This Feature concludes with Sub-Features


- Satellite
- Terrestrial

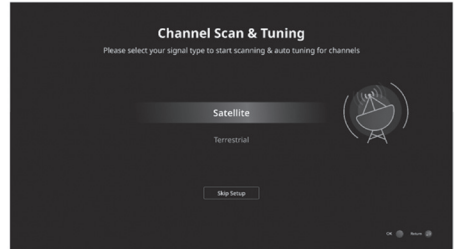

• Settings

This Feature consists of some sub-features

- Network Configuration
- TV Activation
- Video
- Picture
- Audio
- Software Update
- Other Settings
- Live TV

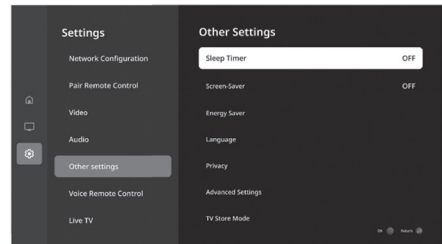

- Network Configuration

Network Info
Network Interface
Internet State
Wake on LAN/wifi

- TV Activation

Please Follow the Steps below to activate your TV
Go To This Link on Your PC Or Mobile Device
Enter This Activation Code

Or Scan this QR Code on your TV
Or call 19319 for Help



- Video

Select the method that you need to watch your Video

- High Dynamic Range HDR10
- HDCP Status

- Picture

- Picture Mode

You can select the Picture Mode
Standard, Bright, soft, Movie, colorful, Monitor, Game, sports, Custom

• Color Temperature

You can select the color Temperature
Standard , Warm , Cold

• Picture Reset

All picture settings will be reset, press confirm to do a factory reset for the Pictures .

- Audio

- Audio Cues
- CEC
- Audio Output
- Output Mode

- Software Update

- Check for Software Update
- Current Version: 0.34.0
- Last checked: ...

- Other Settings

- Sleep Timer
- OFF
- 15 Minutes
- 1 Hour
- 1.5 Hour
- 2 Hour
- 3 Hour
- Custom

- Energy Saver

- Deep Sleep
- Light Sleep

- Language

Select your Preferred Language

- Privacy

- Clear cookies and app Data
- Privacy Policy and License

Setup

Press MENU button to enter the Setup.

Press ◀ / ▶ button to highlight the desired menu icon , and press OK button to select.

(Optional: Network Settings/Image Settings/Sound Settings/General Settings/About This Device)

Network Settings

Press MENU button to enter the main menu.

Press ▼ / ▲ button to select Network Settings.

Press OK button to enter the sub-menu.

Press ▼ / ▲ button to select Wired Connection /Wireless Connection/Network Status/Data Saver. Press OK button to enter sub-menu and setup.

Image Settings

Press MENU button to enter the main menu.

Press ▼ / ▲ button to select Image Settings.

Press OK button to enter the sub-menu.

witch hairing impaired on/off.

- Other Settings

- Sleep Timer
- OFF
- 15 Minutes
- 1 Hour
- 1.5 Hour
- 2 Hour
- 3 Hour
- Custom

- Energy Saver

- Deep Sleep
- Light Sleep

- Language

Select your Preferred Language

- Privacy

- Clear cookies and app Data
- Privacy Policy and License

- Advanced settings

- o Bug Report
- o Contact Support
- o Device
- o Info
- o Time Zone
- o Time Format
- o Check the firmware update
- o Reboot
- o Factory Reset

Attention and Frequently Asked Questions

Attention:

1. Some non-standard mobile storage device may not be recognized. Please change to use the standard device.
2. This system supports the following file formats: Movie format: AVI, MP4, MPG, MKV, MOV, DAT, VOB, RM & RMVB.

Music format: MP3, WMA, M4A & AAC.

Photo format: JPEG, BMP & PNG & MPO & GIF . Text format: .sud, .smi, .ssa/.ass , srt, TXT.

Note: For coding files, there are many kinds nonstandard coding method, so this system can not be guaranteed to support the file formats using any coding method.

Frequently Asked Questions:

1. Under the following conditions, this system can't
Decode the file and the file can't be play normally:
- The parameters of file, such as the pixel of picture,
Code rate of audio and video file or sampling rate of
Audio file exceed the limit of the system.
- The format of file isn't matched or the file is harmed.
2. Hot plug: Don't disconnection when the system is
Reading or transmitting data to avoid damaging
The system or the device.
3. Pay attention to the power supply of the device
When you are using a mobile hard disk or a digital
Camera. If the power supply isn't sufficient or
Not stable, you may encounter problems during
Operating or can't operate at all. In this case,
Please restart the device or unplug the device and
Plug it again and ensure that its power supply is
Normal.
4. The system supports standard USB1.1 and USB2.0
Devices such as standard USB disks, MP3 players,
Mobile hard disks and etc..
5. For obtaining better audio and video quality,
Suggests to use the external device which accords
With USB2.0 standard.
6. When playing the video with high compression ratio,
These phenomenons such as picture standstill and
Menu long time response are normal.
7. For some USB device with power supply such as
Large size hard disk, MP4 and etc., suggests using it
With power to avoid electric power shortage.

Reference Section

32ES3300E / 32ES3300G / 32ES3300X	
Carton Dimensions (L*W*H) (mm)	830 x 120 x 520
Net Weight With Stand (Kg)	4.5
Gross Weight With Packaging (Kg)	5.7
Power Supply (V)	100 - 240
Power Consumption (TV On) (W)	55
Power Consumption (Standby) (W)	0.5
TV System	PAL, NTSC, SECAM
Sound Output Power (W)	2*8
Resolution	1366*768

43ES3300E / 43ES3300G / 43ES3300X	
Carton Dimensions (L*W*H) (mm)	1130 x 150 x 650
Net Weight With Stand (Kg)	7.6
Gross Weight With Packaging (Kg)	9.3
Power Supply (V)	100 - 240
Power Consumption (TV On) (W)	75
Power Consumption (Standby) (W)	0.5
TV System	PAL, NTSC, SECAM
Sound Output Power (W)	2*10
Resolution	1920*1080

wall mount screw specification:

- Screw specification 32" : M4*10 ,silver, pan head
Screw specification 43" : M6*10 ,silver, pan head

Reference Section

"50US3300E / 50US3300G / 50US3300X 50US5300E / 50US5300G / 50US5300X"	
Carton Dimensions (L*W*H) (mm)	1220*155*718
Net Weight With Stand (Kg)	8.09
Gross Weight With Packaging (Kg)	10
Power Supply (V)	100-240
Power Consumption (TV On) (W)	138
Power Consumption (Standby) (W)	<0.5
TV System	ATV : PAL , NTSC , Secam DTV: DVB-T2/C DVB-S/S2
Sound Output Power (W)	2 x 10
Resolution	3140*2160

"55US3300E / 55US3300G / 55US3300X 55US5300E / 55US5300G / 55US5300X"	
Carton Dimensions (L*W*H) (mm)	1310*165*810
Net Weight With Stand (Kg)	10.5
Gross Weight With Packaging (Kg)	12.9
Power Supply (V)	100-240
Power Consumption (TV On) (W)	138
Power Consumption (Standby) (W)	<0.5
TV System	ATV : PAL , NTSC , Secam DTV: DVB-T2/C DVB-S/S2
Sound Output Power (W)	2 x 10
Resolution	3140*2160

"65US3300E / 65US3300G / 65US3300X 65US5300E / 65US5300G / 65US5300X"	
Carton Dimensions (L*W*H) (mm)	1577*166*978
Net Weight With Stand (Kg)	18.2
Gross Weight With Packaging (Kg)	22.4
Power Supply (V)	100-240
Power Consumption (TV On) (W)	198
Power Consumption (Standby) (W)	<0.5
TV System	ATV : PAL , NTSC , Secam DTV: DVB-T2/C DVB-S/S2
Sound Output Power (W)	2 x 10
Resolution	3140*2160

TV Size (inch)	50	55	65
Wall mount dimension (mm)	200*200	200*200	400*350
Wall mount screw	M6*10	M6*10	M6*10

Troubleshooting

Most problems you encounter with your apparatus can be corrected by consulting the following troubleshooting list.

No picture and no sound

1. Check if the fuse or circuit breaker is working.
2. Plug another electrical device into the outlet to make sure it is working or turned on.
3. Power plug is in a bad contact with the outlet.
4. Check the signal source.

No color

1. Change the color system.
2. Adjust the saturation.
3. Try another channel. Black-white program may be received.

Remote control doesn't work

1. Change the batteries.
2. Batteries aren't installed correctly.
3. Main power isn't connected.

No picture and normal sound

1. Adjust the brightness and contrast.
2. Broadcasting failure may happen.

Normal picture and no sound

1. Press the Vol+ button to increase volume.
2. Volume is set to mute, press the mute button to restore sound.
3. Change the sound system.
4. Broadcasting failure may happen.

Unorderly ripples on the picture

It is usually caused by local interference, such as cars, daylight lamps and hair driers. Adjust the antenna to minimize the interference.

Snowy dots and interference

If the antenna is located in the fringe area of the TV signal where the signal is weak, the picture may be marred by dots. When the signal is extremely weak, it may be necessary to install a special antenna to improve the reception.

1. Adjust the position and orientation of the indoor or the outdoor antenna.
2. Check the connection of antenna.
3. Fine tune the channel.
4. Try another channel. Broadcasting failure may happen.

Ignition

Black spots or horizontal streaks appear, or the picture flutters or drifts. This is usually caused by interference from car ignition system, neon lamps, electric drills, or other electrical appliance.

Ghost

Ghosts are caused by the television signal following two paths. One is the direct path, the other is reflected from tall buildings, hills, or other objects. Changing the direction or position of the antenna may improve the reception.

Radio frequency interference

This interference produces moving ripples or diagonal streaks, and in some case, loss of contrast in the picture. Find out and remove the radio interference source.

If the TV is crashed


1. Press the  button to turn off TV, then press the  button again to reset TV.
2. Unplug the power cord, then press the  button to reset TV.

Note: If these 2 methods can not be resolved, please contact the after-sales to solve.

Base Installation

Install the double support base on the apparatus by using screws.

Note: The below illustrations are for reference only and may differ from actual product appearance.



Accessories

The main accessories are

1. Operation Manual.
2. Remote Control.
3. Batteries.
4. Base.
5. Base Screws.

Note: The othe accessories may vary depending on the model and the region.

Important Instruction :

- ELARABY Group is not responsible if customer downloading or using any programs for Software upgrades from any unsupported resources.
- For Smart TV, Customer [Only] has the full re sponsibility when using any harmful or unlicensed programs .
- ELARABY Group is not responsible for any damage arising from the negligence of the instructions shown in Owner's Manual .
- ELARABY Group is not responsible for any damage arising from the misuse or the malfunctions while using the TV and its connected devices at the same time.
- Please read all instructions before operating the device. Keep these instructions well for future use.

Additional Warning:

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
 - ALWAYS use furniture that can safely support the television set.
 - ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
 - ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
 - ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
 - NEVER place a television set in an unstable location.
 - NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
 - NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.
- If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

NOTES

- The only way to disconnect the electricity is to pull the plug from the wall.

تعليمات هامة :

- شركة العربي غير مسؤولة عن تحميل أو استخدام العميل أي برامج تحديث (software) للتلفزيون من أي مصادر غير معتمدة .
- للأجهزة الذكية العميل مسؤول مسؤولية كاملة وحده عند استخدامه برامج ضاره أو غير مرخصة .
- لا تتحمل شركة العربي أي مسؤولية عن أي ضرر ناتج عن إهمال التعليمات الموضحة في دليل المالك. لا تتحمل شركة العربي أي مسؤولية عن أي ضرر ناتج عن سوء الاستخدام أو الأعطال من خلال استخدام هذا المنتج والأجهزة المتصلة به في نفس الوقت .
- برجاء قراءة جميع الارشادات قبل تشغيل الجهاز . حافظ على هذه الارشادات جيدا لاستخدامها فالمستقبل .
- بعض الموديلات، عندما يقوم العميل بحذف قناة من قائمة القنوات، تحذف القناة مع رقمها من القائمة هذا التصميم يساعد العميل في الإبقاء على أرقام جميع القنوات الأخرى بدون تعديل كما لو أن العميل لم يحذف أى قنوات أيضاً تم إضافة خاصية في بعض الموديلات، يتم تخزين القنوات التي تم حذفها حتى يتمكن العميل من استرجاعها إذا احتاج لذلك .

ملاحظات هامة

- ١- المتصفح الخاص بالجهاز قد لا يدعم بعض المواقع التي تحتوي على اعلانات تلقائية وذلك للحفاظ على امن النظام الخاص بالجهاز.

تحذيرات اضافية:

- قد يسقط جهاز التلفزيون ، مما يتسبب في إصابة شخصية خطيرة أو الوفاة. يمكن أن تكون العديد من الإصابات ، خاصة للأطفال ، تجنبها عن طريق اتخاذ احتياطات بسيطة مثل:

- استخدم دائما الخزانات أو الحوامل أو طرق التركيب الموصى بها من قبل الشركة المصنعة للتلفزيون .
- استخدم دائما الأثاث الذي يمكنه دعم جهاز التلفزيون بأمان.
- تأكد دائما من أن جهاز التلفزيون لا يتدلى من حافة الأثاث الداعم.
- تثقيف الأطفال دائما حول مخاطر التسلق على الأثاث للوصول إلى جهاز التلفزيون أو أجهزه عناصر التحكم.
- قم دائما بتوجيه الأسلاك والكابلات المتصلة بالتلفزيون الخاص بك حتى لا يمكن تعثرها أو سحبها أو امسكها.
- لا تضع جهاز تلفزيون في مكان غير مستقر.
- لا تضع جهاز التلفزيون أبدا على أثاث طويل (على سبيل المثال ، الخزائن أو خزائن الكتب) دون تثبيت كل من الأثاث والتلفزيون إلى دعم مناسب.

ملحوظة:

- الطريقة الوحيدة لفصل الجهاز من الكهرباء هي نزع القابس من الحائط.

إشعال

تظهر بقع سوداء، خطوط أفقية أو الصورة غير ثابتة. ينتج هذا عادة بسبب التداخل الناتج عن نظام إشعال السيارة، مصابيح النيون، المثقاب الكهربى أو الأجهزة الكهربائية الأخرى .

شبح

تنشأ الأشباح من خلال مسارين لإشارة التلفزيون التاليين. واحد هو المسار المباشر، والآخر ينعكس من المباني العالية، التلال أو الأبنية المرتفعة الأخرى قد يؤدي تغيير إتجاه أو وضع الهوائي إلى تحسين جودة الإستقبال .

تداخل تردد الراديو ينتج عن هذا التداخل تموجات متحركة أو خطوط قطرية، وفي بعض الحالات يتم فقدان التباين في الصورة. إبحث عن مصدر تداخل الراديو وتخلص منه .


إذا تم تعطل التلفزيون

- ١- إضغط على زر 0 لإيقاف تشغيل التلفزيون، إضغط عليه مرة أخرى لإعادة ضبط التلفزيون .
 - ٢- إفصل كابل الطاقة، ثم إضغط على زر 0 لإعادة ضبط التلفزيون .
- ملحوظة:** إذا لم تتمكن من حل المشكلة بهاتين الطريقتين، برجاء الإتصال بخدمة ما بعد البيع لحلها.

تركيب القاعدة

قم بتثبيت القاعدتين على الجهاز بإستخدام المسامير .

ملحوظة: الرسوم التوضيحية أدناه هي للإشارة فقط وقد تختلف عن مظهر المنتج الفعلي .



الملحقات

الملحقات الرئيسية هي

دليل التشغيل ١x

جهاز التحكم عن بعد ١x

البطاريات ٢x

القاعدة ٢x

مسامير القاعدة ٤x

ملحوظة: قد تختلف الملحقات الأخرى وفقا لموديل الجهاز والمنطقة .

٦٥	٥٥	٥٠	المقاس الجهاز (بوصة)
٣٥٠*٤٠٠	٢٠٠*٢٠٠	٢٠٠*٢٠٠	إبعاد بين مسامير التثبيت على الحائط (مم)
M6*10	M6*10	M6*10	إبعاد مسمار التثبيت على الحائط

إستكشاف الأخطاء وإصلاحها

يمكن إصلاح معظم المشاكل التي تواجهها مع جهازك من خلال الرجوع إلى قائمة إستكشاف الأخطاء وإصلاحها التالية :

لا توجد صورة ولا يوجد صوت

- ١- تأكد من أن الفيوز أوقاطع الكهرباء يعمل بشكل جيد .
- ٢- قم بتوصيل جهاز كهربائي آخر في منفذ التيار الكهربى لتأكد من أنه يعمل أو قيد التشغيل .
- ٣- كابل الطاقة متصل بطريقة غير صحيحة بمنفذ التيار الكهربى
- ٤- تحقق من مصدر الإشارة.

لا يوجد ألوان

- ١- قم بتغيير نظام الألوان.
- ٢- ضبط مستوى درجة التشبع.
- ٣- جرب قناة أخرى. ربما يكون البرنامج الذى يتم إستقباله بالأبيض والأسود .

جهاز التحكم عن بعد لا يعمل

- ١- قم بتغيير البطاريات.
- ٢- لم يتم تركيب البطاريات بطريقة صحيحة.
- ٣- لم يتم توصيل مصدر الطاقة الرئيسى.

لا توجد صورة والصوت طبيعى

- ١- قم بضبط مستوى السطوع والتباين.
- ٢- ربما حدث فشل فى البث.

الصورة طبيعية ولا يوجد صوت

- ١- لزيادة مستوى الصوت .
- ٢- تم ضبط الصوت على كتم الصوت ، إضغط على زر كتم الصوت .

إستعادة الصوت

- ٣- قم بتغيير نظام الصوت .
- ٤- ربما حدث فشل فى البث .

تموجات غير منتظمة على الصورة

يحدث هذا عادةً بسبب التداخل المحلي، مثل السيارات، مصابيح الإضاءة ومحففات الشعر. ضبط الهوائي لتقليل التداخل .

نقاط تلجئة وتداخل

إذا كان الهوائي موجوداً في منطقة على حدود إستقبال إشارة التلفزيون حيث تكون الإشارة ضعيفة، فقد نشوه الصورة بنقاط. عندما تكون الإشارة ضعيفة للغاية، قد يكون من الضروري تثبيت هوائي خاص لتحسين جودة الإستقبال .

- ١- قم بضبط إتجاه وضع الهوائي الداخلى أو الخارجى.
- ٢- تحقق من توصيل الهوائي.
- ٣- قم بالبحث الدقيق للفتوات.
- ٤- جرب قناة اخرى .

ربما حدث فشل فى البث.

قسم المراجع

50US3300E / 50US3300G / 50US3300X" "50US5300E / 50US5300G / 50US5300X	
٧١٨*١٥٥*١٢٢٠	أبعاد الكارتونة طول * العرض * ارتفاع (مم)
٨,٠٩	الوزن الصافى بالقاعدة (كجم)
١٠	الوزن الإجمالى مع التغليف (كجم)
٢٤٠-١٠٠	مصدر التيار الكهربى (فولت)
١٢٣	إستهلاك الطاقة (فى حالة التشغيل) (وات)
<٠,٥	إستهلاك الطاقة (فى وضع الإستعداد) (وات)
ATV : PAL , NTSC , Secam DTV: DVB-T2/C DVB-S/S2	نظام التلفزيون
٢ x ١٠	قدرة خرج الصوت (وات)
٢١٦,٠*٣١٤,٠	الدقة

55US3300E / 55US3300G / 55US3300X" "55US5300E / 55US5300G / 55US5300X	
٨١٠*١٦٥*١٣١٠	أبعاد الكارتونة طول * العرض * ارتفاع (مم)
١٠,٥	الوزن الصافى بالقاعدة (كجم)
١٢,٩	الوزن الإجمالى مع التغليف (كجم)
٢٤٠-١٠٠	مصدر التيار الكهربى (فولت)
١٢٥	إستهلاك الطاقة (فى حالة التشغيل) (وات)
<٠,٥	إستهلاك الطاقة (فى وضع الإستعداد) (وات)
ATV : PAL , NTSC , Secam DTV: DVB-T2/C DVB-S/S2	نظام التلفزيون
٢ x ١٠	(قدرة خرج الصوت (وات
٢١٦,٠*٣١٤,٠	الدقة

65US3300E / 65US3300G / 65US3300X" "65US5300E / 65US5300G / 65US5300X	
٩٧٨*١٦٦*١٥٧٧	أبعاد الكارتونة طول * العرض * ارتفاع (مم)
١٨,٢	الوزن الصافى بالقاعدة (كجم)
٢٢,٤	الوزن الإجمالى مع التغليف (كجم)
٢٤٠-١٠٠	مصدر التيار الكهربى (فولت)
١٩٠	إستهلاك الطاقة (فى حالة التشغيل) (وات)
<٠,٥	إستهلاك الطاقة (فى وضع الإستعداد) (وات)
ATV : PAL , NTSC , Secam DTV: DVB-T2/C DVB-S/S2	نظام التلفزيون
٢ x ١٠	(قدرة خرج الصوت (وات
٢١٦,٠*٣١٤,٠	الدقة

سياسة الخصوصية والتراخيص

• الإعدادات المتقدمة

• الإبلاغ عن مشكلة

• اتصل بالدعم

• الجهاز

الدخول على

• معلومات الجهاز

• التوقيت

• تنسيق الوقت

• تحقق من وجود تحديث خاص

• إعادة تشغيل

• إعادة ضبط المصنع

تنبيه وأسئلة متكررة

تنبيه:

١. قد لا يتم التعرف على بعض أجهزة التخزين الغير قياسية. برجاء

إستخدام أجهزة تخزين قياسية.

- **ملاحظة:** فيما يتعلق بترميز، توجد أنواع كثيرة من طرق الترميز الغير

قياسية، لذلك لا يمكن أن يضمن هذا النظام دعم تنسيقات الملفات التي

تستخدم أى طريقة ترميز .

أسئلة متكررة :

١. في ظل الظروف التالية ، يتعذر على هذا النظام فك تشفير الملف

ويتعذر تشغيل الملف بشكل طبيعي :

- ملفات الملف، مثل بكسل الصورة، معدل ترميز ملف الصوت وملف

الفيديو أو معدل أخذ العينات لملف الصوت، يتجاوز حد النظام .

- تنسيق الملف غير متوافق أو الملف تالف.

٢. التوصيل السريع: لا تفصل الجهاز أثناء قيام النظام بقراءة أو نقل

البيانات لتجنب تلف النظام أو الجهاز .

٣. إنتهب لمصدر إمداد الجهاز بالطاقة عند إستخدام قرص ثابت متنقل أو

كاميرا ديجيتال. إذا كان مصدر الإمداد بالطاقة غير كافٍ أو غير

مستقر، فقد تواجه مشكلات أثناء التشغيل أو يتعذر التشغيل على

الإطلاق. في هذه الحالة برجاء إعادة تشغيل الجهاز أو فصل الجهاز

وتوصيله مرة أخرى والتأكد من أن مصدر الإمداد بالطاقة يعمل بشكل

طبيعي.

٤. يدعم النظام أجهزة مثل USB1.1 و USB2.0 القياسية مثل

أقراص USB ومشغلات MP3 والأقراص الصلبة المحمولة وغيرها.

٥. للحصول على جودة صورة وصوت أفضل، يقترح إستخدام جهاز

خارجي الذي يتوافق مع معيار USB2.0.

٦. عند تشغيل الفيديو بمعدل ضغط عالي، فإن هذه الظواهر مثل التوقف

المؤقت للصورة ووقت الإستجابة الطويل للقائمة يكون طبيعياً .

٧. فيما يتعلق ببعض أجهزة USB التي تحتاج إلى مصدر إمداد بالطاقة

مثل الأقراص الصلبة ذات الأحجام الكبيرة MP4 وغيرها، يقترح

إستخدامها مع مصدر طاقة لتجنب حدوث قصر في الطاقة الكهربائية.

قسم المراجع

32ES3300E/32ES3300G/32ES3300X	
أبعاد الكرتونة (الطول*العرض*الإرتفاع) (مم)	١١٣.٠*١٥.٠*٦٥.٠
الوزن الصافي بالقاعدة (كجم)	٤.٥
الوزن الإجمالي مع التغليف (كجم)	٥.٧
مصدر التيار الكهربى (فولت)	٢٤٠ - ١٠٠
إستهلاك الطاقة (فى حالة التشغيل) (وات)	٥٥
إستهلاك الطاقة (فى وضع الإستعداد) (وات)	٠.٥
نظام التليفزيون	PAL, NTSC, SECAM
قدرة خرج الصوت (وات)	٨*٢
الدقة	١٣٦٦*٧٦٨

43ES3300E/43ES3300G/43ES3300X	
أبعاد الكرتونة (الطول*العرض*الإرتفاع) (مم)	١١٣.٠*١٥.٠*٦٥.٠
الوزن الصافي بالقاعدة (كجم)	٧.٦
الوزن الإجمالي مع التغليف (كجم)	٩.٣
مصدر التيار الكهربى (فولت)	٢٤٠ - ١٠٠
إستهلاك الطاقة (فى حالة التشغيل) (وات)	٧٥
إستهلاك الطاقة (فى وضع الإستعداد) (وات)	٠.٥
نظام التليفزيون	PAL, NTSC, SECAM
قدرة خرج الصوت (وات)	١٠*٢
الدقة	١٩٢٠*١٠٨٠

مسمار تثبيت الحامل على الحائط:

مواصفة المسمار ٣٢": silver, pan head, M4*10

مواصفة المسمار ٤٣": silver, pan head, M6*10

• الإعدادات

تحتوى هذه القائمة على بعض الإعدادات وهى :-

- إعدادات الشبكة

- تفعيل التلفزيون

- فيديو

- الصورة

- صوتى

- تحديث النظام

- الإعدادات الاخرى

- التلفزيون المباشر

- إعدادات الشبكة

• معلومات الشبكة

• واجهات اتصال الشبكة

• حالة الإنترنت

• الاستيقاظ على الشبكة

- تفعيل التلفزيون

ستظهر القائمة التالية

«دعنا نجعلك على اتصال!»

اتبع الخطوات التالية لتنشيط جهاز التلفزيون الخاص بك

• افتح الرابط الموجود على جهاز التلفزيون على جهاز الكمبيوتر الخاص بك

• ادخل رمز التفعيل هذا

- فيديو

اختيار طريقة عرض الفيديو

• نطاق ديناميكى على

• حالة HDCP

- الصورة

• وضع الصورة

يمكنك اختيار وضع الصورة

Standard, Bright, soft, Movie, colorful, Monitor,

Game, sports, Custom

• وضع ال Color Temperature

يمكنك اختيار الوضع المناسب للصورة من الازواضع التالية

Standard , Warm ,cold

• Picture Reset

لعمل إعادة ضبط لجميع أوضاع الصورة التى تم تغييرها من قبل العميل .

- صوتى

• الاشارات الصوتية

• CEC

• Audio Output

• نوع المخرج

تحديث البرنامج

التحقق من تحديث البرنامج

• الإصدار الحالى

• اخر فحص

الاعدادات الأخرى

• مؤقت النوم

- اختيار مؤقت النوم من (لا يعمل - ١٥ دقيقة - ٦٠ دقيقة - ٩٠ دقيقة

- ١٢٠ دقيقة - ١٨٠ دقيقة - تخصيص)

• توفير الطاقة

- النوم العميق

- النوم الخفيف

• اللغة

اختيار اللغة المناسبة (عربى , English)

• الخصوصية


- ازالة البيانات



أو قم بمسح رمز ال QR
أو اتصل على ١٩٣١٩ للمساعدة

إذا كنت تريد تخطي هذه الخطوة أضغط تخطي



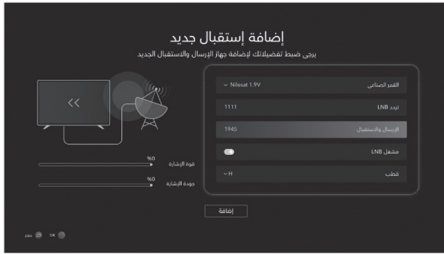


وستظهر المدخلات للاختيار منها



• التلفزيون المباشر

- تحتوى هذه القائمة على خاصيتين
- القمر الصناعي للبحث عن قنوات القمر الصناعي .
- الباحث الأرضي للبحث عن عن القنوات الأرضية .
- يجب اختيار نوع ال LNB لبدء عملية البحث
- أضغظ على إبدأ البحث للبحث
- أضغظ على إضافة تردد إذا كنت تريد البحث عن تردد معين

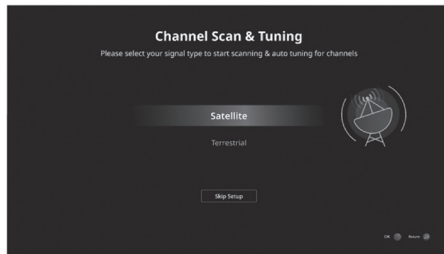

تمت العملية بنجاح!
أضغظ على إستكمال الإعدادات لاستكمال الإعدادات
أضغظ تبديل الشبكة إذا كنت تغير شبكة اللاسلكي التي تم الاتصال بها مسبقا



ستظهر القائمة التالية
"دعنا نجعلك على اتصال!"



- أفتح الرابط الموجود على جهاز التلفزيون على جهاز الكمبيوتر الخاص
- بك أو المحمول الخاص بك .
- ادخل رمز التفعيل هذا

أو قم بمسح رمز ال QR
أو اتصل على ١٩٣١٩ للمساعدة

إذا كنت تريد تخطي هذه الخطوة أضغظ تخطي



بعد ذلك ستظهر
• الصفحة الرئيسية
ستظهر التطبيقات للاختيار منها



ستظهر القائمة التالية
الرجاء إدخال اسم الشبكة
وأختر نظام الحماية المناسب وأدخل كلمة المرور
إذا كنت تريد إظهار كلمة المرور أضغط على المربع الحواري
ستظهر القائمة التالية



الرجاء الضغط على أستمكمل الإعدادات
لأستكمال الإعدادات ستظهر القائمة التالية الرجاء تحديد نوع الشبكة التي
تريد تثبيتها للاتصال بالإنترنت



ستظهر الصفحة التالية
حدد شبكة الاتصال الخاصة بك



أدخل كلمة المرور لشبككت
أضغط إظهار كلمة المرور إذا كنت تريد التحقق من كلمة المرور



إذا كنت تريد إضافة شبكة مخفية
الرجاء الضغط على أنضم إلى الشبكة الخاصة



الإعدادات الأولية


ستظهر الصفحة التالية "مرحبا بك في تلفزيونك الذكي"
"الرجاء اختيار لغتك"

أضغط على عربي لأختيار اللغة العربية

ستظهر الصفحة التالية "شروط الخدمات وخصوصية البيانات"
"شروط الخدمات" و "خصوصية البيانات"



يرجى أختيار القمر الصناعي المراد عمل البحث عليه

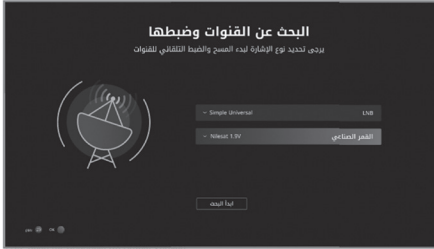


بعد إتمام عملية البحث ستظهر القائمة التالية
الرجاء الضغط على تم لحفظ القنوات .




ستظهر الصفحة التالية

"تمت العملية بنجاح !"

تم الانتهاء من بحث القمر الصناعي بنجاح

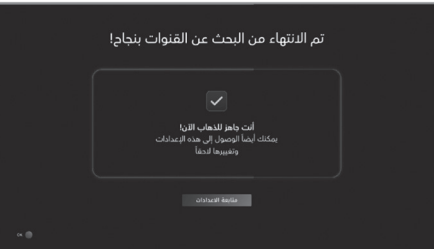

بعد قراءة البيانات والشروط قم بأختيار
أقر وأوافق على شروط الخدمات وخصوصية البيانات
قم بأختيار أ استمرار للانتقال إلى الصفحة التالية

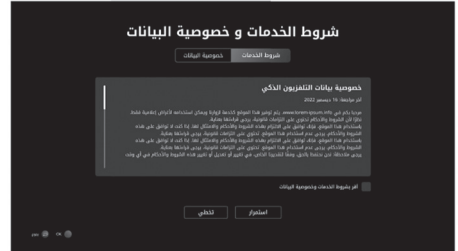

ستظهر الصفحة التالية " البحث عن القنوات وضبطها"

أختار القمر الصناعي لبحث قنوات القمر الصناعي


أختار الباحث الأرضي لبحث القنوات الأرضية



في حالة أختيار القمر الصناعي ستظهر الصفحة التالية
"البحث عن القنوات وضبطها"

يرجى تحديد نوع الإشارة لبدء المسح والضبط التلقائي للقنوات
من القائمة التالية

1. تشغيل الجهاز - ضبطه على وضع الاستعداد
2. زيادة مستوى الصوت
3. تقليل مستوى الصوت
4. الانتقال إلى القناة التالية
5. الانتقال إلى القناة السابقة
6. لوحة المفاتيح : الدخول إلى لوحة المفاتيح والأرقام.
7. كتم الصوت
8. المداخل : الدخول على مداخل الجهاز
9. بحث : البحث في قائمة الجهاز
10. قائمة القنوات : الدخول على قائمة القنوات
11. التصفح : الدخول يمين -شمال - أعلى - أسفل
12. الرجوع إلى المحتوى السابق أو الخروج من الصفحة الحالية
13. الصفحة الرئيسية : الدخول للصفحة الرئيسية
14. المفضلة : الدخول إلى قائمة المحتوى المفضل
15. الضبط : الدخول إلى إعدادات الجهاز
16. إيقاف أو تشغيل المحتوى سواء من القرص الصلب أو التطبيق
17. معلومات : معلومات المحتوى المعروض.
18. دليل المحتوى : الدخول إلى دليل المحتوى
19. الدخول إلى تطبيق اليوتيوب
20. الدخول إلى تطبيق شاهد
21. الدخول إلى تطبيق watch it
22. الدخول إلى تطبيق STARZPLAY
23. الدخول إلى تطبيق VIU
24. الدخول إلى المتصفح

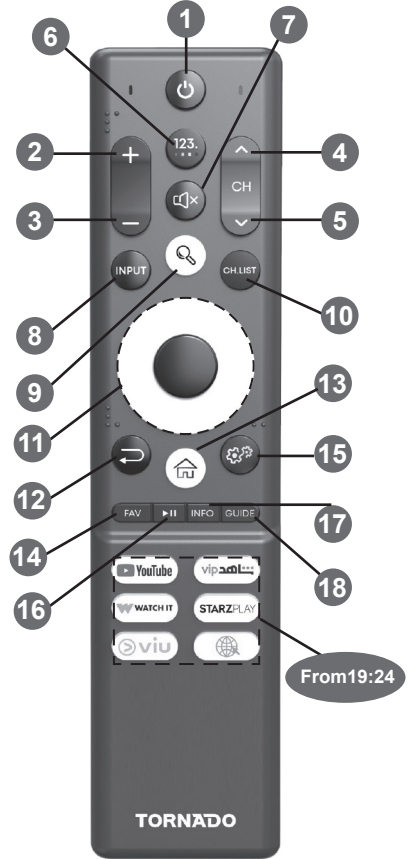

AV IN

يمكن إستخدام هذا المدخل لتوصيل جهاز مثل مسجلات الفيديو، وكاميرات الفيديو، وأجهزة فك التشفير، وأجهزة إستقبال الأقمار الصناعية، مشغل DVD أو وحدات التحكم بالألعاب. ويوفر توصيل الفيديو المركب.

USB

يمكن إستخدام هذا المدخل لتوصيل جهاز USB.

EARPHONE OUT

يمكن إستخدام هذا المدخل لتوصيل سماعات الأذن للإستماع إلى الصوت القادم من الجهاز.

ملحوظة: قد يؤدي ضغط الصوت الزائد من سماعات الأذن إلى فقدان السمع.

المظهر الخارجي للجهاز:

قد يختلف المظهر الخارجي الفعلي للجهاز عن الصورة التي على الكرتونة بناءً على موديل الجهاز.

ANT(RF)

توصيل هوائي VHF/UHF خارجي .

Satellite in

هذا المدخل يستخدم فى استقبال إشارة القمر الصناعي او الأريل الرضى

(HDMI) واجهة الوسائط المتعددة عالية الدقة

يمكن إستخدام هذا المدخل لتوصيل جهاز مثل مشغل Blu-ray مع مخرج HDMI للحصول على أفضل جودة للصورة.

كما يوفر إتصال ديجيتال غير مضغوط

يحمل كل من بيانات الصورة والصوت عن طريق كابل مدمج صغير .

(LAN) RJ45

توصيل كابل Ethernet للوصول إلى أي شبكة أو الانترنت.


Digital Audio Output

(مخرج صوت رقمي) إستخدم كبل متحد المحور أو ضوئى على حسب المدخل الموجود فى الجهاز لإخراج إشارة صوت التلفاز إلى أى جهاز إستقبال صوت رقمى متوافق

أضرار على الجهاز

ملحوظة: قد يختلف موقع وأسماء أضرار الوظائف على الجهاز وفقاً لموديل الجهاز.

ES3300E

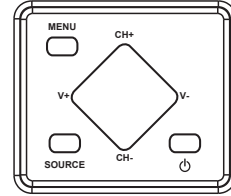

زر MENU

إضغط عليه لعرض القائمة.

زر CH +1-

ينتقل لأعلى/لأسفل فى قائمة القنوات.

زر V +1-

يزيد/يخفض مستوى الصوت.

زر SOURCE

إضغط عليه لتغيير مصدر الدخل.


زر ٠

- الجهاز في وضع التشغيل.
- إضغط عليه لتحويل الجهاز إلى وضع الاستعداد.
- الجهاز في وضع الإستعداد.
- إضغط عليه لتحويل الجهاز إلى وضع التشغيل.

المدخل

ملحوظة: قد يختلف موقع وأسماء المدخل على الجهاز وفقاً لموديل الجهاز وقد لا تتوفر بعض المدخل لبعض الموديلات.

US3300E/X/G & US5300E/X/G

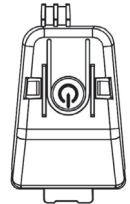

* الجهاز فى حالة التشغيل

- ضغطة قصيرة لتأكيد الأمر الذى تم اختياره (ok)
- ضغطة طويلة لتحويل الجهاز لوضع الانتظار

* الجهاز فى وضع الانتظار

ضغطة قصيرة لتحويل الجهاز لوضع التشغيل

تعليق الجهاز على الحائط

تحذير: تتطلب هذه الوظيفة شخصين.

لتأكد من التركيب السليم. إتبع ملاحظات السلامة التالية:


- تحقق من أن الحائط يتحمل وزن الجهاز وحامل التركيب على الحائط.
- إتبع تعليمات التركيب الموجودة مع حامل التركيب على الحائط.
- يجب تركيب الجهاز رأسياً على الحائط.
- تأكد من استخدام المسامير المناسبة لمادة الحائط.
- تأكد من وضع كابلات الجهاز في أماكنها لتجنب خطر تعثرها.
- كما تطبق جميع تعليمات السلامة الأخرى الخاصة بالجهاز هنا.

تحذير: لمنع الإصابات ، وهذا الجهاز يجب أن يعلق بشكل آمن على سطح مستقر / الجدار وفقاً لتعليمات التثبيت.

- قم بتثبيت التلفزيون في مكان أفقي ومستقيم
- لتأمين التلفزيون ، استخدم حزاماً قوياً من الخياط على الجزء الخلفي من التلفزيون وصولاً إلى أي وت عمود بالحائط أو للربط بأي هيكل آخر ثابت.

- تأكد من ربط الحزام ومن توازيه مع الارضية.
- لا تقف أو تتسلق على التلفزيون أبداً. قم بتوعية الأطفال حول مخاطر التسلق على الأثاث للوصول إلى التلفزيون أو أدوات التحكم الخاصة به.

- كن حذراً بشكل خاص في المنازل التي لديها أطفال لمنعهم من التسلق فوق التلفزيون. قد يتحرك أو يسقط أو ينكسر أو يتلف أو يتسبب في إصابة.

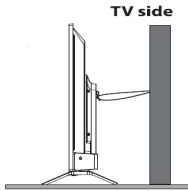

البطاريات

- يجب ألا تعرض البطاريات للحرارة الزائدة مثل ضوء الشمس، النار أو ما شابه ذلك.
- أزل البطاريات من وحدة التحكم عن بعد عند عدم استخدامها لفترة طويلة قد يسبب ترك البطاريات في وحدة التحكم عن بعد إلى حدوث التلف من خلال التدهور والتسريب المسبب للتآكل، مما يؤدي إلى إبطال الضمان.
- قد يؤدي استبدال البطاريات بنوع غير صحيح إلى التعرض لخطر الانفجار.
- استبدل البطاريات ببطاريات من نفس النوع أو بنوع مماثل توصي به الشركة المصنعة للجهاز.
- لحماية البطارية استخدم مرافق إعادة التنوير المحلية للتخلص من البطاريات.
- تخلص من البطاريات المستعملة وفقاً للتعليمات.

العمر الافتراضي

تلتزم شركة العربي داخل جمهورية مصر العربية بتوفير الصيانة وقطع الغيار بعد انتهاء فترة الضمان بمقابل مادي وذلك لمدة ١ سنة.

الإحتياجات

برجاء قراءة جميع الإرشادات قبل تشغيل الجهاز. حافظ على هذه الإرشادات جيداً لإستخدامها في المستقبل.

المنتج

- لا تسد فتحات التهوية الموجودة على الغطاء الخلفي للجهاز أو تغطيتها.
- لا تدفع أشياء من أي نوع إلى داخل الجهاز من خلال فتحات الغطاء الخلفي. حيث قد تلامس أجزاء توصيل التيار أو أجزاء من دائرة القصر، مما ينتج عنه نشوب حريق، التعرض لصدمة كهربائية أو حدوث تلف للجهاز.
- لا تحاول فتح الغطاء الخلفي حيث قد يؤدي ذلك إلى حدوث تلف.
- لا توجد أي أجزاء داخل الجهاز يمكنك إصلاحها بنفسك. برجاء الرجوع إلى موظف صيانة مؤهل لإجراء جميع أعمال الصيانة.
- لا تلمس سطح الشاشة بأصابعك حيث قد يؤدي ذلك إلى خدشها أو ظهور علامات على شاشة الجهاز.
- لا تقوم بالضغط على شاشة الجهاز حيث قد يؤدي ذلك إلى تلف شاشة الجهاز بشدة.

الطاقة والتوصيل

- إفصل الجهاز في ظل الظروف التالية:
- عند عدم إستخدام الجهاز لفترة زمنية طويلة.
- عند تلف كابل الطاقة أو مدخل / مخرج الطاقة.
- إتبع الإرشادات لترتيب وضبط الجهاز. إضبط وحدات التحكم التي يتم الإشارة إليها في تعليمات التشغيل حيث قد يؤدي الضبط غير الصحيح لوحداث التحكم إلى حدوث تلف للجهاز. عند حدوث ذلك، إفصل الجهاز وقم بالرجوع إلى موظف الصيانة.
- إذا حدث صدمة للجهاز أو سقط مما أدى إلى تلف الغطاء الخلفي
- عند إستخدام مدخل التيار الكهربى أو الأجهزة المقترنة كجهاز فصل، يجب أن يظل جاهزاً للتشغيل بسرعة.

كابل الطاقة وكابل الإشارة

- لا تسمح بوضع أي شيء على كابل الطاقة وكابل الإشارة أو لفهما.
- أحمى كابل الطاقة وكابل الإشارة من أن يداس عليهم.
- لا تزيد الحمل على كابل الطاقة أو منفذ الطاقة.
- لا تعرض كابل الطاقة وكابل الإشارة للرطوبة.

بيئة الإستخدام

- لا تضع الجهاز على عربة، حامل أو منضدة غير مستقرة.
- قم بوضع الجهاز في مكان يسمح بالتهوية الجيدة له.
- لا تستخدم الجهاز بالقرب من المناطق الرطبة والباردة. أحمى الجهاز من الحرارة الزائدة.
- أحفظ الجهاز بعيداً عن ضوء الشمس المباشر.
- لا يجب أن يتعرض الجهاز لتقطير المياه أو رشها ولا يجب وضع أشياء ممتلئة بالسوائل مثل الزهريرات على الجهاز.
- لا تستخدم الجهاز في بيئات بها غبار أو أتربة.

التنظيف

- أزل الغبار من على الجهاز من خلال مسح الشاشة والغطاء الخلفي بإستخدام قطعة قماش ناعمة ونظيفة أو بعض المنظفات السائلة الخاصة.
- لا تضغط بشدة على الشاشة أثناء التنظيف.
- لا تستخدم الماء أو منظفات كيميائية أخرى لتنظيف الشاشة حيث قد يؤدي ذلك إلى تلف سطح شاشة الجهاز.

الفصل ١ : المقدمة

٣	 الإحتياجات.
٣	 - المنتج.
٣	 - الطاقة والتوصيل.
٣	 - كابل الطاقة وكابل الإشارة.
٣	 - بيئة الإستخدام.
٣	 - التنظيف.
٣	 - تعليق الجهاز على الحائط.
٣	 - البطاريات.
٤	 أضرار على الجهاز.
٤	 المداخل.
٥	 وظائف جهاز التحكم عن بعد.

الفصل ٢ : التوصيلات والإعداد

٦	 التشغيل.
٦	 إيقاف التشغيل.

الفصل ٣ : وظائف متقدمة

١٢	 تنبيه وأسئلة متكررة.
١٢	 قسم المراجع.

الفصل ٤ : معلومات أخرى

١٣	 إستكشاف الأخطاء وإصلاحها.
١٣	 تركيب القاعدة.
١٣	 الملحقات.
١٤	 ملاحظات هامة.

الفصل ٥ : التعليمات

١٤	 تعليمات هامة.
----	---------------------

TORNADO

OWNER MANUAL

دليل المالك

LED TV Product

منتج تلفزيون ليد

ES3300E

ES3300G

ES3300X

US3300E

US3300G

US3300X

US5300E

US5300G

US5300X