Ordering Parts from the Parts List

The parts lists in this instruction manual and in the parts catalog contain links to "Parts Support Net", operated by Sega Logistics Service Co., Ltd.

Click a part number in the parts list to open the page for that part on Parts Support Net in your browser. (A login screen is displayed the first time you access it.)

If the part is in stock, you can order it from the page that opens.

■ Parts list page

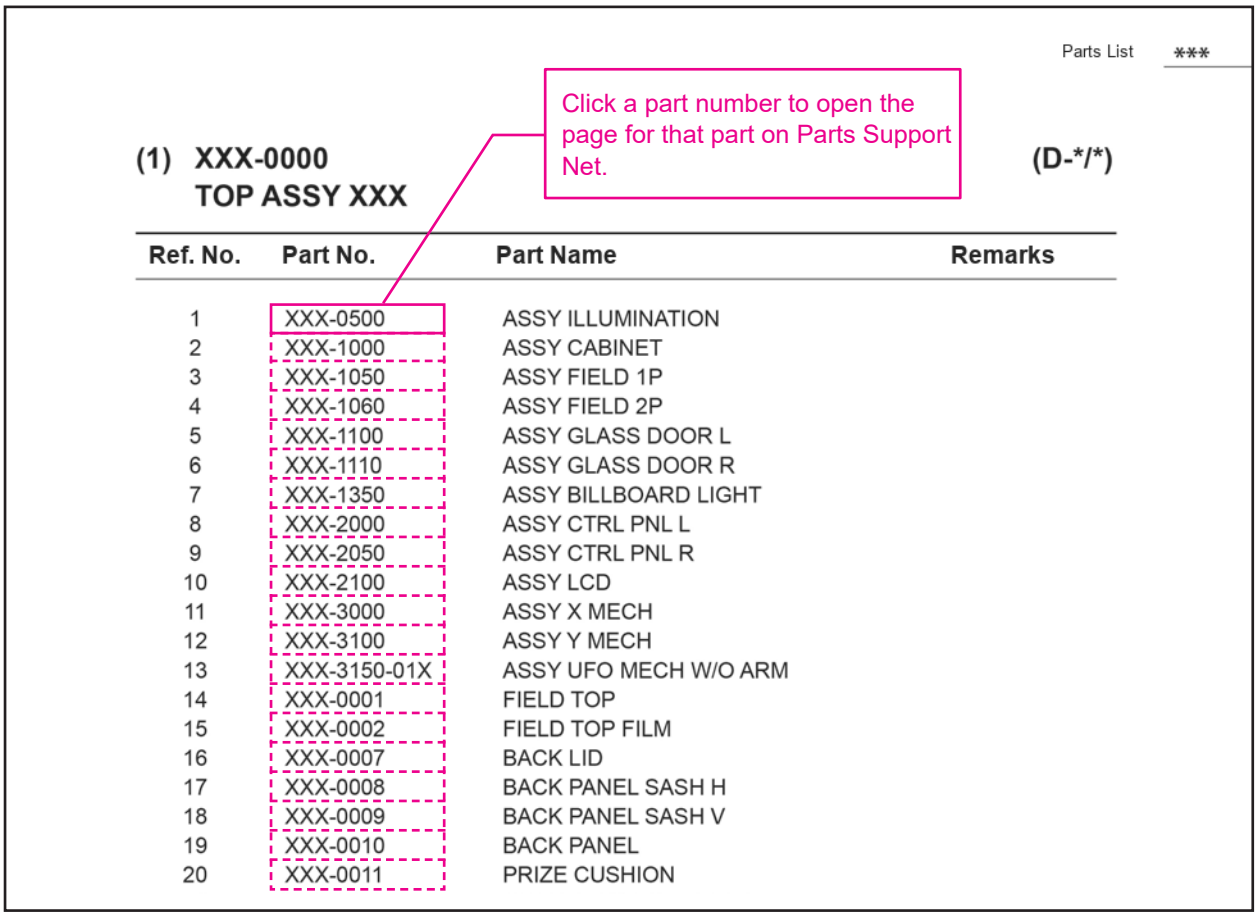

Ref. No.	Part No.	Part Name	Remarks
1	XXX-0500	ASSY ILLUMINATION	
2	XXX-1000	ASSY CABINET	
3	XXX-1050	ASSY FIELD 1P	
4	XXX-1060	ASSY FIELD 2P	
5	XXX-1100	ASSY GLASS DOOR L	
6	XXX-1110	ASSY GLASS DOOR R	
7	XXX-1350	ASSY BILLBOARD LIGHT	
8	XXX-2000	ASSY CTRL PNL L	
9	XXX-2050	ASSY CTRL PNL R	
10	XXX-2100	ASSY LCD	
11	XXX-3000	ASSY X MECH	
12	XXX-3100	ASSY Y MECH	
13	XXX-3150-01X	ASSY UFO MECH W/O ARM	
14	XXX-0001	FIELD TOP	
15	XXX-0002	FIELD TOP FILM	
16	XXX-0007	BACK LID	
17	XXX-0008	BACK PANEL SASH H	
18	XXX-0009	BACK PANEL SASH V	
19	XXX-0010	BACK PANEL	
20	XXX-0011	PRIZE CUSHION	

※ Registration in advance is required to use Parts Support Net.
For details on the procedure, see: http://www.sls-net.co.jp/e-site/

am.sega.jp

maimai DX Errata

Instruction Manual / 420-7651

The instruction manual contained errors. They are corrected as follows.

◆Add the earth wire to the accessories table in Chapter 5 "Accessories"

■ Accessories table

Part name / Part No.	Illustration / Application	Qty.
Earth wire 600-6972-2500	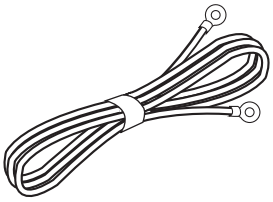 <See Chapter 10>	1

◆Delete the IMPORTANT text in "6-4 Connecting Power and Earth"

STOP

IMPORTANT

If you earth the unit with the earth wire built into the power cord, do not also connect the AC unit's earth terminal. If you earth the unit with the AC unit's earth terminal, do not use the earth wire built into the power cord. Doing so may cause malfunction or erratic operation.

⇩

STOP

IMPORTANT

~~If you earth the unit with the earth wire built into the power cord, do not also connect the AC unit's earth terminal. If you earth the unit with the AC unit's earth terminal, do not use the earth wire built into the power cord. Doing so may cause malfunction or erratic operation.~~

◆Add the following to the troubleshooting table in Chapter 10 "Troubleshooting"

■ Troubleshooting table

Problem	Cause	Remedy
Touch sensor does not respond well	Weak earth connection	Connect the unit to earth with the supplied earth wire. <See below>

am.sega.jp

◆Add "Earthing with the earth wire" after the troubleshooting table in Chapter 10 "Troubleshooting"

Earthing with the earth wire

If the touch sensor does not respond well, connect the earth screw of the AC unit to the earthing mechanism with the supplied earth wire.
To connect the earth wire, first remove the earth screw of the AC unit, pass it through the round terminal of the earth wire, and tighten it. Fit the spring washer and the flat washer on the screw.

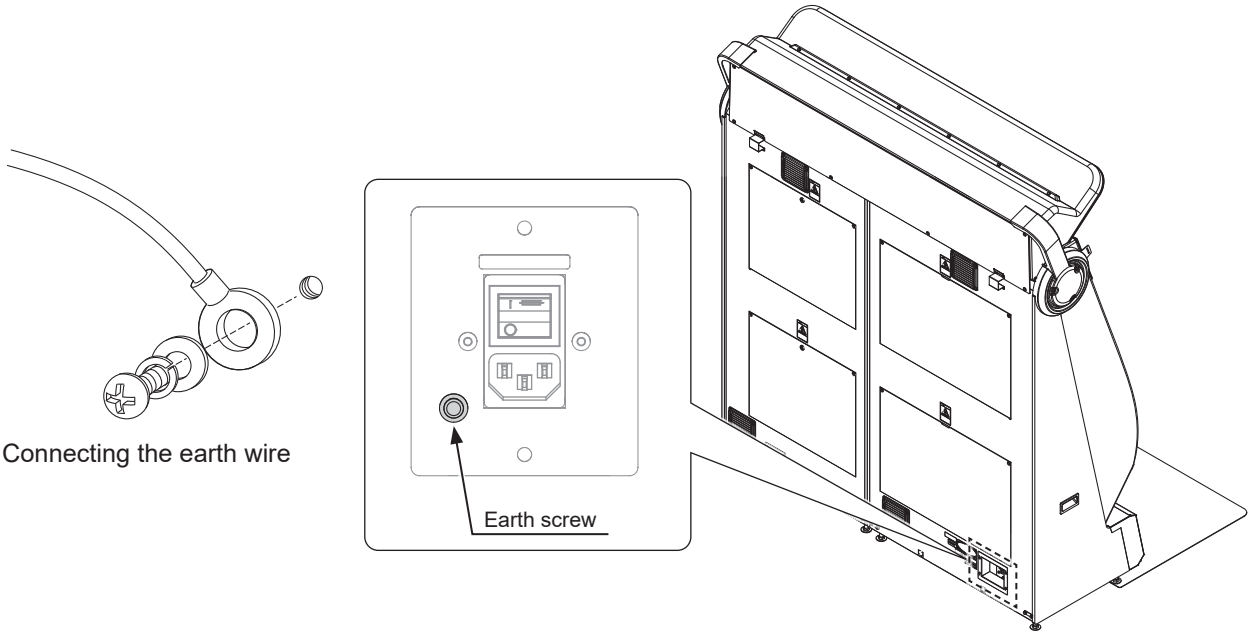

Connecting the earth wire

◆ Change step 3 of "11-1-2 Cleaning the Back of the Touch Sensor and the Front of the LCD Monitor"

3 Remove the 5 tamper-proof screws and remove the front cover. Be careful not to damage the LED board, LED tape or wiring on the cabinet side.
When reinstalling, first tighten the 5 tamper-proof screws loosely by hand, then fully tighten them with a tool.

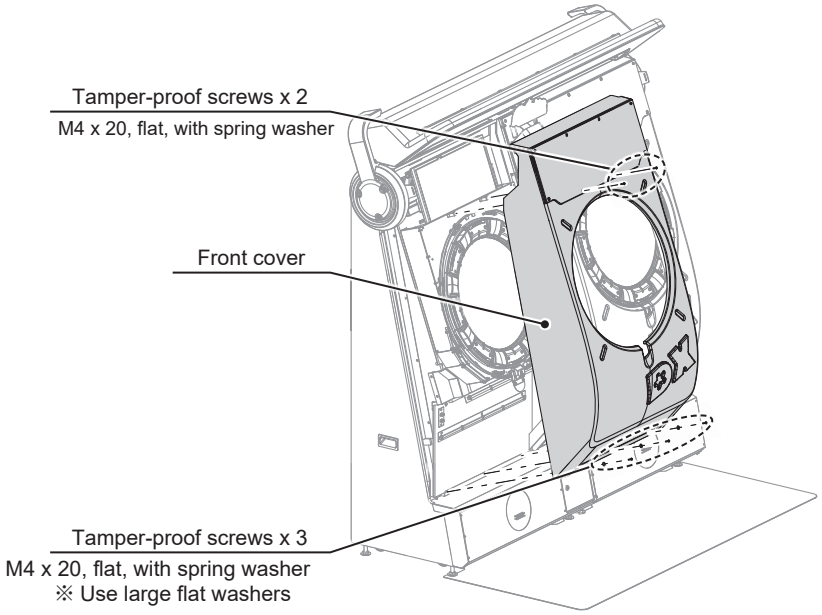

◆Change step 5 of "11-5 Replacing the Headphone Jack Board"

5 Install the front cover with the 5 tamper-proof screws. First tighten the 5 tamper-proof screws loosely by hand, then fully tighten them with a tool. Also be careful not to damage the LED board, LED tape or wiring on the cabinet side.

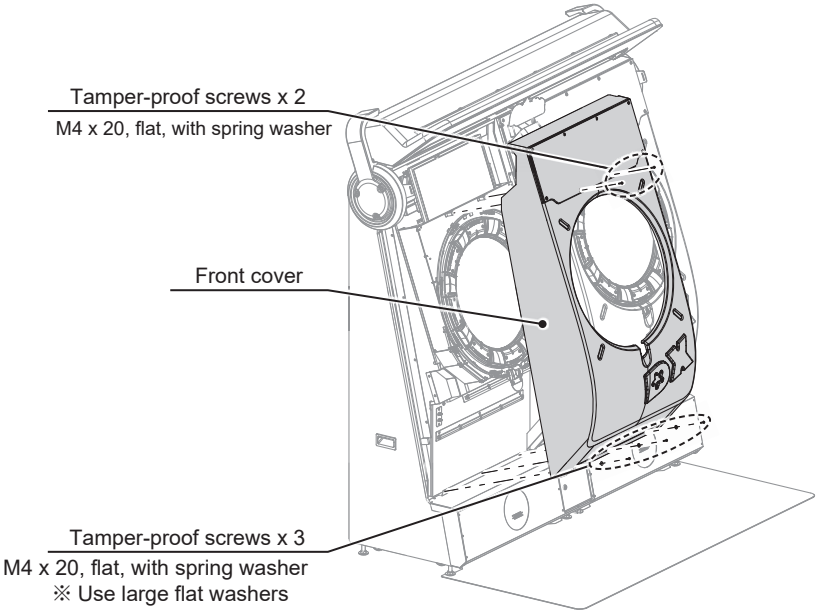

◆Additions and changes to "21-1 Cabinet"

- Added "Ref. No.: 408" to "(1) MMT-0000 (D-2-2)".
- Changed the part number of "Ref. No.: 7" in "(13) MMT-1400 (D-2-2)".

(1) MMT-0000 (D-2/2)
TOP ASSY MMT

Ref. No.	Part No.	Part Name	Remarks
408	600-6972-2500	WIRE HARN EARTH ID5 2500MM	

(13) MMT-1400 (D-2/2)
ASSY CENTER TOWER

Ref. No.	Part No.	Part Name	Remarks
7	MMT-1401X	CENTER TOWER BOX	

am.sega.jp

420-7651

SEGA®

maimai DX

Instruction Manual

420-7651

SEGA INTERACTIVE CO., LTD.
Osaki Garden Tower, 1-1-1 Nishi-Shinagawa, Shinagawa-ku, Tokyo 141-0033, Japan
http://sega.jp/
http://am.sega.jp/
http://sega-interactive.co.jp/

© SEGA

SEGA®

Instruction Manual

IMPORTANT

- Before use, read this manual carefully and make sure you understand it.
- After reading, keep it near this product so that you can refer to it at any time.

Warranty

The warranty period for this product is 3 months from the shipping date by SEGA.
If a failure occurs within the warranty period under normal use in accordance with the supplied instructions, SEGA will repair it free of charge. When a failure occurs, turn the power switch OFF, unplug the power cord on the power supply side, and contact the address listed under "Contact Information" in this manual.
The following failures are excluded from the warranty (repairs are chargeable even when possible).

(1) Failures caused by force majeure such as earthquakes, flooding, tsunamis or volcanic eruptions

(2) Failures caused by mishandling, such as damage from dropping the equipment

(3) Failures caused by operating errors

(4) Failures caused by use that violates the installation and operating conditions specified in this manual

(5) Failures caused by specification changes not approved by SEGA (addition of equipment, modifications)

(6) Failures caused by intentional acts or negligence of the user

(7) Failures caused by neglecting the required periodic inspections

(8) Failures caused by equipment other than this product
Malfunctions caused by radio waves or magnetic interference from other equipment (e.g. screen disturbance)

(9) Failures caused by deterioration of parts regarded as consumables
a) Fluorescent lamps and bulbs
b) Switches and buttons
c) Levers and joysticks
d) Fuses
e) Promotional items, POP displays and banners
f) Items specifically designated as consumables in this manual

(10) Network failures not caused by the product
a) The store's network environment (LAN cables, switching hubs, etc.)
b) The internet environment, such as the line and provider
c) When a server failure occurs, etc.

Overhauls, periodic maintenance, and the relocation and reinstallation of large machinery are excluded from the warranty. Separately sold items (options) such as chairs may have a different warranty period from this product.
SEGA is not liable for any loss of profit or indirect damages resulting from the inability to use this product.
Data loss that occurs with parts replacement during repair is not covered by the warranty.

ALL.Net Usage Procedures and Commercial Use License

ALL.Net Usage Procedure

This product requires the use of ALL.Net.
A prescribed procedure must be completed in advance to use ALL.Net.
If you have not completed the procedure, please contact the address below.
Note that the "key chip for this product" is a loaned item. After delivery, you are obliged to handle it with the due care of a good manager, so handle it carefully.

Basic Commercial Use License Agreement

This product is subject to the Basic Commercial Use License Agreement. Before using this product, check the terms of use stated in the "Basic Commercial Use License Agreement" concluded with SEGA.
This product cannot be used unless an agreement has been concluded with SEGA. To use it commercially in a store or similar venue, contact the address below and obtain a separate commercial use license from SEGA.

The terms of use in the Basic Commercial Use License Agreement are as follows.

Terms

- This product shall be used commercially by you only within Japan and shall not be used overseas.
- Do not resell this product for overseas markets, and do not sell it to a third party who may use it commercially overseas or resell it overseas.
- When reselling this product to a third party, notify SEGA of the buyer in advance and obtain approval. In this case, make sure the buyer is fully informed that a "commercial use license" from SEGA is required to use this software commercially.
- When disposing of this product, notify SEGA in advance and, if SEGA requests it, submit proof of disposal.
- When using it in a cabinet bearing a serial number different from the one stated in the license number notice, submit a new license application.
- If SEGA so requests, immediately report the usage status of this product to SEGA and take measures to substantiate that usage status.
- If SEGA sells cards or other products intended for use with this product, use them only in the manner specified by SEGA (as described in the instruction manual and operation manual of this product, etc.), and do not use them for any other purpose or distribute them in any way not specified.

End

(Contact) SEGA Interactive Co., Ltd.

Equipment Sales Department
Sumitomo Fudosan Osaki Garden Tower, 1-1-1 Nishi-Shinagawa, Shinagawa-ku, Tokyo 141-0033, Japan
TEL: +81-3-6864-6974

Kansai Sales Office
FGEX Shin-Osaka Building 3F, 1-4-13 Nishimiyahara, Yodogawa-ku, Osaka 532-0004, Japan
TEL: +81-6-6150-5230

About This Manual

This manual covers the following product:

maimai DX

It provides and explains information on its installation, operation, maintenance, inspection, relocation, parts and wiring.

This manual is intended for the owners, managers and operators of this product. Read this manual thoroughly and make sure you understand it before using this product. After reading it, keep it near this product so that you can consult it at any time.

For information about the software, refer to the Service Manual.

If you cannot carry out the work as described in this manual, or if normal functionality cannot be obtained, anyone other than a technician must never touch the internal system. Contact the place of purchase or the address listed under "Contact Information" in this manual.

To request a machine repair or to order parts, fill in the required items on the "On-site Service Request Form", the "Service Parts Order Form" or the "Advance Loan / Item Repair Request Form" at the end of this manual and send it by fax.

If you lose this manual, you can obtain a replacement by ordering it with the "Service Parts Order Form". When relocating or reselling this product, include this manual and the manuals related to this product.

※The contents of this manual may be changed without notice for the purpose of improvement.

Explanation of Warning Labels

Fully understand the meaning of the warning labels shown in this manual and on the cabinet, and the precautions they give, and use this product correctly and safely. Explanations that require particular attention are classified, according to the degree of danger, as "DANGER", "WARNING" and "CAUTION".

⚠ **DANGER**	Ignoring this notice and handling the product incorrectly is extremely likely to result in death or serious injury.
⚠ **WARNING**	Ignoring this notice and handling the product incorrectly may result in death or serious injury.
⚠ **CAUTION**	Ignoring this notice and handling the product incorrectly may result in minor injury or property damage.

The following symbols are used to ensure the safe use of this product.

	"Electric shock hazard" symbol. Indicates the possibility of electric shock under specific conditions.
	"High temperature hazard" symbol. Indicates the possibility of injury caused by high temperature under specific conditions.
	"Pinch hazard" symbol. Indicates the possibility of injury caused by fingers or hands being caught in doors, etc.
	"Prohibited" symbol. Indicates actions that must not be performed when handling the product.
	"Protective earth terminal" symbol (earth terminal). Always connect the earth before operating the equipment.

Important information that does not involve personal injury or property damage is indicated in this manual with the symbol below.

IMPORTANT	Indicates content that is important for installing, operating, maintaining and inspecting this product.

am.sega.jp

Definition of Store Maintenance Staff and Technicians (Service Persons)

⚠ WARNING

Work that this manual designates to be performed by "store maintenance staff" or a "technician (service person)", and work that is not described in this manual, must not be performed by anyone who lacks the necessary knowledge and skills. Doing so may cause electric shock or malfunction. If nobody with the necessary knowledge and skills is available, ask the place of purchase or the address listed under "Contact Information" in this manual to carry out the work, for safety.

Parts replacement, maintenance inspections and troubleshooting must be performed by store maintenance staff or a technician (service person). In this manual, particularly dangerous work is designated to be performed by a technician (service person) with specialized knowledge. This manual defines store maintenance staff and technicians (service persons) as follows.

Store maintenance staff

A person who has experience in maintaining amusement equipment, vending machines and the like, and who, under the management of the owner and operator of this product, routinely takes part in the maintenance and management of equipment inside an amusement facility or store by installing and inspecting equipment and replacing units and consumable parts.

Work of store maintenance staff

Installation, maintenance inspection, and replacement of units and consumable parts of amusement equipment, vending machines and the like.

Technician (service person)

A person who is engaged in the design, manufacture, inspection and maintenance service of equipment at an amusement equipment manufacturer. A person who has specialized knowledge of electrical, electronic and mechanical engineering equivalent to or higher than that of a technical high school graduate, and who routinely takes part in the maintenance, management and repair of amusement equipment.

Work of a technician (service person)

Installation of amusement equipment, vending machines and the like, and repair and adjustment of their electrical, electronic and mechanical parts.

Notation Used in This Manual

Notation in figures

Figures in this manual show fastener (screw, nut, washer, etc.) and connector information as follows.

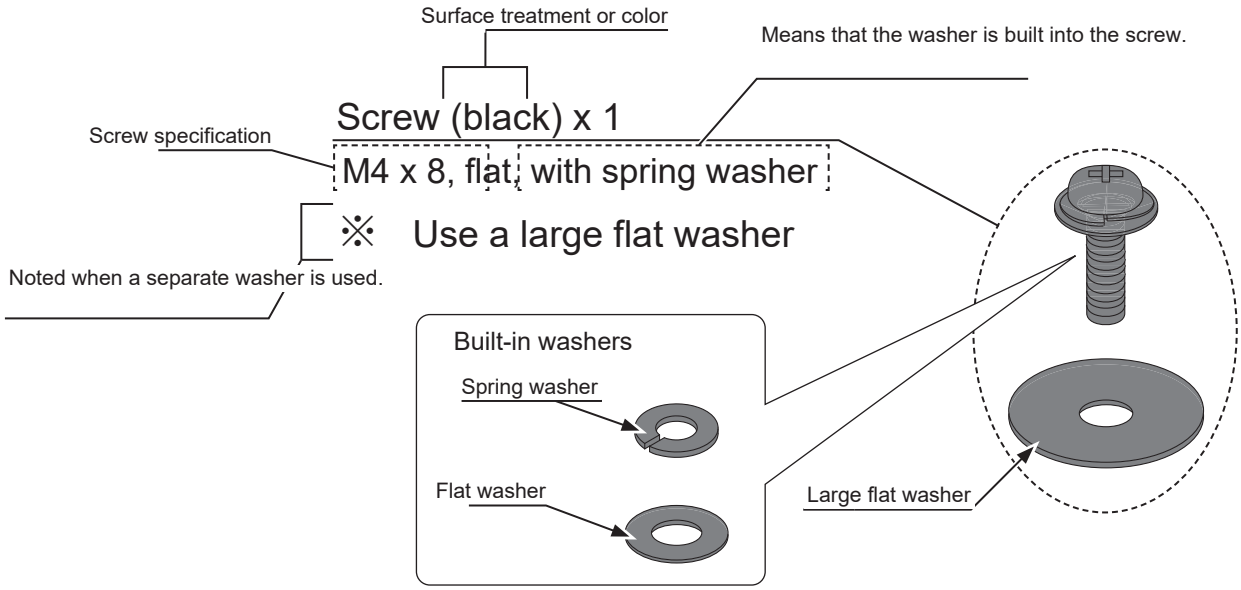

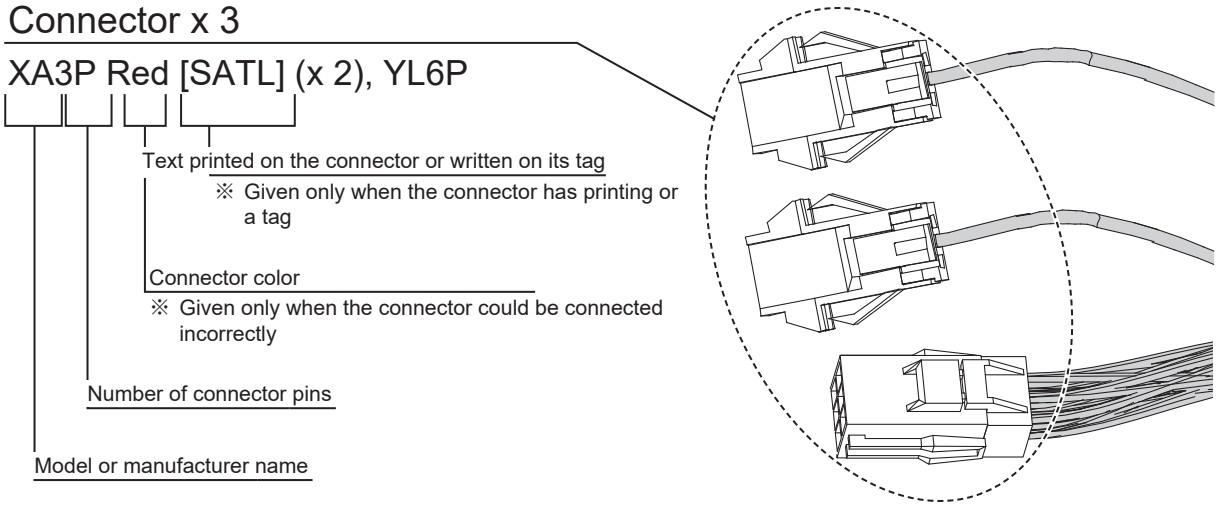

Version notation

Version numbers displayed in test mode are shown with masked characters. When explaining a software version upgrade, only the major version and minor version are given. The release version is SEGA's internal management number. If you need information on the release version, contact the address listed under "Contact Information" in this manual.

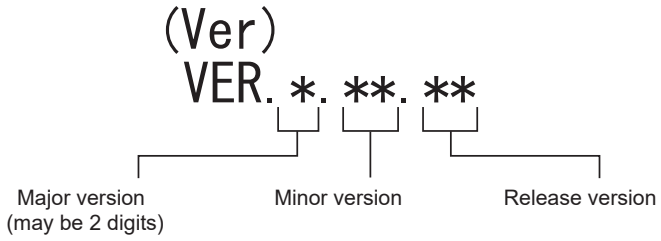

Tools Used

For the tools that fit the fasteners (screws, nuts) used in this product, refer to the table below.

■ Fastener and tool correspondence table

Fastener type		Corresponding tool	
Truss-head screw (M3)		Phillips screwdriver No. 1	
Truss-head screw (M4, M5)		Phillips screwdriver No. 2	
Flat-head screw (M3 to M5)			
Screw (M3 to M5)			
Tamper-proof screw		Tamper-proof wrench	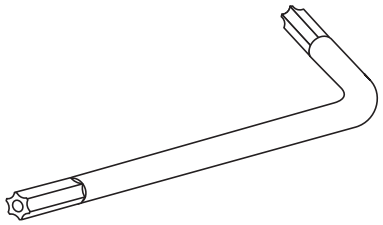
Hex socket bolt		Hex key	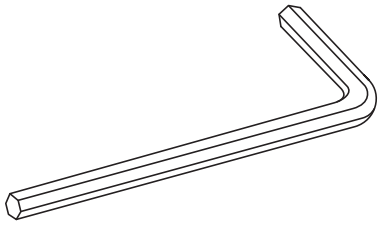
Low-head hex socket bolt			
Extra-low-head hex socket bolt			
Hex socket button bolt			
Set screw			
Hex bolt		Socket wrench (box driver)	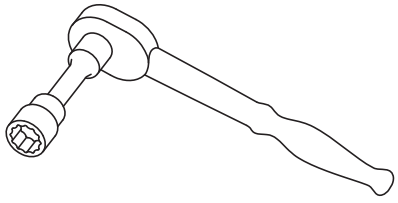
Hex nut			
Cap nut			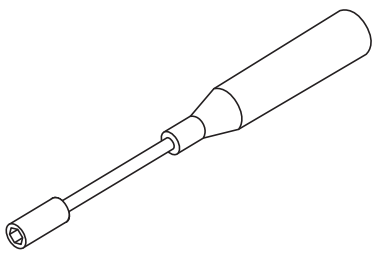
Flange nut			

※For the corresponding sizes and across-flats dimensions of hex keys and socket wrenches (box drivers), see the correspondence tables on the next page.

am.sega.jp

■ Hex key correspondence table

Size	Tool size (across flats)				
	Hex socket bolt	Low-head hex socket bolt	Extra-low-head hex socket bolt	Hex socket button bolt	Set screw
M3	2.5 mm	2 mm	1.5 mm	2 mm	1.5 mm
M4	3 mm	2.5 mm	2 mm	2.5 mm	2 mm
M5	4 mm	3 mm	3 mm	3 mm	2.5 mm
M6	5 mm	4 mm	3 mm	4 mm	3 mm
M8	6 mm	5 mm	4 mm	5 mm	4 mm

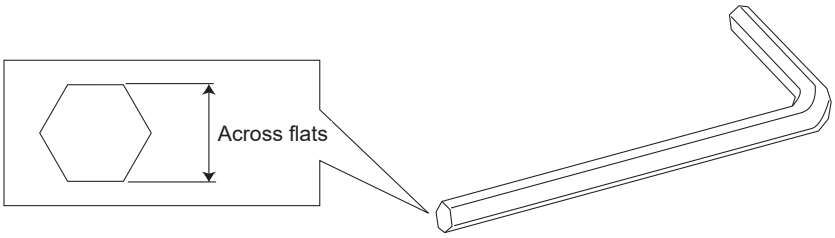

■ Socket wrench (box driver) correspondence table

Size	Tool size (across flats)			
	Hex bolt	Hex nut	Cap nut	Flange nut
M3	5.5 mm			
M4	7 mm			
M5	8 mm			
M6	10 mm			
M8	13 mm			12 mm
M10	17 mm		-	
M12	19 mm		-	
M16	24 mm		-	

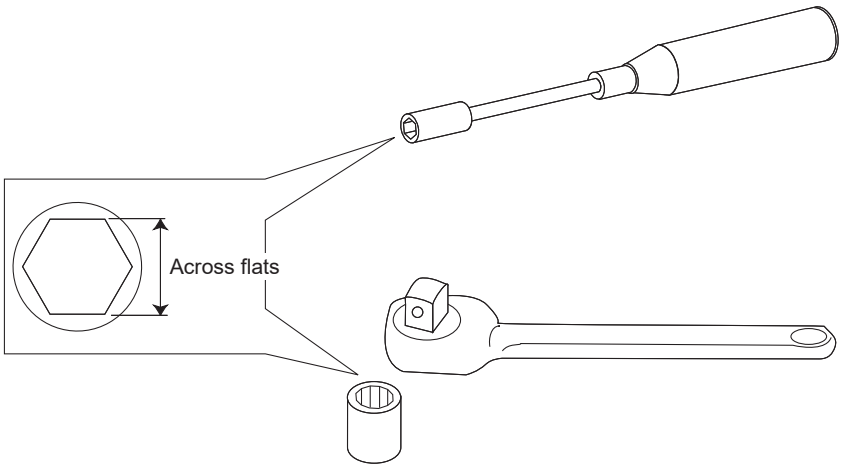

am.sega.jp

How to Read the Parts List

How to Read the Assembly Structure

The assembly structure is a tree diagram showing the relationships between units (combinations of multiple parts).

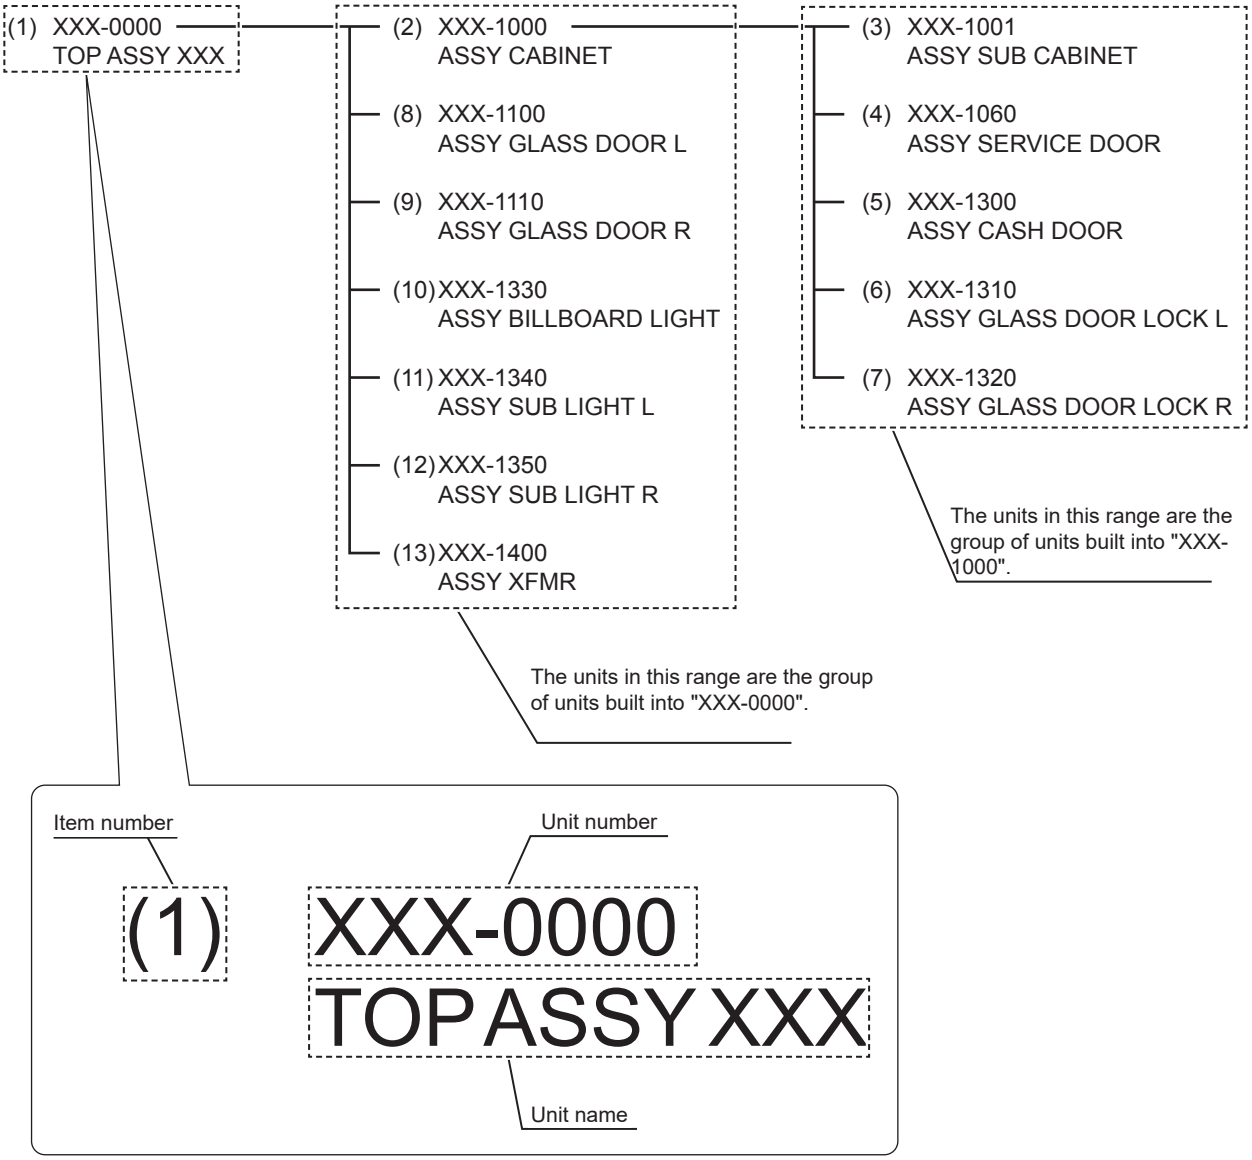

am.sega.jp

How to Read the Unit Assembly Drawing

(13) XXX-1400
ASSY XFMR

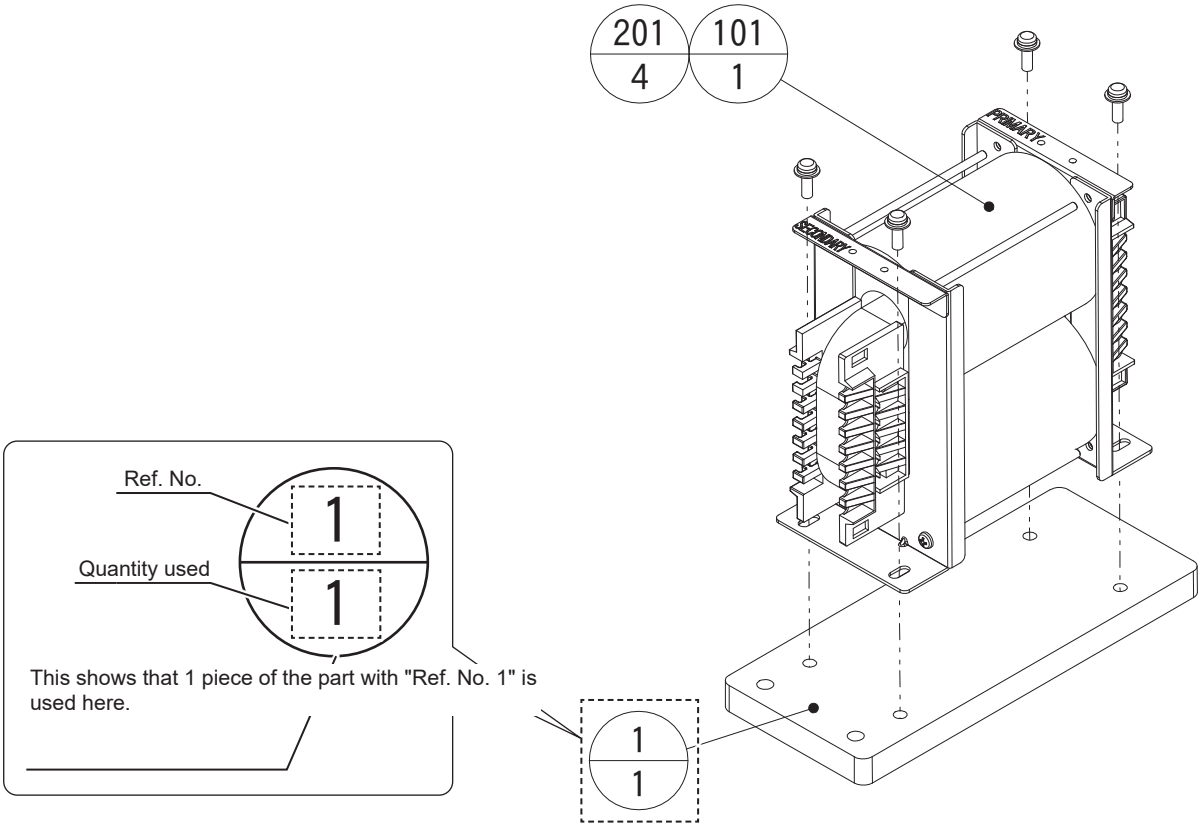

Ref. No.	Part No.	Part Name	Remarks
1	XXX-1401	WOODEN BASE XFMR	
101	560-5523-V	XFMR 100-120V 100V7.5A WB V	
201	000-P00516-W	M SCR PH W/FS M5x16	

am.sega.jp

About the Key Chip

Key chip serial number

The key chip bears the serial number required when making inquiries about ALL.Net.

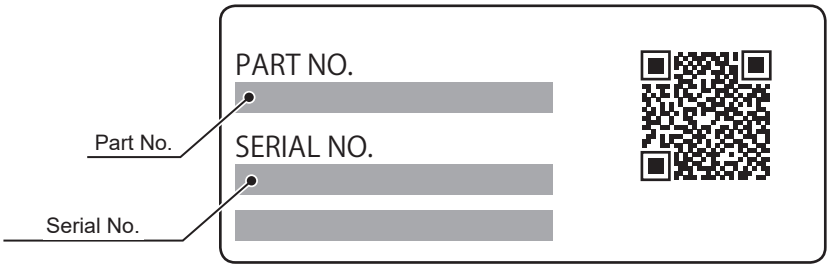

Key chip sticker

Key chip mounting position

The mounting position of the key chip is shown in the figure below.

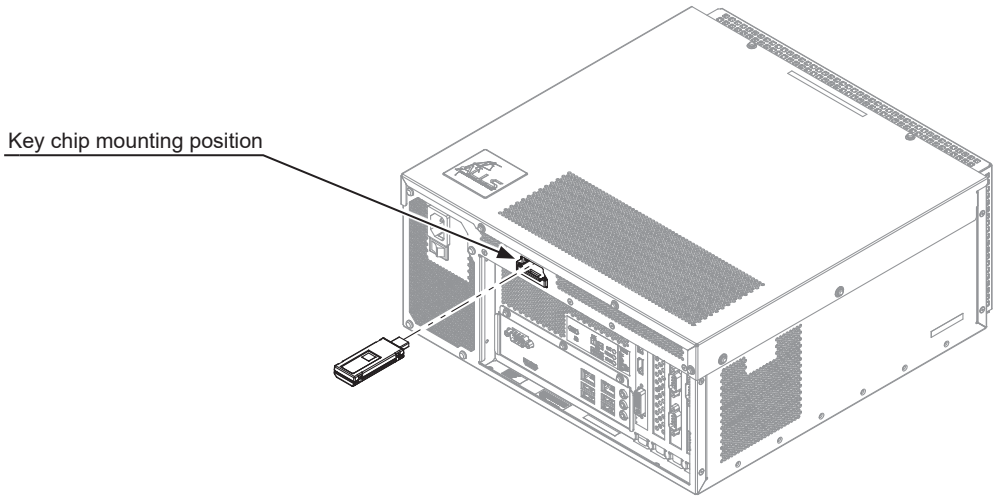

ALLS HX2

Contents

Warranty i

ALL.Net Usage Procedures and Commercial Use License ii

About This Manual iii

Explanation of Warning Labels iv
Definition of Store Maintenance Staff and Technicians (Service Persons) v
Notation Used in This Manual vi
Tools Used vii
How to Read the Parts List ix
About the Key Chip xi

Contents xii

1 Product Specifications 1

1-1 Specifications 1
1-2 Names of Parts 3
1-3 Product Serial Number and Electrical Specification Label 4

2 Handling Precautions 5

3 Installation Site Precautions 8

3-1 Operating Conditions 8
3-2 Operating Area Restrictions 9

4 Precautions for Operation 10

4-1 Operating Precautions 10
4-2 Precautions for Customers 13

5 Accessories 16

6 Installation 19

6-1 Assembling the Cabinet 21
6-1-1 Connecting Cabinet 1P and Cabinet 2P 21
6-1-2 Installing the Player Camera 26
6-1-3 Installing the Billboard 28
6-1-4 Installing the Side Covers and Billboard POP 30
6-1-5 Installing the Key Chip 33
6-1-6 Installing the Router Unit 34
6-2 Fixing the Cabinet in Place 36
6-3 Connecting the LAN Cables 39

am.sega.jp

6-3-1 When Operating One Unit 39
6-3-2 When Operating Two Units 45
6-3-2-A Server Unit 45
6-3-2-B Client Unit 47
6-4 Connecting Power and Earth 49
6-5 Installing the Software 53
6-5-1 When Operating One Unit 54
6-5-2 When Operating Two Units 57
6-5-2-A Server Unit 57
6-5-2-B Client Unit 60

7 Setup 62

7-1 Setup Immediately After Installation 62
7-1-1 Turning On the Power 62
7-1-2 Software Settings 62
7-1-3 Operation Check 63
7-1-4 Volume Adjustment 63
7-2 Daily Setup 64

8 Precautions When Moving the Cabinet 65

9 Periodic Inspection 67

10 Troubleshooting 69

11 LCD Monitor, Touch Sensor and Headphone Jack 72

11-1 Cleaning 73
11-1-1 Cleaning the Front of the Touch Sensor 73
11-1-2 Cleaning the Back of the Touch Sensor and the Front of the LCD Monitor . 74
11-2 Adjusting the LCD Monitor 79
11-2-1 Accessing the Adjustment Board 79
11-2-2 Adjustment Procedure 82
11-3 Replacing the LCD Monitor 86
11-4 Replacing the Touch Sensor Unit 89
11-5 Replacing the Headphone Jack Board 92

12 Buttons 94

12-1 Replacement Procedure 94
12-2 Greasing 97

13 Coin Selector 100

13-1 Coin Insertion Test 101
13-2 Removing the Coin Selector 102

13-3 Cleaning the Coin Selector 104
13-4 Clearing Coin Jams 105

14 Code Reader Camera 106

14-1 Replacing the Code Reader Camera Unit 106
14-2 Cleaning the Camera Identification Code 112

15 Cleaning the Card Entry 114

16 Player Camera 117

16-1 Cleaning 117
16-2 Replacement Procedure 118

17 Replacing the Fuses 122

18 ALLS HX2 126

18-1 Removing the ALLS HX2 Unit 127
18-2 Cleaning the ALLS HX2 130
18-3 Replacing the ALLS HX2 132

19 Multipurpose Bracket 134

20 Design Parts 135

21 Parts List 136

21-1 Cabinet 136
21-2 Router Kit 191

22 Overall Wiring Diagram 193

Third-Party Rights Notices 197

On-site Service Request Form

Service Parts Order Form

Advance Loan / Item Repair Request Form

Contact Information

1 Product Specifications

1-1 Specifications

■ Product specifications

Dimensions	2,021 mm (W) × 1,342 mm (D) × 2,199 mm (H) ※ Height measured with the adjusters set down (5 mm above the floor surface).
Weight	322 kg
Power, max. current	406 W, 4.5 A (AC 100 V, 50/60 Hz)
Operating environment	Temperature: 5 °C to 30 °C, relative humidity: 35 %RH to 70 %RH (no condensation)

This product is equipped with wireless communication equipment that complies with Japan's Radio Act. It cannot be used outside Japan.

Dimensions (installed)

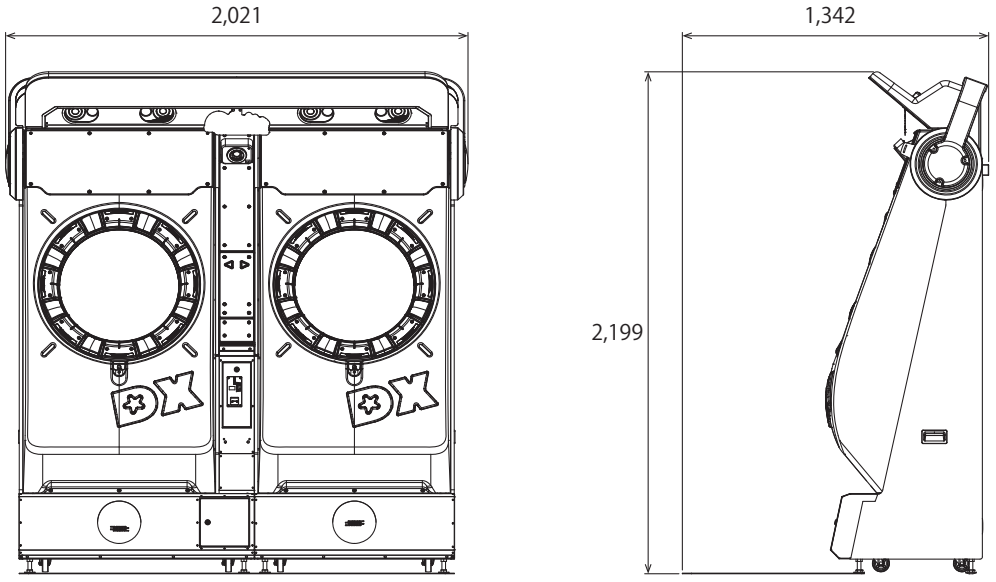

Unit: mm

■ Main unit dimensions and weights before installation

Name	Width (mm)	Depth (mm)	Height (mm)	Weight (kg)
Cabinet 1P	1,038	714	1,940	153
Cabinet 2P	899	714	1,940	130
Billboard	1,850	574	273	24

Dimensions (before installation)

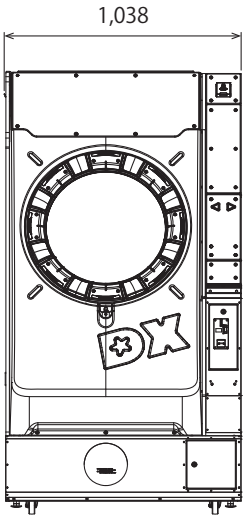

Cabinet 1P

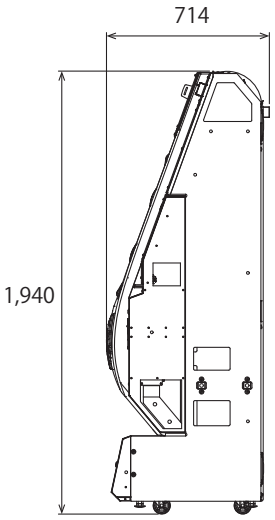

Unit: mm

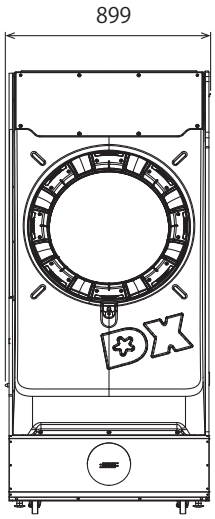

Cabinet 2P

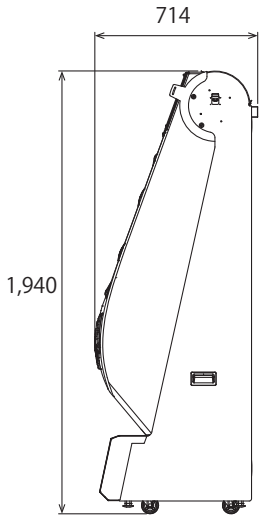

Unit: mm

1-2 Names of Parts

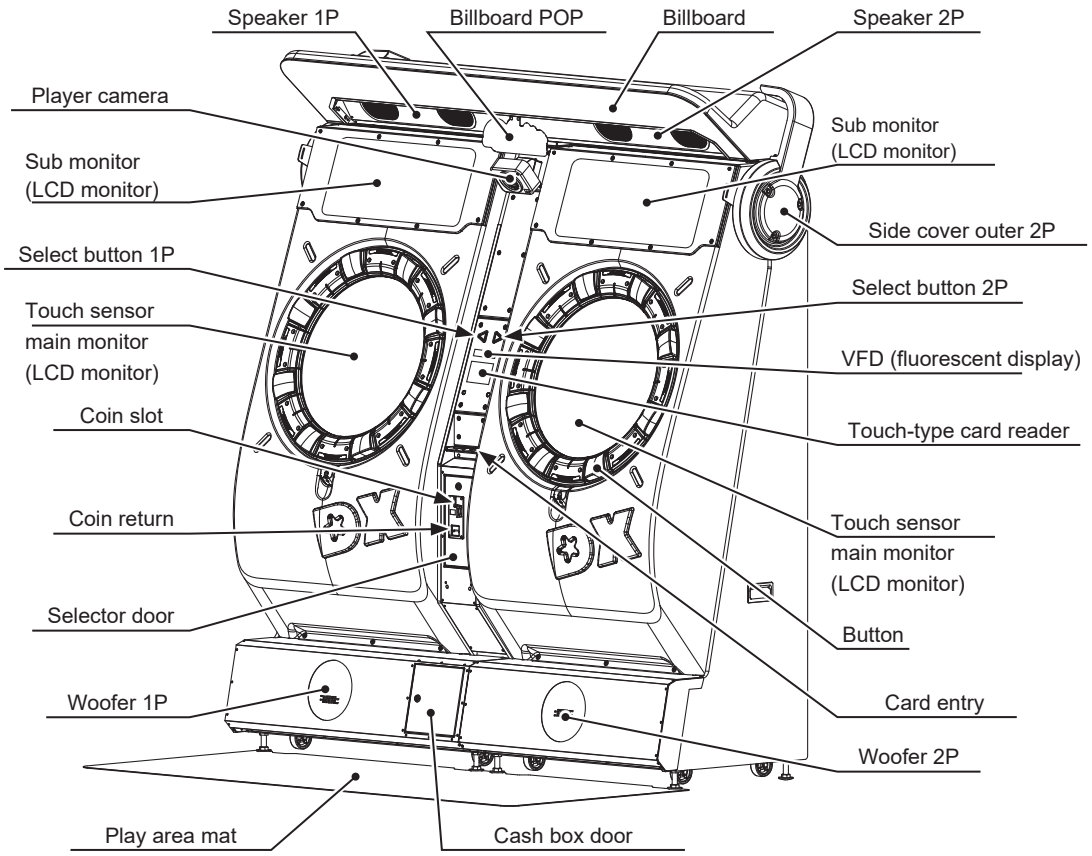

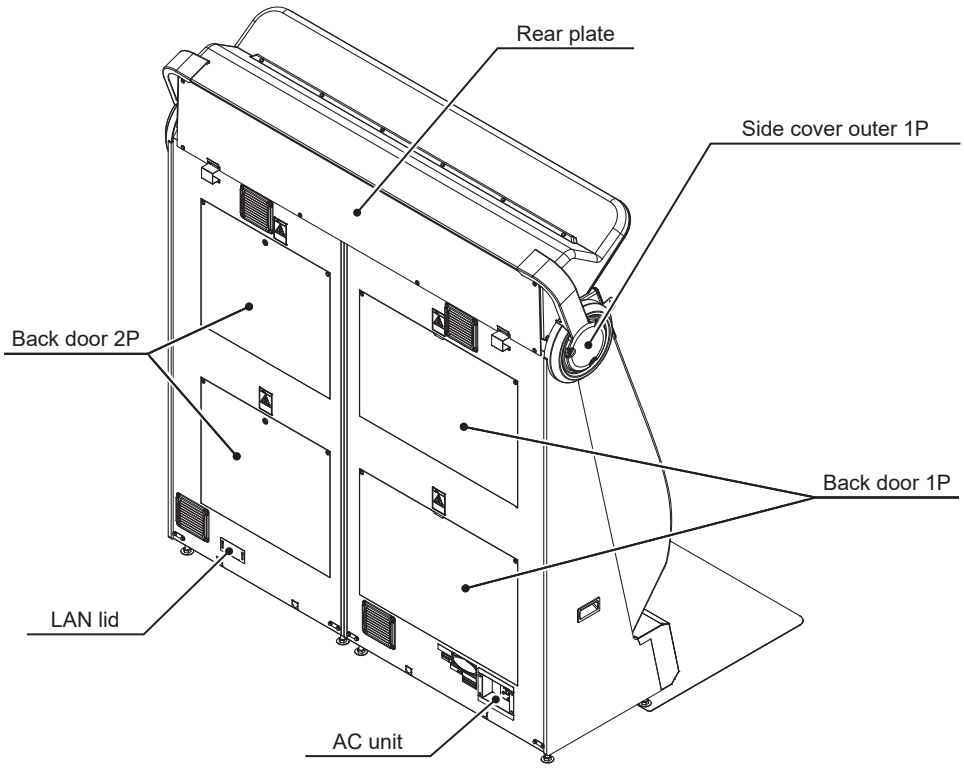

1-3 Product Serial Number and Electrical Specification Label

SEGA products are marked with a product serial number (serial number) and electrical specifications. The product serial number is the registration number of the product, and the parts used may differ depending on the production period even for the same model. When making inquiries, check the product serial number and model name, and contact the address listed under "Contact Information" in this manual.

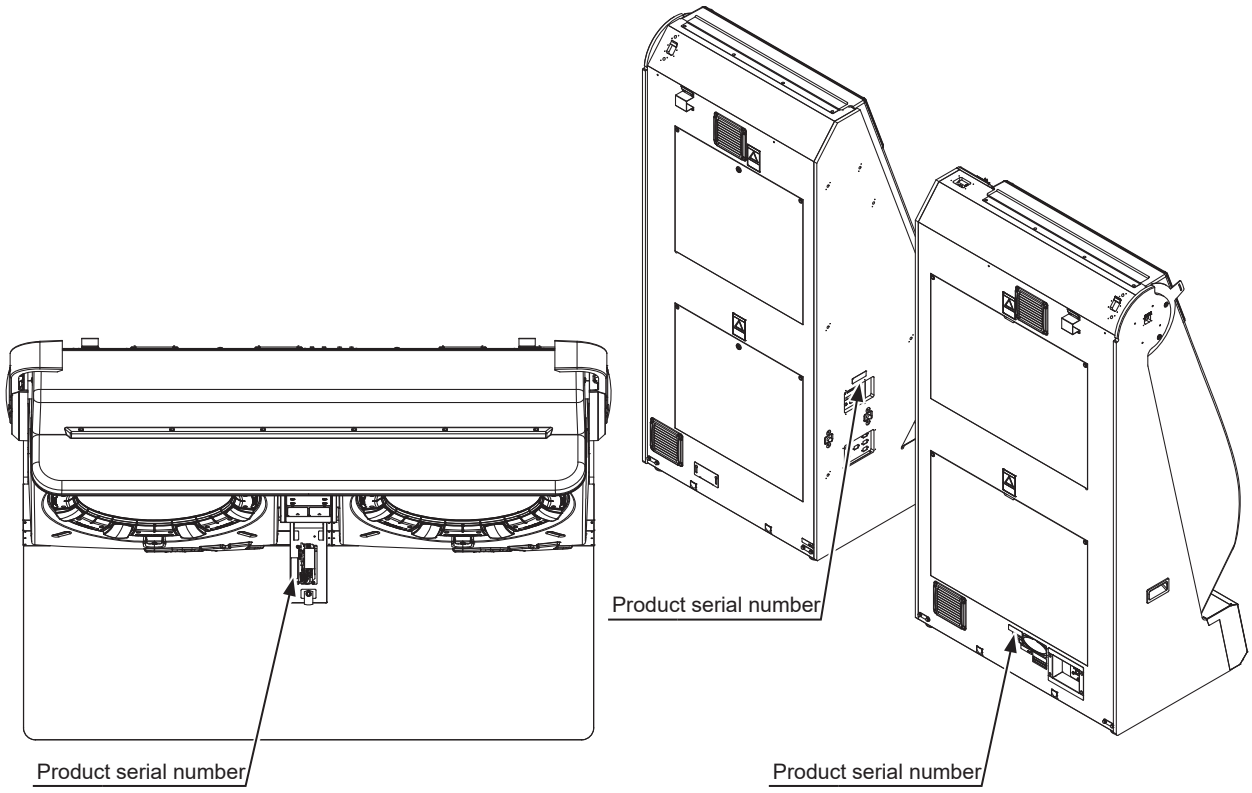

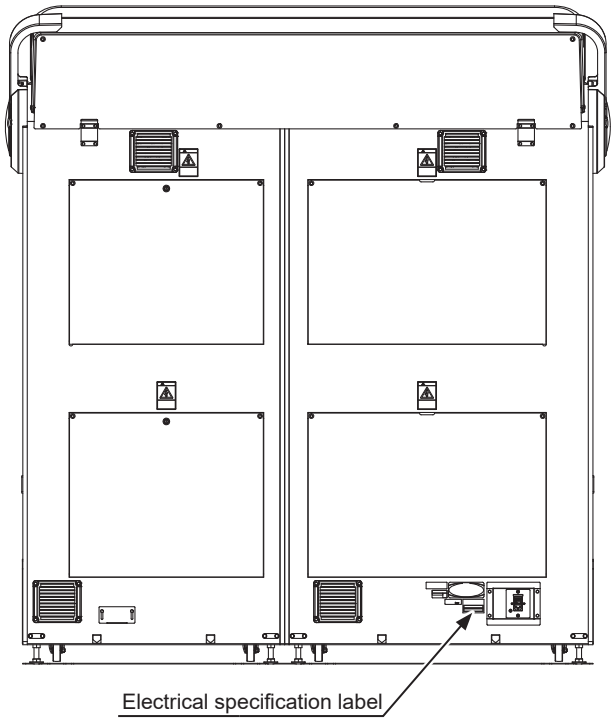

2 Handling Precautions

⚠ WARNING

- Carry out work and checks as instructed in this manual. Failure to do so may cause accidents such as electric shock, or fatal damage. Customers may also be injured during operation.
- Always turn off the power before working. Failure to do so may cause electric shock, short circuit or fire. Work to be performed with the power on is explained in this manual.
- Do not plug or unplug the power plug abruptly. This may cause electric shock or failure.
- Do not plug or unplug the power plug with wet hands. This may cause electric shock or failure.
- Do not leave wiring exposed in walkways. It may be damaged and cause electric shock, short circuit or fire. Use a cable protection cover where wiring is laid on the floor.
- Do not place objects on the wiring or damage it. Doing so may cause electric shock, short circuit or fire.
- Do not pull on the power cord during or after installation. If the cord is damaged, it may cause electric shock, short circuit or fire.
- If the power cord is damaged, ask the place of purchase or the contact address in this manual to replace it. Using it as is may cause electric shock, current leakage or fire.
- Always connect the earth wire. Without proper earthing, electric shock may result.

- Hold the connector body when plugging or unplugging connectors. Holding any other part may damage the cable and the connector terminals, causing electric shock, short circuit or fire.
- When connecting a connector, check its type and orientation and connect it securely. Connectors can only be connected in a fixed orientation. Applying force carelessly may break the connector or terminals and cause electric shock, short circuit or fire.
- Be careful not to damage the wiring. Doing so may cause electric shock, short circuit or fire.
- Do not twist or pull the wiring. If the conductors are damaged, it may cause failure or fire.

- Do not touch any parts other than those specified. This may cause electric shock, short circuit or fire.
- Be careful not to lose fasteners (screws, nuts, washers, etc.). If a metal fastener touches a live part, it may cause electric shock, short circuit or fire.
- Do not use deformed or damaged fasteners (screws, nuts, washers). Replace them with the fasteners specified in this manual. If you lose a fastener, use the fastener specified in this manual. Using fasteners other than those specified may cause accidents such as parts falling off.
- When handling heavy objects, pay attention to the following points. Failure to do so may cause tipping over, falling parts or serious injury.
  - Make sure enough people are available. Plan for about 15 kg as the load one worker supports.
  - Watch your footing so that you do not slip or trip.

⚠ WARNING

- Do not make specification changes not specified by SEGA (adding equipment, modifications).
  - This may cause electric shock or fire.
  - This may make users or people nearby feel unwell while the product is in use.
  - If an accident occurs under conditions that do not conform to SEGA specifications, SEGA accepts no responsibility whatsoever, including liability for compensation to third parties.
- Work or parts replacement not described in this manual may cause accidents. If you need to perform work that is not described in this manual, ask the place of purchase or the address listed under "Contact Information" in this manual to do it, or ask for details of the work.
- Always carry out the periodic inspections described in this manual.
- When handling the VFD, always turn off the power and wait 1 minute before starting work. Failure to do so may cause electric shock, short circuit or fire.

⚠ CAUTION

- For safe work, wear clothing suitable for the work. Wearing gloves and safety shoes is recommended to prevent accidents and injuries.
- Do not pinch your hands or fingers when opening, closing, installing or removing parts.
- Be careful when working inside the cabinet, as you may be injured by bumping into or catching yourself on parts.
- Handle glass and plastic parts with care. Parts may break and cause injury from fragments or cracks.
- When fixing glass or plastic parts, be careful not to overtighten screws and nuts. Parts may break and cause injury from fragments or cracks.
- Take care also in how you place glass parts. If you lean them against a wall, or place them on a surface with protrusions or small stones, they may break under their own weight and the fragments may cause injury.
- Wear gloves when handling the VFD. Failure to do so may cause an accident or injury.

STOP

IMPORTANT

- When performing periodic inspections or replacing parts, refer to the relevant section of this manual beforehand and prepare the necessary tools before starting work.
- Do not test the circuits of IC boards. Using anything other than dedicated measuring equipment or tools may damage the board.
- Static electricity from the human body may damage electronic components on IC boards. Before handling IC boards, discharge static electricity from your body, for example by touching a grounded metal surface.
- Some of the parts used in this product were not designed or manufactured exclusively for it. If such parts are discontinued or their specifications are changed by the manufacturer, repair or replacement requests may not be accepted even during the warranty period of this product.

STOP

IMPORTANT

- Do not turn the power switch ON and OFF repeatedly within a short time. This may cause failure or damage to parts.
- Be careful not to drop removed fasteners (screws, nuts, washers, etc.) into the cabinet. This may cause failure or damage to parts.
- This product uses LCD monitors. LCD monitor screens are easily scratched, so be careful when cleaning them. <See 11-1-2>

Handling the warning labels

Warning labels are attached to the cabinet to prevent accidents involving customers and to avoid dangers during maintenance work.
If a warning label becomes dirty, damaged or otherwise unreadable, replace it with a new warning label part.

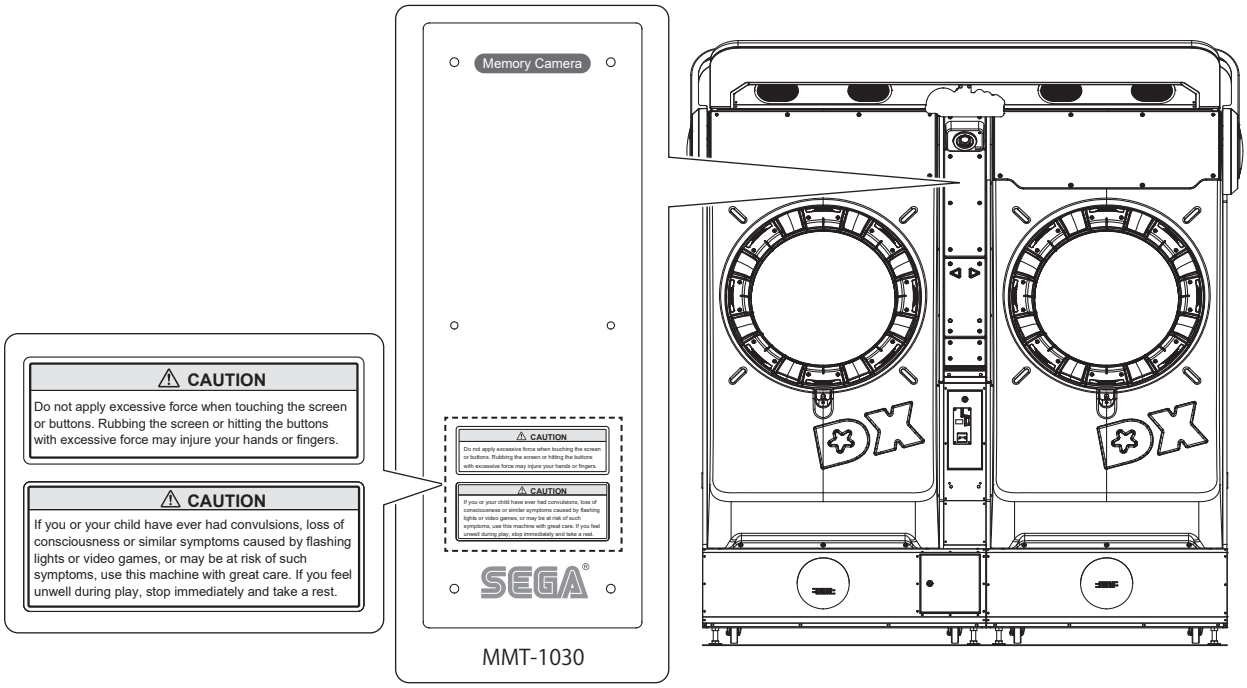

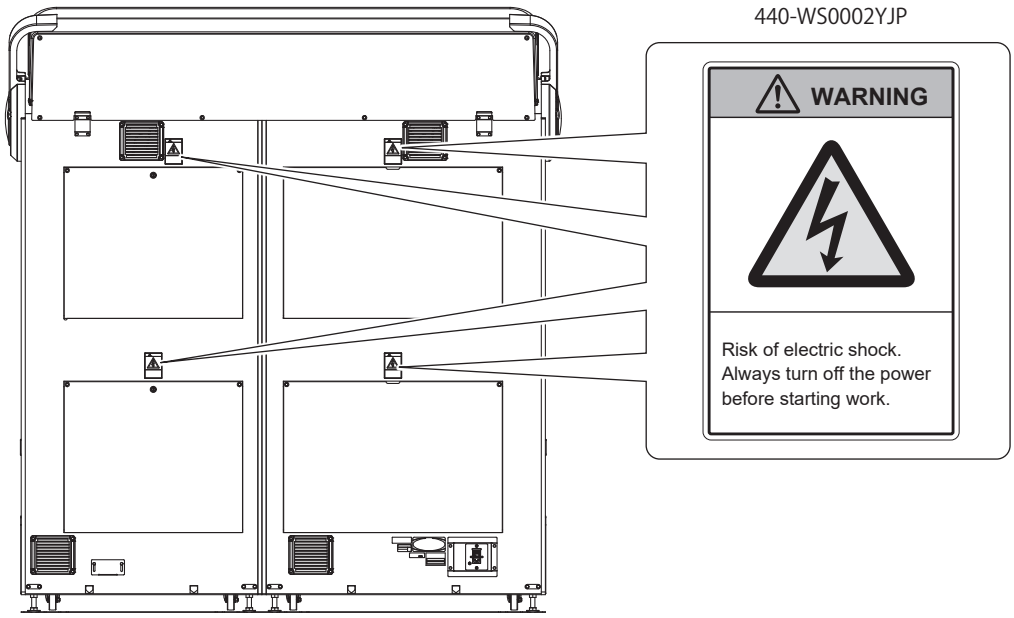

3 Installation Site Precautions

⚠ WARNING

This product is for indoor use. Do not install it outdoors.
Also, do not install it in any of the following places, even indoors. This may cause electric shock, fire, injury or failure.

- Places with high humidity, such as places with roof leaks or water leaks, and the vicinity of indoor pools, showers and water jets (high-pressure washers)
- Hot places, such as in direct sunlight or near heating appliances
- Places with flammable gas, or near highly flammable or volatile chemicals or hazardous materials
- Dusty places
- Slopes, steps and unstable places
- Places with severe vibration
- The vicinity of emergency exits and disaster prevention equipment such as fire extinguishers
- Places outside the operating ambient temperature range

3-1 Operating Conditions

⚠ WARNING

- Always check the electrical specifications. Confirm that this product matches the power supply, voltage and frequency of the site. A nameplate stating the electrical specifications is attached to the product. Using different specifications may cause electric shock or fire.
- The installation site must provide a circuit breaker and an earth connection dedicated to this product. If they are shared with other equipment, this may cause electric shock or fire.
- Use a dedicated power supply equipped with an earth leakage breaker. Using a power supply without an earth leakage breaker may cause a fire if a leakage occurs.
- Do not use branched wiring (multi-plug adapters). Overloading may cause overheating and fire.
- The indoor power wiring must be rated for the following current capacity. Using a different electrical specification may cause electric shock or fire.
  - AC single-phase 100 V (50/60 Hz), 7 A or more
- When using an extension cord, use one rated at or above the following rating. Using a cord that does not meet the specified rating may cause electric shock or fire.
  - 7 A or more

3-2 Operating Area Restrictions

⚠ WARNING

- Secure an operating area of at least 2.3 m in width and 1.79 m in depth for this product. If an accident occurs when operating in an area smaller than specified in this manual, SEGA accepts no responsibility whatsoever, including liability for compensation to third parties.
- The ceiling height at the installation site must be at least 2.3 m. If it is lower than the specified height, this may cause heat generation and fire.
- Provide the ventilation space specified in this manual, and do not block the ventilation openings. This may cause heat generation and fire.
- To operate this product commercially, space for players is required in addition to the area required for the product and the ventilation area. Secure an area of at least 0.7 m square per player. A player who falls during play and hits their head may suffer a serious injury.

Installation example

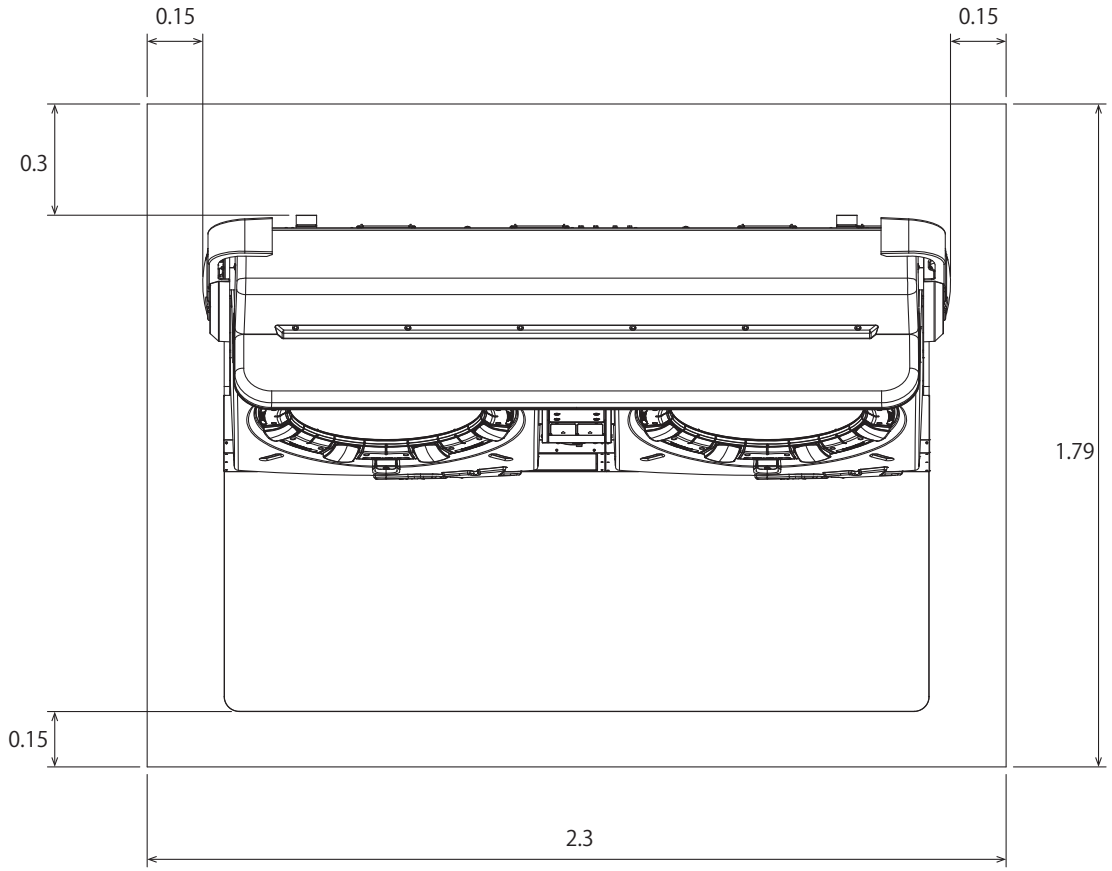

Unit: m

1/100 scale drawing

The 1/100 scale drawing is available on the download site (http://am.sega.jp/). Please download and use it.

4 Precautions for Operation

Observe the following precautions for safe operation of this product.

4-1 Operating Precautions

⚠ WARNING

- Install and operate this product under lighting that allows customers to read the warning labels. If the warning labels cannot be read, this may cause an accident.
- Check that all adjusters are set down on the floor. If they are not, the cabinet may move and cause an accident.

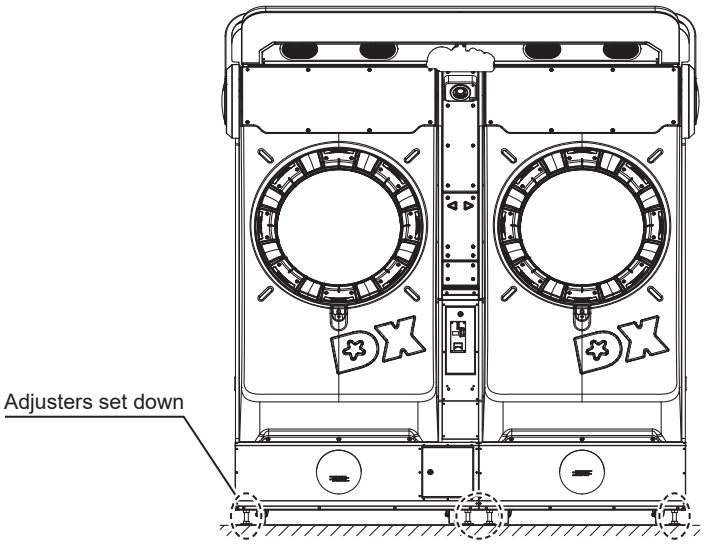

- Do not place heavy objects on this product. They may fall and cause an accident or damage to parts.
- Do not climb on this product. You may fall or the product may tip over, causing an accident. Use a step stool when viewing high parts.
- Check the doors and covers for damage or missing parts. Otherwise electric shock may result.
- Do not place the following kinds of items on or around this product. This may cause electric shock, short circuit, fire or damage to parts.

  Vases, flowerpots, cups, aquariums, cosmetics, and containers holding medicine, water, etc.
- Use this product only in Japan. Using it outside Japan may cause an accident or damage.

⚠ CAUTION

- To prevent accidents, secure enough space for peak crowds. If the space is too small, customers may bump into one another, causing accidents or trouble.
- Clean the parts customers touch directly every day and, at the same time, check the surfaces for scratches and cracks. Scratches and the like may cause customers to be injured.
- Check carefully that there are no gaps or looseness at the cabinet joints. Gaps or looseness may cause customers to pinch their hands or fingers and be injured.
- Check that all doors lock securely and have no looseness. Doors that are not completely locked, or that have gaps or looseness, may cause players to pinch their hands or fingers, or invite mischief.
- When cleaning the control panel, check the surface for scratches and cracks and the fixing screws for looseness. Playing with scratches, cracks or loose screws may cause customers to be injured.
- Provide a place where customers who feel unwell can rest, in case of emergency.
- Adjust the LCD monitors properly. Do not operate with screen flicker or distortion left uncorrected. A badly adjusted screen may cause customers to feel dizzy, get headaches or otherwise become unwell.

STOP

IMPORTANT

- Provide "hand towels" or similar so that customers can play comfortably.
- Clean the parts that players touch directly on a regular basis so that players can play comfortably.
- Check the coin slot regularly. If foreign objects are inserted into it or it is tampered with, play becomes impossible.
- Server maintenance is performed regularly. Game play is restricted from a certain time before the maintenance until the end of the maintenance. Be careful, as this may cause trouble with players. For details on server maintenance and play restrictions, see Service Manual "1-7 Server Maintenance".
- When the closing time setting is enabled, various processing functions run so that all games are ended at the set closing time. A message is displayed each time a processing function runs, but this may cause trouble with players, so make sure you fully understand the functions during closing processing before operating. For closing processing, see Service Manual "1-8 Store Closing Processing".
- If you operate without a closing time setting, make sure no players are present before turning off the power.
- If the machine is running at 7:00 AM, it restarts automatically. Various processing functions run at this time. A message is displayed each time a processing function runs, but this may cause trouble with players, so make sure you fully understand the functions during automatic restart processing before operating. For automatic restart processing, see Service Manual "1-9 Automatic Restart Processing".
- When turning OFF the main power switch of the server unit during business hours, first make sure there are no players at the other client units. Turning OFF the main power switch disables network communication.

STOP

IMPORTANT

- Turn on the power of the server unit first, then the client units. If the server unit is turned on later, the in-store network may not work correctly.
- To avoid scratching the touch sensor surface, do not press or rub hard objects (sharp-tipped sticks, pens, etc.) against it.
- Do not stick stickers or the like on the touch sensor surface.
- The headphone jack is plugged and unplugged with every play and may be handled roughly or tampered with. Run the headphone jack output test regularly and inspect it. <See Service Manual "4-1 Speaker Test">

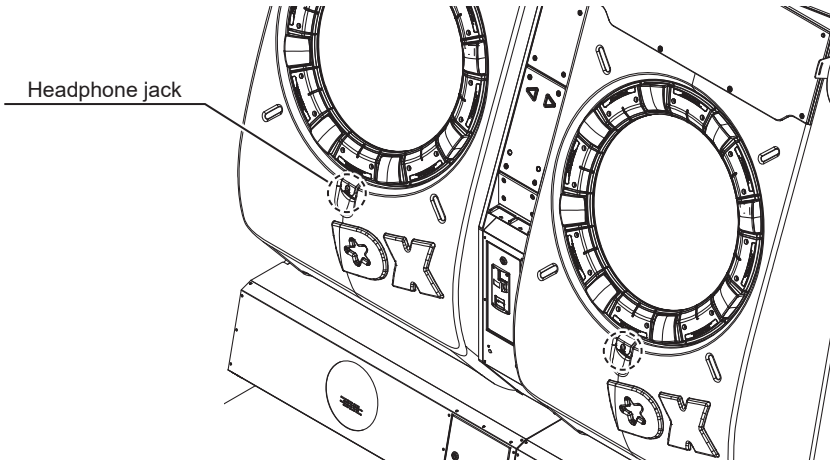

4-2 Precautions for Customers

⚠ WARNING

- Do not allow the following persons to play. Accidents or injuries may occur.
  - Persons who act against the warning labels on the machine
  - Persons who are heavily intoxicated
- Instruct customers not to place heavy objects or drinks on this product. Falling objects may cause accidents, and spilled drinks may cause electric shock.
- Instruct customers not to put hands, fingers or foreign objects into the openings or door gaps of this product. This may cause electric shock, short circuit or fire.
- Instruct customers to stop leaning on or climbing on this product. This may cause it to tip over or cause falls.
- Tell customers not to unplug the power plug. This may cause electric shock, short circuit or fire.
- For safety, instruct players to stop the following actions. They may cause accidents. They may also cause part damage, deformation, malfunction and unnecessary trouble.
  - Rough operation or behavior
  - Placing cigarettes anywhere other than in an ashtray
  - Blocking the ventilation openings
  - Placing drinks on the cabinet
  - Placing wet rain gear on the cabinet
  - Persons other than the player touching the controls during play
  - Placing luggage that obstructs other customers' passage
  - Tilting the cabinet
  - Actions likely to cause accidents, such as leaning on the LCD monitor

⚠ CAUTION

Recommend that customers who feel unwell see a doctor.

STOP

IMPORTANT

- We recommend operating with a notice that headphones are used at the player's own risk. Trouble such as damage or theft may occur.
- Do not connect anything other than headphones to the headphone jack. Connecting other devices may damage the board.

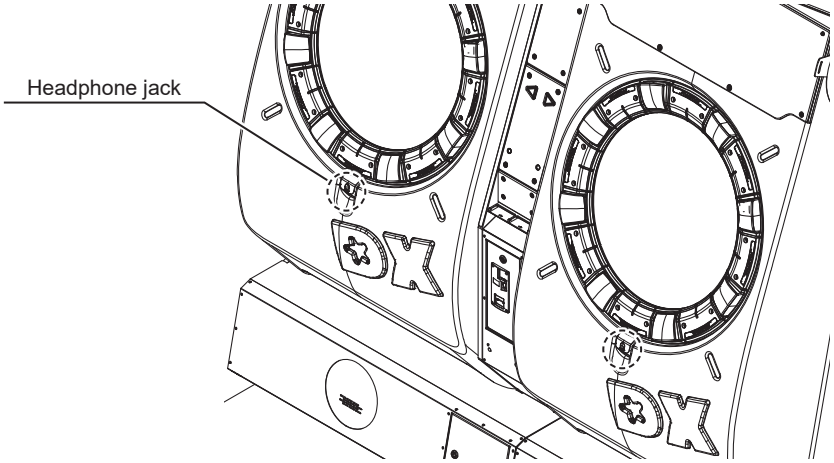

About Aime-compatible cards and mobile phones

An Aime-compatible card or mobile phone is required to play this product.
Using an Aime-compatible card or mobile phone lets you save your game progress.

STOP

IMPORTANT

The following Aime-compatible cards and mobile phones can be used with this product.

- Amusement IC card compatible IC cards
- Aime card (both Amusement IC card compatible and non-compatible types can be used)
- MJ MEMBER'S CARD
- Hatsune Miku Project DIVA Arcade Access Card
- Banapassport card (both Amusement IC card compatible and non-compatible types can be used)
- Mobile phone with the Osaifu-Keitai (mobile wallet) function

Make sure the following points are clearly communicated to players.

- Do not bend Aime-compatible cards, get them wet or bring them near magnetism.
- Do not store or leave Aime-compatible cards in hot, humid places.
- Do not transfer or lend Aime-compatible cards to others.
- When reading data from an Aime-compatible card or mobile phone, hold it firmly against the touch-type card reader on the cabinet.
- SEGA cannot provide any guarantee for damage, loss, theft, soiling or unauthorized use of Aime-compatible cards and mobile phones, or for corruption of their data.

[What Is Aime?]

A service that lets you play, with a single Aime-compatible card or a single mobile phone, any game machine that displays the "Aime" mark.

[What Is an Amusement IC Card?]

"Amusement IC Card" is a unified standard for IC cards for arcade games.
It can be used in common with game machines and services that support "Amusement IC Card".

Amusement IC logo

[About the Aime Service Site]

By registering on the "Aime Service Site (https://my-aime.net/)", you can receive various services, such as moving your data (data transfer) if trouble occurs, such as when you change your mobile phone or lose or break your Aime-compatible card. An access code is required for data transfer. Registration is free.

You can play the game without registering on the "Aime Service Site".

※ "Aime" is a registered trademark or trademark of SEGA Holdings Co., Ltd. or its affiliates.
"Banapassport" is a trademark of Bandai Namco Amusement Inc.
"Osaifu-Keitai" is a registered trademark of NTT DOCOMO, INC.
The "Amusement IC logo" is a registered trademark or trademark in Japan and other countries and regions, jointly managed by SEGA Interactive Co., Ltd., Bandai Namco Amusement Inc. and Konami Amusement Co., Ltd.

5 Accessories

The parts in the table below are tools, spare parts, or parts that may not be used depending on the operating situation. Keep them in a safe place, as they are used for maintenance and other purposes.
Parts marked "Spare" in the "Illustration / Application" column are consumables. For consumables other than those in the table below, see "Warranty" at the front of this manual.
Parts without a part number may not be available for purchase even if you wish to buy them, so keep them in a safe place.
※ Depending on the installation conditions, the parts in the table below may be attached to the cabinet.

■ Accessories table

Part name / Part No.	Illustration / Application	Qty.
About the Use of the Multipurpose Bracket 421-14274	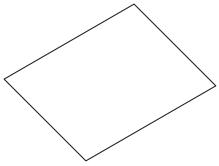 <See Chapter 19>	1
Master key 220-5793-2-A001		2
Key	 For the cash box door At shipment, it is inside the selector door.	1
Fuse 514-5176-10000	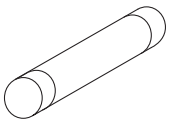 10 A (spare) <See Chapter 17>	2
LAN cable 10 m 600-7269-1000	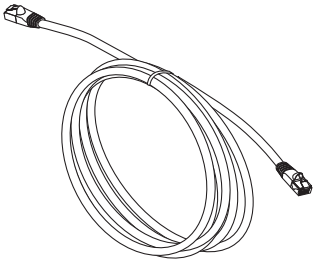 <See 6-3>	1
Test tool 610-0880	 For the touch sensor test <See Service Manual "3-5 Touch Sensor Test">	1

Part name / Part No.	Illustration / Application	Qty.
Multipurpose bracket MMT-0010	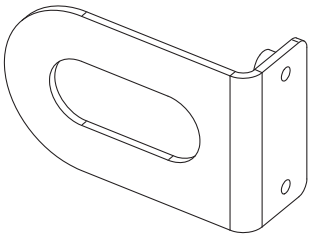 <See Chapter 19>	2
Truss-head screw (black, M4 x 8) 000-T00408-0B	 <See Chapter 19>	4

Router kit

■ Kit No.: XKT-2293 [ROUTER KIT MMT]

Part name / Part No.	Illustration / Application	Qty.
Instruction manual 420-7651	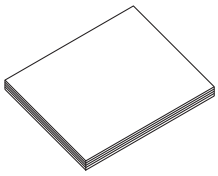 This manual	1
ALLS HX2 Service Manual 420-7653	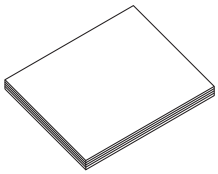	1
Router unit MMT-4300	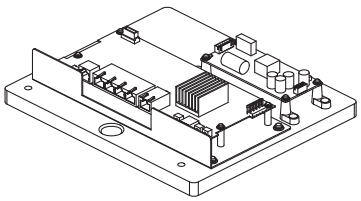 <See 6-1-6>	1
"SERVER" sticker 421-11708	 <See 6-1>	1
Tamper-proof wrench 540-0006-01: for M4	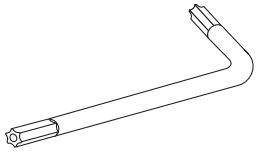 Tool A wrench as shown is included as the supplied tool, but screwdriver-type tools also exist. If you wish to purchase one, contact the address listed under "Contact Information" in this manual. 540-0069: for M4	1

Part name / Part No.	Illustration / Application	Qty.
LAN cable 1 m 600-7269-0100	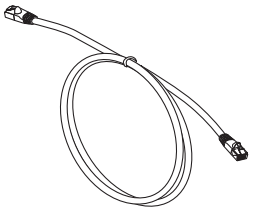 <See 6-3>	1
LAN cable 50 m 600-7269-5000	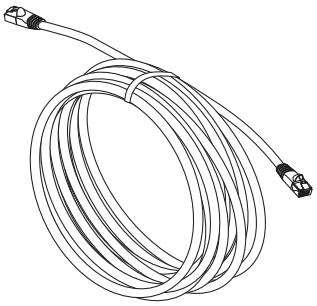 <See 6-3>	1
Large flat washer (outer dia. 16 mm, inner dia. 4.4 mm) 068-441616-0C	 <See 6-1-6>	2
Screw (M4 x 35, with spring washer) 000-P00435-S	 <See 6-1-6>	2

Software kit

■ Kit No.: XKT-2303 [SOFT KIT MMT]

Part name / Part No.	Illustration / Application	Qty.
Service Manual 420-7652	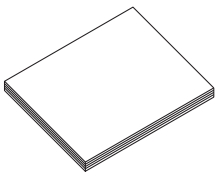	1
USB memory for installation MDA-U0083*	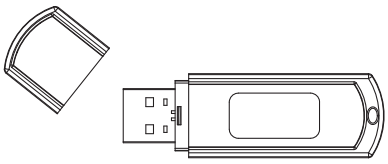 ※ The "*" in the part number may change depending on the game program version. ※ The shape may differ. <See 6-5>	1

6 Installation

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- When several workers work at the same time, pay attention to your surroundings. Appoint a lookout if necessary. Carelessness may cause contact or collision accidents. Also, if workers proceed individually and get the assembly order wrong, unexpected accidents may occur.
- For work that this manual says must be done by "several people", use at least the number of people specified in this manual. With fewer people the work is difficult, which may cause accidents.
- For safe and reliable work, prepare a step stool with sufficient strength and stability. An unstable step stool may cause falls.
- While working on a step stool, take care not to fall and not to hit your head on the ceiling or the cabinet. This may cause serious injury.
- For safe work, provide enough space. Working in a narrow place or under a low ceiling may cause accidents.
- Check that the adjusters and casters are not damaged. Using the product with damaged ones may cause it to tip over.
- Set all adjusters down on the floor. Otherwise the cabinet may move and cause an accident.
- Do not work on slopes, steps, grooves or similar places. The cabinet may tip over, causing a serious accident. Also, the work cannot be done easily.
- Work with sufficient lighting. Working in an inadequate environment may cause accidents.

- Connect the earth wire securely. If it is not connected, electric shock may result. It may also cause malfunction, faulty operation or damage to parts.
- Connect the connectors securely. If they are not fully inserted, this may cause electric shock, short circuit or fire.
- Be careful not to damage the wiring. This may cause electric shock, short circuit or fire.
- Indoor lighting may not reach the wiring connection work inside the cabinet. Prepare auxiliary lighting such as a flashlight. Careless wiring connections may cause electric shock, short circuit or fire.

⚠ CAUTION

- Be careful not to pinch your fingers when opening, closing, installing or removing parts.
- Handle glass and plastic parts with care. Parts may break and cause injury from fragments or cracks.
- When fixing glass or plastic parts, be careful not to overtighten screws and nuts. Parts may break and cause injury from fragments or cracks.
- Falling parts may cause accidents. Support parts firmly and fix them with screws or bolts, or have one worker support the part while another fixes it.
- If all the fasteners (screws, nuts, washers, etc.) fixing a part are removed, the part may fall and cause an accident. Remove the fasteners while supporting the part firmly.
- For safe work, wear clothing suitable for the work. Wearing gloves and safety shoes is recommended to prevent accidents and injuries.

■ Tools and equipment required for the work

 Master key (supplied)	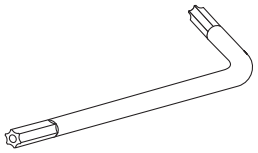 Tamper-proof wrench (for M4, supplied)	 Phillips screwdriver (for M4)	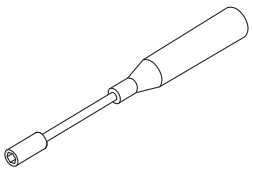 Box driver (7 mm across flats [for M4])
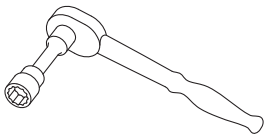 Socket wrench (13 mm across flats [for M8]) ※ An extension of about 150 mm is required	 Wrench (24 mm across flats)	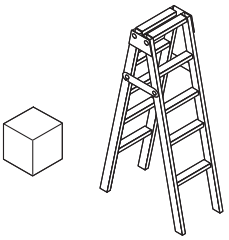 Step stool x 2	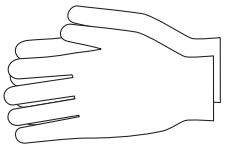 Gloves

6-1 Assembling the Cabinet

This section must be performed by two or more workers. Also use a step stool.

6-1-1 Connecting Cabinet 1P and Cabinet 2P

STOP

IMPORTANT

Connect cabinet 1P and cabinet 2P on a flat place with no steps.

1 Remove the 4 truss-head screws of cabinet 1P and remove back door 1P (upper and lower).

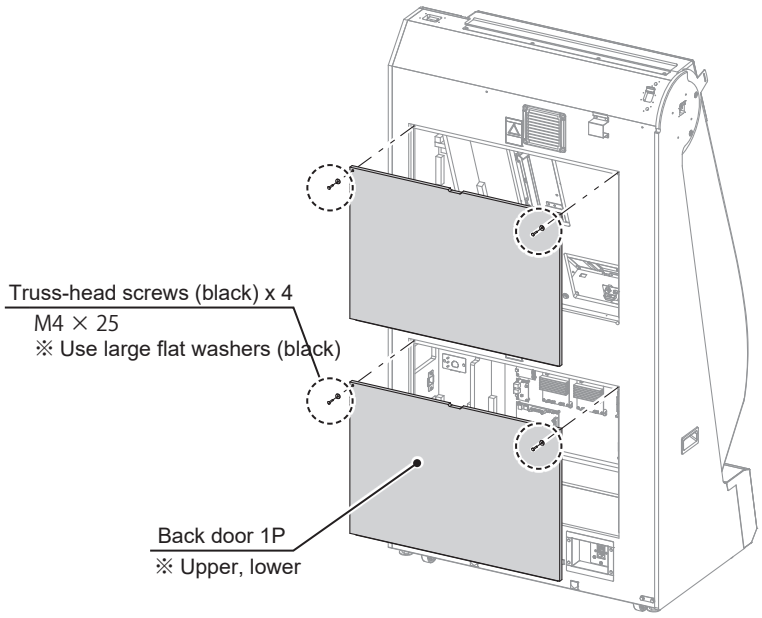

2 Remove the 2 truss-head screws of cabinet 2P. Unlock with the master key and remove back door 2P (lower).

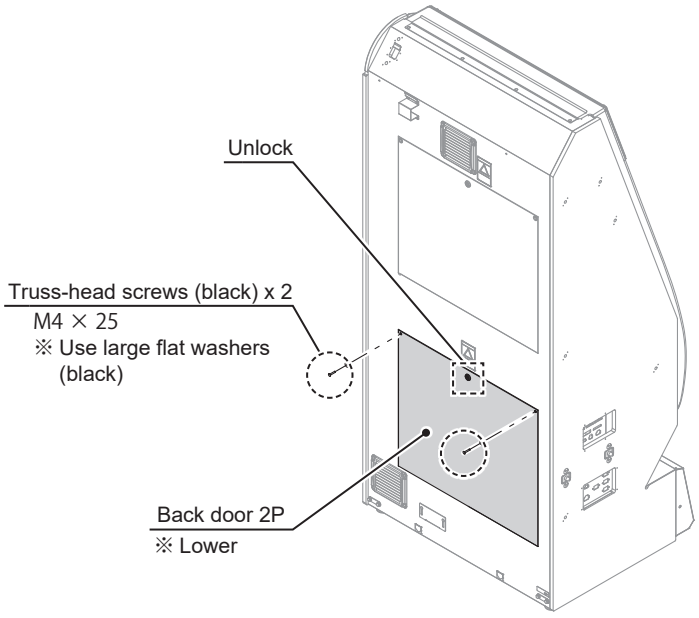

3 Insert the pins of cabinet 2P into the holes of cabinet 1P. Be careful not to pinch any wiring.

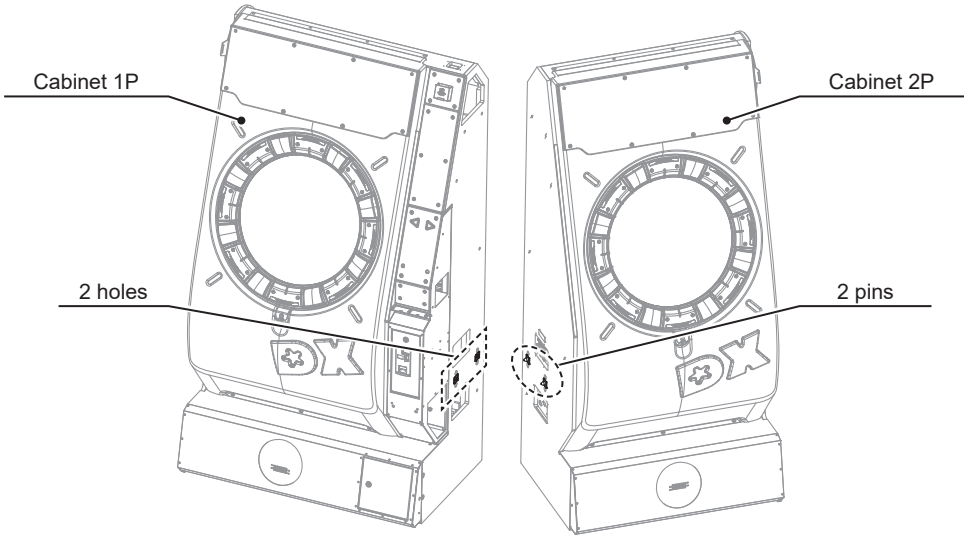

4 Unlock with the master key and open the selector door.

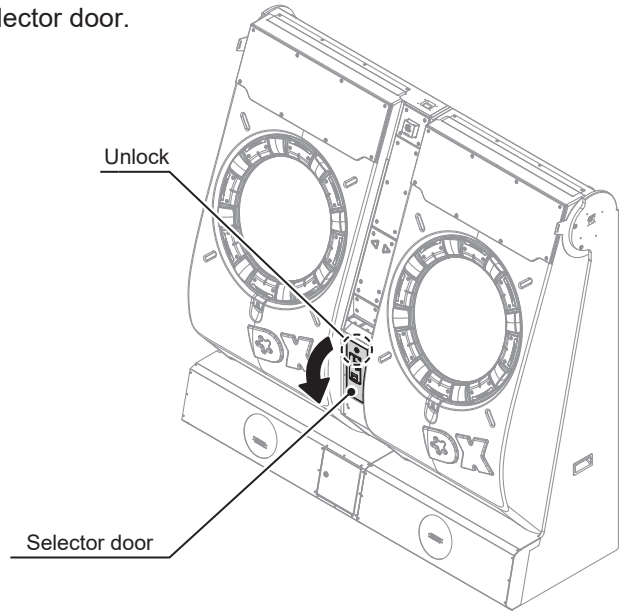

5 Unlock the cash box door with the key stored inside the selector door (for the cash box door) and open the cash box door.

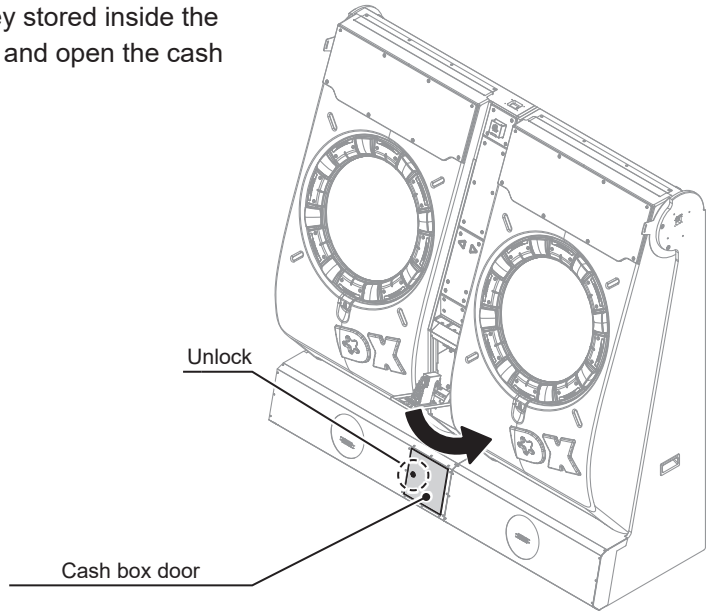

6 Fix cabinet 1P and cabinet 2P together with 7 hex bolts. Use an extension of about 150 mm for the hex bolt (black).

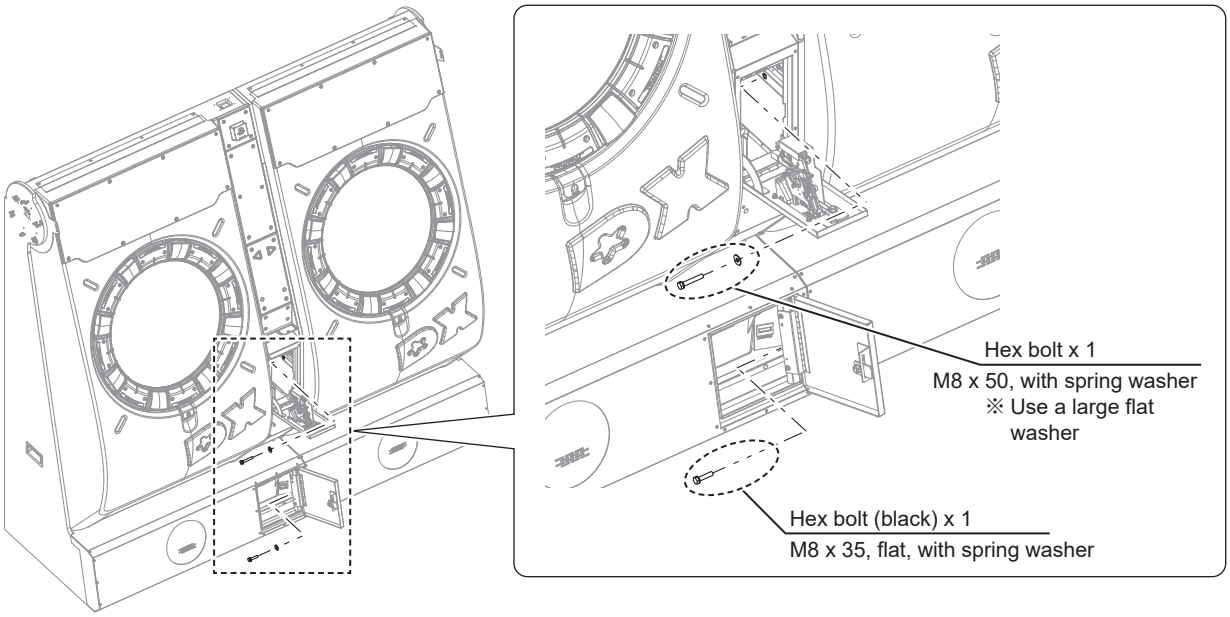

Cabinet front side

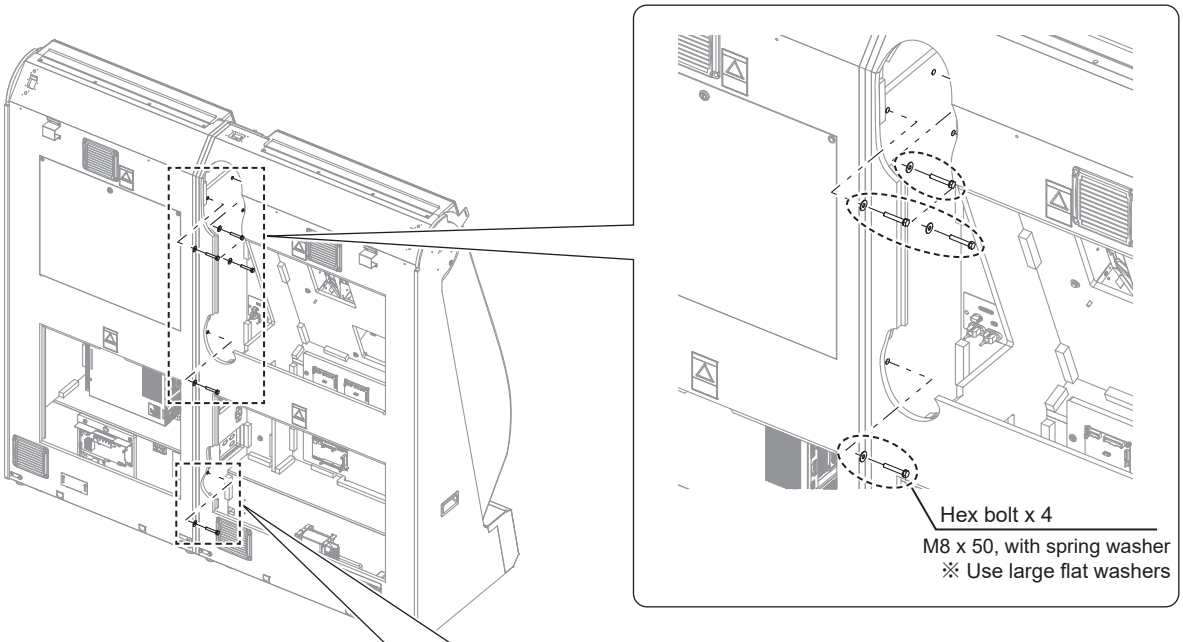

Cabinet rear side

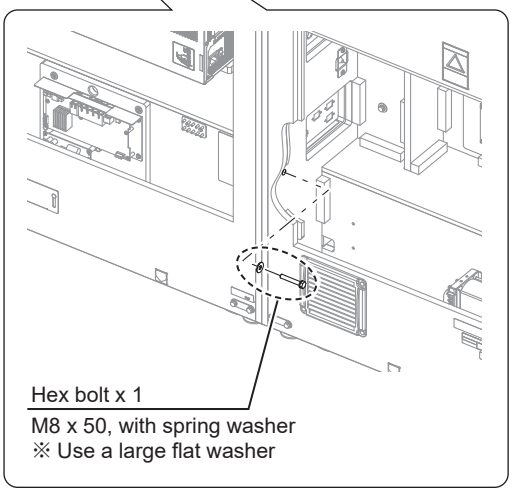

7 Connect the 14 connectors.

Connector x 8
SM3P, SM11P, SM12P, XA12P, XAD26P, YL2P, YL4P, YL6P

Connector x 6
VL2P, VL6P, USB2.0 (x 3), USB3.0
※ USB2.0: from the top of the right column, use [P CAMERA], [USB HUB] and [I/O BD]. USB3.0: use the center column for [INSTALL].

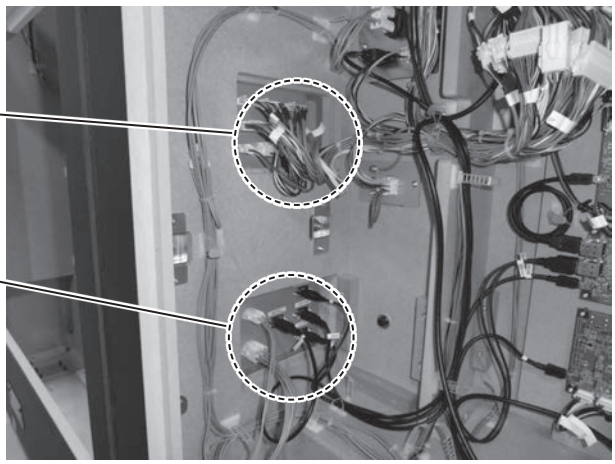

Inside cabinet 1P (rear side)

8 Pull the HDMI cable out from the cabinet 1P side to the cabinet 2P side and connect it to the ALLS HX2 on the cabinet 2P side.

Hole
Connector x 1
HDMI

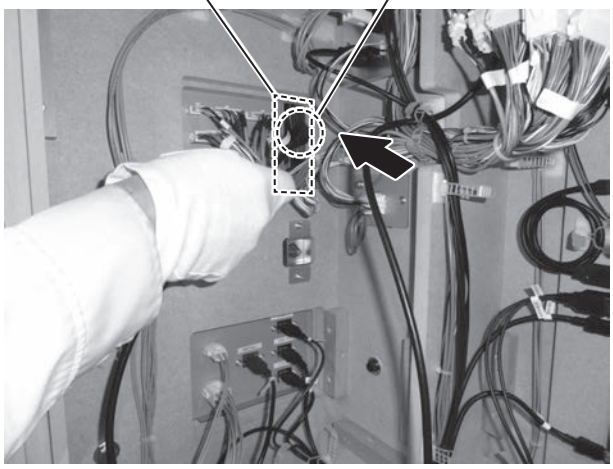

Inside cabinet 1P (rear side)

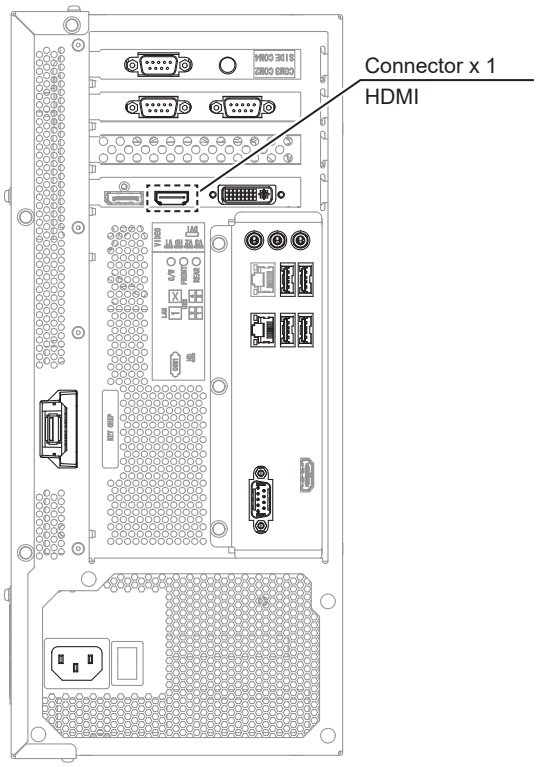

ALLS HX2

9 Secure the connectors connected in step 8 with 2 cord clamps.

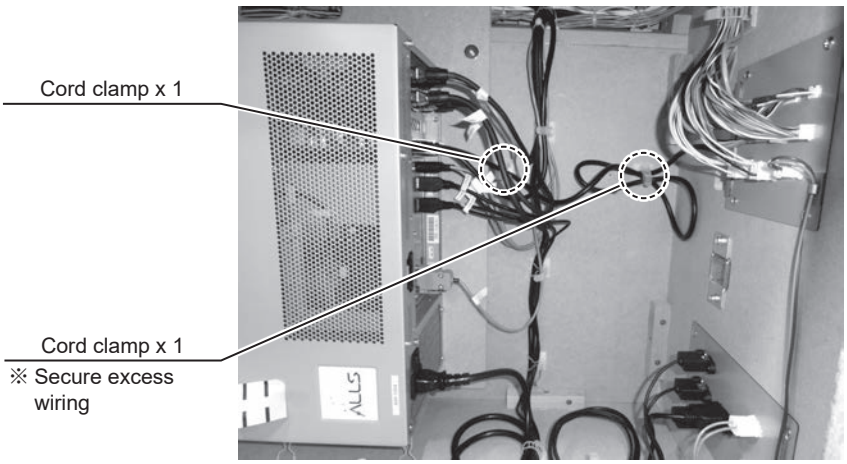

Inside cabinet 2P (rear side)

10 Refer to steps 4 and 5 and close the cash box door and the selector door in the reverse order.

6-1-2 Installing the Player Camera

1 Set all 8 adjusters of the cabinet down on the floor.

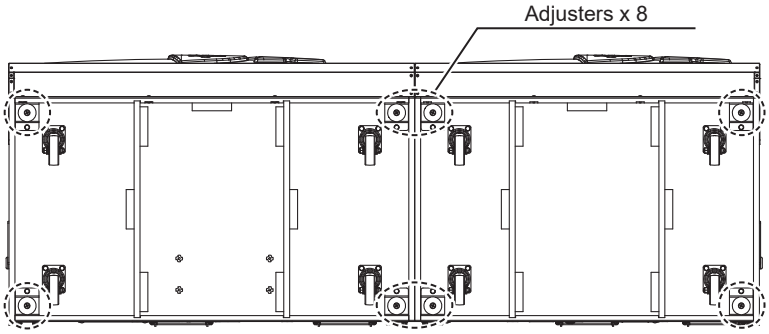

Bottom view

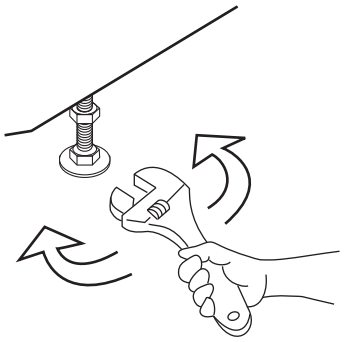

2 Connect the 2 connectors of the player camera and install the player camera. Hook the holes of the player camera onto the tabs of the cabinet. Be careful not to pinch any wiring.

Parts used

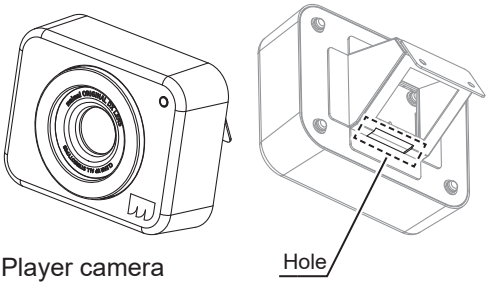

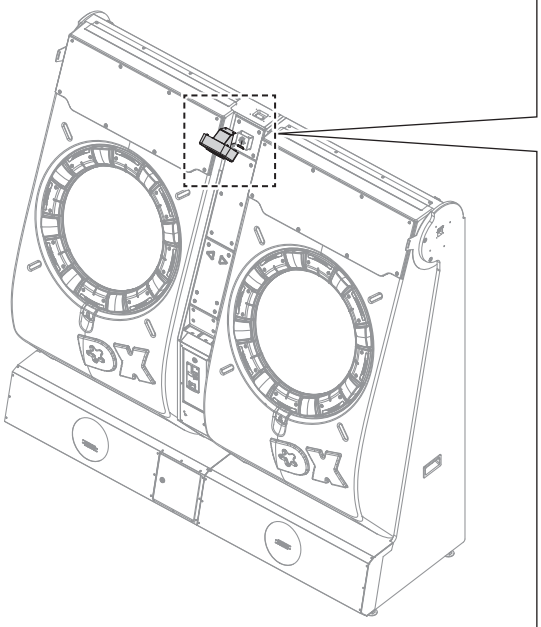

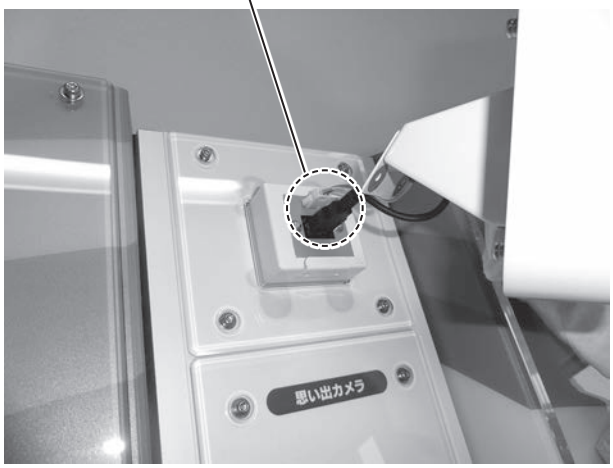

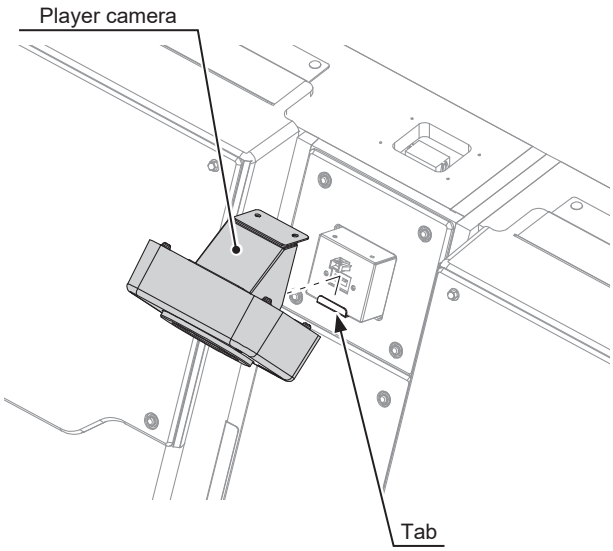

3 Secure the player camera with 2 tamper-proof screws.

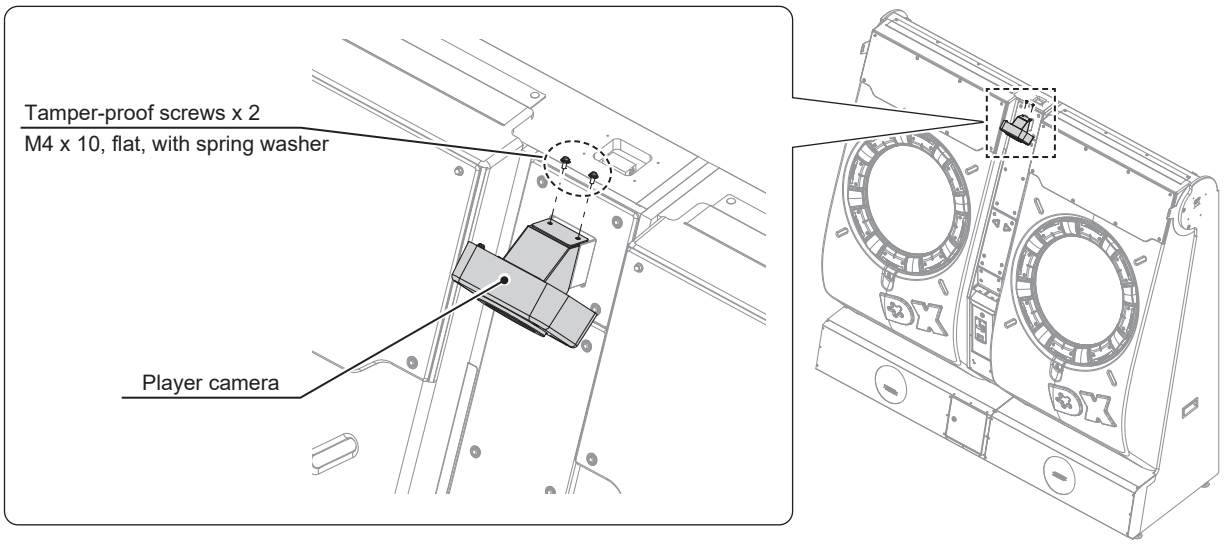

6-1-3 Installing the Billboard

1 Place 2 step stools beside the cabinet.

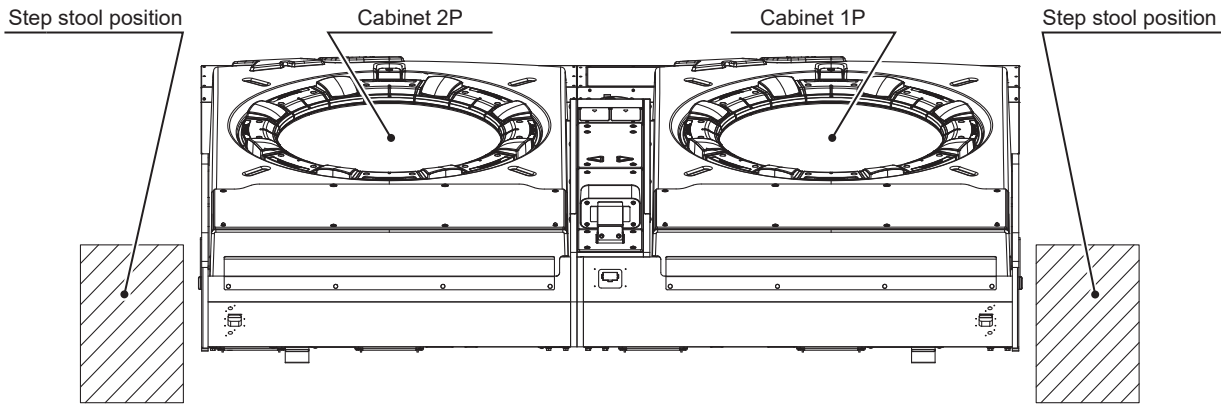

Cabinet top view

2 With two or more workers supporting the billboard, install it on the cabinet. Hook the holes of the billboard onto the tabs of the cabinet.

Parts used

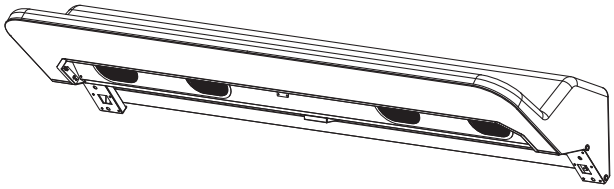

Billboard

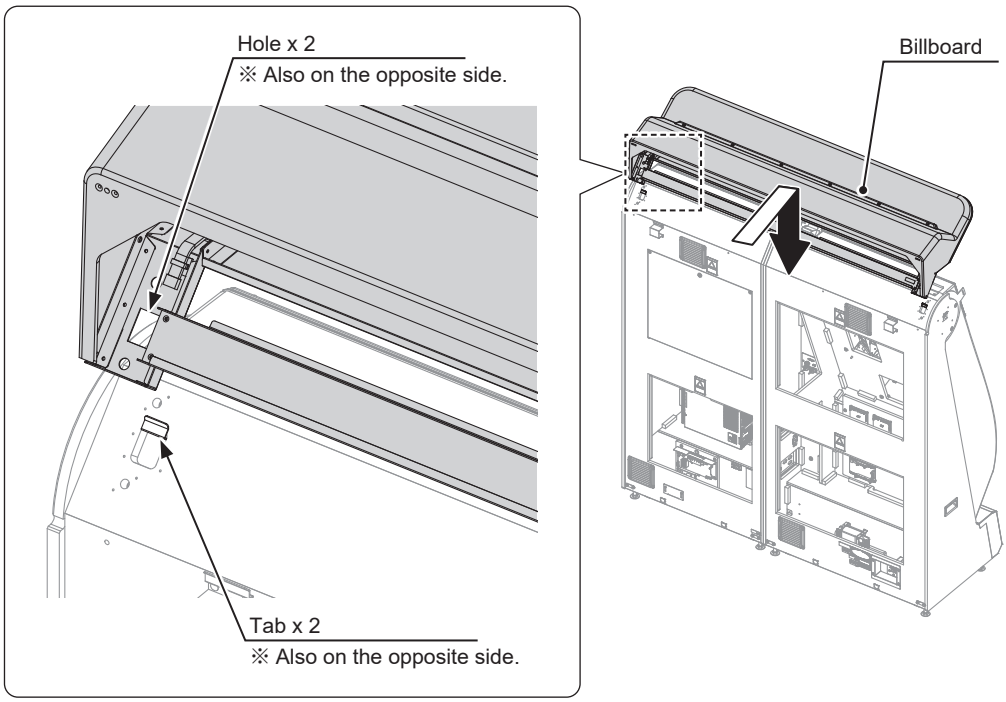

3 Secure the billboard with 4 hex bolts.

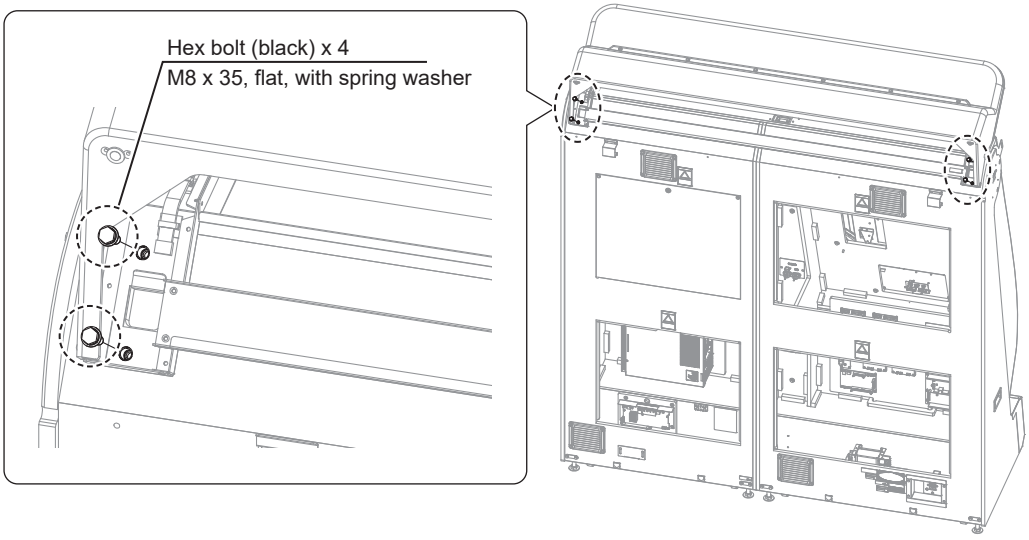

4 Connect 1 connector.

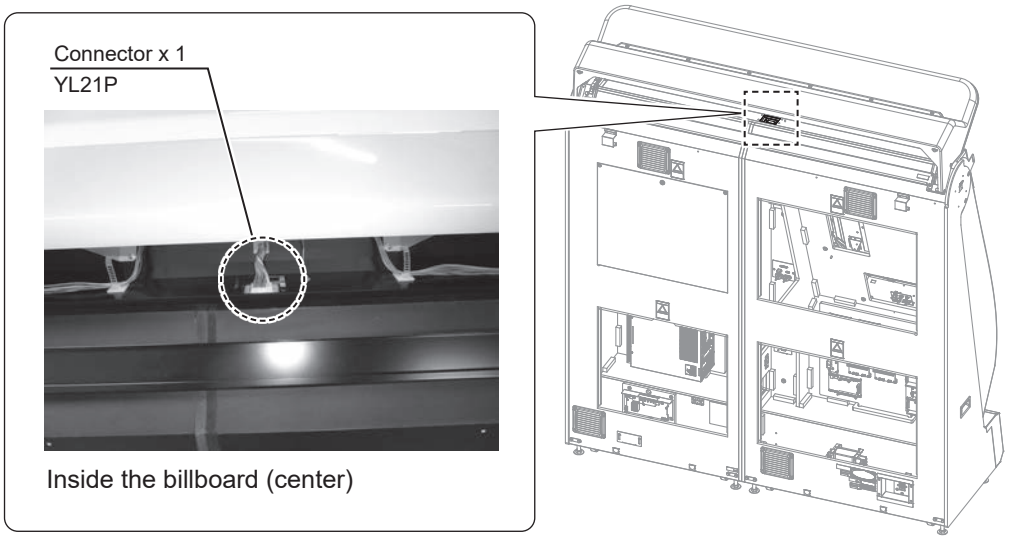

5 Insert the rear plate into the rear plate brackets and secure it with 6 truss-head screws. Make sure the white surface marked "This side faces inward." is on the inside.

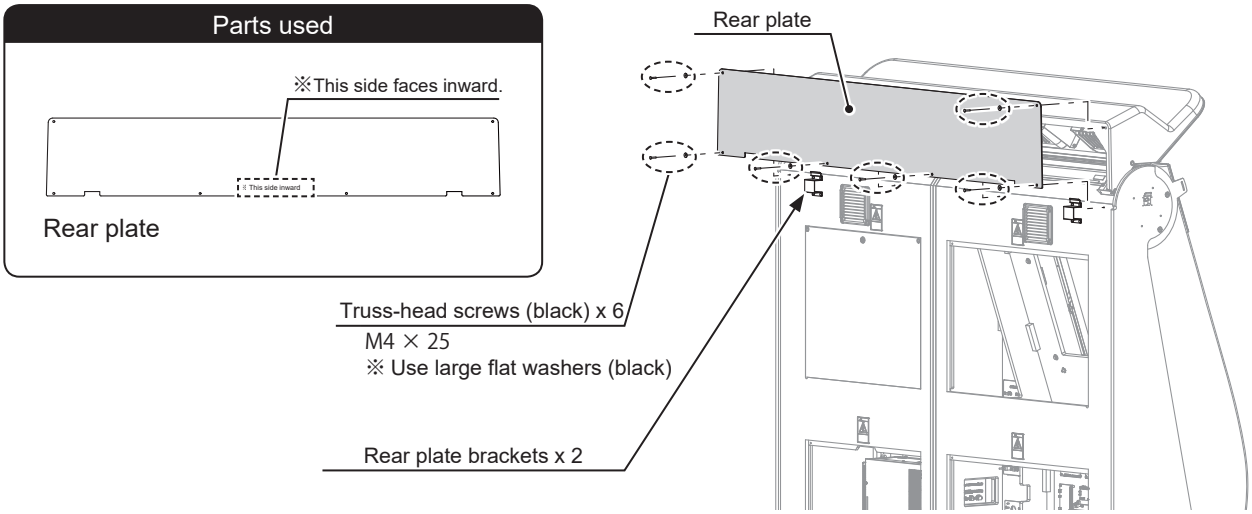

6-1-4 Installing the Side Covers and Billboard POP

1 Hook the holes of side cover base 1P onto the tabs of the cabinet and secure it with 4 screws.

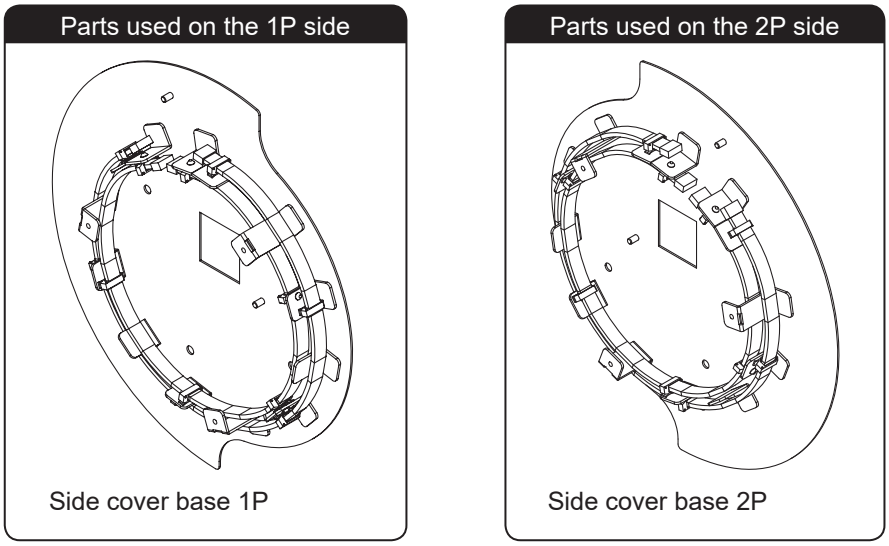

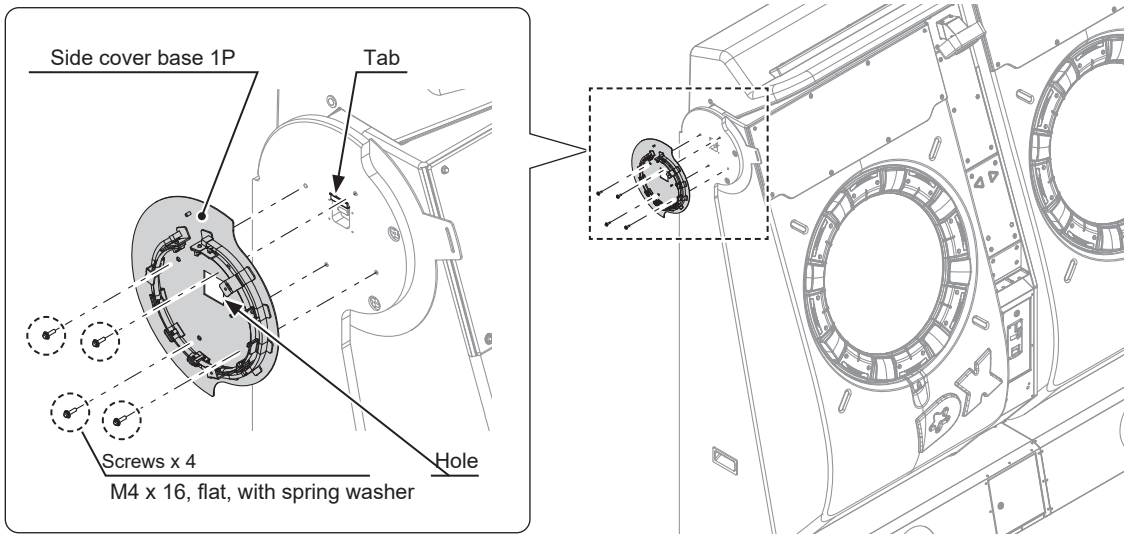

2 Connect 1 connector.

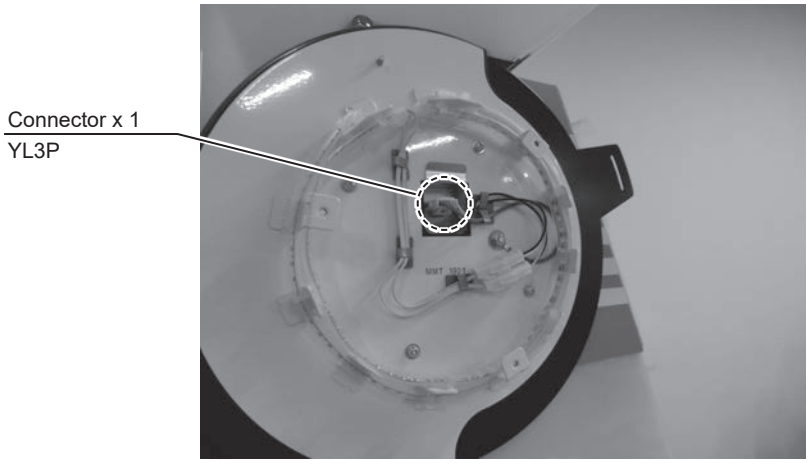

3 Install side cover inner 1P with 1 flange nut.

Parts used on the 1P side

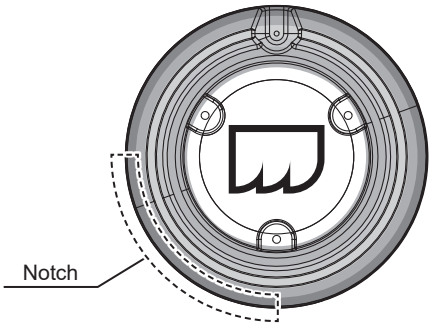

Side cover inner 1P

Parts used on the 2P side

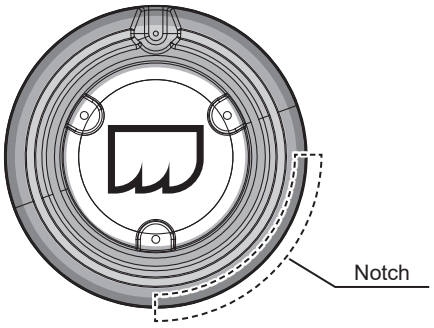

Side cover inner 2P

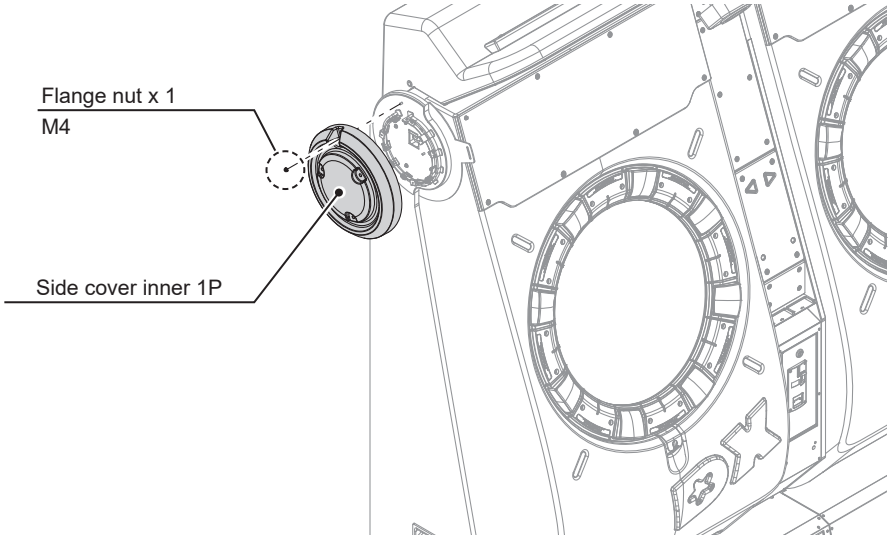

4 Install side cover outer 1P with 3 truss-head screws.

Parts used on the 1P side

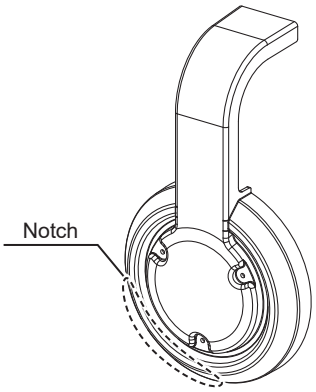

Side cover outer 1P

Parts used on the 2P side

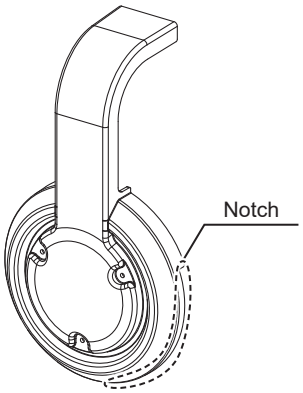

Side cover outer 2P

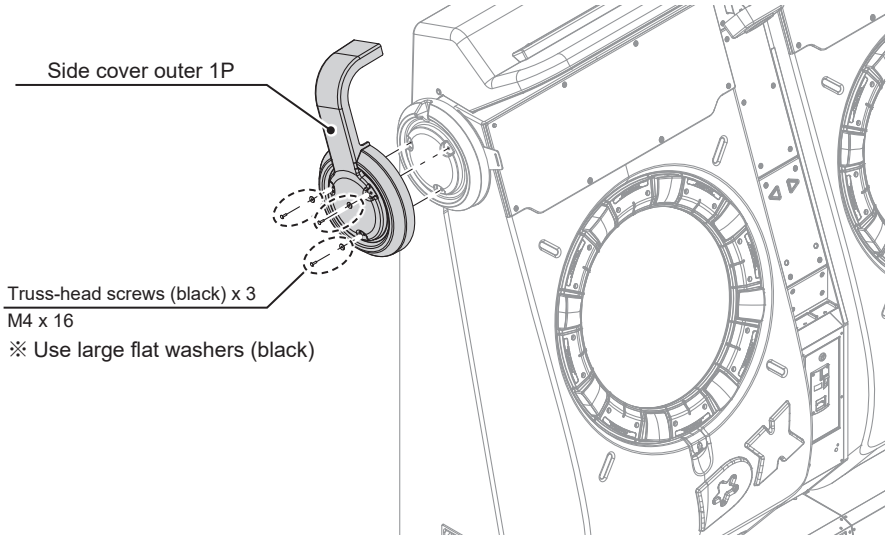

5 Referring to steps 1 to 4, install side cover base 2P, side cover inner 2P and side cover outer 2P in the same way.

6 Install the billboard POP with 2 truss-head screws.

Parts used

Billboard POP

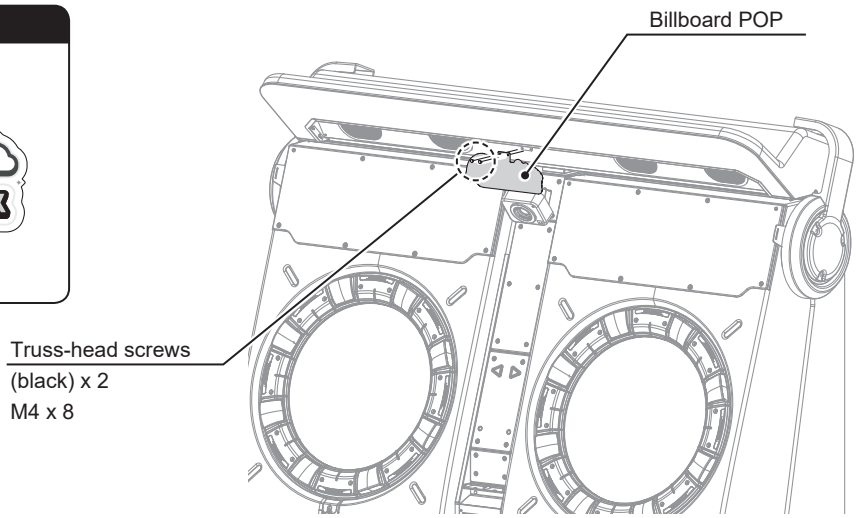

6-1-5 Installing the Key Chip

STOP
IMPORTANT

The key chip is a precision part. It may be damaged by heat, shock, static electricity, etc. Handle it with care.

1 Install the key chip on the ALLS HX2. Check the orientation of the key chip carefully and insert it firmly all the way in.

Parts used

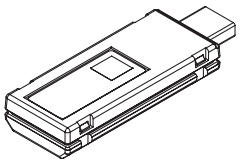

Key chip

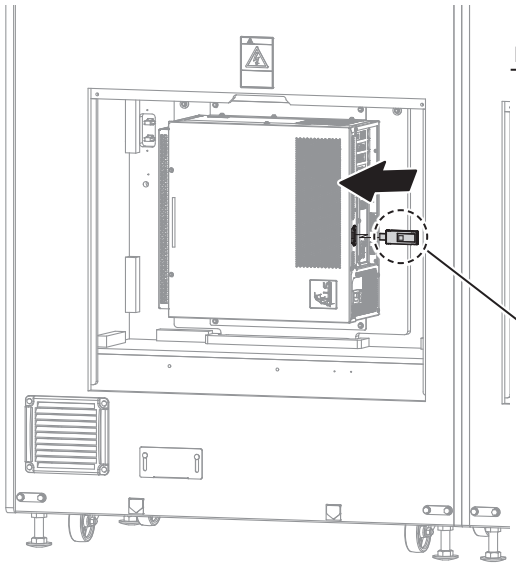

Cabinet 2P rear

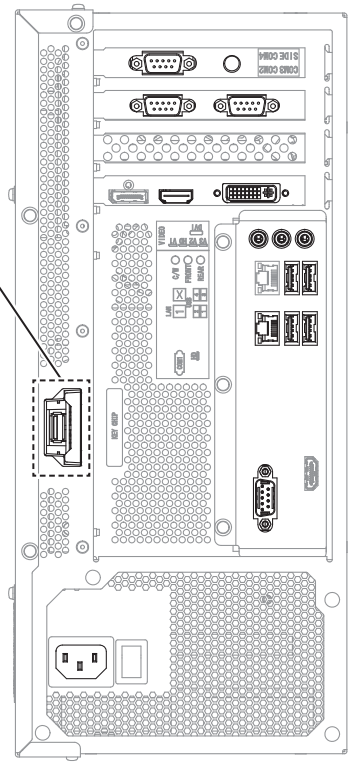

ALLS HX2

2 Install back door 1P (upper and lower) with 4 truss-head screws.

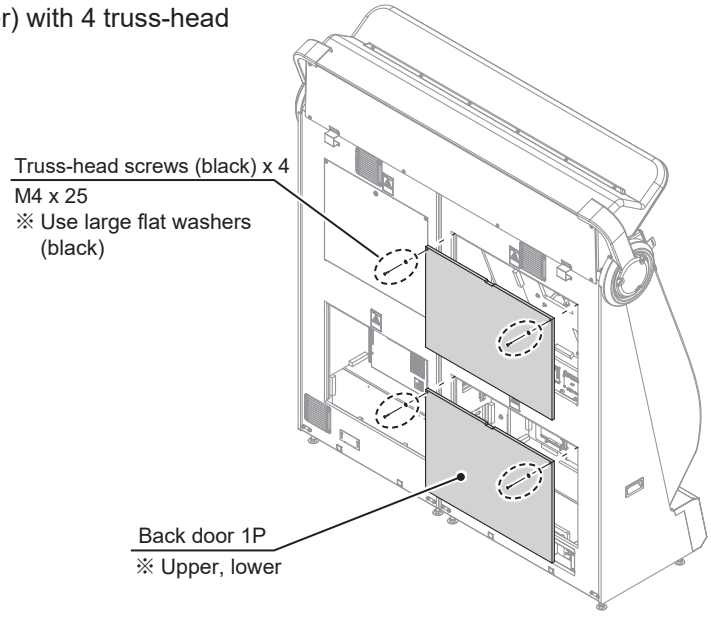

6-1-6 Installing the Router Unit

Perform this section only on the cabinet that will be the server unit.

1 Insert the router unit from the router kit into cabinet 2P. Be careful not to pinch any wiring.

Kit parts

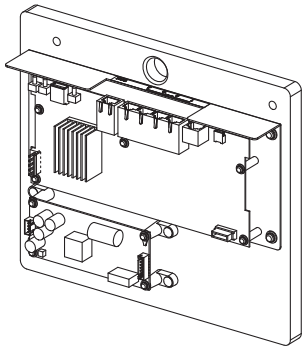

Router unit

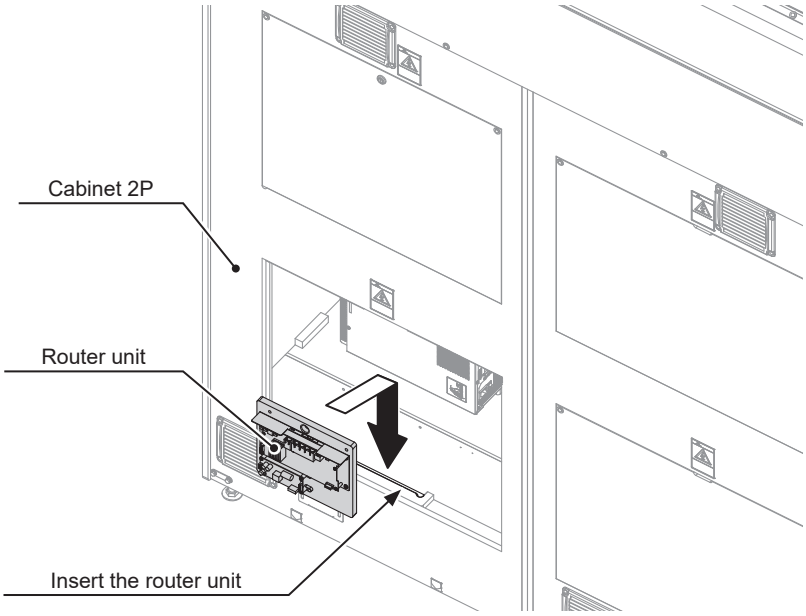

2 Secure the router unit with the 2 screws from the router kit.

Kit parts



Screw

Large flat washer

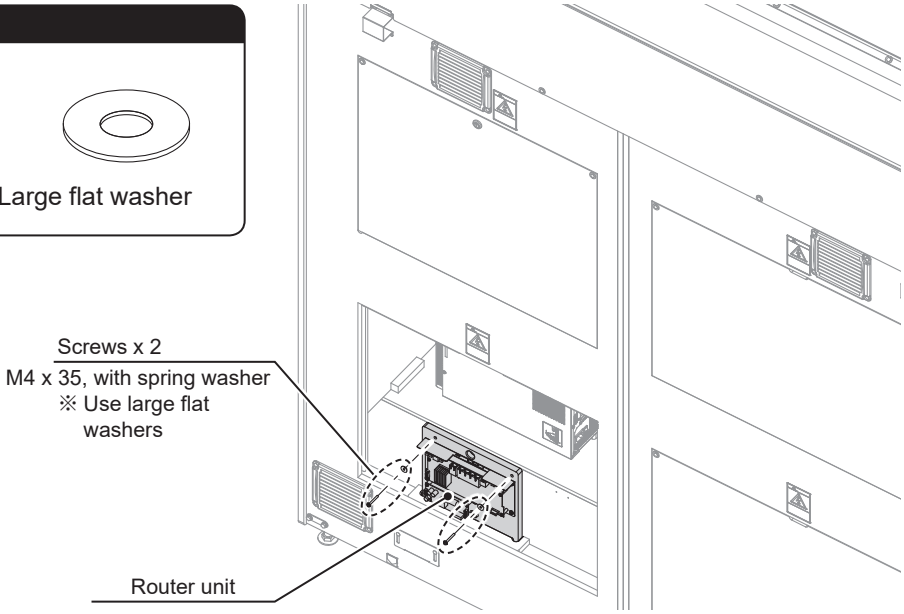

3 Connect 1 connector.

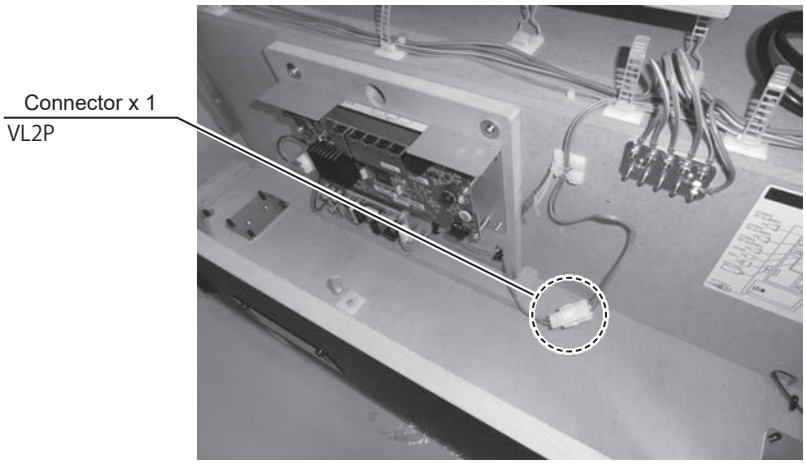

Cabinet 2P rear (inside)

4 Attach the "SERVER" sticker from the router kit, referring to the figure below.

Kit parts

"SERVER" sticker

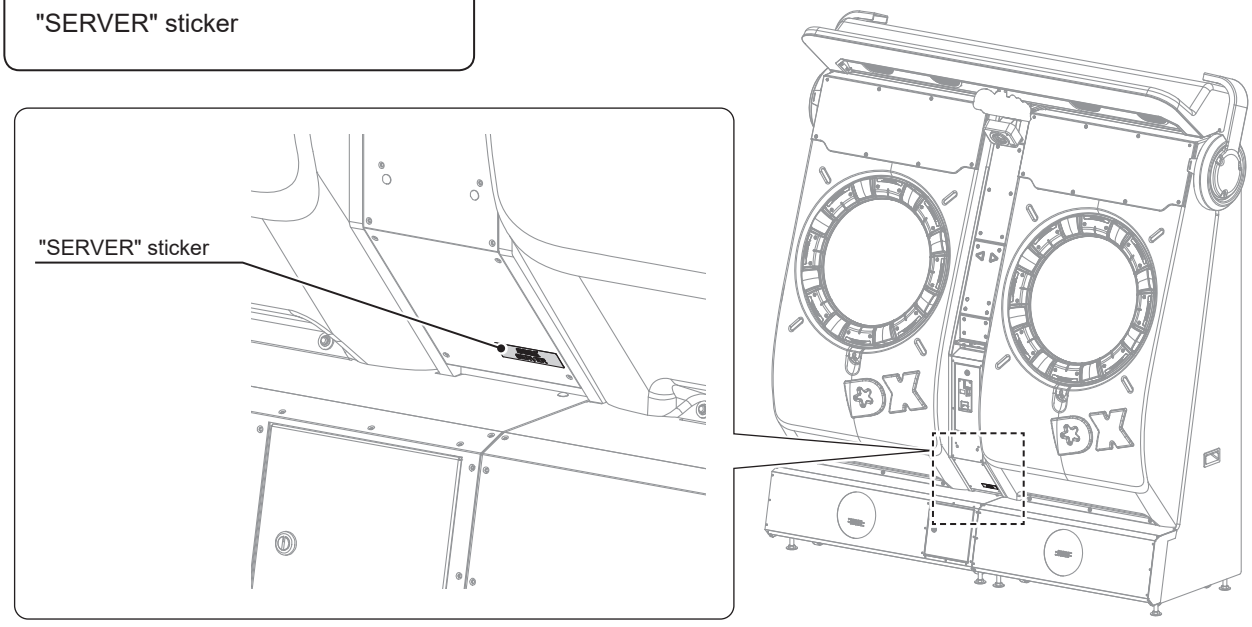

6-2 Fixing the Cabinet in Place

1 Raise the 8 adjusters on the bottom of the cabinet and lower the 8 casters onto the floor.

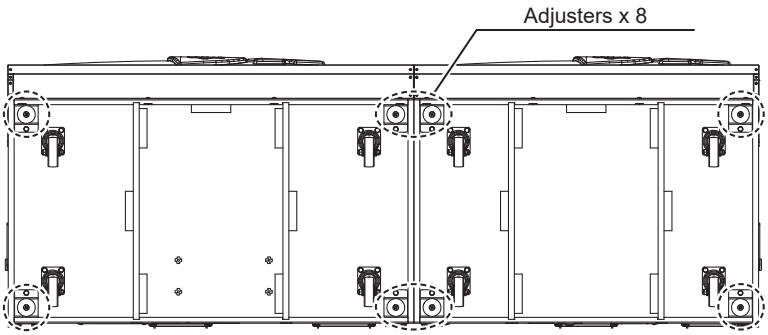

Bottom view

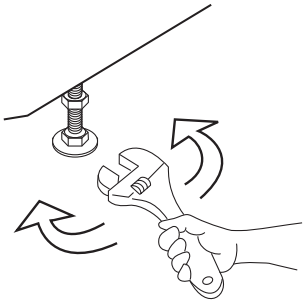

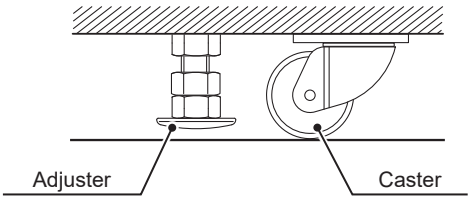

2 Move the cabinet to the installation site. <See 3-2 and Chapter 8>

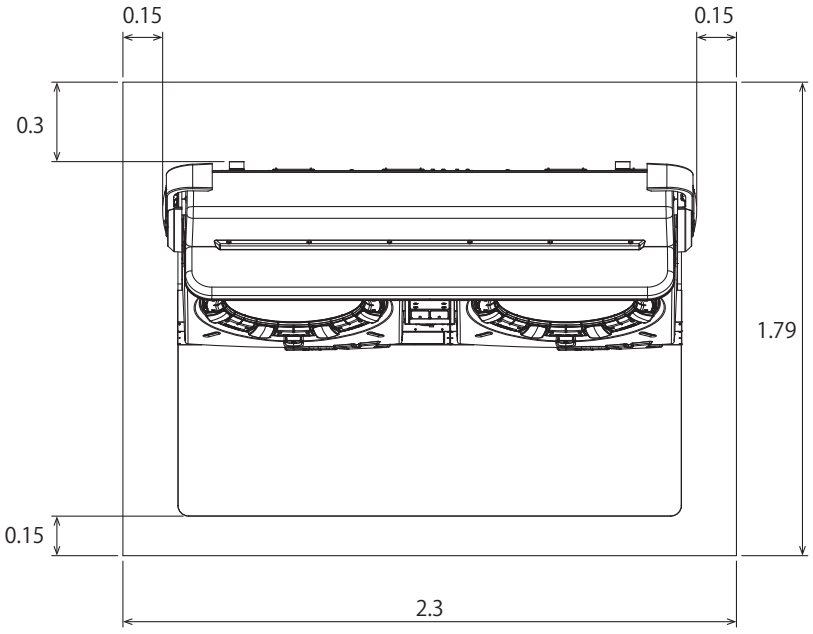

Cabinet installation example (unit: m)

3 Align the round holes of the play area mat with the adjuster positions and lay the play area mat.

Parts used

Play area mat

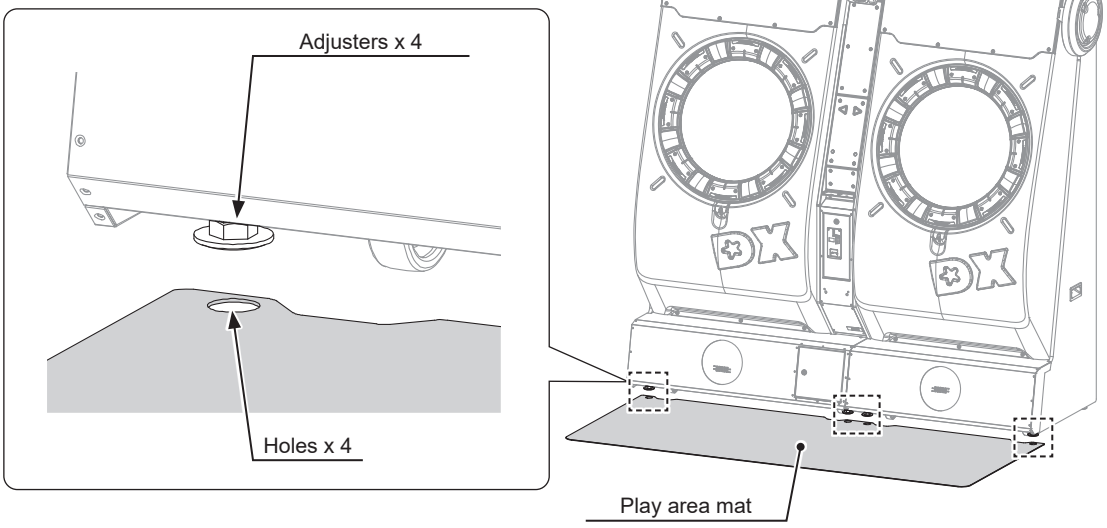

4 Set all adjusters firmly down and adjust their height so that the cabinet stays level. Adjust so that there is a gap of about 5 mm between the floor and the casters and the cabinet is level. Check that the adjusters sit within the round holes of the play area mat.

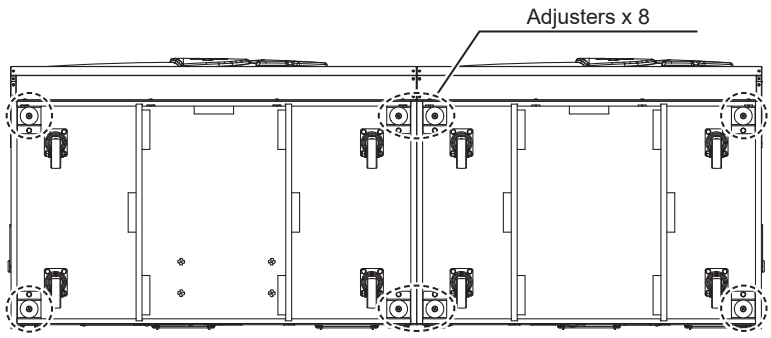

Bottom view

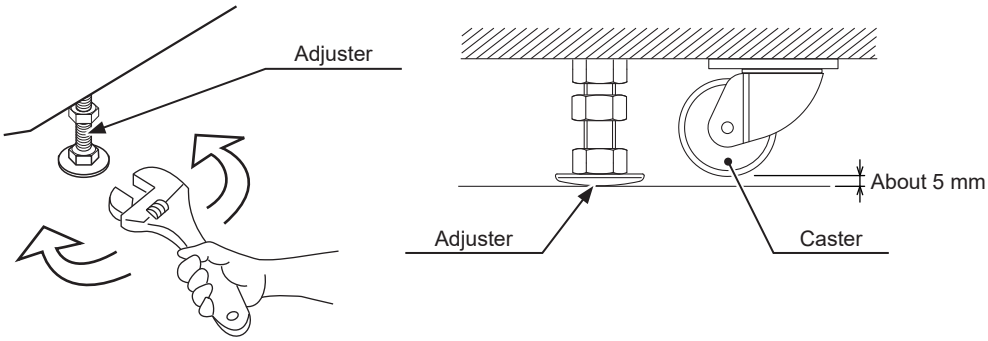

5 After adjusting, tighten the adjuster nuts upward to fix the adjuster height.

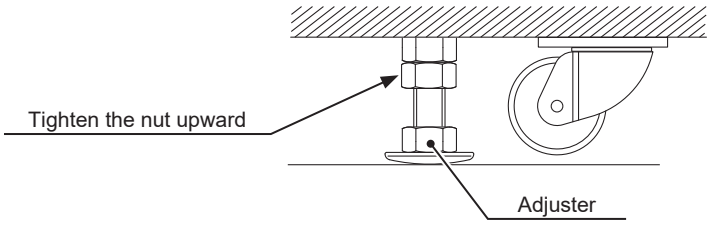

6 Peel off the release paper of the double-sided tape on the back of the play area mat and fix the mat in place.

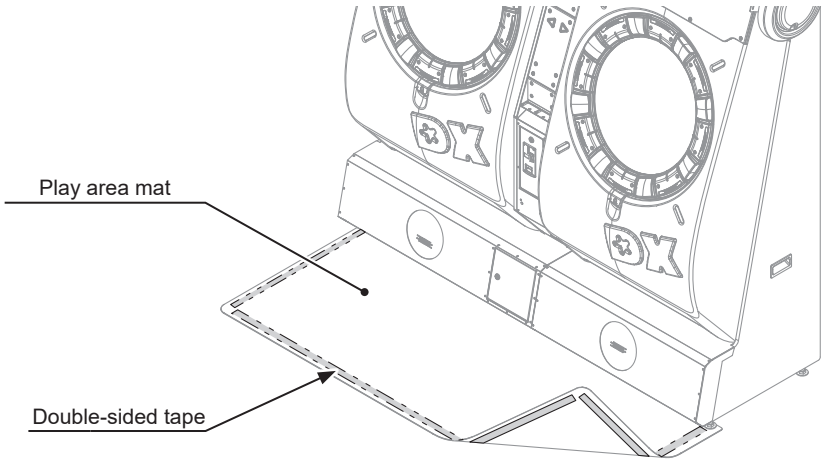

6-3 Connecting the LAN Cables

This product must be connected to an external network (ALL.Net).
The external network environment (equipment, facilities, etc.) varies from store to store. For connection to the external network (ALL.Net), contact the address listed under "Contact Information" in this manual.
When operating one unit, see "6-3-1". When operating two units, see "6-3-2".

6-3-1 When Operating One Unit

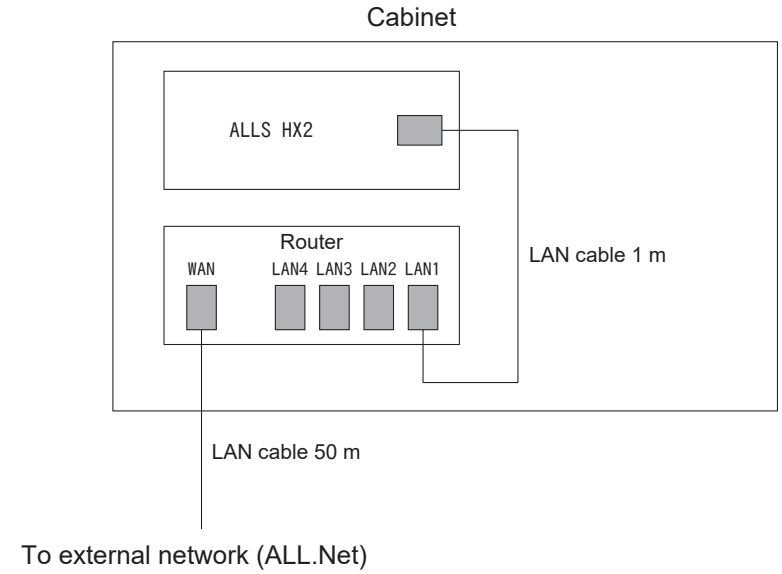

Network block diagram

1 Connect 1 connector of the 1 m LAN cable from the router kit to the ALLS HX2.

Kit parts

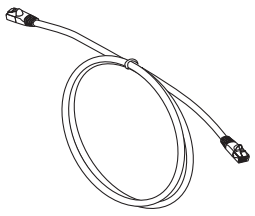

LAN cable 1 m

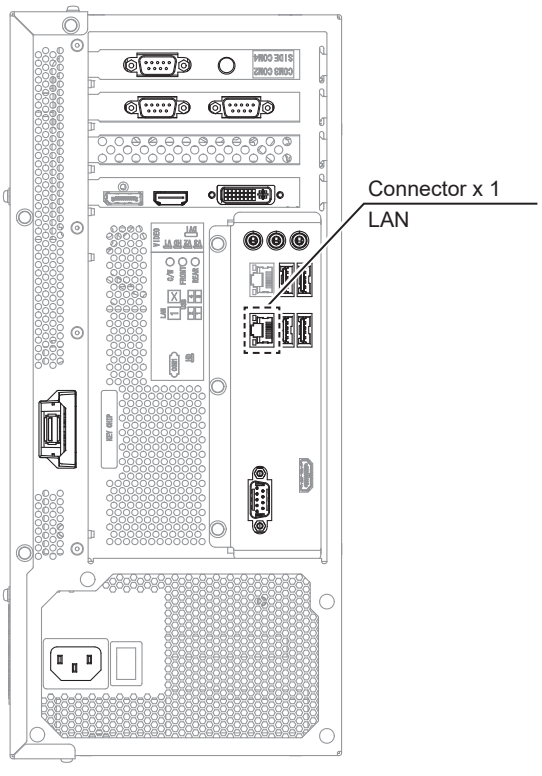

ALLS HX2

2 Connect 1 connector at the other end of the 1 m LAN cable connected in step 1 to a free LAN port (other than the WAN port) of the router unit.

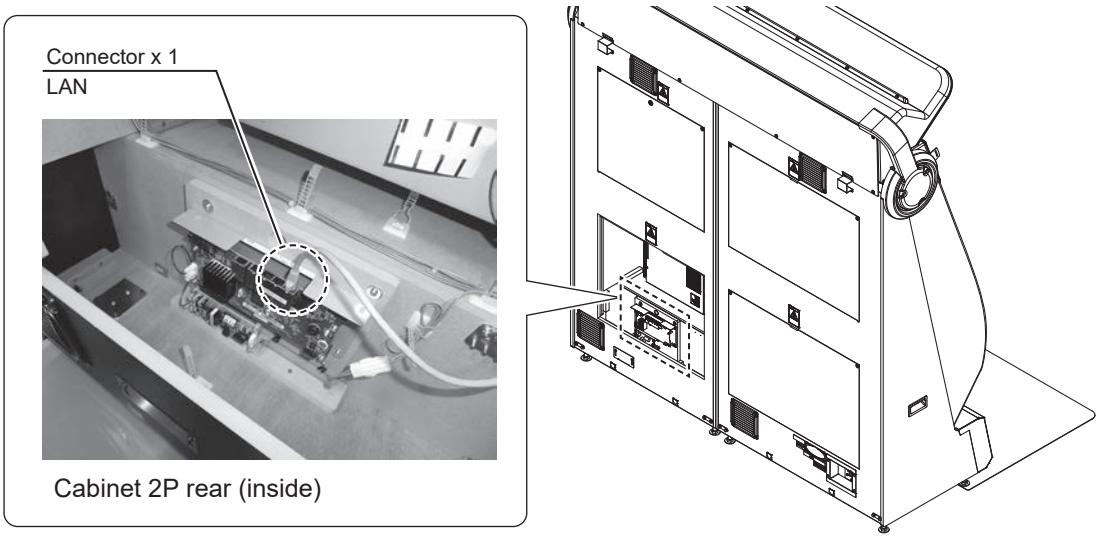

3 Secure the 1 m LAN cable with 2 cord clamps.

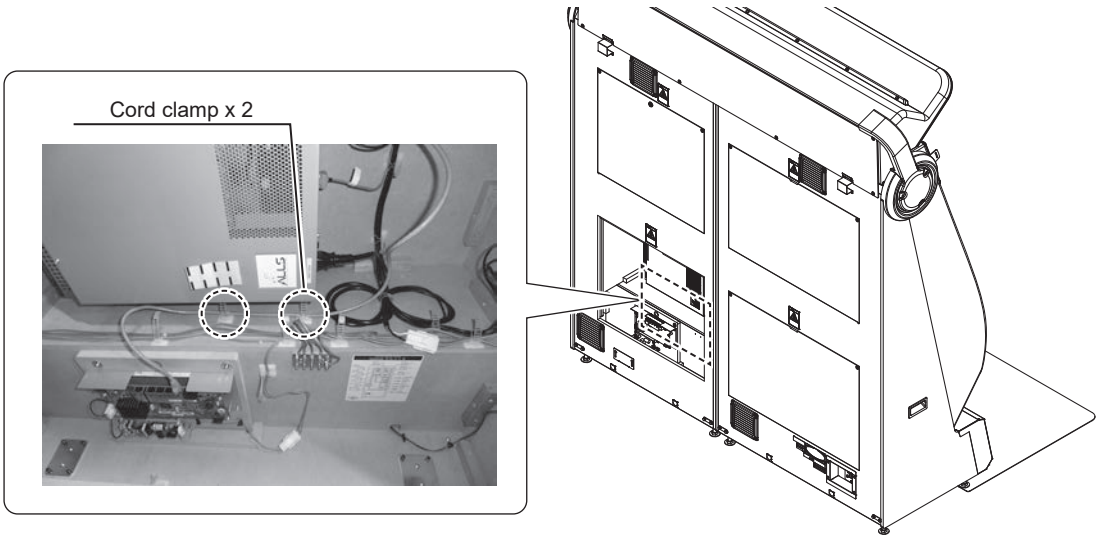

4 Loosen 2 truss-head screws.

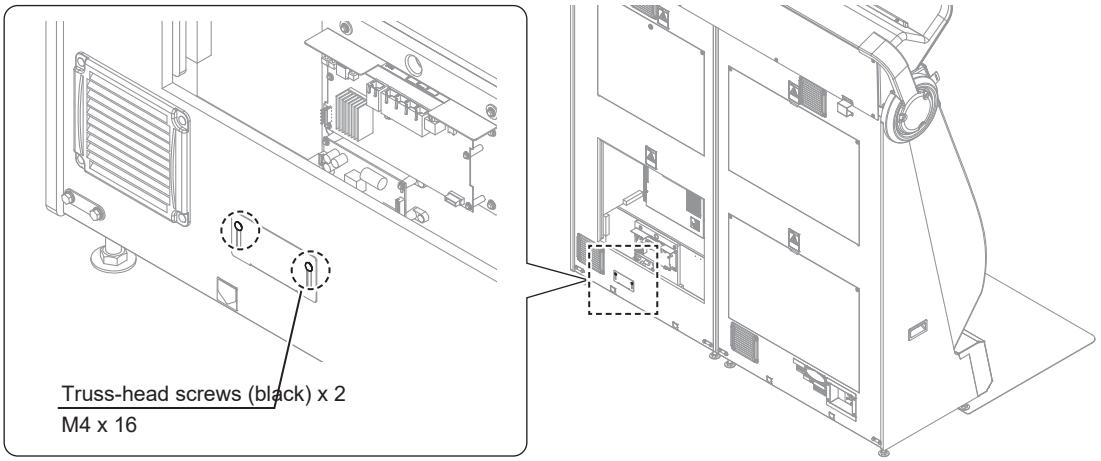

5 Slide the LAN lid up and fully tighten the 2 truss-head screws loosened in step 4 to secure it.

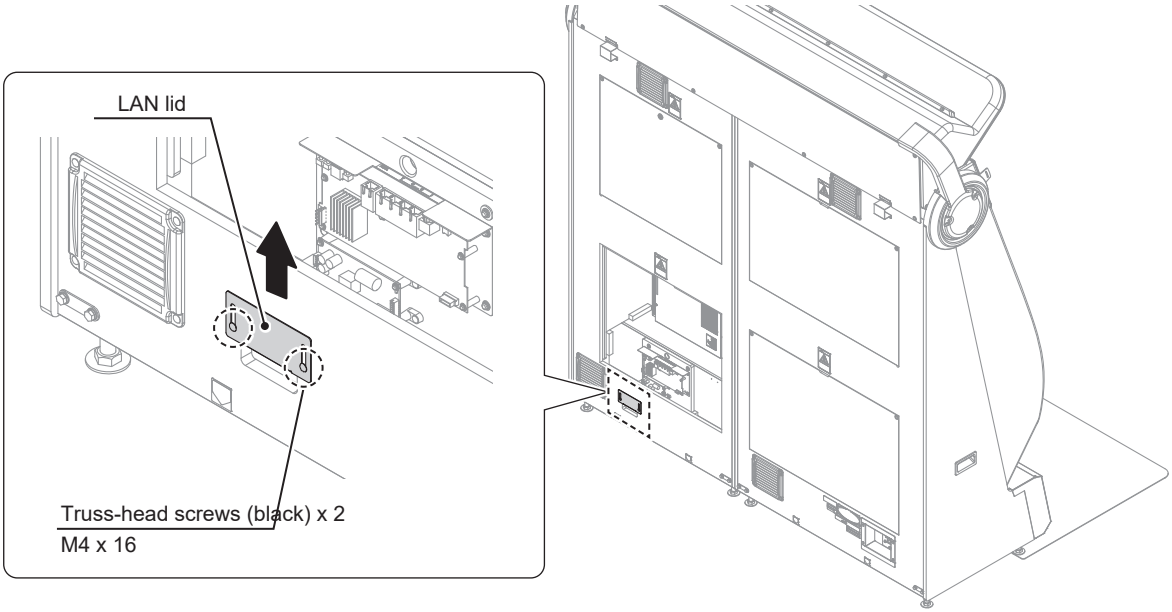

6 Pass 1 connector of the 50 m LAN cable from the router kit through the hole.

Kit parts

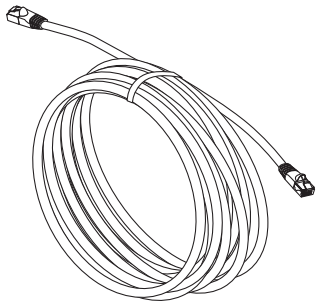

LAN cable 50 m

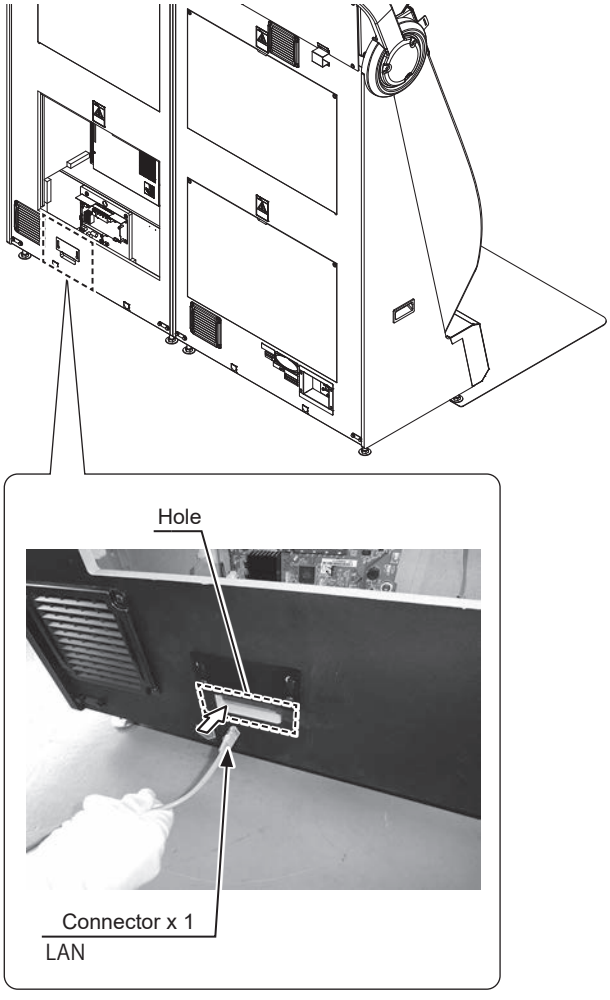

7 Connect 1 connector of the 50 m LAN cable passed through the hole in step 6 to the WAN port of the router unit.

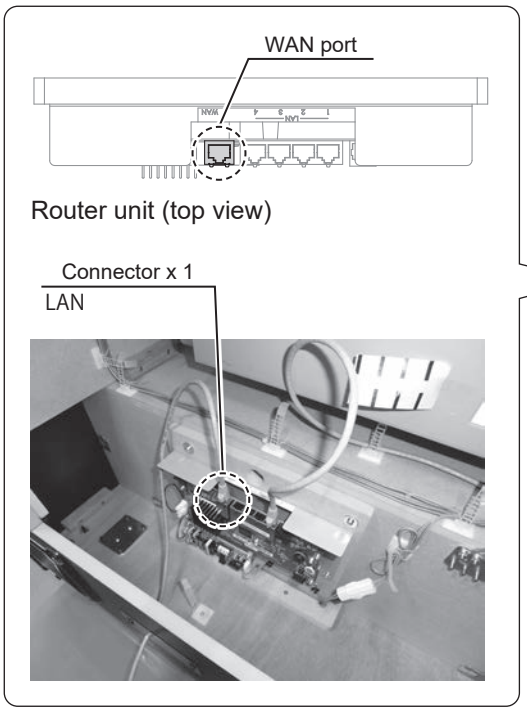

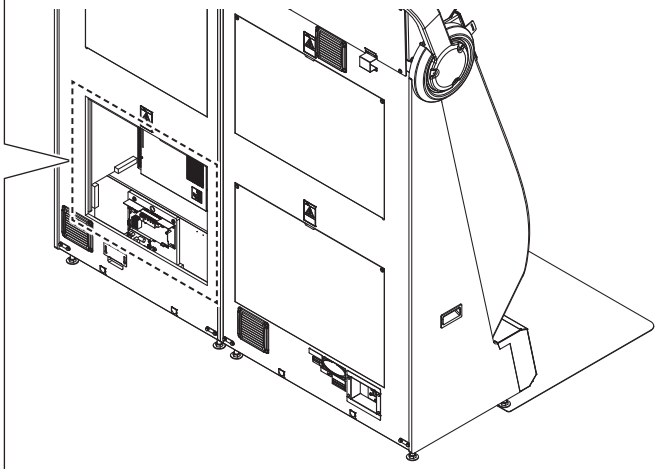

8 Make a loop of about 10 cm in the 50 m LAN cable and secure it with 1 cord clamp.

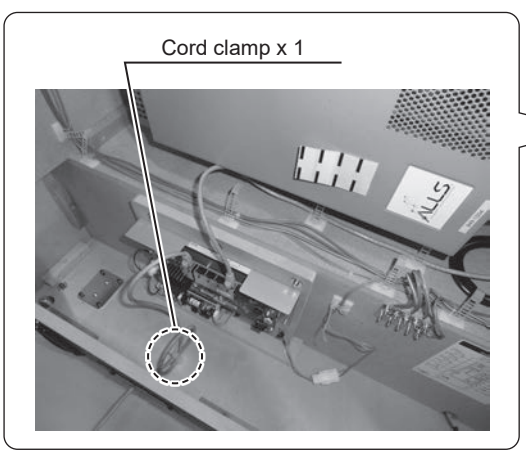

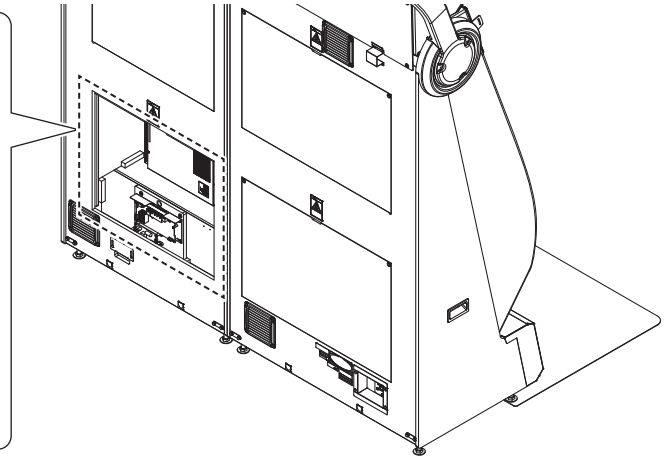

9 Connect the connector at the other end of the 50 m LAN cable connected to the WAN port of the router unit to the external network equipment (ALL.Net).

10 Loosen 2 truss-head screws.

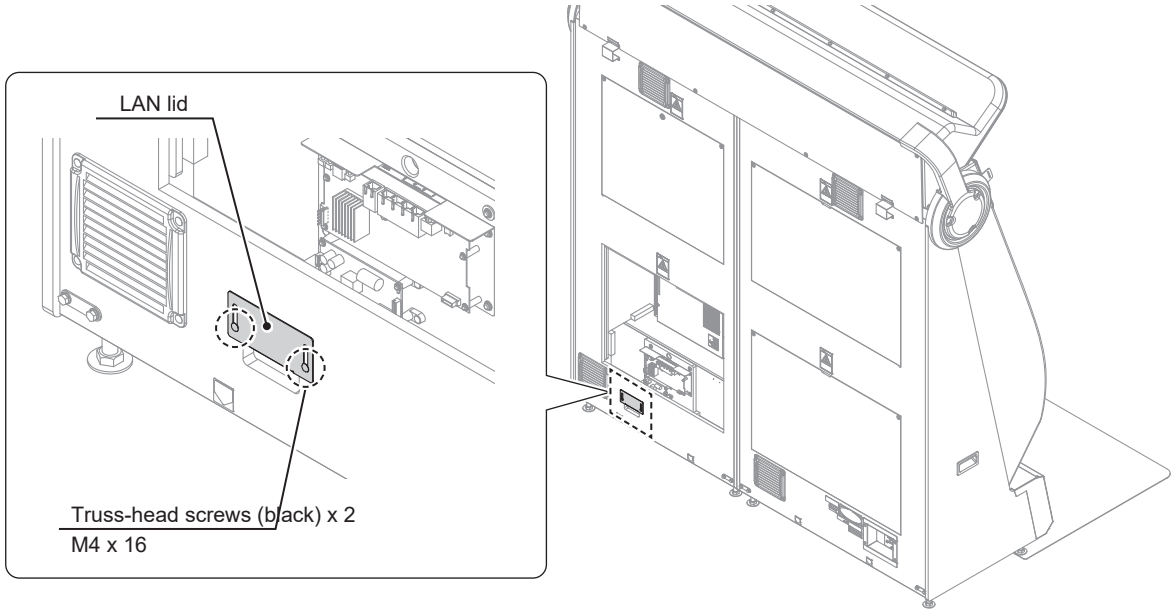

11 Close the LAN lid just enough that it does not touch the LAN cable. Fully tighten the truss-head screws loosened in step 10 to secure the LAN lid.

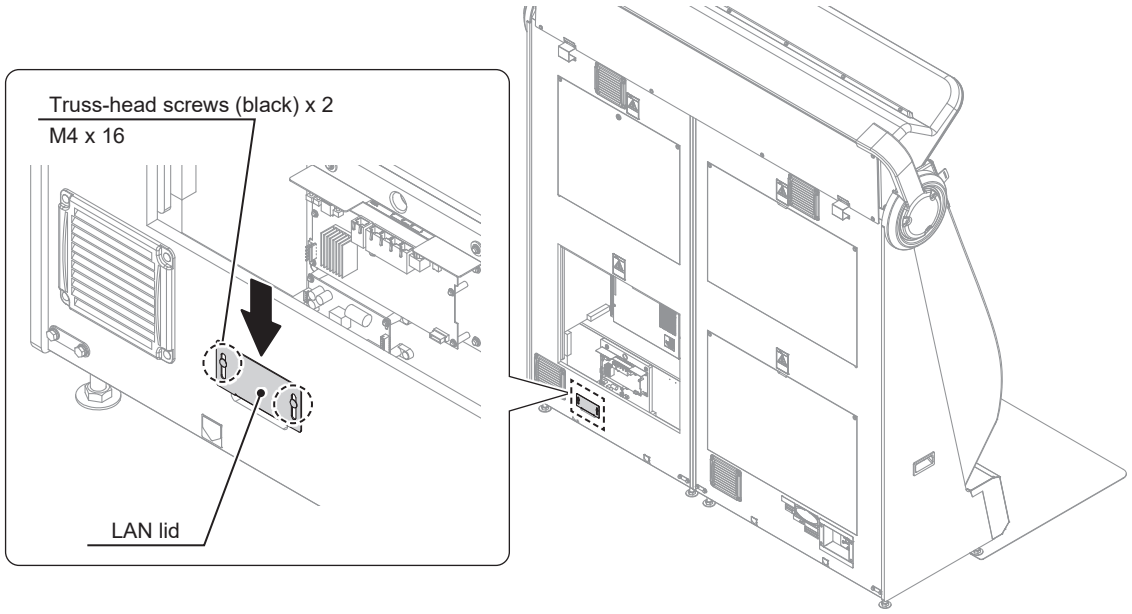

12 Install back door 2P (lower). Lock it with the master key and secure it with 2 truss-head screws.

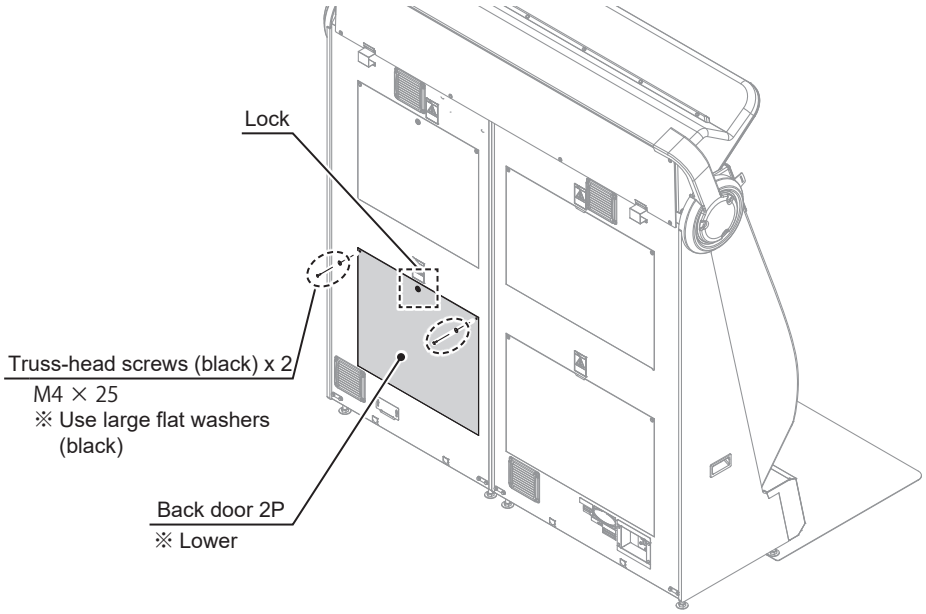

6-3-2 When Operating Two Units

This section describes operation with 1 server unit and 1 client unit.
※ Connect only 1 client unit to each server unit. Do not connect 2 or more.

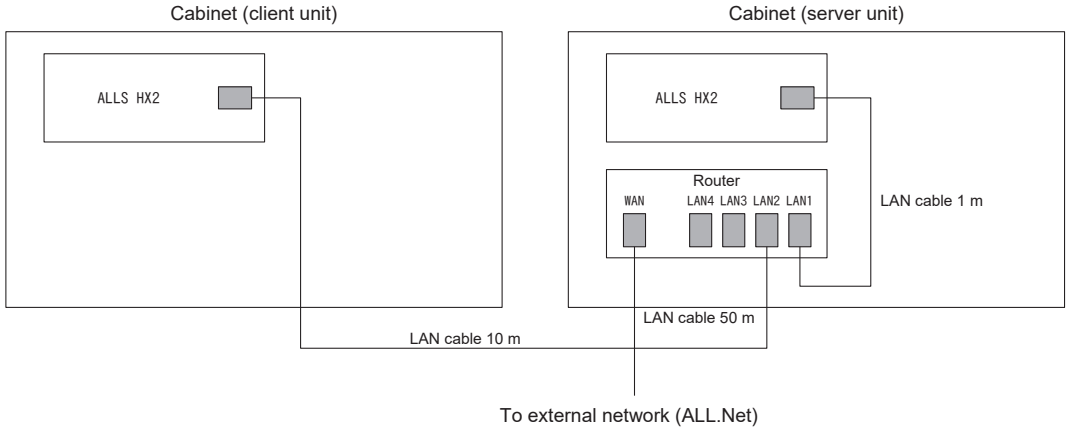

Network block diagram

6-3-2-A Server Unit

1 Work in the same way as steps 1 to 9 of "6-3-1".

2 Pass the connector of the 10 m LAN cable (supplied) through the hole in the cabinet on which the router unit is installed.

Parts used

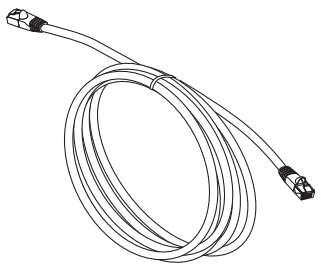

LAN cable 10 m

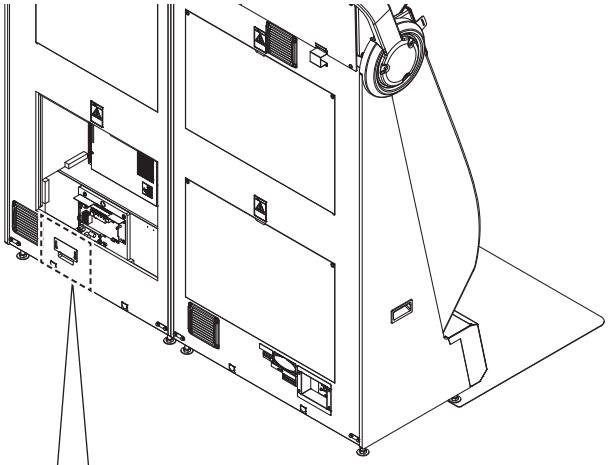

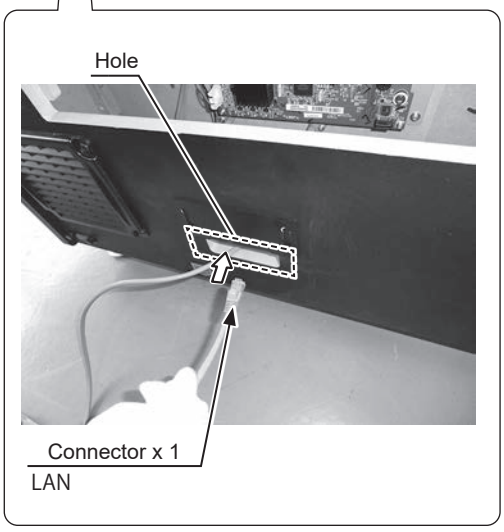

3 Connect the connector of the LAN cable passed through in step 2 to a free LAN port on the router unit.

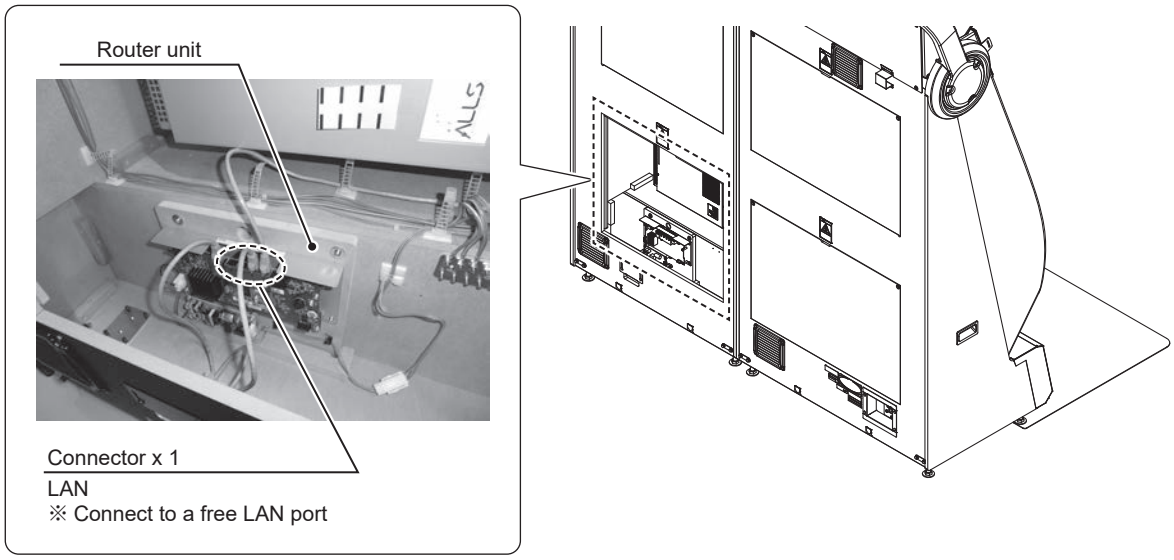

4 Secure the 50 m LAN cable and the 10 m LAN cable with 1 cord clamp. Note the following points.

- Make a loop of about 10 cm and secure the LAN cable.
- Take any excess LAN cable outside the cabinet.

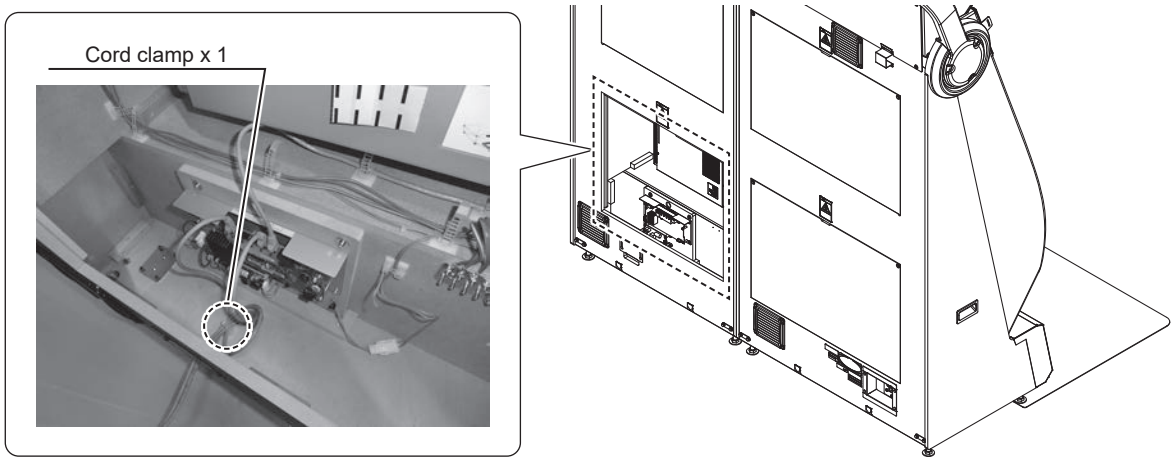

5 Work in the same way as steps 10 to 12 of "6-3-1".

6-3-2-B Client Unit

1 Loosen the 2 truss-head screws of the client unit.

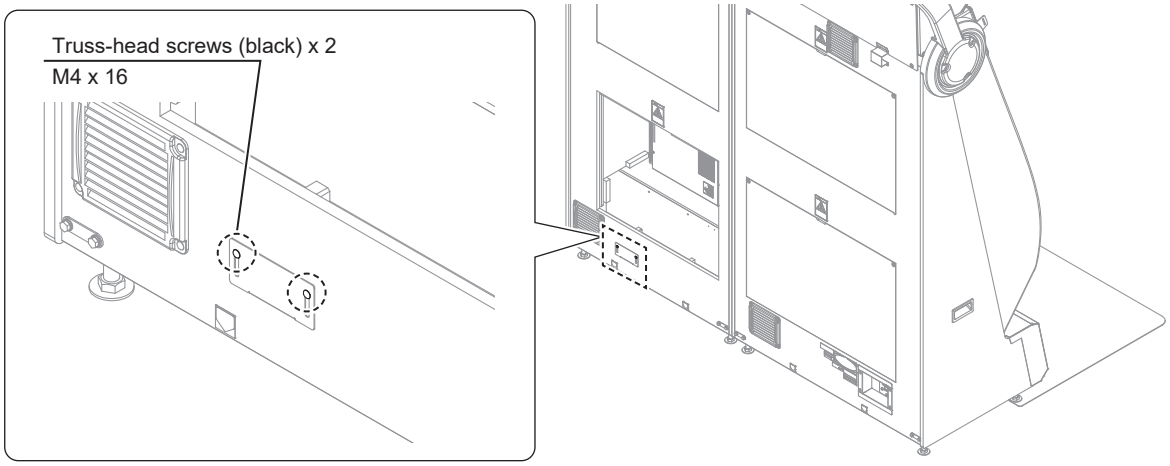

2 Slide the LAN lid up and fully tighten the 2 truss-head screws loosened in step 1 to secure it.

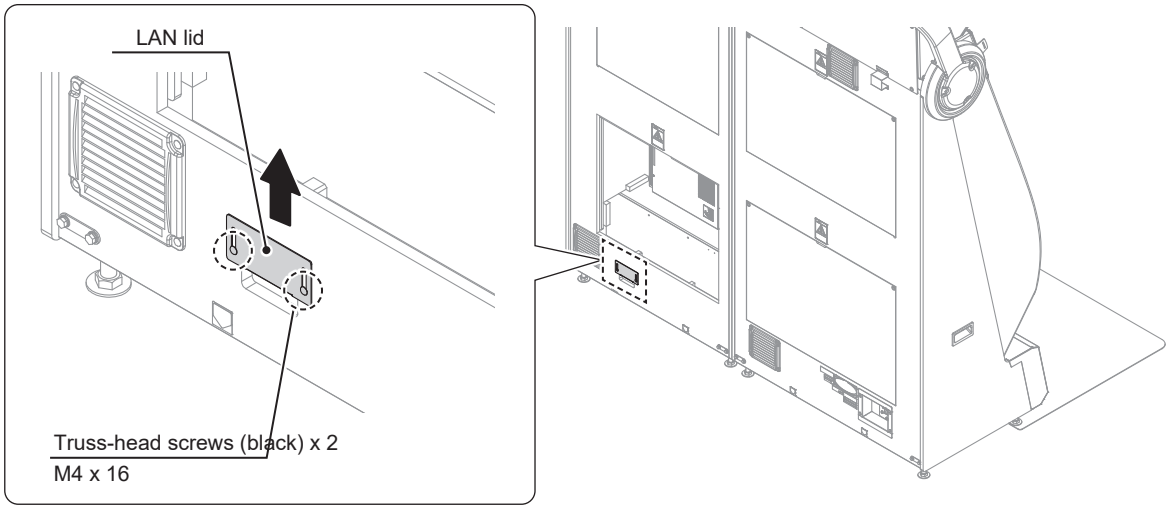

3 Pass 1 connector at the opposite end of the 10 m LAN cable connected to the server unit in step 3 of "6-3-2-A" through the hole in the client unit.

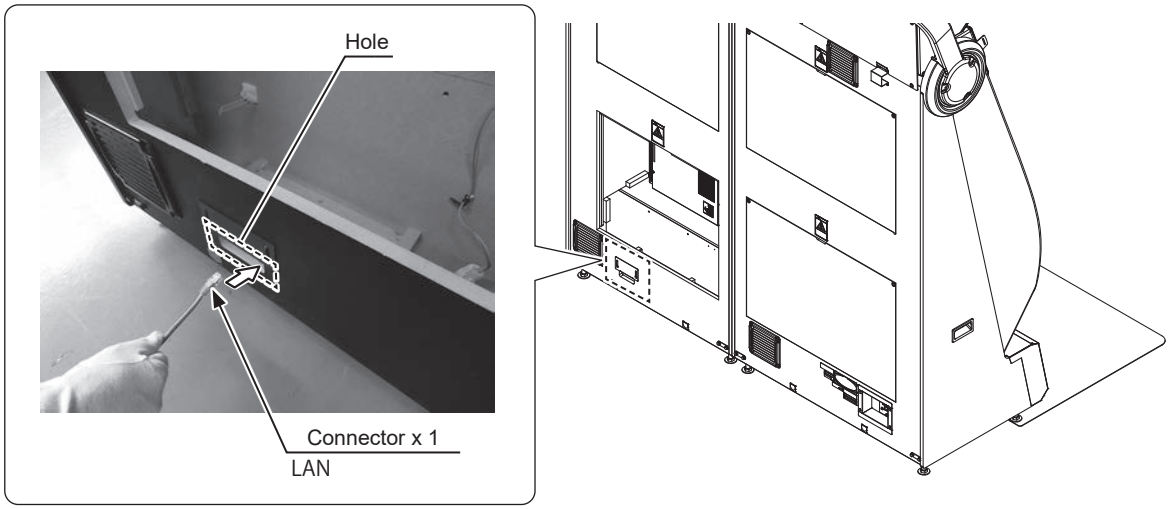

4 Connect 1 connector of the 10 m LAN cable passed through the hole in step 3 to the ALLS HX2.

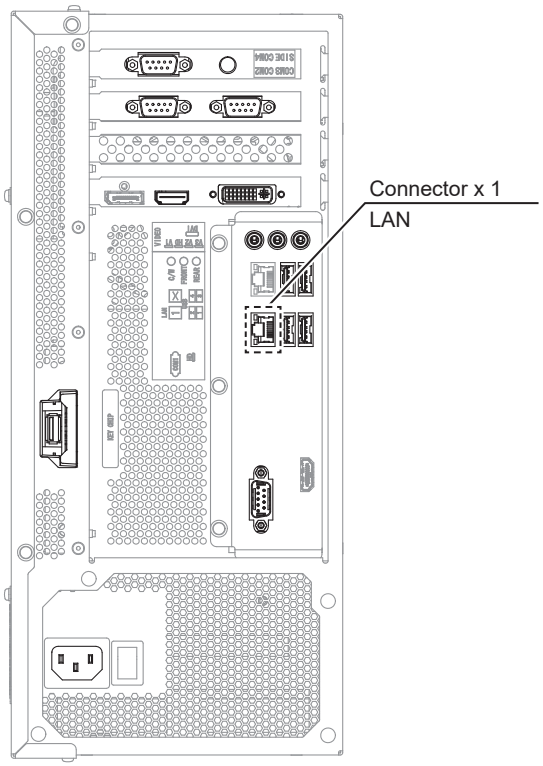

ALLS HX2

5 Make a loop of about 10 cm in the 10 m LAN cable and secure it with 3 cord clamps.

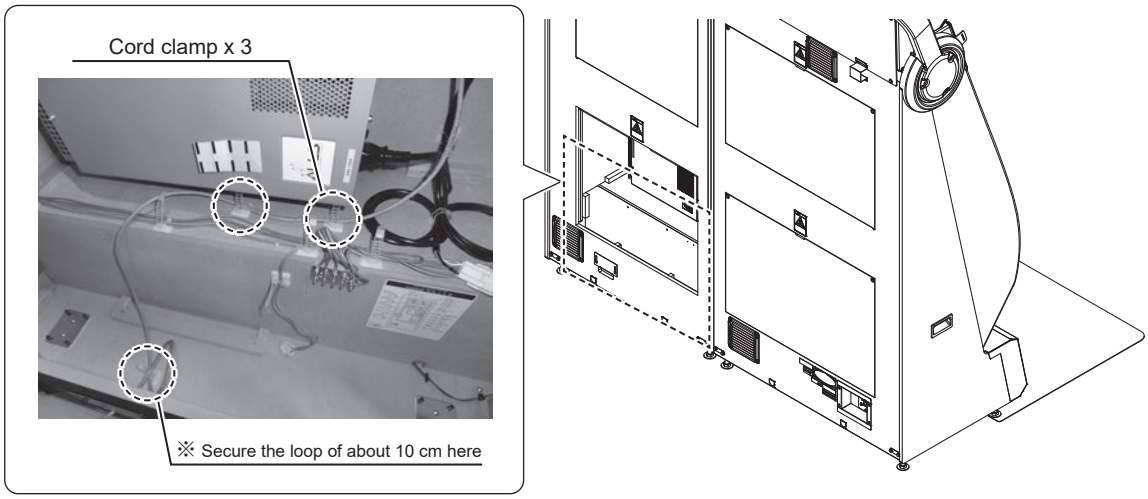

6 Work in the same way as steps 10 to 12 of "6-3-1".

6-4 Connecting Power and Earth

⚠ WARNING

- Check the power cord for cuts and dents. A damaged power cord may cause electric shock, current leakage or fire.
- Use a dedicated power supply equipped with an earth leakage breaker. Using a power supply without an earth leakage breaker may cause a fire if a leakage occurs.
- Prepare an "indoor earth terminal that is securely earthed". This product has an earth terminal. Connect the earth terminal to the indoor earth terminal with an earth wire. Without proper earthing, electric shock or malfunction may result.
- Do not leave the power cord or earth wire exposed. When exposed, they are easily damaged, for example by customers tripping over them. Damage may cause electric shock, short circuit or fire. Route them where they do not obstruct customers, or fit a cover.
- When using the earth screw and earth terminal of the AC unit, do not earth with the earth wire left bare. This may cause electric shock, short circuit or fire. Use a round terminal rated 15 A or higher for M4 and earth the cabinet securely.

STOP

IMPORTANT

If you earth the unit with the earth wire built into the power cord, do not also connect the AC unit's earth terminal. If you earth the unit with the AC unit's earth terminal, do not use the earth wire built into the power cord. Doing so may cause malfunction or erratic operation.

1 Check that the power switches are OFF. The main power switch is on the AC unit. The sub power switch is inside the selector door.

※While the main power switch is ON, power is still supplied to the router even if the sub power switch is turned OFF.

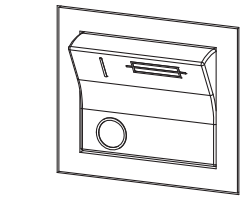

Main power switch (OFF)

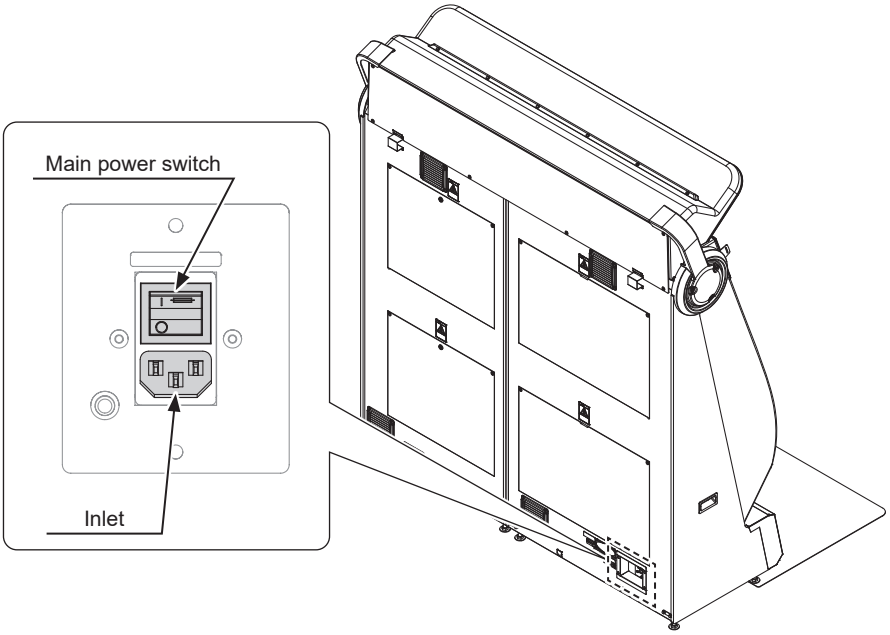

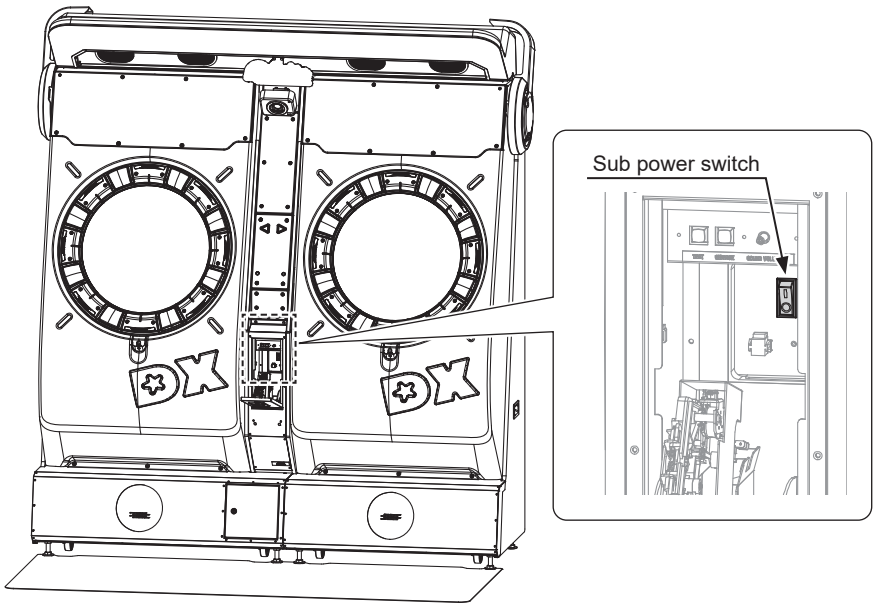

Sub power switch (OFF)

2 Firmly insert the power cord connector into the inlet of the AC unit and the power cord plug into the outlet.

Parts used

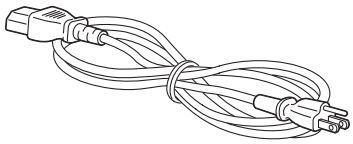

Power cord

When connecting to a power outlet with an earth terminal

The power cord has a built-in earth wire. Connect the power cord to the AC unit and plug the power cord into a "power outlet with an earth terminal".

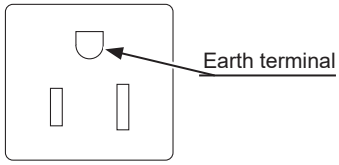

Example of a power outlet with an earth terminal

When using a separately prepared earth wire

If there is no "power outlet with an earth terminal", connect the earth screw or earth terminal of the AC unit to the earthing mechanism with a separately prepared earth wire, and be sure to earth the unit.

First remove the earth screw of the AC unit, pass it through the round terminal of the earth wire, and tighten it. Fit the spring washer and the flat washer on the screw.

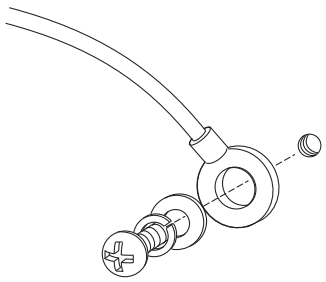

Connecting the earth wire

When using a commercially available adapter

When supplying power through a commercially available conversion adapter, connect the earth terminal of the adapter to an "earth terminal that is securely earthed".

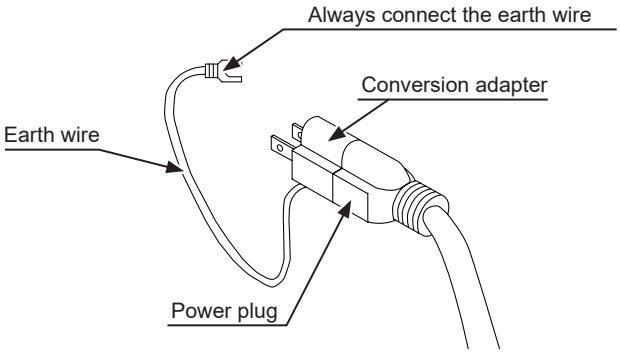

3 Route the power cord wiring indoors. Fit a wiring cover to protect the power cord. If you earthed the unit with a separately prepared earth wire, also route and protect the earth wire at the same time.

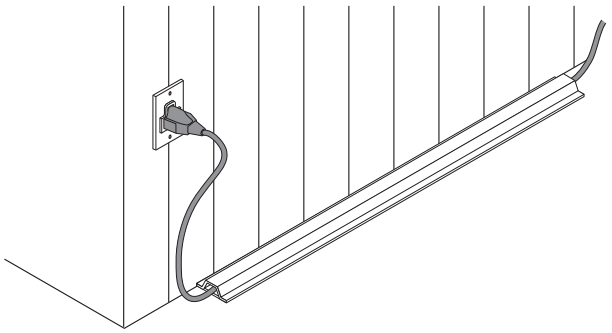

6-5 Installing the Software

⚠ WARNING

If any operation or abnormality not described in this manual occurs, turn off the power immediately. Otherwise electric shock or fire may result.

STOP

IMPORTANT

- Do not perform any other work until the software installation has finished.
- If a condition not described in this manual continues, contact the address listed under "Contact Information" in this manual.
- Do not turn off the power during a system update. Turning off the power may cause the ALLS HX2 to fail.

Test mode is operated with the test button and service button inside the selector door. Buttons 1, 4 and 5 can also be used in the same way as the test button and service button, but only during the game test mode.

The buttons are located as shown in the figure below.

Select an item with the service button or with button 1 or 4.

Execute the selected item or change the setting value with the test button or button 5. <See Service Manual "Chapter 2 How to Operate Test Mode">

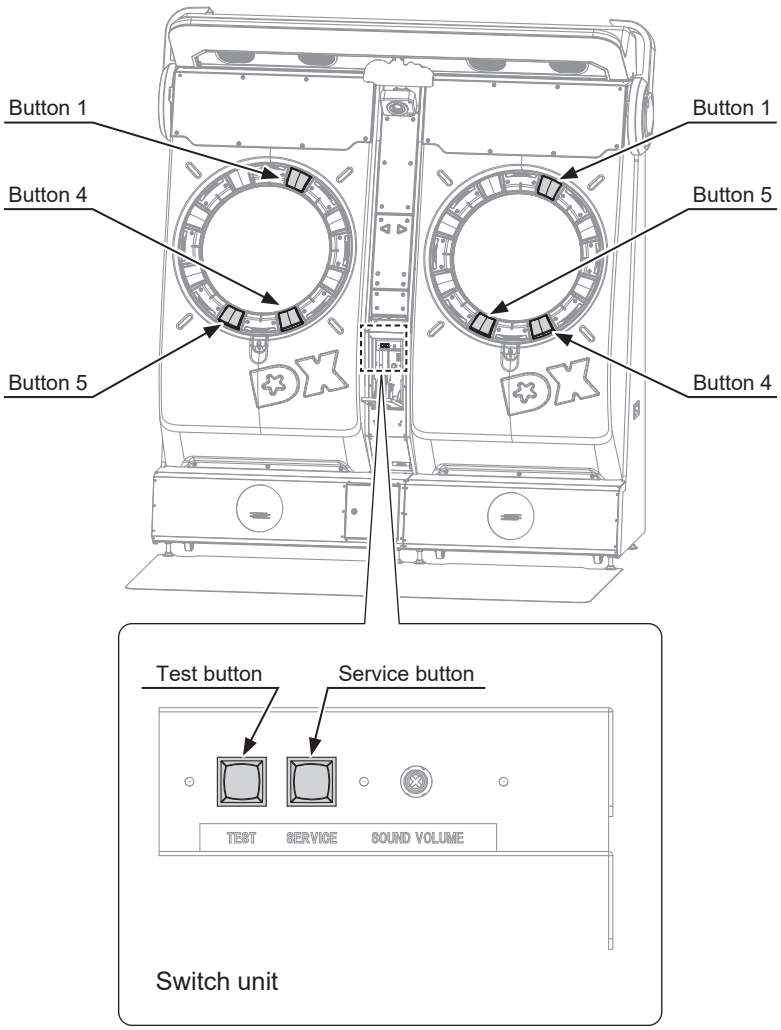

6-5-1 When Operating One Unit

This work takes about 95 minutes (including software installation time).
If a system update is required (at installation and when replacing the ALLS HX2), it may take even longer.

1 Unlock with the master key and open the selector door.

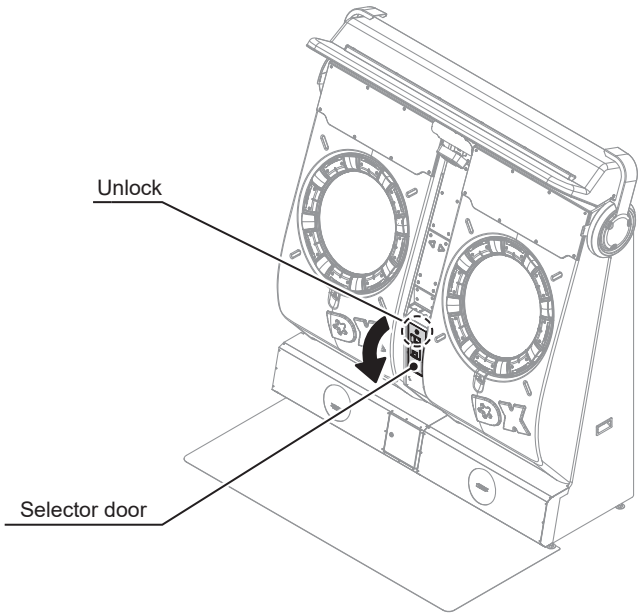

2 Connect the USB memory for installation to the USB connector.

Parts used

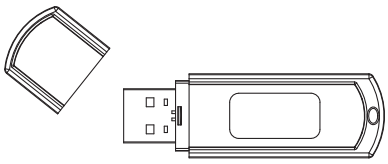

USB memory for installation

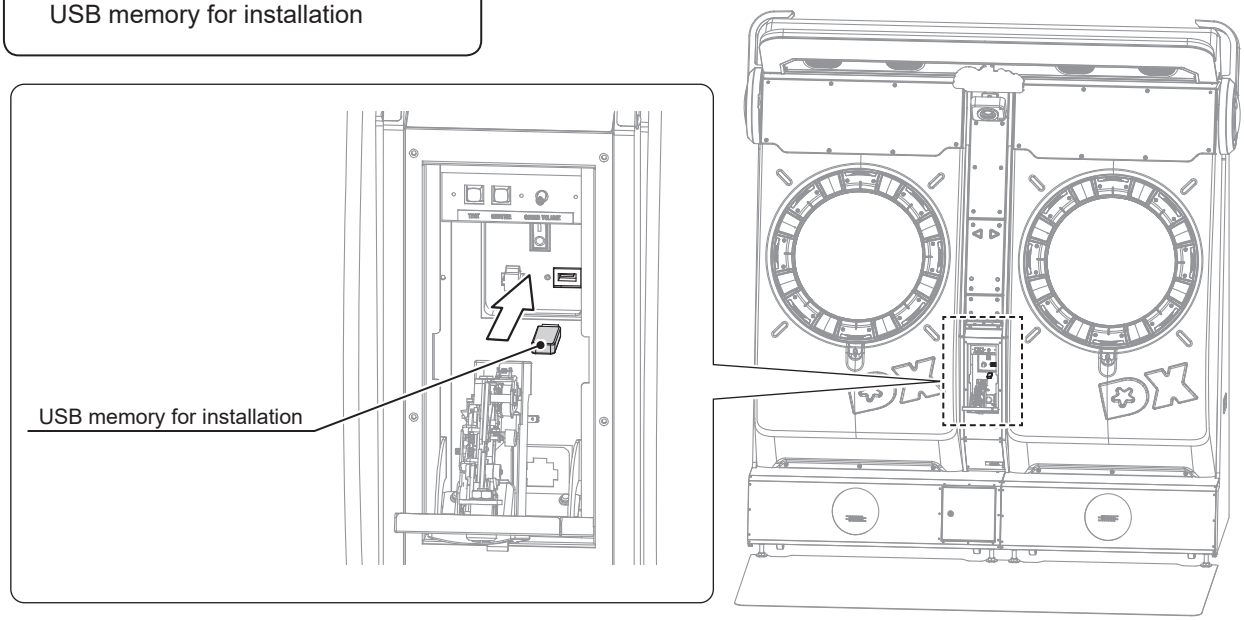

3 Turn ON the main power switch and the sub power switch.

4 The ALLS HX2 startup screen is displayed on the LCD monitor.

5 Software installation starts automatically and the message "Installing the game program. ○/○ ○○.○○ %" is displayed. Do not turn off the power of the cabinet during software installation.

[Required time (guideline): 90 minutes]

6 After the software installation, the device check screen is displayed.

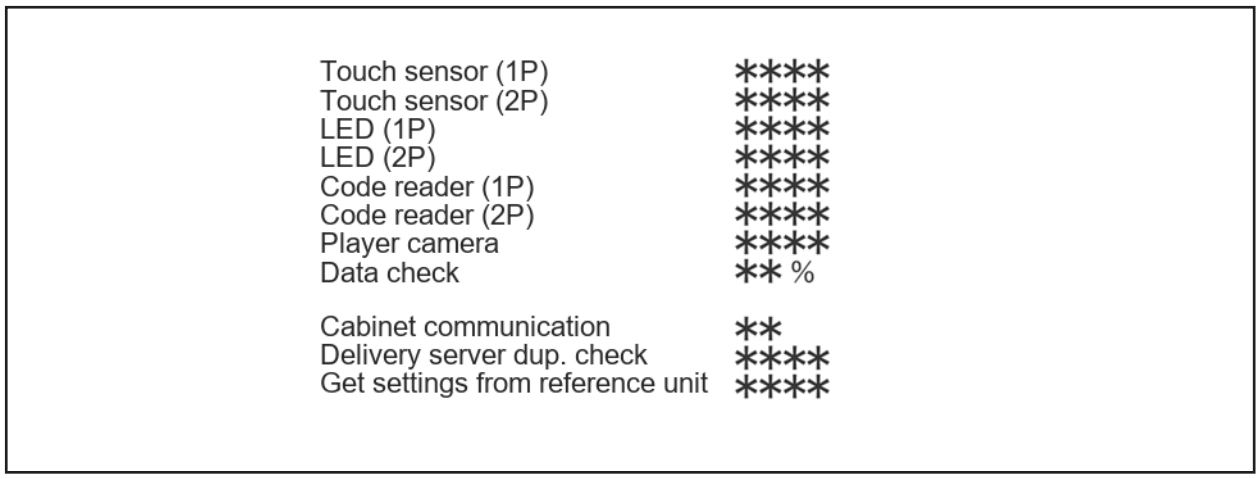

Device check screen

7 When the device check screen is displayed, press the test button to display the game test menu screen.
<See Service Manual "Chapter 3 Game Test Mode">

8 Press the service button to select "Game Settings" and press the test button to display the game settings screen. <See Service Manual "3-7 Game Settings">

9 Press the service button to select "In-store Matching Setting" and press the test button to set it to "OFF". <See Service Manual "3-7 Game Settings">

10 Press the service button to select "Exit" and press the test button to return to the game test menu screen.

11 Press the service button to select "System Test" and press the test button to display the system test transition screen. <See Service Manual "3-15 System Test">

12 Press the service button to select "Switch" and press the test button to display the system test mode screen.
<See ALLS HX2 Service Manual "Chapter 3 System Test Mode">

13 Press the service button to select "System Settings" and press the test button to display the system settings screen. <See Service Manual "4-2 System Settings">

14 Press the service button to select "Delivery Server Setting" and press the test button to set it to "Server". <See Service Manual "4-2 System Settings">

15 Press the service button to select "Exit" and press the test button to return to the system test menu screen.

16 Press the service button to select "Exit" and press the test button; an error is displayed.

17 When "Error 0917: USB memory is still connected" is displayed, turn the sub power switch OFF and remove the USB memory for installation from the USB connector.

STOP

IMPORTANT

- Do not leave the USB memory for installation connected. Always take it out at this point and store it safely.
- If the USB memory for installation is left connected, an error screen is displayed and the game cannot be played.

18 Turn ON the sub power switch to display the advertise (attract) screen.

6-5-2 When Operating Two Units

The time required for this work (including software installation time) varies with the number of units. It is about 180 minutes for 2 units (1 server unit and 1 client unit).
If a system update is required (at installation and when replacing the ALLS HX2), it may take even longer.

6-5-2-A Server Unit

1 Unlock with the master key and open the selector door.

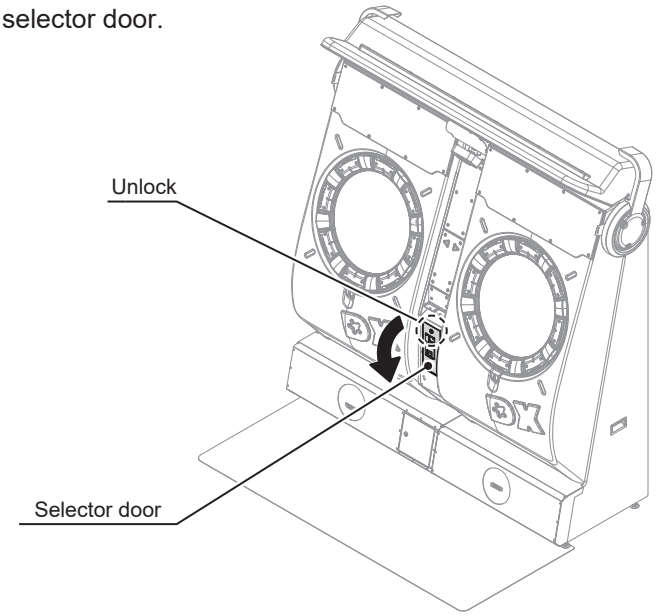

2 Connect the USB memory for installation to the USB connector.

Parts used

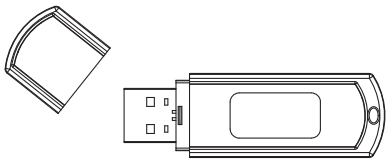

USB memory for installation

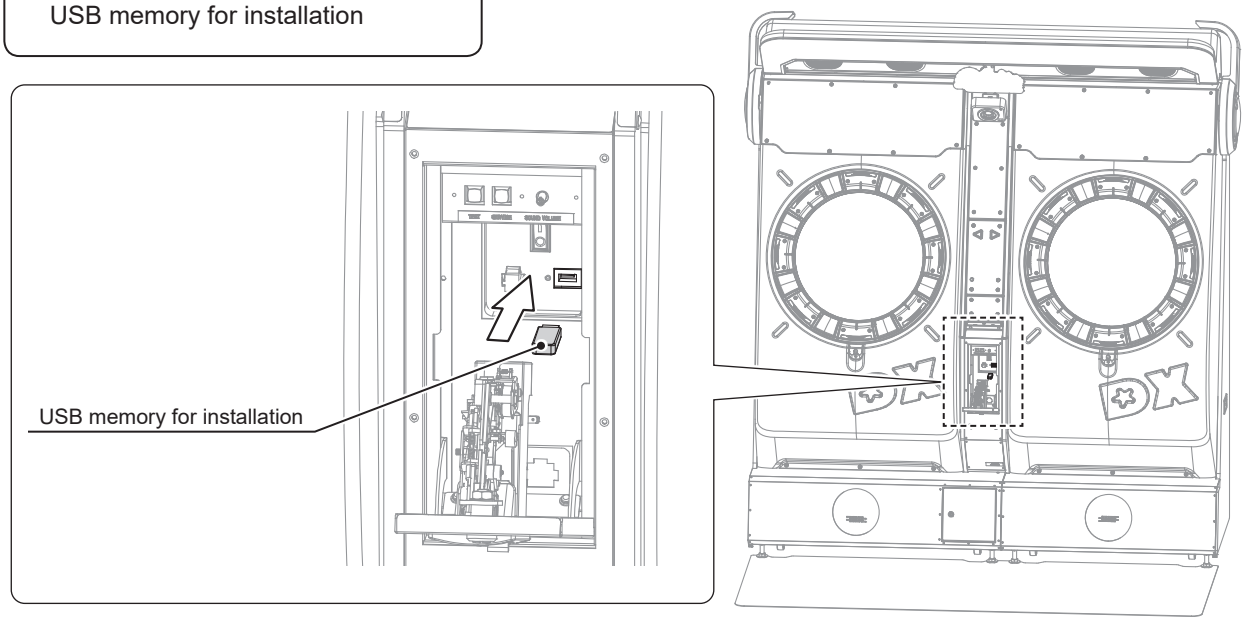

3 Turn ON the main power switch and the sub power switch.

4 The ALLS HX2 startup screen is displayed on the LCD monitor.

5 Software installation starts automatically and the message "Installing the game program. ○/○ ○○.○○ %" is displayed. Do not turn off the power of the cabinet during software installation.

[Required time (guideline): 90 minutes]

6 After the software installation, the device check screen is displayed.

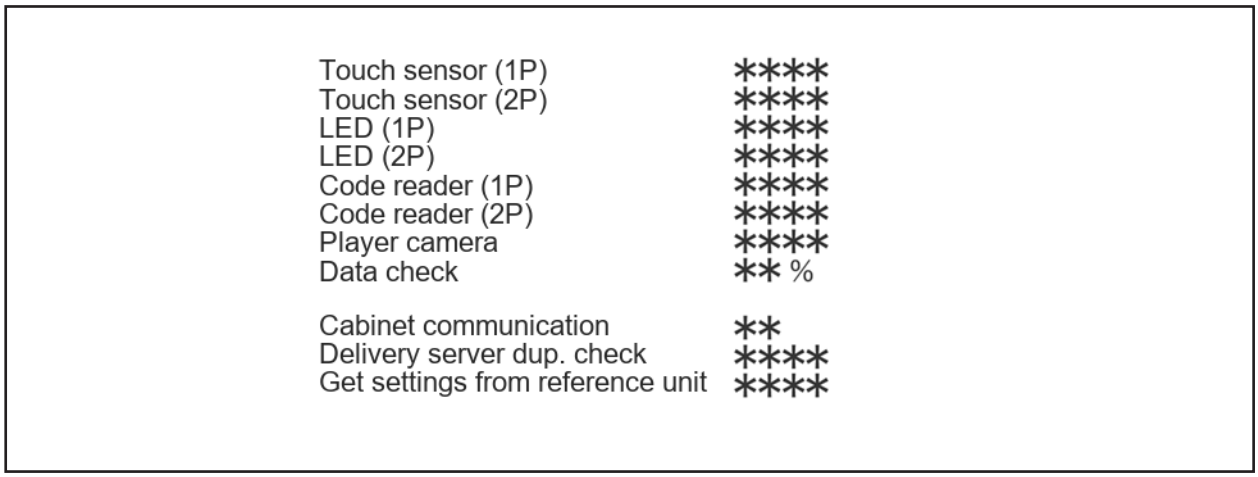

Device check screen

7 When the device check screen is displayed, press the test button to display the game test menu screen.
<See Service Manual "Chapter 3 Game Test Mode">

8 Press the service button to select "Game Settings" and press the test button to display the game settings screen. <See Service Manual "3-7 Game Settings">

9 Press the service button to select "In-store Matching Setting" and press the test button to set it to "ON". <See Service Manual "3-7 Game Settings">

10 Press the service button to select "In-group Reference Unit Setting" and press the test button to set it to "Reference Unit". <See Service Manual "3-7 Game Settings">

11 Press the service button to select "Exit" and press the test button to return to the game test menu screen.

12 Press the service button to select "System Test" and press the test button to display the system test transition screen. <See Service Manual "3-15 System Test">

13 Press the service button to select "Switch" and press the test button to display the system test mode screen.
<See ALLS HX2 Service Manual "Chapter 3 System Test Mode">

14 Press the service button to select "System Settings" and press the test button to display the system settings screen. <See Service Manual "4-2 System Settings">

15 Press the service button to select "Delivery Server Setting" and press the test button to set it to "Server". <See Service Manual "4-2 System Settings">

16 Press the service button to select "Exit" and press the test button to return to the system test menu screen.

17 Press the service button to select "Exit" and press the test button; an error screen is displayed.

18 When "Error 0917: USB memory is still connected" is displayed, turn the sub power switch OFF and remove the USB memory for installation from the USB connector.

STOP

IMPORTANT

- Do not leave the USB memory for installation connected. Always take it out at this point and store it safely.
- If the USB memory for installation is left connected, an error screen is displayed and the game cannot be played.

19 Turn ON the sub power switch to display the advertise (attract) screen.

6-5-2-B Client Unit

1 Unlock with the master key and open the selector door.

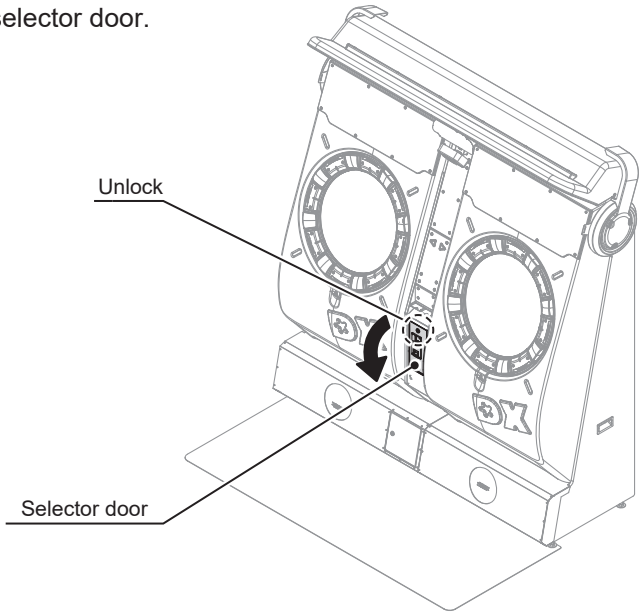

2 Turn ON the main power switch and the sub power switch.

3 When the ALLS logo screen is displayed, press the test button to display the system test mode screen. <See ALLS HX2 Service Manual "Chapter 3 System Test Mode">

4 When all menu items are displayed in white characters, press the service button to select "System Settings" and press the test button to display the system settings screen.
<See Service Manual "4-2 System Settings">

5 Press the service button to select "Delivery Server Setting" and press the test button to set it to "Client". <See Service Manual "4-2 System Settings">

6 Press the service button to select "Exit" and press the test button to return to the system test menu screen.

7 Press the service button to select "Exit" and press the test button.

8 When the ALLS logo screen is displayed, software installation starts automatically from the server unit to the client unit.

[Required time (guideline): 80 minutes]

9 When the software installation or system update is complete, the advertise screen is displayed.

10 Press the test button to display the game test menu screen. <See Service Manual "Chapter 3 Game Test Menu">

11 Press the service button to select "Game Settings" and press the test button to display the game settings screen. <See Service Manual "3-7 Game Settings">

12 Press the service button to select "In-store Matching Setting" and press the test button to set it to "ON". <See Service Manual "3-7 Game Settings">

13 Press the service button to select "In-group Reference Unit Setting" and press the test button to set it to "Follow Reference Unit". <See Service Manual "3-7 Game Settings">

14 Press the service button to select "Exit" and press the test button to return to the game test menu screen.

15 Press the service button to select "Exit" and press the test button to return to the advertise screen.

7 Setup

"Setup" means the work done to make the machine ready for operation.

7-1 Setup Immediately After Installation

7-1-1 Turning On the Power

STOP

If only the sub power switch is turned OFF, the router remains powered.

IMPORTANT

Turn on the power of the server unit first, then the client units. If the power is turned on in any other order, the in-store network may not work correctly.

When the power is turned on, "step ~ (various numbers)" is displayed on the monitor screen and initialization starts. After that, the ALLS logo is displayed and, after the device and network checks, the advertise screen is displayed.

Closing processing is performed at the same time as startup. If the closing processing has not finished by the time the advertise screen is displayed, "Network processing in progress. Please wait." is displayed. Normally the closing processing finishes about 3 minutes after the power is turned on, and the game can be played.

The time until the closing processing finishes varies depending on network conditions, etc. The game cannot be played until the closing processing finishes. Do not insert coins, etc.

If an error screen is displayed, refer to Service Manual "Chapter 5 Error Display" and take action.

Restart procedure

If a cabinet needs to be restarted individually, for example when it fails to authenticate with ALL.Net (external network), restart that cabinet. Turn the power off, wait 10 seconds, and turn the power on again.

Each cabinet authenticates with ALL.Net individually. The result is shown by the "network icon" of each cabinet. A diagonal line through the icon indicates an abnormality.

7-1-2 Software Settings

Refer to the table below and make settings and adjustments as needed.

■ List of setting items

Setting and adjustment items	Work content and reference chapter	Store
Closing time setting	Set the closing time to suit your operating situation. <See SM "1-8 Store Closing Processing" and "3-10 Closing Time Setting">	Store-dependent
Game settings	Make game settings to suit your operating situation. <See SM "3-7 Game Settings">	Store-dependent
Coin settings	Change to settings suitable for your operation. <See SM "Chapter 4 System Test Mode">	Store-dependent

※ "SM" in the reference chapters in the table refers to the Service Manual.

7-1-3 Operation Check

Refer to the table below and check the operation as needed.

■ **List of operation check items**

Operation check item	Check content and reference chapter
Input test	Check that each input device operates correctly. <See SM "3-2 Input Test">
Output test	Check that each output device operates correctly. For the LEDs, check that they light in the positions and colors listed in the items. <See SM "3-3 Output Test">
Touch sensor test	Check that the touch sensor operates correctly. <See SM "3-5 Touch Sensor Test">
Camera test	Check that the player camera and the code reader operate correctly. <See SM "3-6 Camera Test">
Aime card reader test	Check that the touch-type card reader operates correctly. <See SM "3-9 Aime Card Reader Test">
Network test	Check the network connection. <See SM "3-11 Network Test">
Speaker test	Check that sound is output correctly from each sound device. <See SM "4-1 Speaker Test">

※ "SM" in the reference chapters in the table refers to the Service Manual.

7-1-4 Volume Adjustment

Adjust the volume with the sound volume control on the switch unit.
The headphone output volume can be adjusted on the play preparation screen before the game starts (when the headphone volume item is selected). <See SM "1-4-10 Play Preparation">

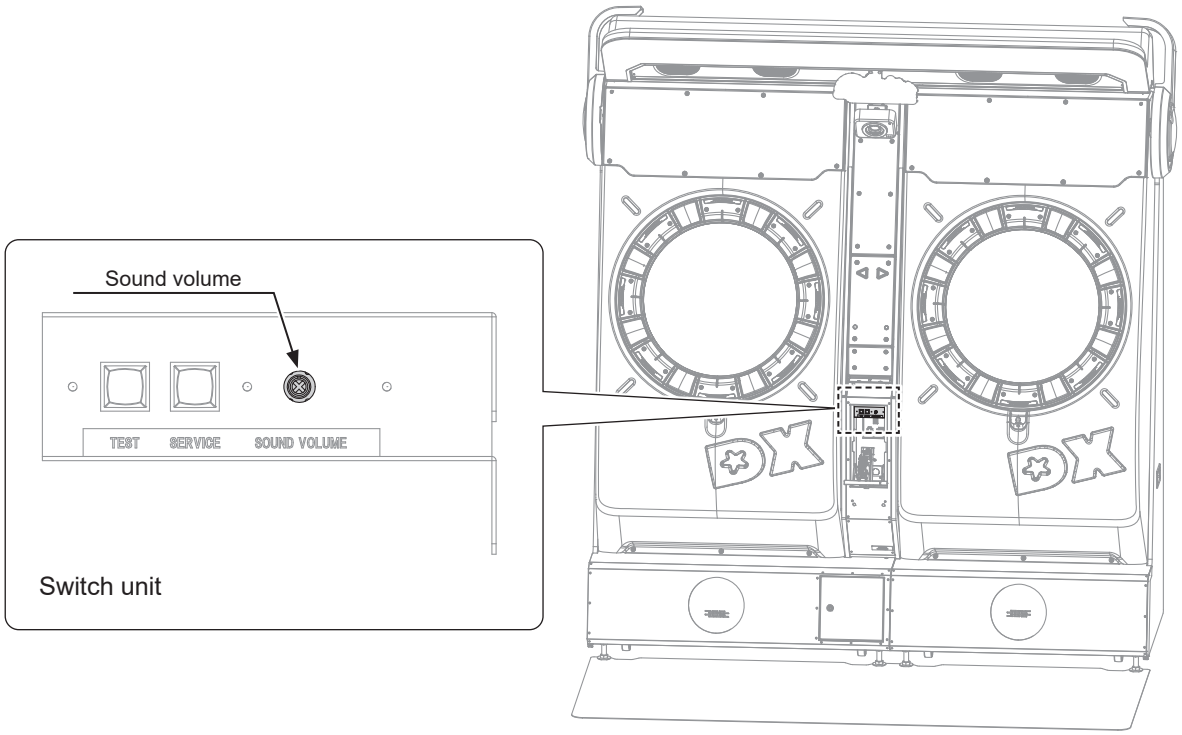

7-2 Daily Setup

Collecting coins from the cash box

STOP

IMPORTANT

If the coin meter circuit is disconnected, play becomes impossible.

1 Unlock with the key and open the cash box door.

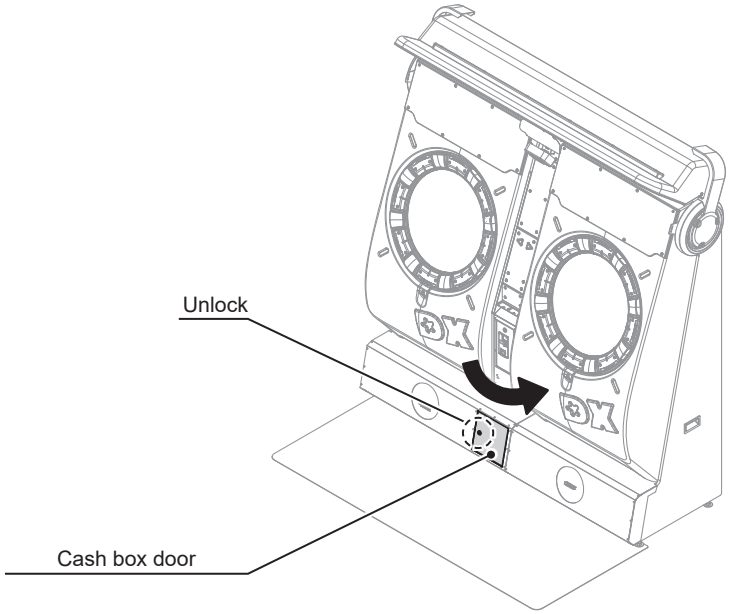

2 Pull out the cash box and collect the coins.

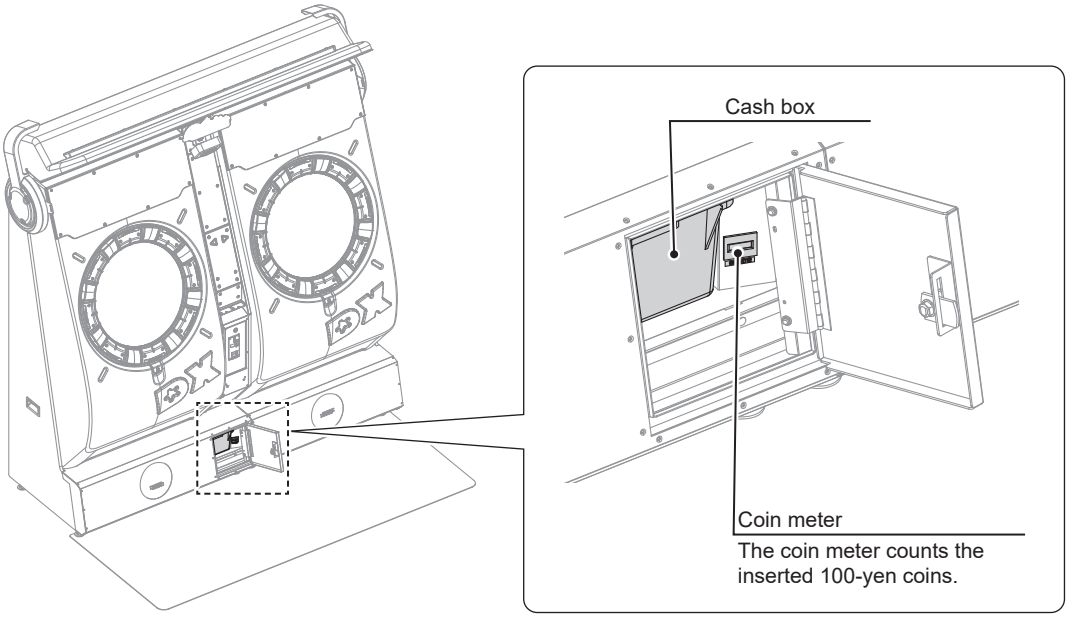

8 Precautions When Moving the Cabinet

⚠ WARNING

- "Moving" as described in this manual refers to moving within the same building. Moving to a different building, area, store or facility involves various factors, such as packing, loading onto a transport vehicle and securing for transport, and is therefore not described in this manual. When moving to a different building or store, contact the place of purchase or the address listed under "Contact Information" in this manual.
- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- The components of this product are large and heavy. Unless people with knowledge and skills in transport, as well as information about the product, are involved, accidents may occur.
- Turn off the power before starting work. Otherwise electric shock, short circuit or fire may result.
- Do not perform disassembly work that is not described in this manual. This may cause electric shock, short circuit or fire.
- Unplug the power plug and the LAN cables before moving. Moving with them connected may damage the cables and cause electric shock or fire.
- When moving across the floor, raise the adjusters and lower the casters onto the floor. During the move, take care that the casters do not run over wiring such as the power cord. Damaged wiring may cause electric shock, short circuit or fire.
- When supporting heavy objects, consider carefully where to hold them and hold them by the handles or the bottom. Holding a part that lacks strength may cause parts or joints to break under the object's own weight, causing tipping over, falling parts or serious injury.
- Do not leave cabinets on slopes, unstable places or places with steps. They may tip over or collide.
- For safe and reliable work, prepare a step stool with sufficient strength and stability. An unstable step stool may cause falls.
- While working on a step stool, take care not to fall and not to hit your head on the ceiling or the cabinet. This may cause serious injury.

⚠ CAUTION

When moving the cabinet, do not hold or push anywhere other than the specified places. Careless handling may damage parts, and fragments may cause injury.

STOP

IMPORTANT

- When moving the cabinet, the floor may be damaged depending on its material. Prepare a mat for moving, etc. Also remove in advance anything that obstructs the move (chairs, thick carpets, etc.).
- Do not stack or lean separated or disassembled parts. This may damage or deform the parts. Severe deformation may also cause malfunction or failure.

When moving through a place with a width restriction, refer to "6-1" through "6-4" and disassemble in the reverse order.
Do not push or pull the parts in the hatched areas of the figure below.

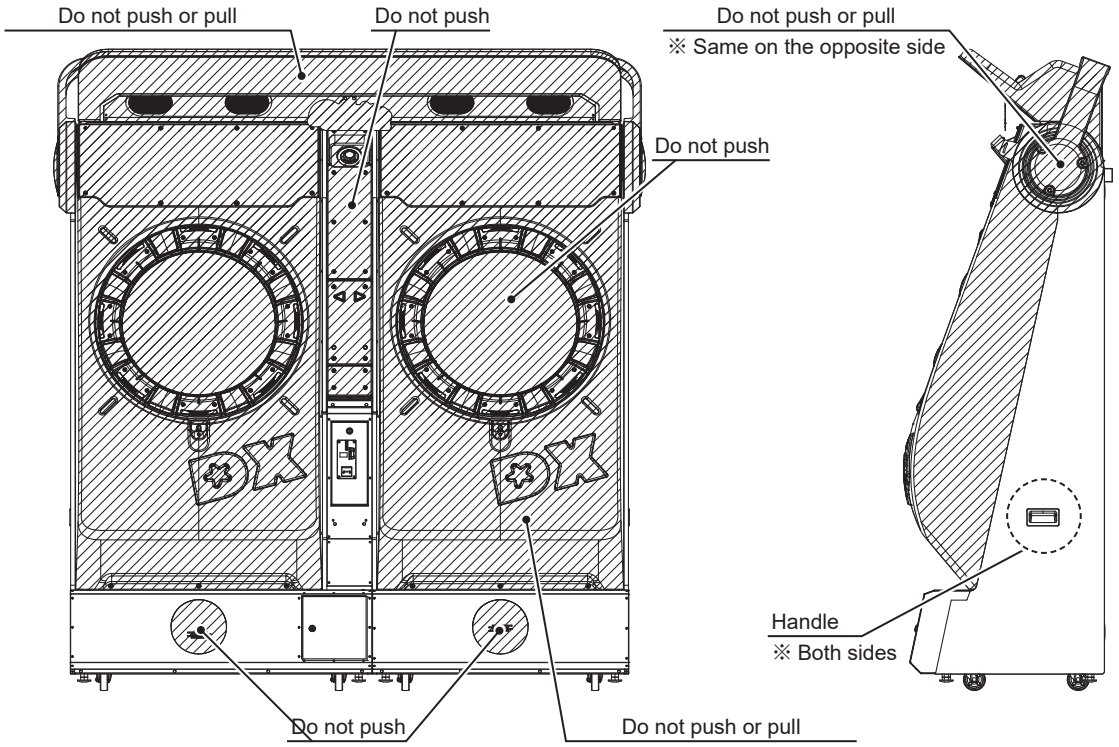

9 Periodic Inspection

To maintain the performance of this product and to operate safely, inspect and maintain the following items regularly.

⚠ WARNING

- Work that involves touching the inside of this product must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- At least once a year, check that the power cord is not damaged, that the plug is firmly inserted, and that no dust has accumulated between the outlet and the power plug. Using the product with accumulated dust may cause electric shock or fire.
- At least once a year, ask the place of purchase or the address listed under "Contact Information" in this manual to clean the inside. If the inside is not cleaned and dust accumulates, fire or accidents may result. Internal cleaning is a chargeable service.
- Aging (insulation deterioration) of electronic and electrical parts may cause electric shock, short circuit or fire. Check for abnormalities such as unusual odors.
- Cleaning this product with a water jet (high-pressure washer) or by spraying water is prohibited. This product is not designed to be cleaned with a water jet. Water ingress may cause electric shock, short circuit or fire, and damage that is difficult to repair may result.
- Clean the ALLS HX2 at least once a year. Using it with accumulated dust inside the ALLS HX2 may cause malfunction, short circuit or fire.

STOP

IMPORTANT

Each ALLS HX2 has different components, software and settings. After cleaning, return the ALLS HX2 to the cabinet it was removed from. Returning it to the wrong cabinet may cause malfunction or other problems.

■ Periodic inspection table

Interval	Inspection point	Content	Reference
As needed	Cabinet surface	Cleaning	See below
	Card entry	Cleaning	Chapter 15 (P.114)
	Player camera	Cleaning	16-1 (P.117)
	Camera identification code	Cleaning	14-2 (P.112)
	Electronic and electrical parts	Inspection	See warning above
	Touch sensor surface	Cleaning the touch sensor surface	11-1-1 (P.73)
Daily	Cabinet	Check that the adjusters are set down	4-1 (P.10)
	Touch sensor	Inspection	SM "3-5"
1 month	Buttons	Inspection of input devices	SM "3-2"
	Speakers and woofers	Inspection of speaker volume	7-1-4 (P.63)
		Inspection of speakers	SM "4-1"
	Coin selector	Cleaning	13-3 (P.104)
		Coin insertion test	13-1 (P.101)
	LED	Output test	SM "3-3"
	Code reader	Reading test	SM "3-6"
	Touch-type card reader	Reading test	SM "3-9"
	Headphone jack	Sound output test	SM "4-1"
3 months	Buttons	Greasing	12-2 (P.97)
1 year	ALLS HX2	Cleaning	18-2 (P.130)
	Power plug	Inspection and cleaning	See warning above
	LCD monitor	Check the adjustment	11-2 (P.79)
	Inside of cabinet	Cleaning	See warning above

※ "SM" in the reference chapters in the table refers to the Service Manual.

Cleaning the cabinet surface

If the dirt is heavy, wet a soft cloth with water or water-diluted neutral detergent, wring it out well, and wipe off the dirt. Do not use thinner, benzine, alcohol, chemical dusters, etc., as they may damage the surface finish.

Some household, kitchen and furniture cleaners are strong enough to attack plastic parts, paint and printing. Read the cleaner's instructions carefully before use and take precautions, such as testing it on an inconspicuous spot.

10 Troubleshooting

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result. If no store maintenance staff or technician is available, turn off the power immediately and contact the place of purchase or the address listed under "Contact Information" in this manual.
- If trouble occurs that is not described in this manual, or if the measures described in this manual do not bring improvement, do not attempt to deal with it carelessly. Turn off the power, unplug the power plug from the outlet or disconnect the power connection, and contact the place of purchase or the address listed under "Contact Information" in this manual. Careless measures may cause unforeseeable accidents.
- Remove the cause of the circuit protector tripping before resetting it. Forcing it back and continuing to use the product may cause a fire.

STOP

IMPORTANT

- When an error message is displayed, identify the cause immediately and take action. Continuing operation while leaving it unattended may cause failure. <See Service Manual "Chapter 5 Error Display">
- Static electricity from the human body may damage electronic components on IC boards. Before working, discharge static electricity from your body, for example by touching a grounded metal surface.
- If an error number or message that is not described in this manual is displayed, stop using the product and contact the place of purchase or the address listed under "Contact Information" in this manual.

If trouble occurs, first check the connector connections. <See Chapter 22>

■ Troubleshooting table

Problem	Cause	Remedy
Does not operate even when the power switch is turned ON	Power is not being supplied	Connect the power cord correctly. <See 6-4 (P.49)>
	Only one of the main power switch and sub power switch is OFF	Turn ON both power switches. <See 6-4 (P.49)>
	Incorrect power supply voltage	Supply the correct power supply voltage. <See 1-1 (P.1) and 3-1 (P.8)>
	Fuse blown by a momentary overload	After removing the cause of the overload, replace it with a spare fuse. <See Chapter 17 (P.122)>
No sound from the headphones	Headphone terminal is damaged	Replace the headphone jack board. <See 11-5 (P.92)>
	ALLS HX2 or amplifier failure	Check in test mode whether sound is output. <See SM "4-1 Speaker Test"> If there is an abnormality, contact the place of purchase or the address listed under "Contact Information" in this manual.

Problem	Cause	Remedy
No sound from the speakers or woofers	Volume is not adjusted correctly	Adjust the sound volume on the switch unit. <See 7-1-4 (P.63)>
	Incorrect setting	Check the sound output setting during the advertise (attract) screen. <See SM "3-7 Game Settings">
	ALLS HX2, amplifier or speaker failure	Check in test mode whether sound is output. <See SM "4-1 Speaker Test"> If there is an abnormality, contact the place of purchase or the address listed under "Contact Information" in this manual.
Sound is output but no picture appears on the monitor	LCD monitor failure	Replace the LCD monitor. <See 11-3 (P.86)>
	ALLS HX2 failure	Replace the ALLS HX2. <See 18-3 (P.132)>
Screen colors or brightness are abnormal	Screen adjustment is not appropriate	Make appropriate adjustments. <See 11-2 (P.79)>
LED lamps do not light	LED lamp failure	Check in test mode whether the LED lamps light. <See SM "3-3 Output Test"> If there is an abnormality, contact the place of purchase or the address listed under "Contact Information" in this manual.
Buttons do not operate smoothly	Grease has run out	Apply grease. <See 12-2 (P.97)>
	Button failure	Replace the button. <See 12-1 (P.94)>
Touch-type card reader does not read properly	Unsuitable card used, or a mobile phone that does not support Osaifu-Keitai	Check in test mode whether reading works. <See SM "3-9 Aime Card Reader Test">
	Touch-type card reader failure	Contact the place of purchase or the address listed under "Contact Information" in this manual.
Touch sensor does not work	Touch sensor failure	Replace the touch sensor. <See 11-4 (P.89)>
Touch sensor does not respond well	Touch sensor surface is dirty	Clean the touch sensor surface. <See 11-1 (P.73)>
	Adjustment is not appropriate	Adjust in test mode. <See SM "3-5 Touch Sensor Test">
Inserted coins are returned	Closing time setting is in effect, or server maintenance is in progress	From a certain time before the closing time or server downtime, credits are restricted and inserted coins are returned. <See SM "3-10 Closing Time Setting">
Music delivery day	New songs cannot be played on the music delivery day	Restart with the network connected. <See 7-1-1 (P.62)>

Problem	Cause	Remedy
Player camera picture does not appear on the monitor	Player camera failure	Check in test mode. <See SM "3-6 Camera Test"> If there is an abnormality, replace the player camera. <See 16-2 (P.118)>
Code reader does not recognize the card	A card that is not supported is being used	Use the correct card.
	Card is inserted in the wrong orientation	Insert the card into the card entry with the code part of the card facing the front insertion slot side.
	Camera identification code is dirty	Clean the camera identification code. <See 14-2 (P.112)>
	Code part of the card is damaged	Use a card that is not damaged.
	A special sleeve is attached to the card	Remove the sleeve before use.
	Code reader LED lamp failure	Check whether the window of the code reader lights up white. Contact the place of purchase or the address listed under "Contact Information" in this manual.
	Code reader camera failure	Check in test mode. <See SM "3-6 Camera Test"> If there is an abnormality, replace the code reader camera unit. <See 14-1 (P.106)>
Link play is not possible	Incorrect setting	Make the settings correctly. <See SM "3-7 Game Settings">
	LAN cable connected improperly	Reconnect the LAN cable correctly. <See 6-3 (P.39)>
	LAN cable damaged	Replace the LAN cable. <See 6-3 (P.39)>
	Server maintenance in progress, closing time, or network failure	Check the closing time or the server maintenance time. Link play is not possible from 30 minutes before the server downtime until maintenance ends. <See SM "1-7 Server Maintenance" and "1-8 Store Closing Processing">
	Router failure	Contact the place of purchase or the address listed under "Contact Information" in this manual.
Stays on the ALLS logo screen and does not reach the advertise screen (an error is displayed)	ALLS HX2 configuration fault or failure	Check "Chapter 4 Error Display" in the ALLS HX2 Service Manual. If it is faulty, replace the ALLS HX2. <See 18-3 (P.132)>

※ "SM" in the reference chapters in the table refers to the Service Manual.

11 LCD Monitor, Touch Sensor and Headphone Jack

The explanation in this section covers the cabinet 1P side. The same method can be used on the cabinet 2P side.

⚠ WARNING

- In the following cases, continued use may cause electric shock or fire. Immediately unplug the power plug from the outlet and contact the place of purchase or the address listed under "Contact Information" in this manual.
  - When smoke or an unusual odor is produced
  - When nothing appears on the screen
  - When water or foreign matter has entered the inside
  - When it has been dropped or damaged
- Do not repair, modify or disassemble. There are high-voltage parts inside, which may cause electric shock or fire. Ask the place of purchase or the address listed under "Contact Information" in this manual to inspect, adjust or repair the inside.
- Do not insert foreign objects. If metal or flammable items such as paper get inside through the ventilation openings, electric shock, short circuit or fire may result.

⚠ CAUTION

- Do not strike the LCD monitor screen or subject it to impact. The glass may break and cause injury.
- If the glass of the LCD monitor breaks and liquid leaks out, do not touch the liquid. If it gets on your body, it may be harmful to your health. Deal with the leaked liquid as follows.
  - If it gets into your eyes or mouth or onto your skin, rinse thoroughly with clean water and consult a doctor immediately.
  - If it gets on clothing, rinse it off immediately with clean water.
  - If it gets on equipment other than the LCD monitor, wipe it off without touching the liquid directly.
- Make appropriate adjustments. Do not operate with screen flicker or distortion left uncorrected. A badly adjusted screen may cause customers to feel dizzy, get headaches or otherwise become unwell.

11-1 Cleaning

STOP

IMPORTANT

- Wipe off dirt with a dry soft cloth (flannel). Do not use coarse gauze or similar.

  If the dirt is heavy, wet a soft cloth with water or lukewarm water, wring it out well, and wipe off the dirt. Then wipe off the moisture with a dry cloth. Do not use chemical detergents or chemicals.

- Do not rub or scratch the surface with hard objects such as brushes or scrubbing brushes.

11-1-1 Cleaning the Front of the Touch Sensor

■ Tools and equipment required for the work

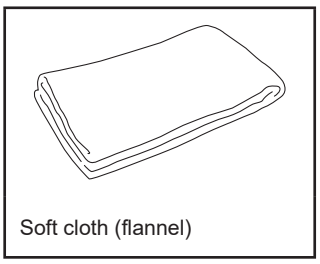

Soft cloth (flannel)

Clean as needed.

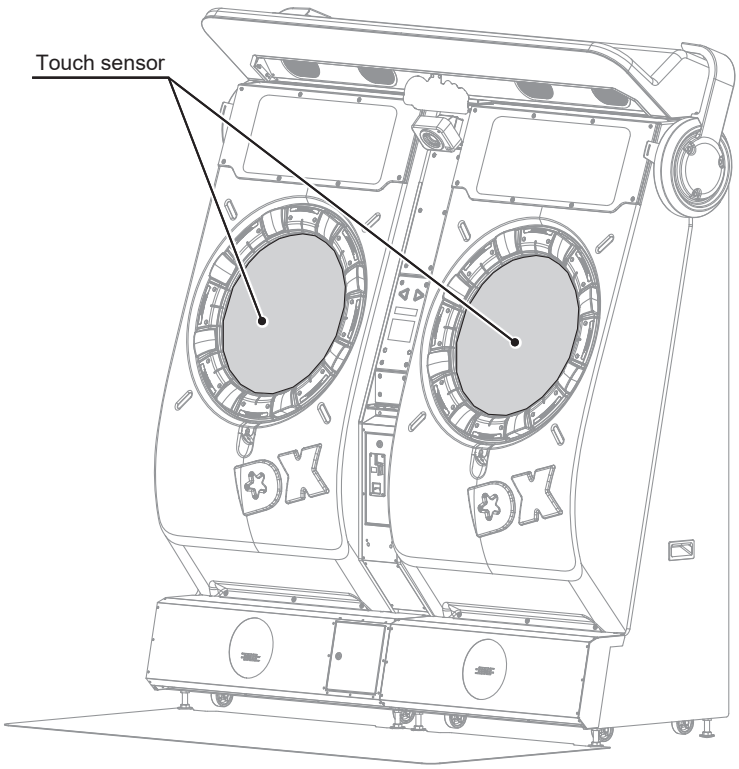

11-1-2 Cleaning the Back of the Touch Sensor and the Front of the LCD Monitor

■ Tools and equipment required for the work

 Master key (supplied)	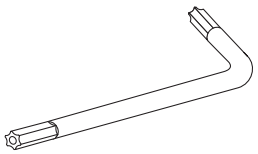 Tamper-proof wrench (for M4, supplied)	 Phillips screwdriver (for M4)	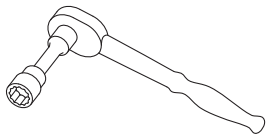 Socket wrench (10 mm across flats [for M6])
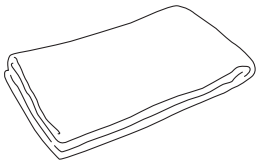 Protective mat (at least 1 m x 0.6 m)	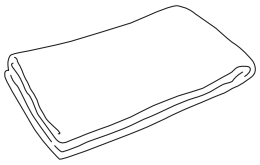 Soft cloth (flannel)	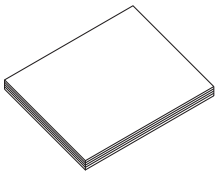 Service Manual (supplied)	

This section explains cleaning of the 1P side. The 2P side can be cleaned in the same way.

11

1 Unlock with the master key and open the selector door.

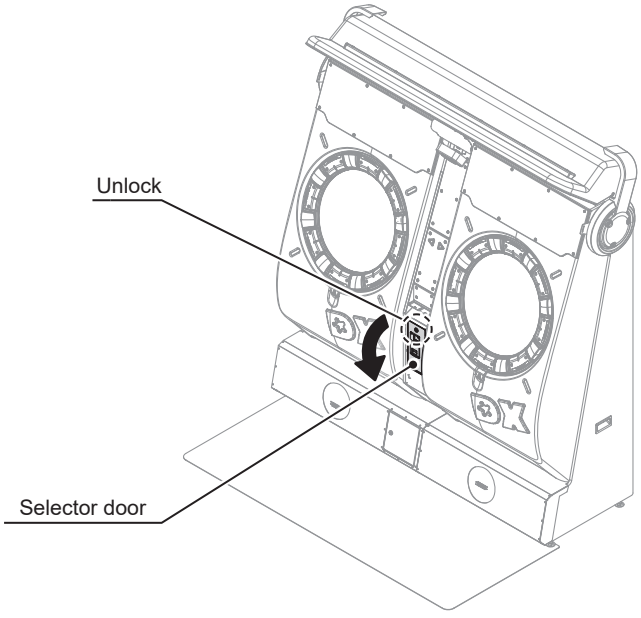

2 Turn OFF the sub power switch.

3 Remove the 5 tamper-proof screws and remove the front cover. Be careful not to damage the LED board, LED tape or wiring on the cabinet side.

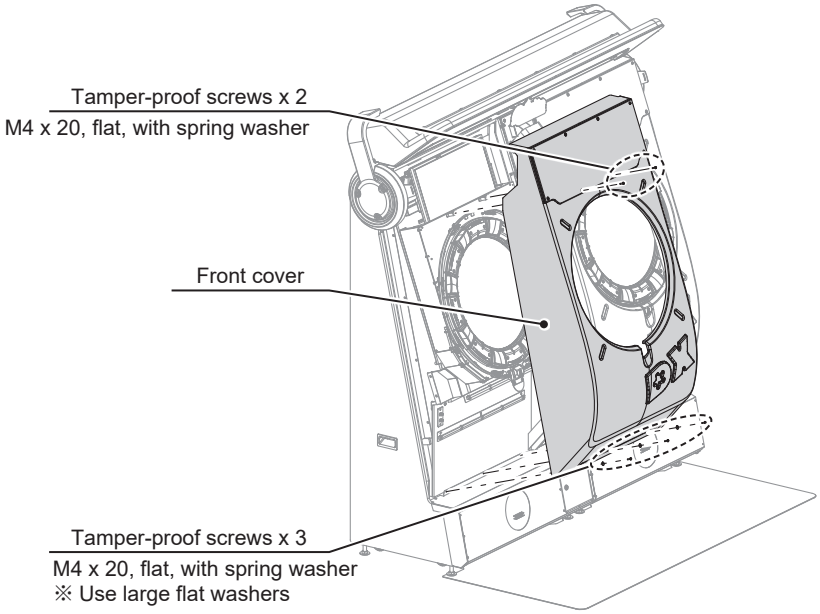

4 Remove the 2 truss-head screws and remove back door 1P (upper).
When working on the cabinet 2P side, remove the 2 truss-head screws. Unlock with the master key and remove back door 2P (upper).

11

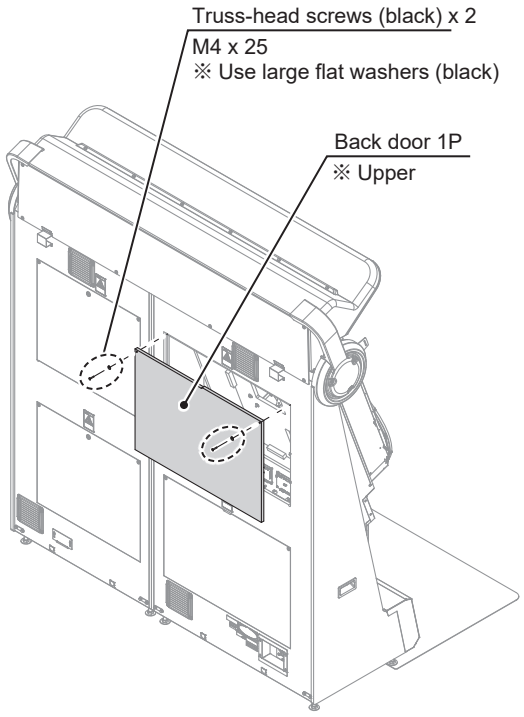

Cabinet 1P side

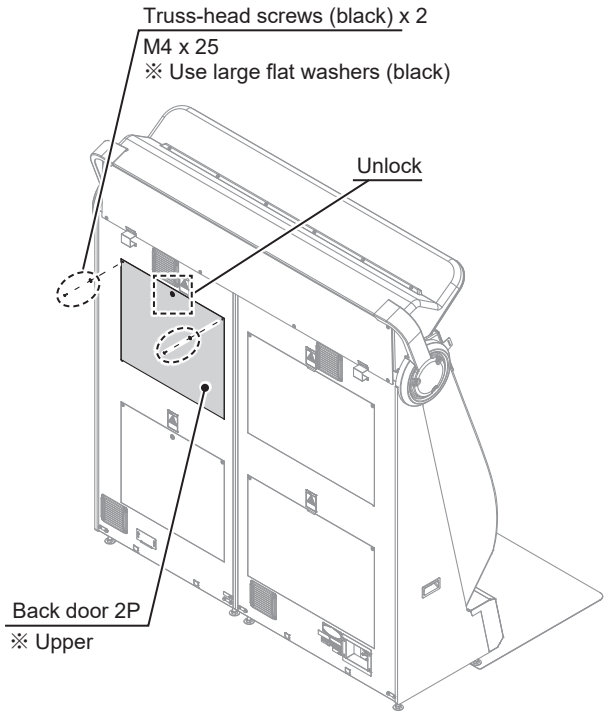

Cabinet 2P side

5 Disconnect the 5 connectors.

Connector x 5
YL4P, SM3P, SM5P, XA12P, XAD26P

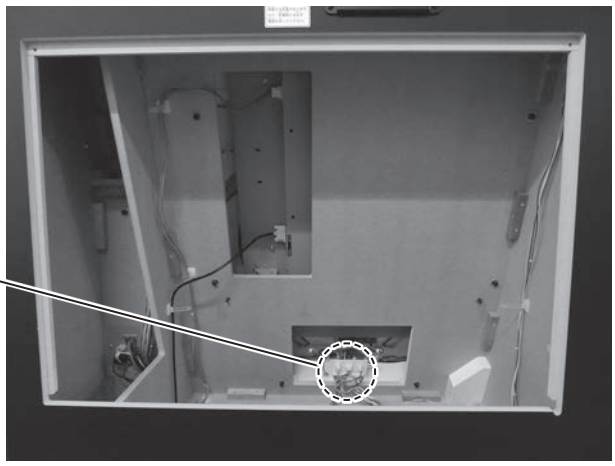

Cabinet rear side (inside)

6 Remove the 6 hex bolts.

Hex bolts (black) x 6
M6 x 30, flat, with spring washer
※ Use large flat washers

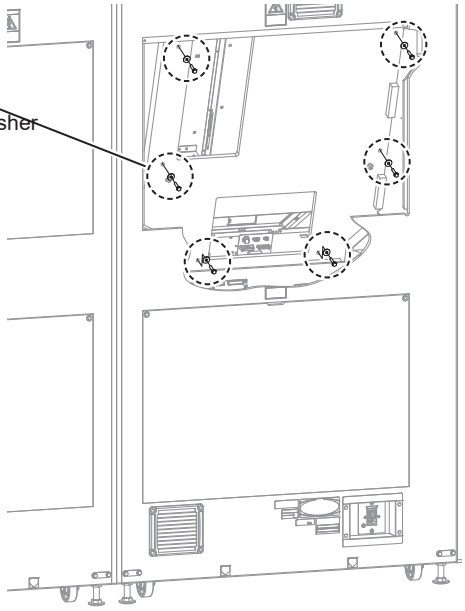

7 Lay the protective mat on the floor.

8 With two or more workers supporting it, remove the switch base and place it on the protective mat with the touch sensor side facing down.

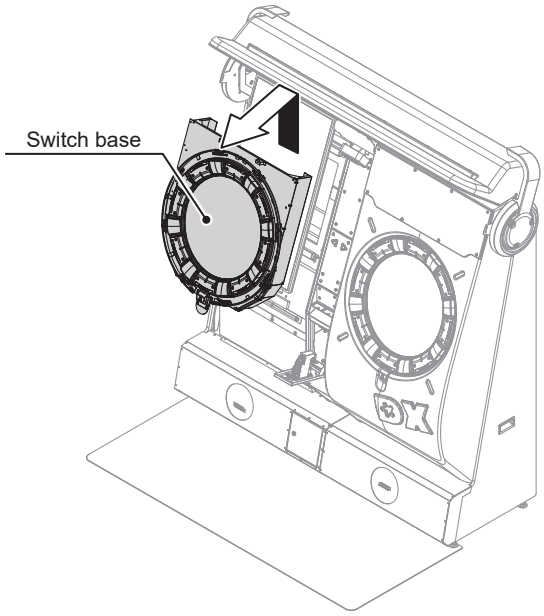

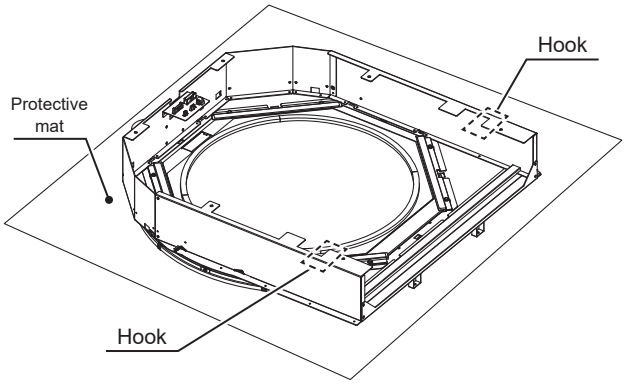

9 Clean the front of the LCD monitor and the back of the touch sensor.

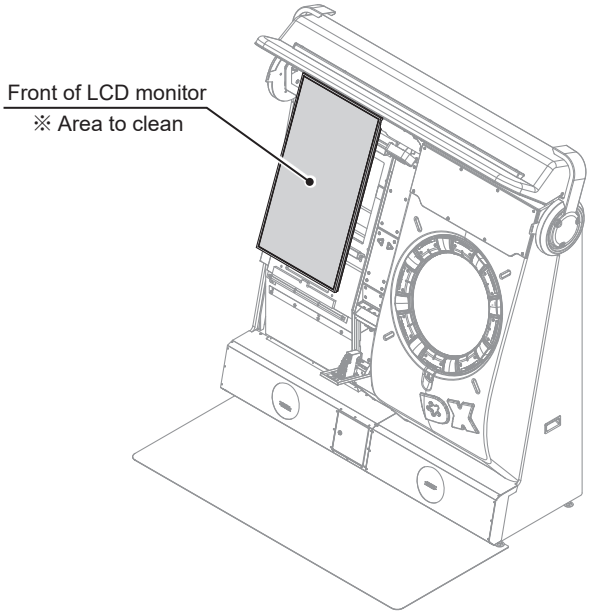

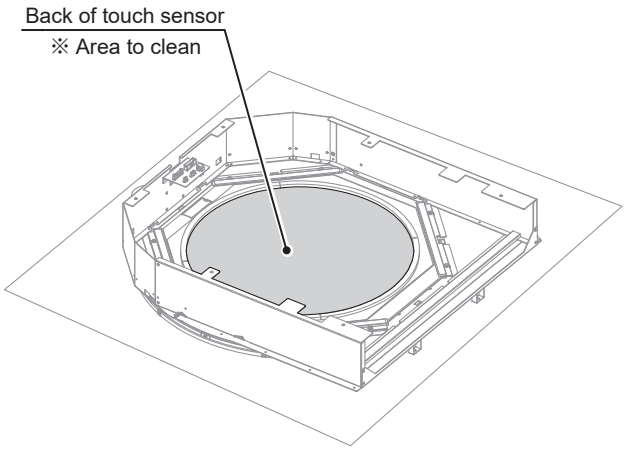

10 Install the switch base on the cabinet. Note the following points.

- Fit the uneven parts on the lower back of the switch base together and hook the hooks onto the hooking parts of the cabinet.
- Be careful not to pinch any wiring.
- Be careful not to pinch your hands.

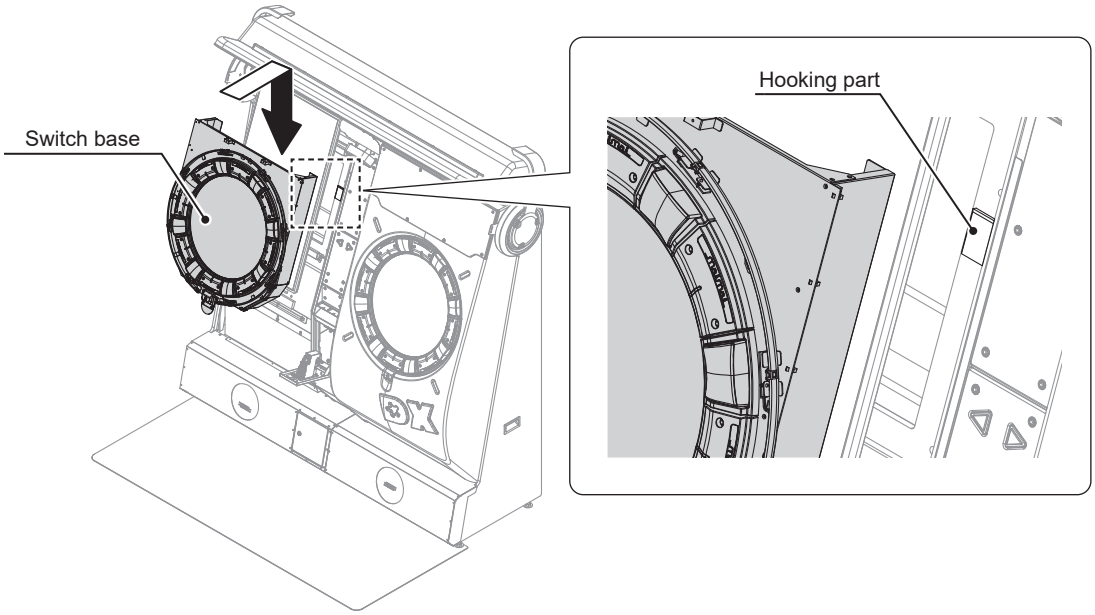

11 Refer to steps 3 to 6 and work in the reverse order.

12 Turn ON the sub power switch.

13 Check the operation of the touch sensor. <See Service Manual "3-5 Touch Sensor Test">

11-2 Adjusting the LCD Monitor

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Do not touch any parts other than those specified. This may cause electric shock, short circuit or fire.

⚠ CAUTION

Be careful not to pinch your fingers when opening, closing, installing or removing parts.

STOP
IMPORTANT

The various adjustment values are precisely adjusted at the factory. Do not change the adjustment values carelessly or make adjustments not specified in this manual. The display may not be shown correctly.

11-2-1 Accessing the Adjustment Board

This section is explained for the cabinet 1P side. The cabinet 2P side can be worked on in the same way.

■ Tools and equipment required for the work

	
Master key (supplied)	Phillips screwdriver (for M4)

1 Unlock with the master key and open the selector door.

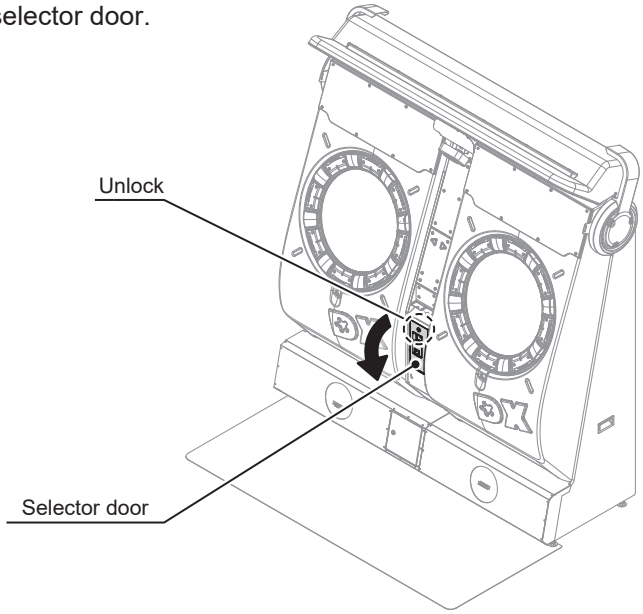

2 Turn OFF the sub power switch.

3 Remove the 2 truss-head screws and remove back door 1P (upper).
When working on the cabinet 2P side, remove the 2 truss-head screws. Unlock with the master key and remove back door 2P (upper).

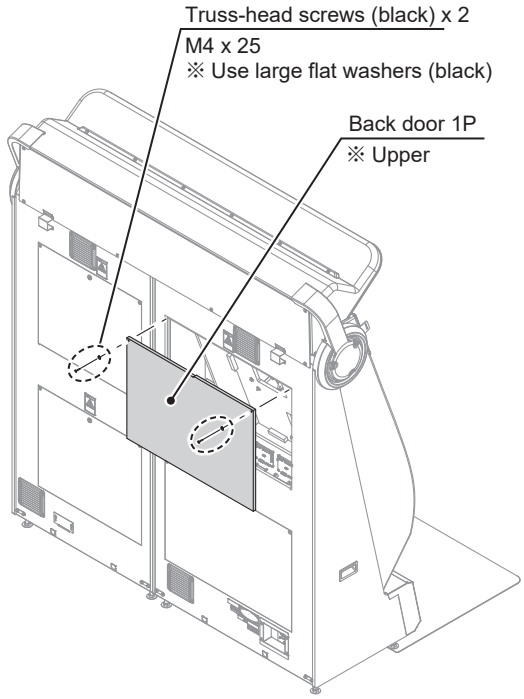

Cabinet 1P side

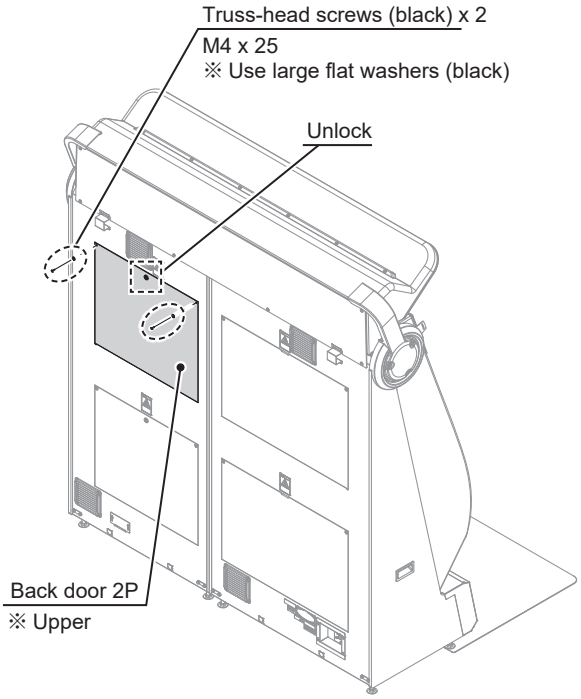

Cabinet 2P side

4 Untie 1 cord clamp.

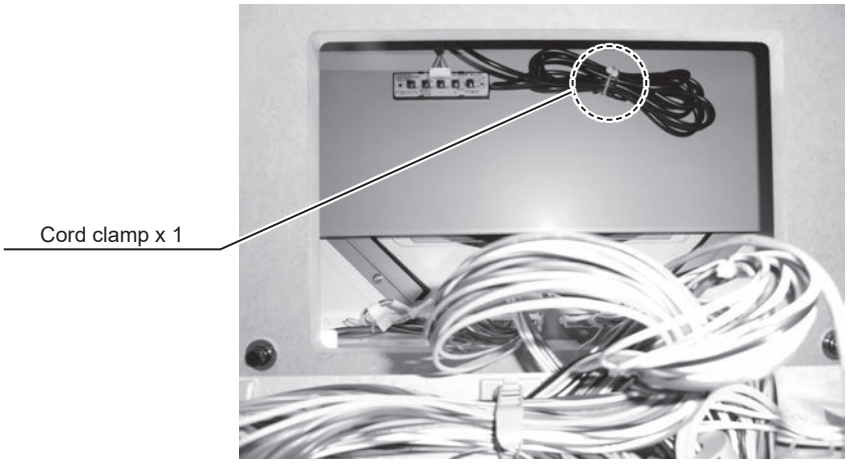

Cabinet rear side (inside)

5 Press the 2 tabs of the adjustment board and remove the adjustment board from the back of the LCD monitor.

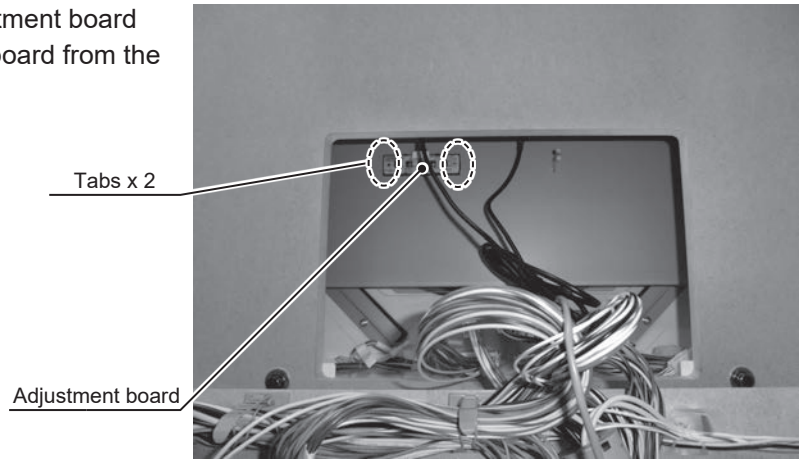

Cabinet rear side (inside)

6 Pass the wiring of the adjustment board through the notch in the opening from which the back door (upper) was removed.

※Seen from the rear, the notch is at the "lower right of the opening" on the cabinet 1P side and at the "lower left of the opening" on the cabinet 2P side.

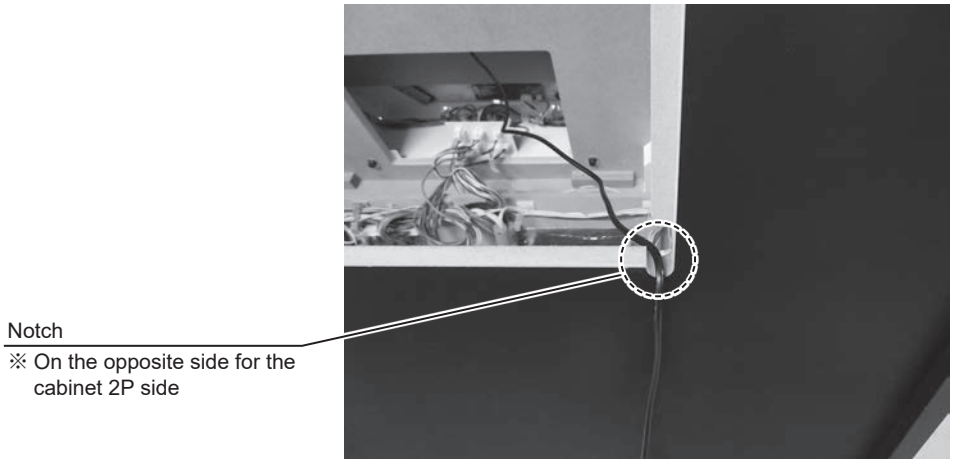

Cabinet rear side

7 Install back door 1P (upper) with 2 truss-head screws. Be careful not to pinch any wiring.

When working on the cabinet 2P side, install back door 2P (upper). Lock it with the master key and secure it with 2 truss-head screws.

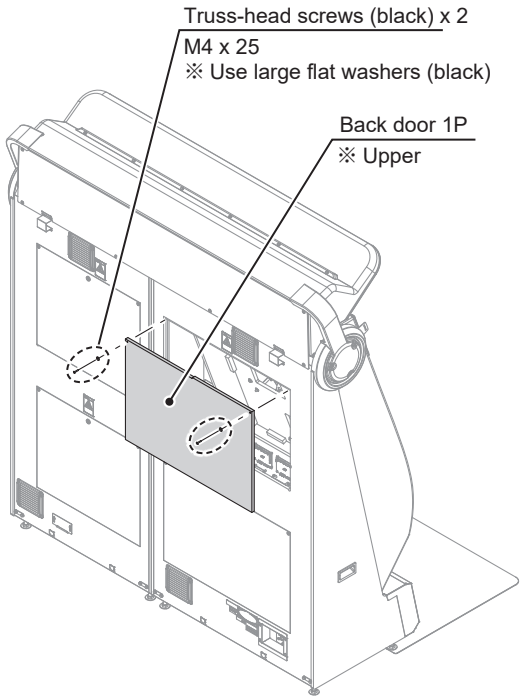

Cabinet 1P side

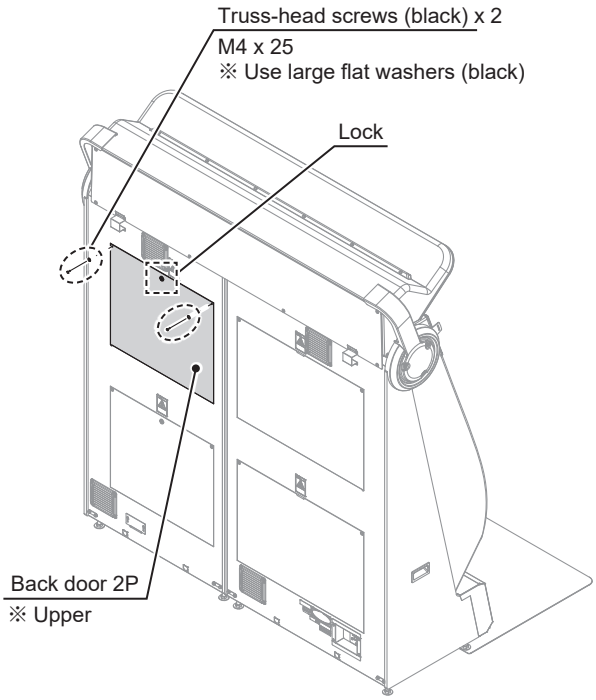

Cabinet 2P side

8 Turn ON the sub power switch and adjust the LCD monitor.

11-2-2 Adjustment Procedure

This section explains the basic operations for making various adjustments.

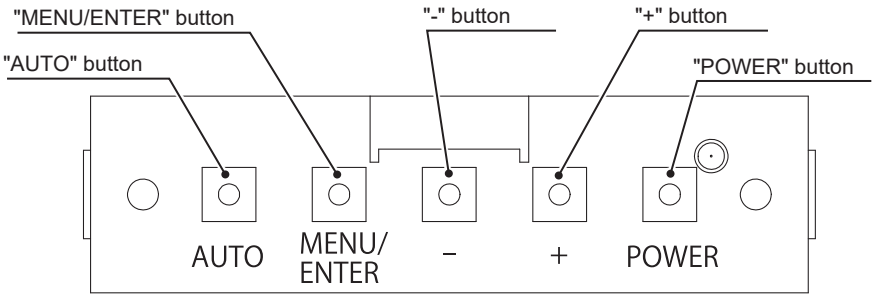

Adjustment board

AUTO	Cancel
MENU/ENTER	Display OSD menu screen / confirm item / switch page
-	Decrease the value of the selected setting / move up / display contrast screen
+	Increase the value of the selected setting / move down / display brightness screen
POWER	This button is not used.

1 Press the "MENU/ENTER" button to display the OSD menu screen.

2 Select the item to adjust or set with the "+" and "-" buttons and confirm it with the "MENU/ENTER" button; the selection bar turns yellow.

3 Adjust the value of each item with the "+" and "-" buttons.

4 After adjusting or setting, press the "AUTO" button to exit the OSD menu screen; the settings are then saved.

■ **Description of each item**

LUMINANCE	Adjusts the contrast and brightness of the screen.
Contrast	Adjusts the contrast of the screen. (Default: 50, setting range: 0 to 100)
Brightness	Adjusts the brightness of the screen. (Default: 100, setting range: 0 to 100)
IMAGE ADJUST	Not used on this model.
COLOR ADJUST	Adjusts the color intensity of the screen.
Color Temp	Adjusts the color temperature of the screen. (Use the setting 6500.)
Color Adjust	Not used on this model.
SETUP MENU	Adjustments related to the OSD menu screen.
Language	Sets the language used on the OSD menu screen. (Use the setting English.)
OSD H Position	Adjusts the horizontal position (H) of the OSD menu screen. (Default: 50, setting range: 0 to 100)
OSD V Position	Adjusts the vertical position (V) of the OSD menu screen. (Default: 50, setting range: 0 to 100)
OSD Timer	Not used on this model.
OSD Transparency	Adjusts the density of the OSD menu screen. (Default: 0, setting range: 0 to 100)
RECALL	Not used on this model.
INFORMATION	Not used on this model.
INPUT SELECT	Selects the input signal. (Use the setting Auto Search.)

Operation example

As examples, the operations for brightness adjustment (Brightness) and OSD horizontal position adjustment (OSD H Position) are introduced. Refer to the examples to set the other items as well.

■ **Brightness Adjustment**

1 Press the "+" button to display the brightness screen.

Brightness screen

2 Adjust the value with the "+" and "-" buttons.

3 After adjusting, press the "AUTO" button to close the screen.

■ OSD Horizontal Position Adjustment (OSD H Position)

1 Press the "MENU/ENTER" button to display the OSD menu screen.

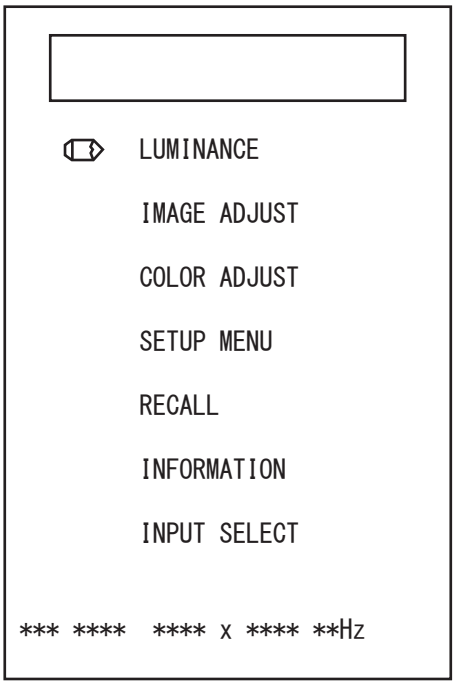

OSD menu screen

2 Press the "+" and "-" buttons to select "SETUP MENU" and press the "MENU/ENTER" button to display the setup menu screen.

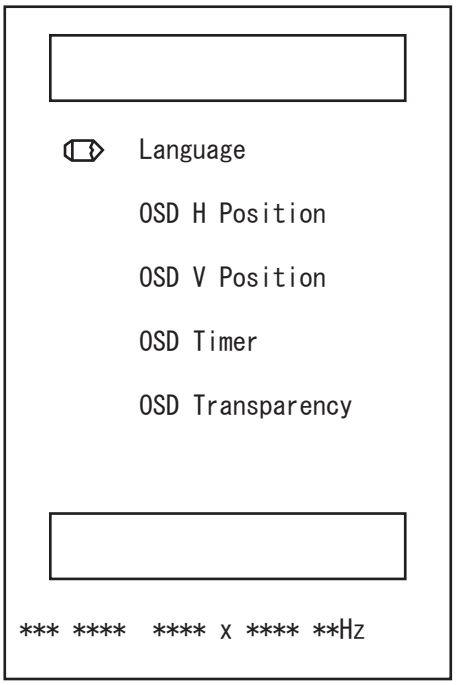

Setup menu screen

am.sega.jp

3 Select "OSD H Position" with the "+" and "-" buttons and press the "MENU/ENTER" button to display the OSD horizontal position screen.

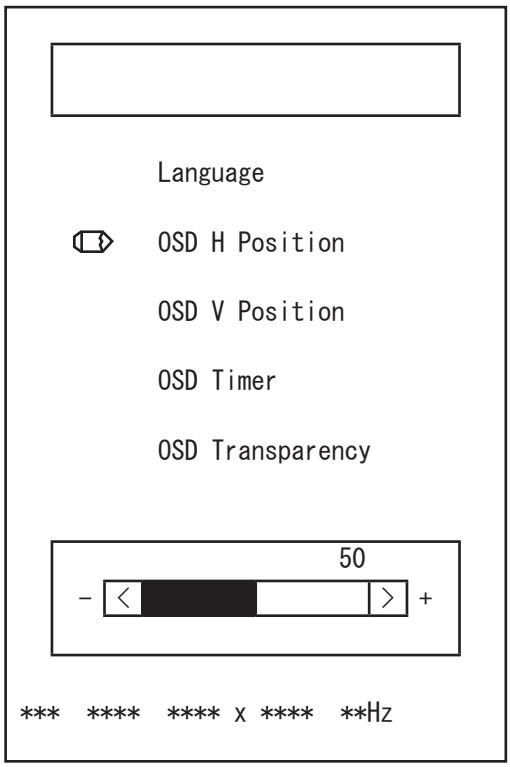

OSD horizontal position screen

4 Adjust the value with the "+" and "-" buttons.

5 After adjusting, press the "AUTO" button 3 times to close the OSD menu screen.

11-3 Replacing the LCD Monitor

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Turn off the power before starting work. Otherwise electric shock, short circuit or fire may result.
- Be careful not to damage the wiring. This may cause electric shock, short circuit or fire.
- Do not touch any parts other than those specified. This may cause electric shock, short circuit or fire.

⚠ CAUTION

- Be careful not to pinch your fingers when opening, closing, installing or removing parts.
- After replacing the LCD monitor, adjust the screen properly. Do not operate with screen flicker or distortion left uncorrected. A badly adjusted screen may cause customers to feel dizzy, get headaches or otherwise become unwell.
- If all the fasteners (screws, nuts, washers, etc.) fixing a part are removed, the part may fall and cause an accident. Remove the fasteners while supporting the part firmly.
- Handle plastic parts with care. Parts may break and cause injury from fragments or cracks.
- When fixing plastic parts, be careful not to overtighten screws and nuts. Parts may break and cause injury from fragments or cracks.
- Handle glass parts with care. Parts may break and cause injury from fragments or cracks.
- Take care also in how you place glass parts. If you lean them against a wall, or place them on a surface with protrusions or small stones, they may break under their own weight and the fragments may cause injury.

STOP

IMPORTANT

- Adjust the touch panel after replacement. Poor operability may cause unnecessary trouble with players.
- Static electricity from the human body may damage electronic components on IC boards. Before handling IC boards, discharge static electricity from your body, for example by touching a grounded metal surface.

■ Tools and equipment required for the work

 Master key (supplied)	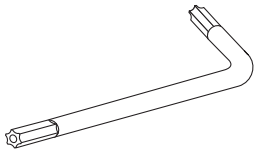 Tamper-proof wrench (for M4, supplied)	 Phillips screwdriver (for M4 and M5)	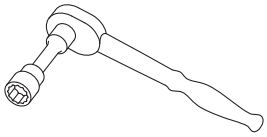 Socket wrench (10 mm across flats [for M6])
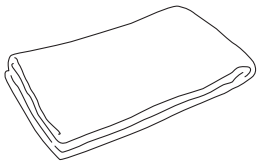 Protective mats x 2 (at least 1 m x 0.6 m)	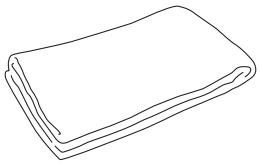 Soft cloth (flannel)	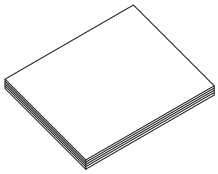 Service Manual (supplied)	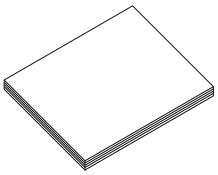 ALLS HX2 Service Manual (supplied)

1 Turn OFF the main power switch.

2 Refer to steps 3 to 5 of "11-1-2" and work in the same way.

3 Disconnect the 2 connectors. Loosen the fixing screws of the DVI connector before pulling it out.

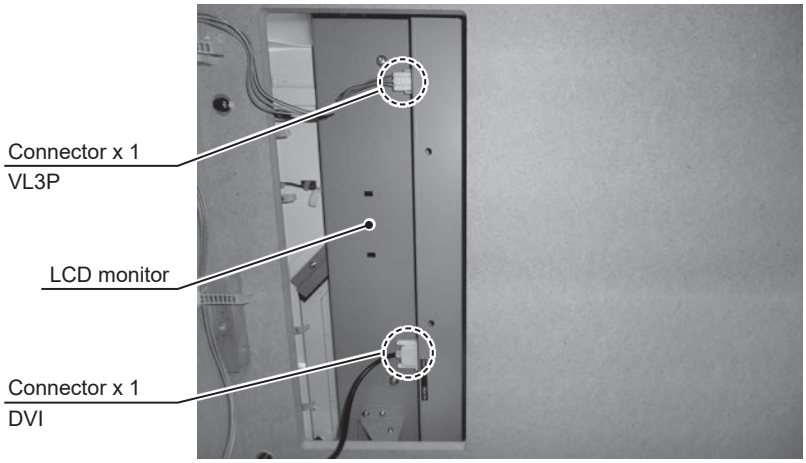

Cabinet rear side (inside)

4 Refer to steps 6 to 8 of "11-1-2" and work in the same way.

5 Lay the protective mat.

6 Remove the 4 hex bolts and remove the LCD monitor. With two or more workers supporting the LCD monitor, place it on the protective mat with the LCD face down.
When reinstalling, make sure the connector is on the right side as seen from the front of the cabinet.

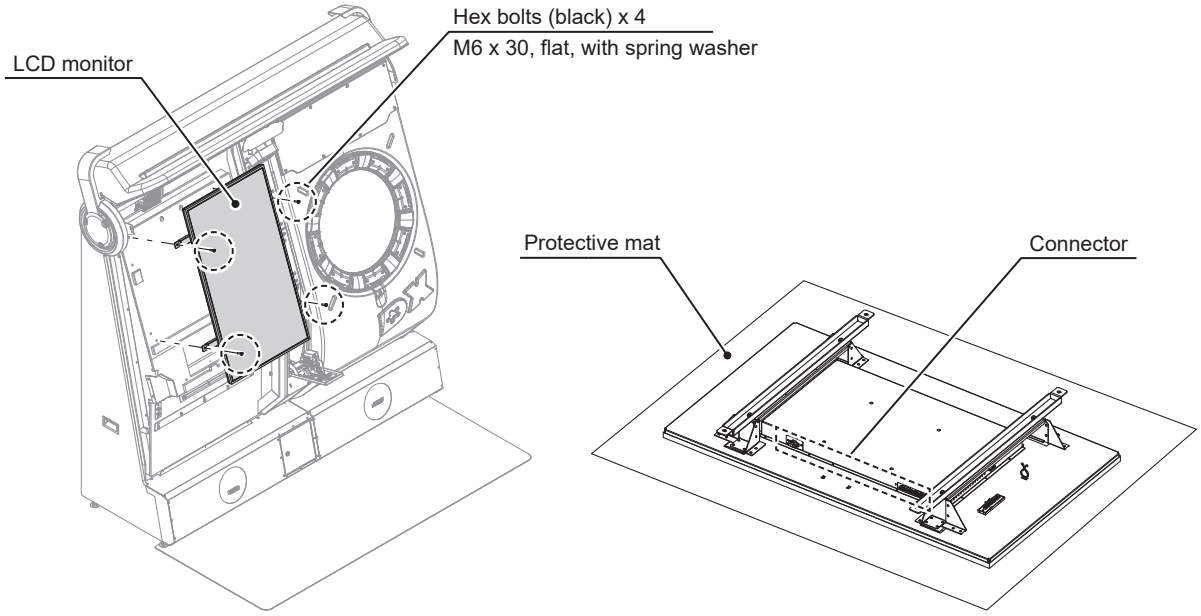

7 Remove the 4 screws and remove the 2 LCD monitor brackets from the LCD monitor.

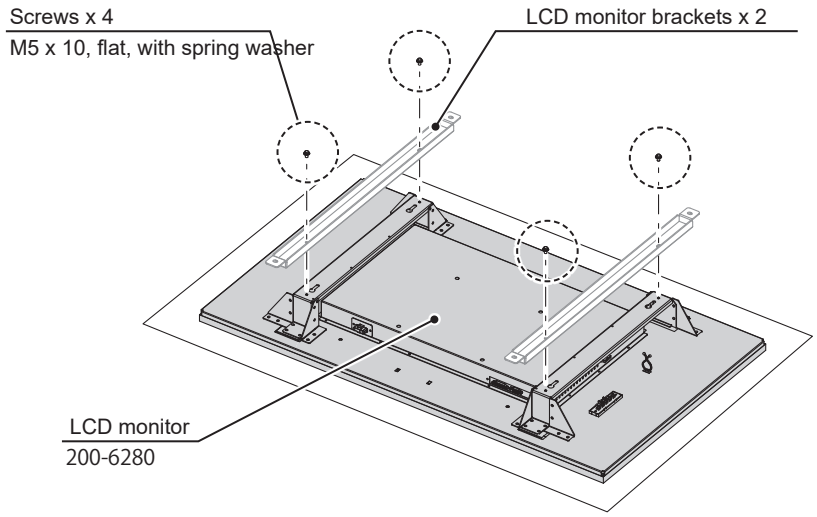

8 Refer to steps 2 to 6, install the replacement LCD monitor in the reverse order, and reassemble.

9 Turn ON the main power switch.

10 Adjust the screen position. <See Service Manual "3-4 Monitor Test">

11 Adjust the screen colors. <See ALLS HX2 Service Manual "3-4 Monitor Test">

11-4 Replacing the Touch Sensor Unit

■ Tools and equipment required for the work

 Master key (supplied)	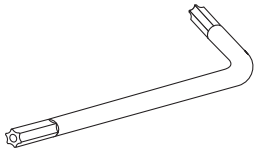 Tamper-proof wrench (for M4, supplied)	 Phillips screwdriver (for M4)	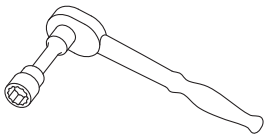 Socket wrench (10 mm across flats [for M6])
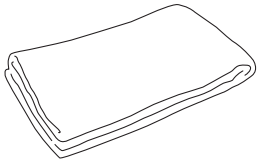 Protective mat (at least 1 m x 0.6 m)	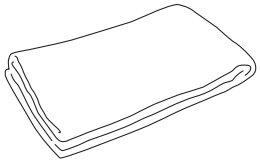 Soft cloth (flannel)	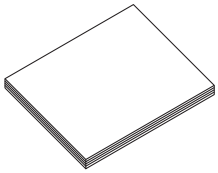 Service Manual (supplied)	

1 Turn OFF the main power switch.

2 Refer to steps 3 to 8 of "11-1-2" and work in the same way.

3 Disconnect the 2 connectors.

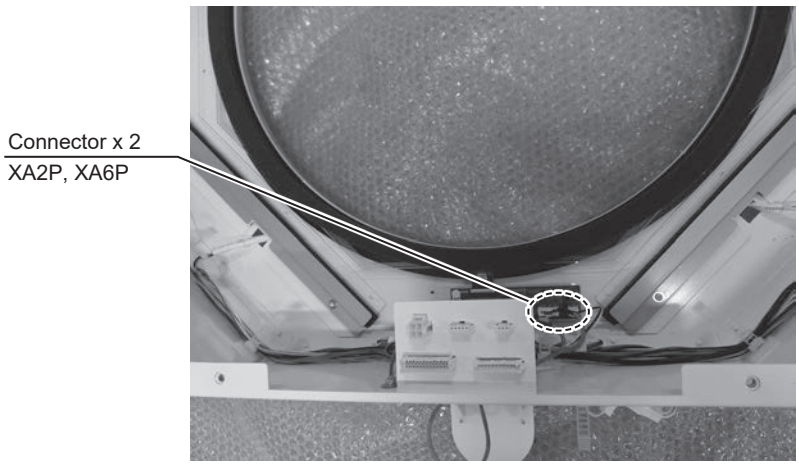

Switch base

4 Remove the 8 screws and remove the 4 touch sensor sashes and the touch sensor unit.

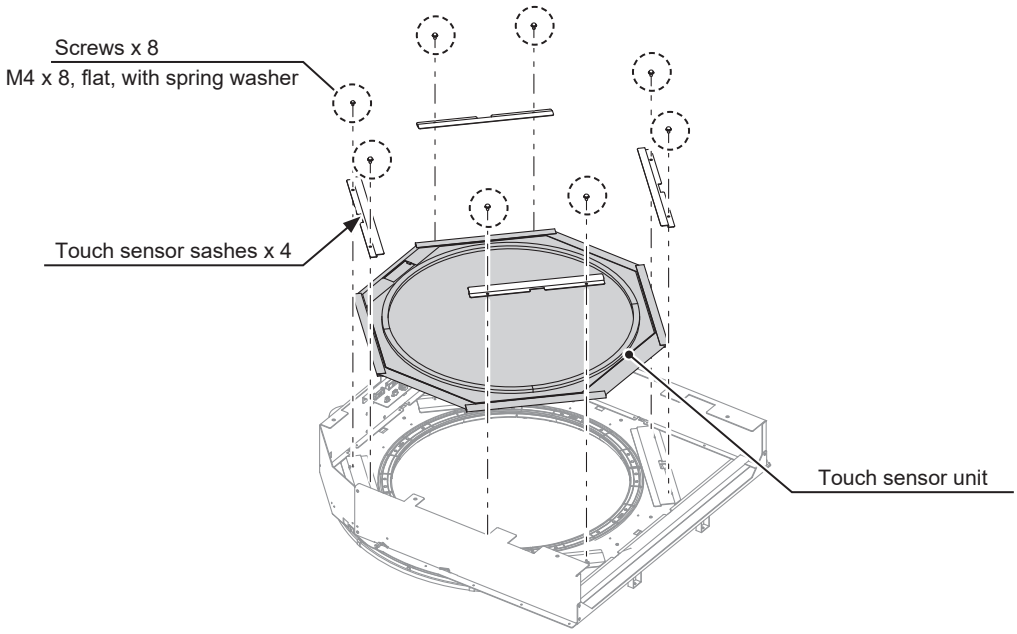

5 Install the 4 touch sensor sashes and the replacement touch sensor unit with the 8 screws. Make sure the touch sensor board is on the connector panel side.

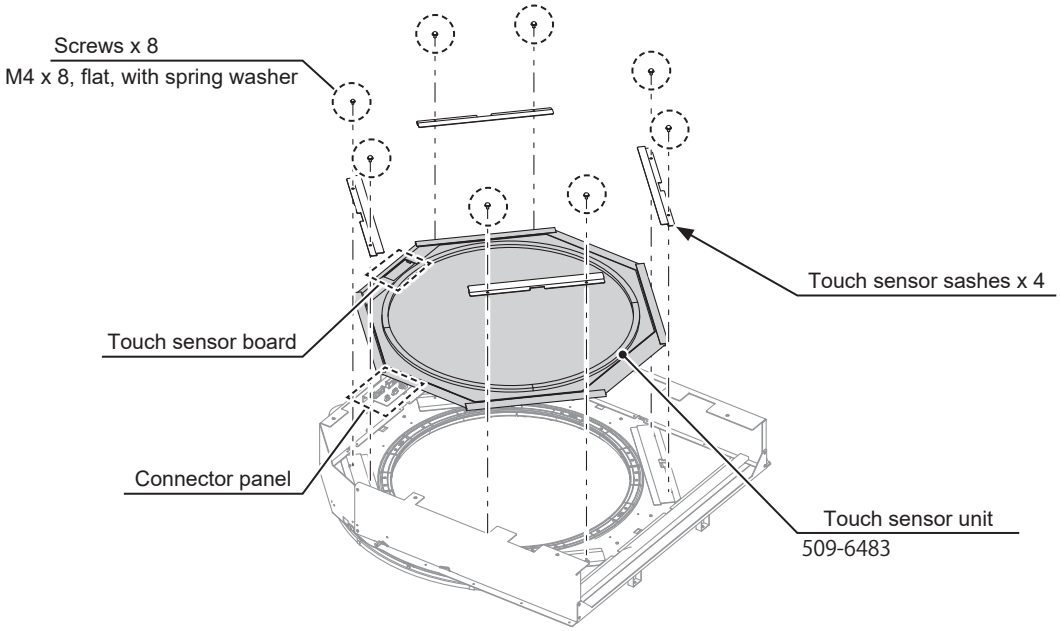

6 Connect the 2 connectors.

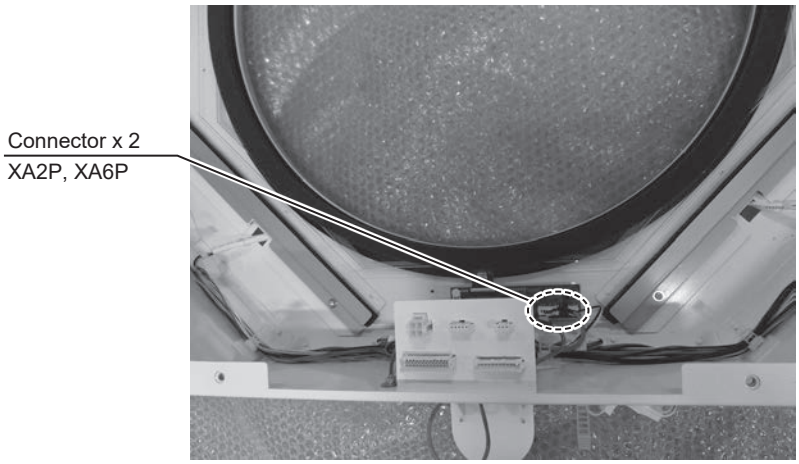

Switch base

7 Refer to steps 3 to 8 of "11-1-2" and work in the reverse order.

8 Turn ON the main power switch.

9 Check the operation of the touch sensor. <See Service Manual "3-5 Touch Sensor Test">

11-5 Replacing the Headphone Jack Board

■ Tools and equipment required for the work

	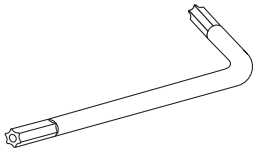		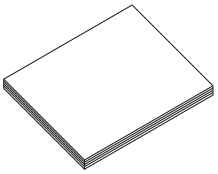
Master key (supplied)	Tamper-proof wrench (for M4, supplied)	Phillips screwdriver (for M4)	Service Manual (supplied)

1 Refer to steps 1 to 3 of "11-1-2" and work in the same way.

2 Remove the 4 screws, remove the headphone jack unit, and disconnect 1 connector. Be careful not to pull too hard on the wiring connected to the headphone jack unit.

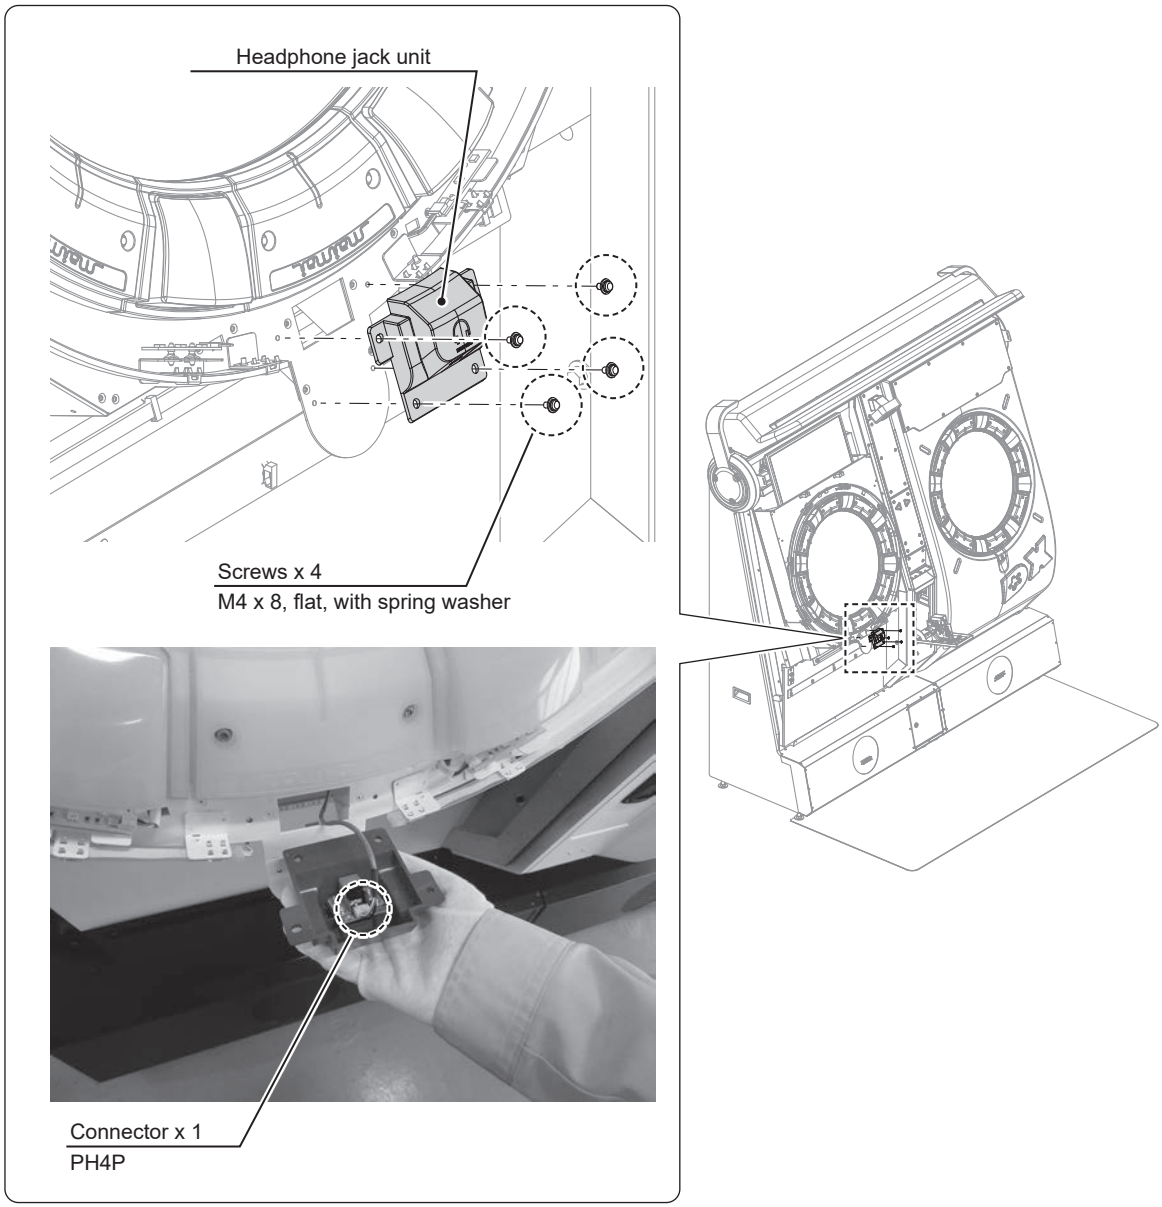

3 Remove the 4 screws and remove the headphone jack holder and the headphone jack board.

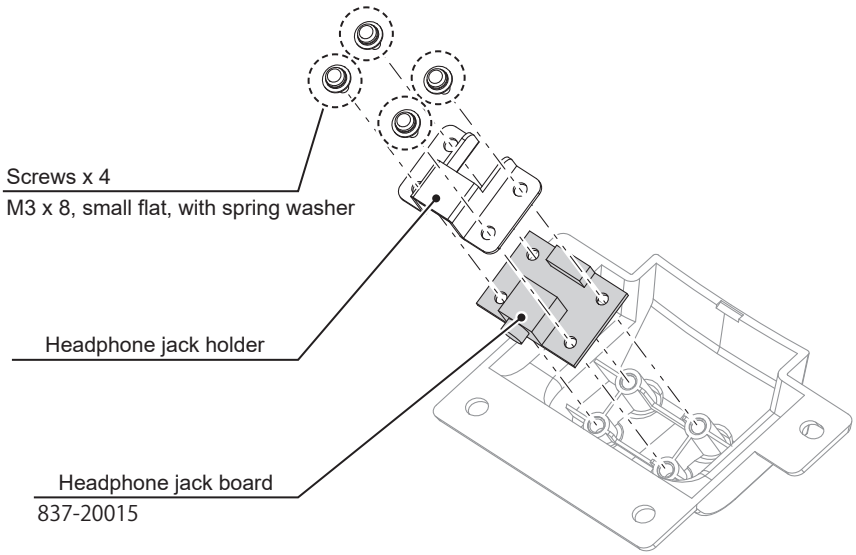

4 Refer to steps 2 and 3, install the replacement headphone jack board in the reverse order, and reassemble.

5 Install the front cover with the 5 tamper-proof screws. Be careful not to damage the LED board, LED tape or wiring on the cabinet side.

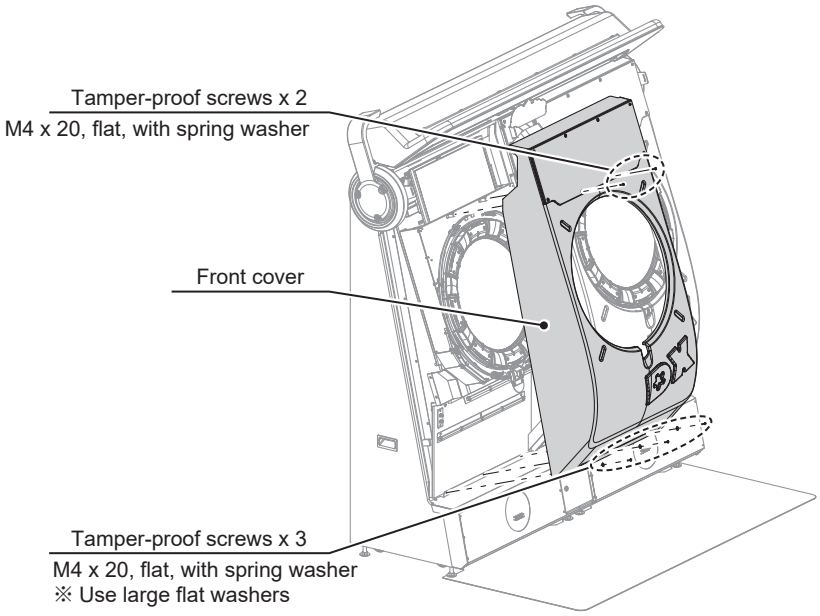

6 Turn ON the sub power switch.

7 Connect headphones to the headphone jack and check that sound is output. <See Service Manual "4-1 Speaker Test">

12 Buttons

This section is explained using button 1 on the cabinet 1P side. The other buttons can be worked on in the same way.

12-1 Replacement Procedure

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Turn off the power before starting work. Otherwise electric shock, short circuit or fire may result.
- Be careful not to damage the wiring. This may cause electric shock, short circuit or fire.

■ Tools and equipment required for the work

	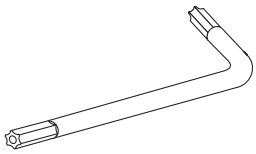		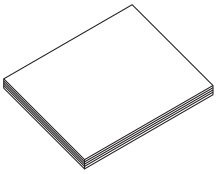
Master key (supplied)	Tamper-proof wrench (for M4, supplied)	Phillips screwdriver (for M4)	Service Manual (supplied)

1 Unlock with the master key and open the selector door.

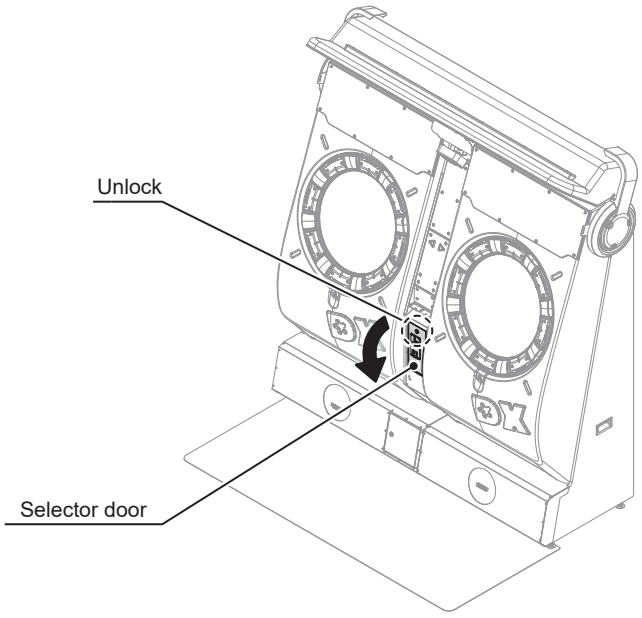

2 Turn OFF the sub power switch.

3 Remove the 4 tamper-proof screws and remove the switch covers on both sides of button 1. When reinstalling, be careful not to pinch any wiring.

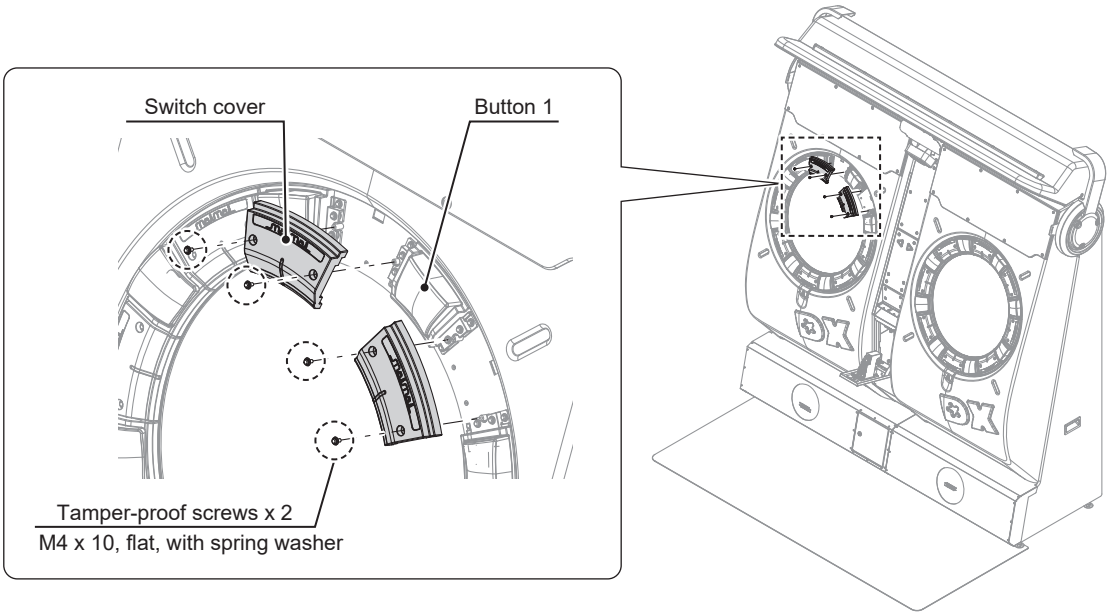

4 Untie 1 cord clamp.

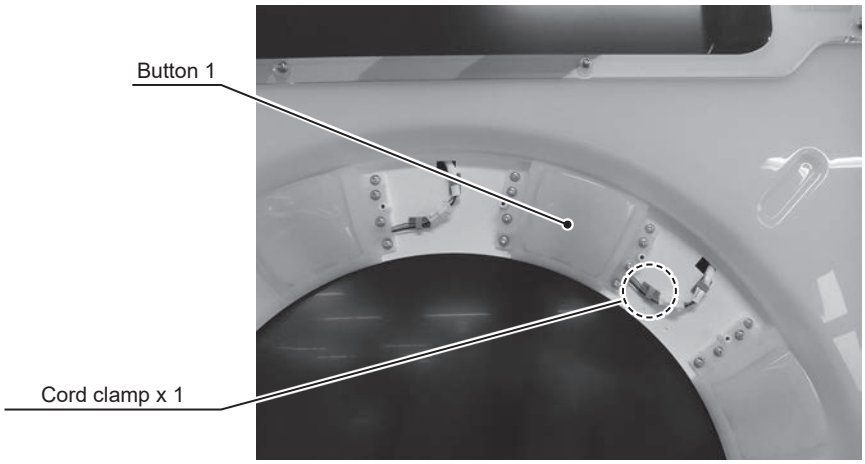

5 Disconnect 1 connector.

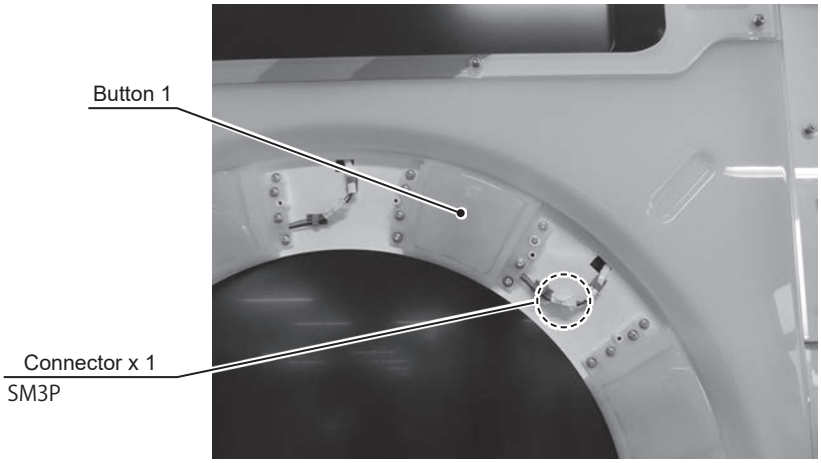

6 Remove the 4 screws and remove button 1.

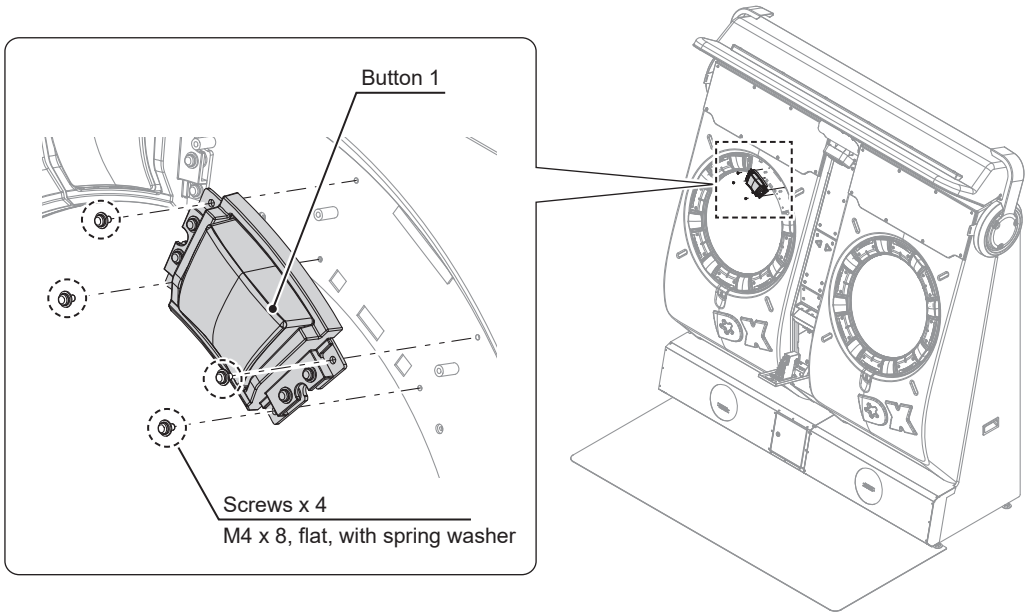

7 Install the replacement button 1 with the 4 screws. Install button 1 pushed toward the center of the LCD monitor.

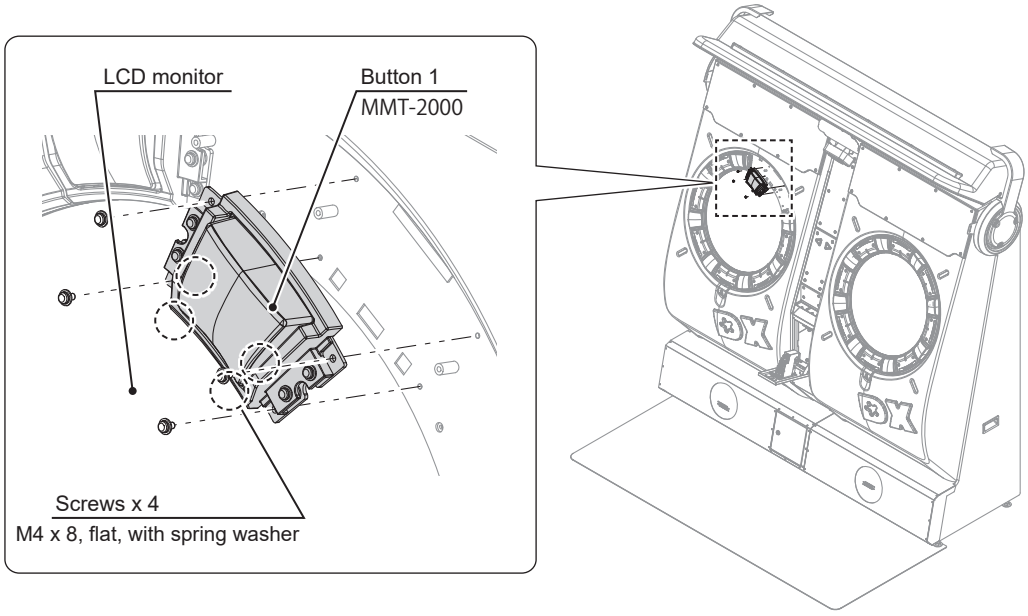

8 Refer to steps 3 to 5, install the replacement button 1 in the reverse order, and reassemble.

9 Turn ON the sub power switch.

10 Check that the button works. <See Service Manual "3-2 Input Test">

12-2 Greasing

⚠ CAUTION

- Inhaling grease is harmful. Do not work in poorly ventilated places.
- Grease in the eyes may cause inflammation. Use protective goggles or similar and take care to keep it out of your eyes. If it gets into your eyes, rinse with clean water for at least 15 minutes and see a doctor.
- Grease on the skin may cause inflammation. Use protective gloves or similar and take care to keep it off your skin. If it touches your skin, wash thoroughly with soap and water.

STOP

IMPORTANT

- Use the specified grease. Using any other grease may damage parts.
- Do not apply grease anywhere other than the specified parts. It may cause malfunction or change the material properties of parts.
- The specified greasing interval is only a guideline. If there is an abnormality such as squeaking, apply grease to the specified parts.

■ Tools and equipment required for the work

 Master key (supplied)	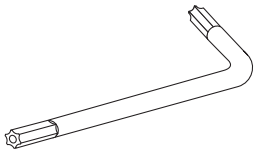 Tamper-proof wrench (for M4, supplied)	 Phillips screwdriver (for M4)	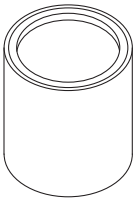 Grease
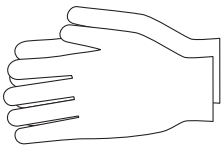 Protective gloves			

Apply grease as follows once every 3 months.
Use Solvest 248 (part number: 090-0070) as the grease.

1 Refer to steps 1 to 6 of "12-1" and work in the same way.

2 Remove the 4 screws and remove the switch bezel.

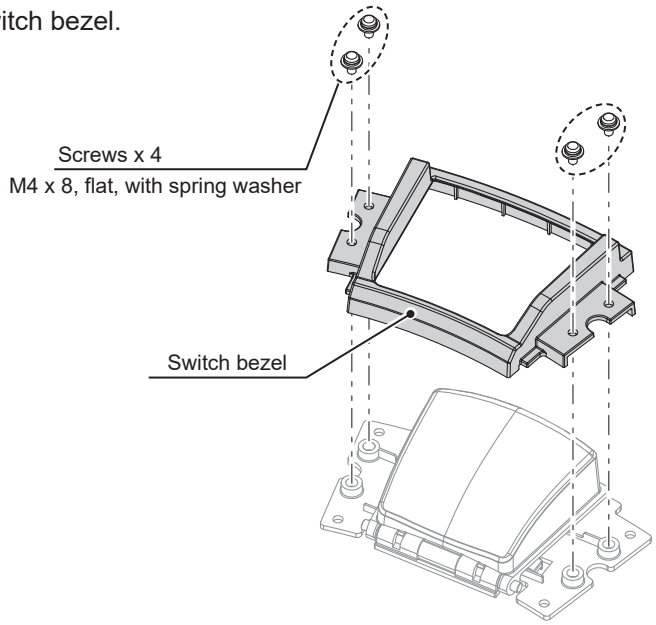

3 Open the switch button and apply grease evenly to the spring, as if wiping it on. Be careful not to apply too much grease, and do not get grease on the sensor part. If grease gets on the sensor part, wipe it off cleanly with a soft cloth.

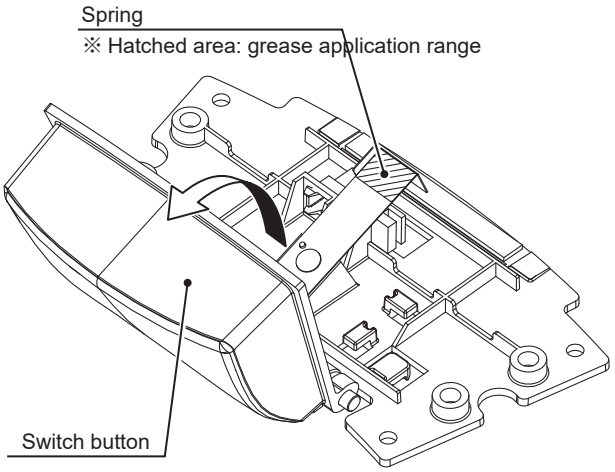

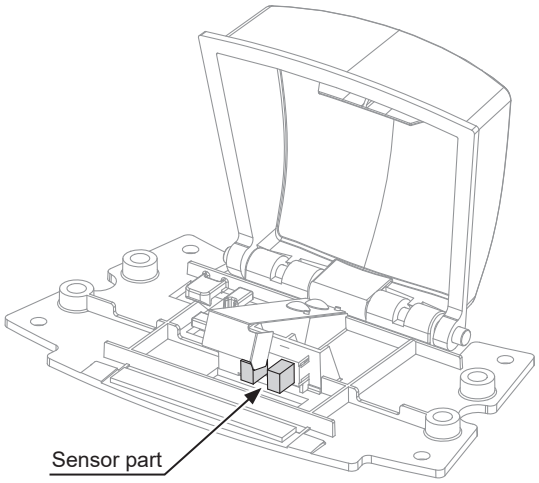

4 Close the switch button and install the switch bezel with the 4 screws.

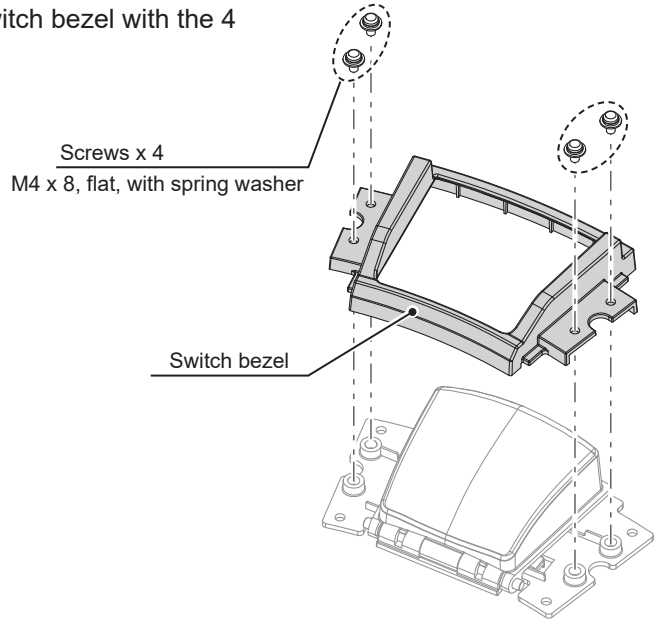

5 Refer to steps 3 to 6 of "12-1" and work in the reverse order.

6 Close the selector door and lock it with the master key.

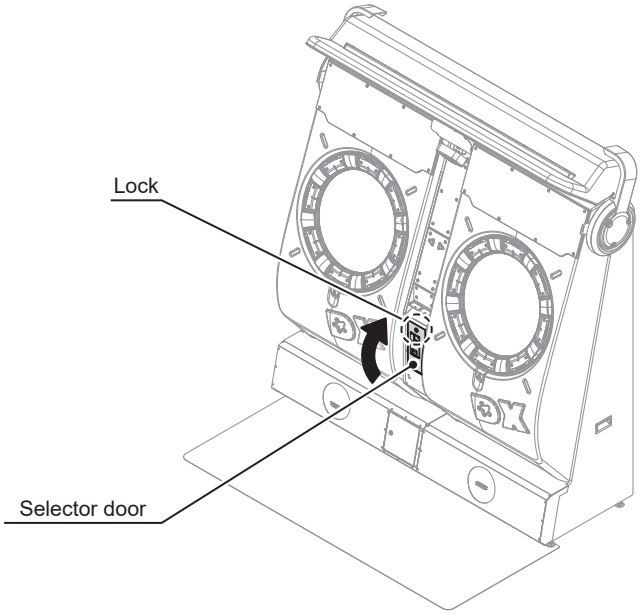

13 Coin Selector

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Turn off the power before starting work. Otherwise electric shock, short circuit or fire may result.

⚠ CAUTION

- Be careful not to pinch your fingers when opening, closing, installing or removing parts.
- Immediately after the power is turned off, the coin blocker solenoid of the coin selector remains hot, so do not touch it. It may cause burns.
  Also, work only after the coin blocker solenoid has cooled down completely.

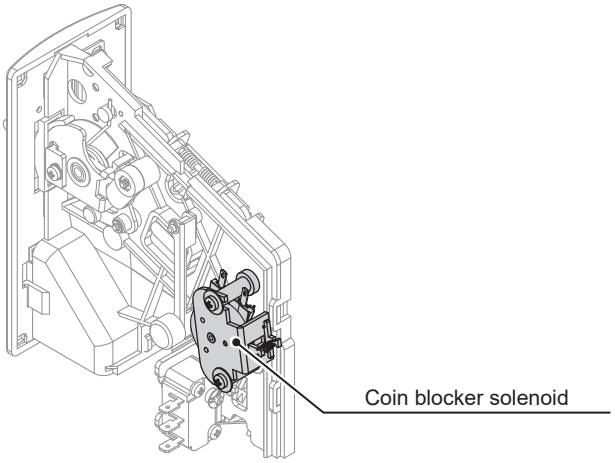

STOP

IMPORTANT

- Use a soft cloth or similar to clean the coin selector. If it is very dirty, wet the cloth with water or lukewarm water, wring it out well, and wipe. Do not use chemical detergents or chemicals.
- After servicing the coin selector, insert genuine coins in normal use and check that it works accurately.
- The coin selector is a precision instrument. Careless handling may damage parts or cause poor connections in electronic circuits.
- Do not use machine oil, grease, etc. on the coin selector.
- Do not open the door plate more than 90 degrees. Opening it more than 90 degrees puts excessive force on the hinge spring and may cause failure.
- Do not perform disassembly or remove parts other than as specified in this manual.

13-1 Coin Insertion Test

Check the following items once a month. At the same time, test the coin blocker in test mode. <See Service Manual "3-3 Output Test">

- ☐ Does the coin meter count correctly?
- ☐ Do coins drop into the cash box normally?
- ☐ Are coins inserted while pressing the return button returned to the coin return?
- ☐ Are coins other than the coins used returned?

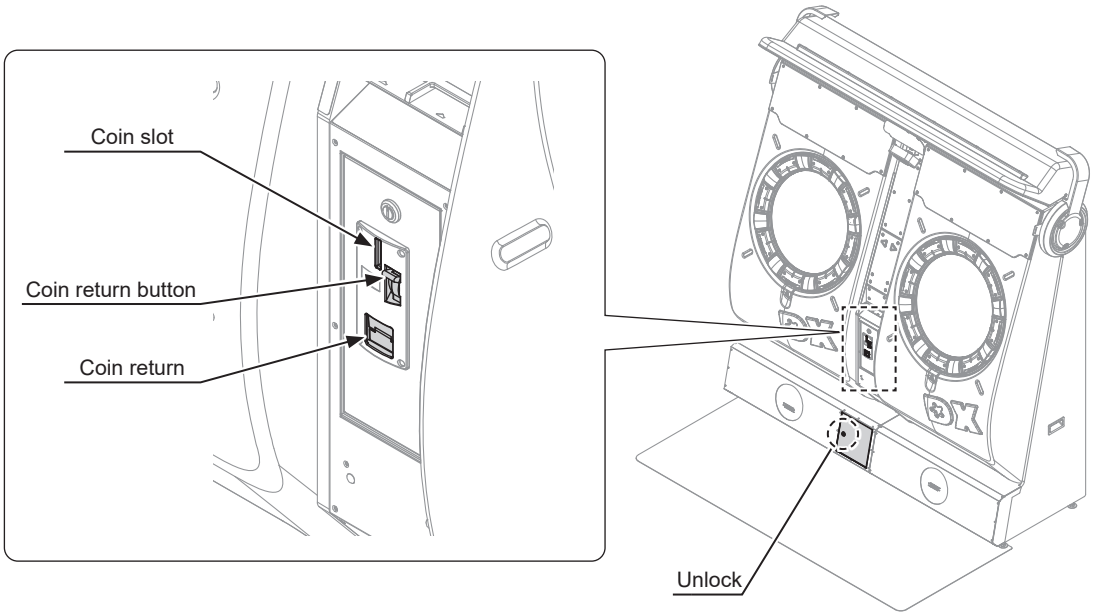

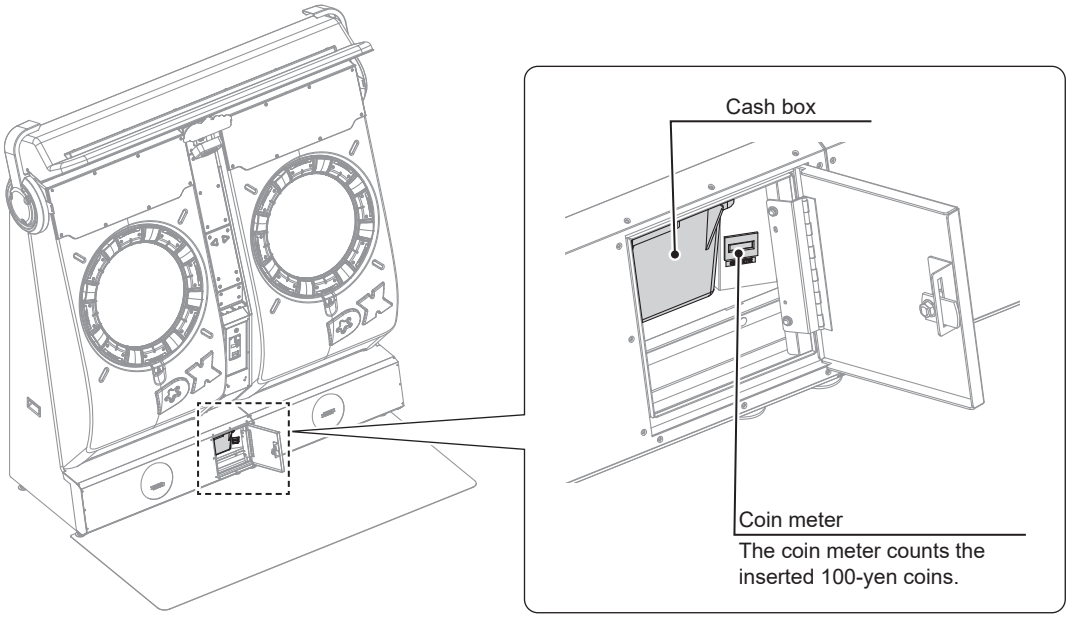

13-2 Removing the Coin Selector

■ Tools and equipment required for the work

 Master key (supplied)	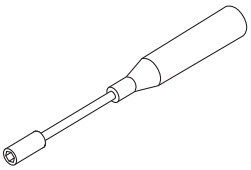 Box driver (7 mm across flats [for M4])

1 Unlock with the master key and open the selector door.

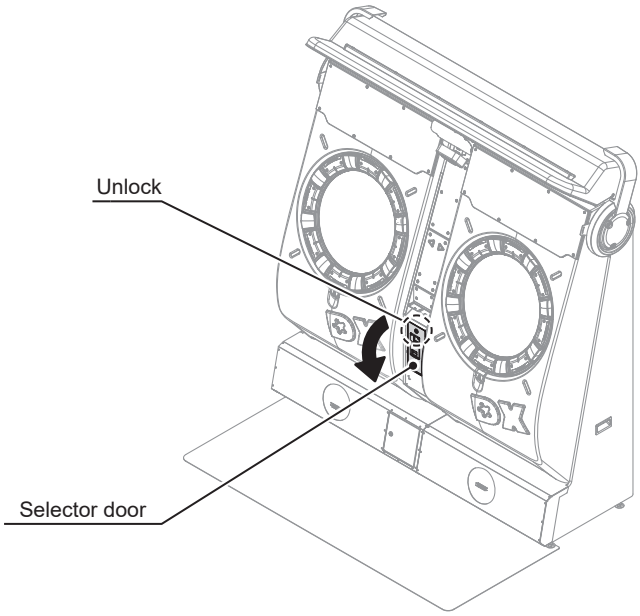

2 Turn OFF the sub power switch.

3 Untie 2 cord clamps.

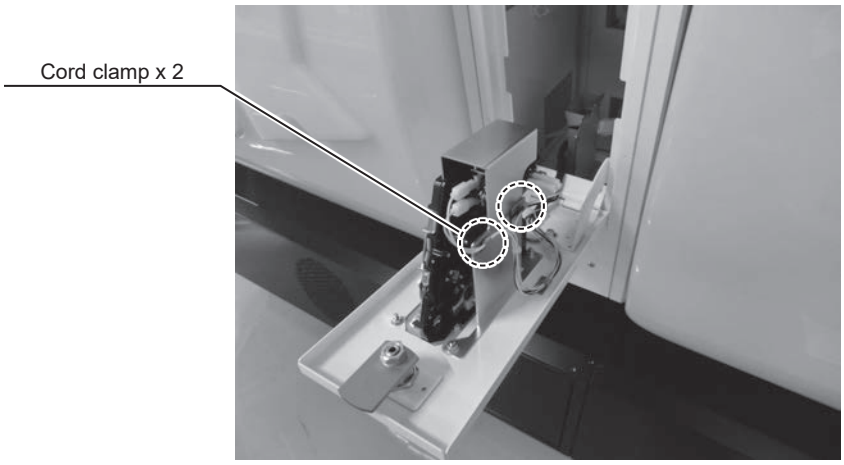

4 Disconnect the 4 connectors.

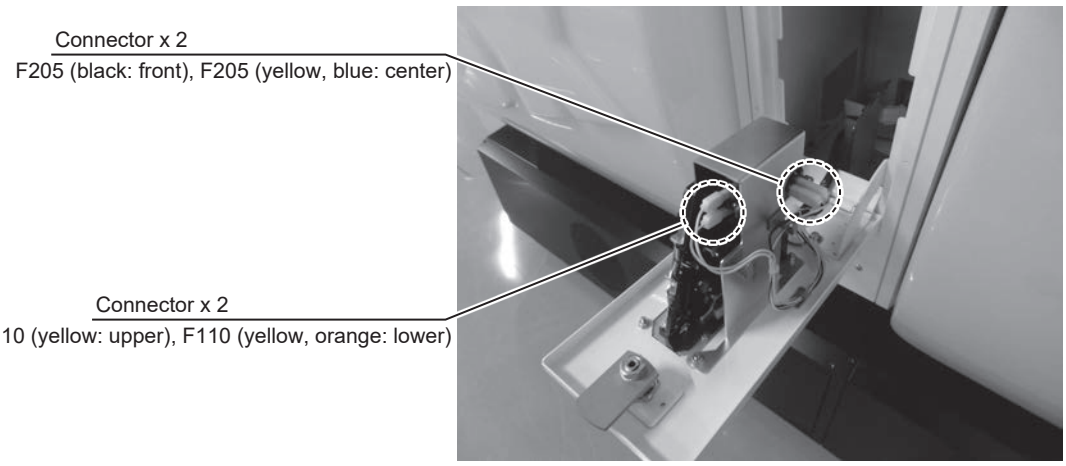

5 Remove the 2 carriage bolts and 2 flange nuts and remove the selector cover.

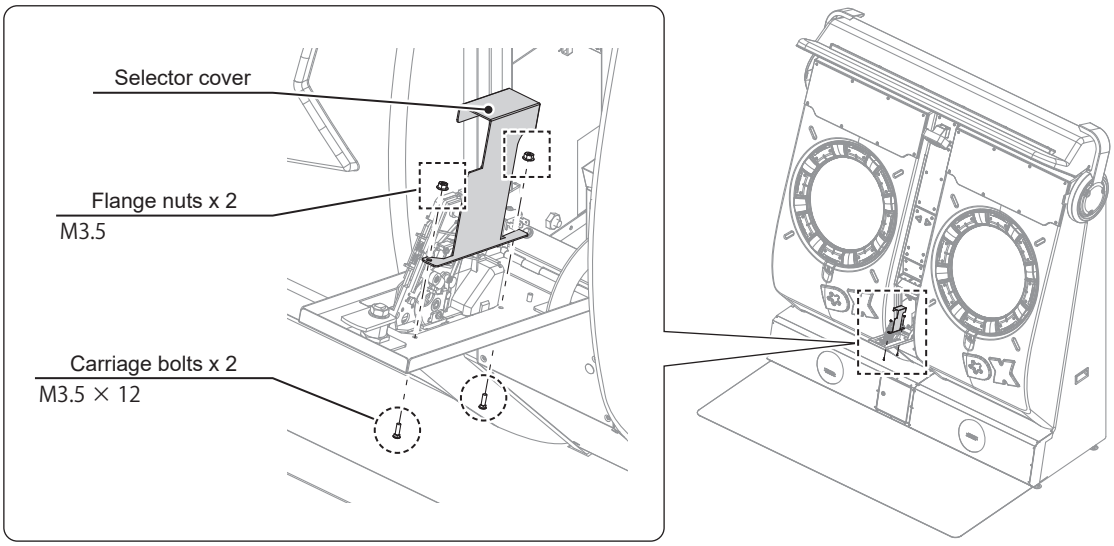

6 Remove the 2 carriage bolts and 2 flange nuts and remove the coin selector.

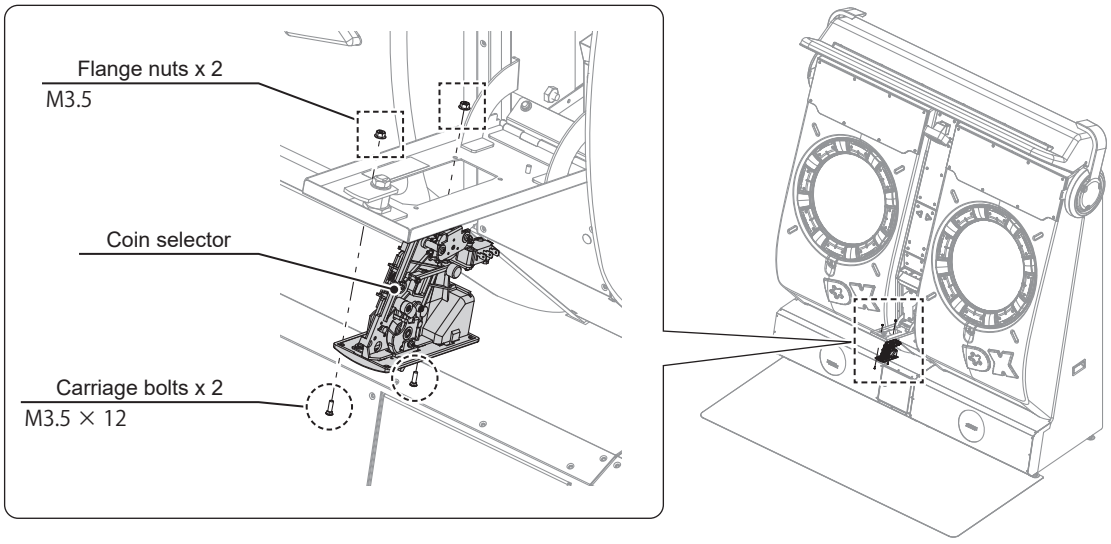

13-3 Cleaning the Coin Selector

■ Tools and equipment required for the work

 Master key (supplied)	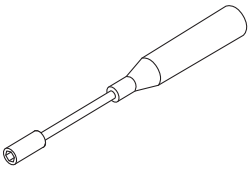 Box driver (7 mm across flats [for M4])	 Air spray	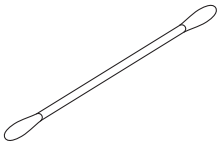 Cotton swab
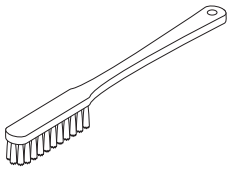 Soft brush	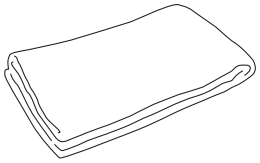 Soft cloth (flannel)		

Clean the coin selector once a month.

1 Refer to "13-2" and remove the coin selector in the same way.

2 Open the door plate and blow air to remove dust and dirt. Remove stubborn dirt with a cotton swab or a soft brush.

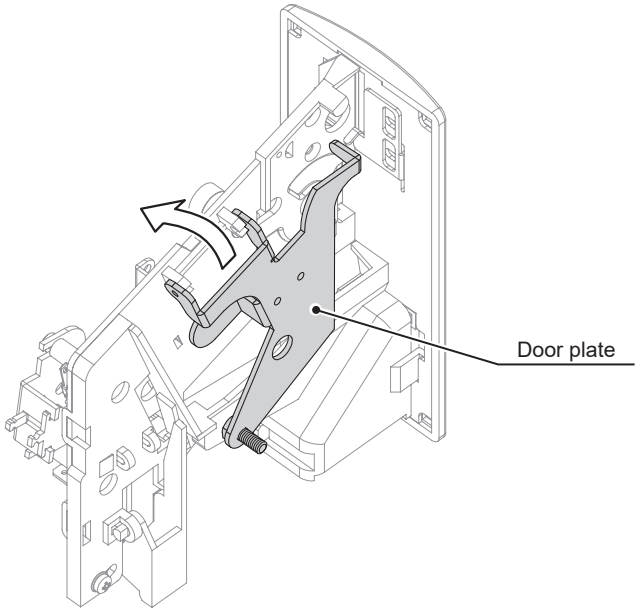

3 Wet a soft cloth with water or lukewarm water, wring it out well, and wipe off the dirt.

4 After wiping, dry the coin selector completely, for example by wiping it with a dry cloth.

5 Refer to "13-2" and install the coin selector in the reverse order.

13-4 Clearing Coin Jams

■ Tools and equipment required for the work



Master key
(supplied)

If coins are not returned even when the return lever is used, unlock with the master key and open the selector door. Open the door plate of the coin selector and remove the jammed coins.
<See "13-3" step 2>

After removing them, insert normal coins and check that the coin selector works correctly. <See 13-1>

14 Code Reader Camera

14-1 Replacing the Code Reader Camera Unit

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Turn off the power before starting work. Otherwise electric shock, short circuit or fire may result.
- For safe and reliable work, prepare a step stool with sufficient strength and stability. An unstable step stool may cause falls.
- While working on a step stool, take care not to fall and not to hit your head on the ceiling or the cabinet. This may cause serious injury.
- Be careful not to damage the wiring. This may cause electric shock, short circuit or fire.

⚠ CAUTION

If all the fasteners (screws, nuts, washers, etc.) fixing a part are removed, the part may fall and cause an accident. Remove the fasteners while supporting the part firmly.

■ Tools and equipment required for the work

 Master key (supplied)	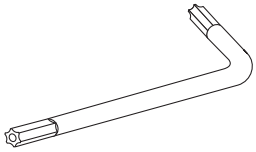 Tamper-proof wrench (for M4, supplied)	 Phillips screwdriver (for M3 and M4)	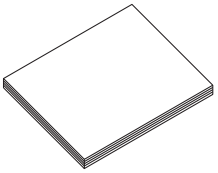 Service Manual (supplied)
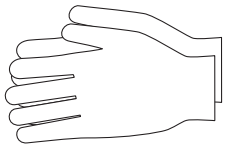 Gloves			

This section is explained using the code reader camera on the cabinet 1P side. The cabinet 2P side can be worked on in the same way.

1 Unlock with the master key and open the selector door.

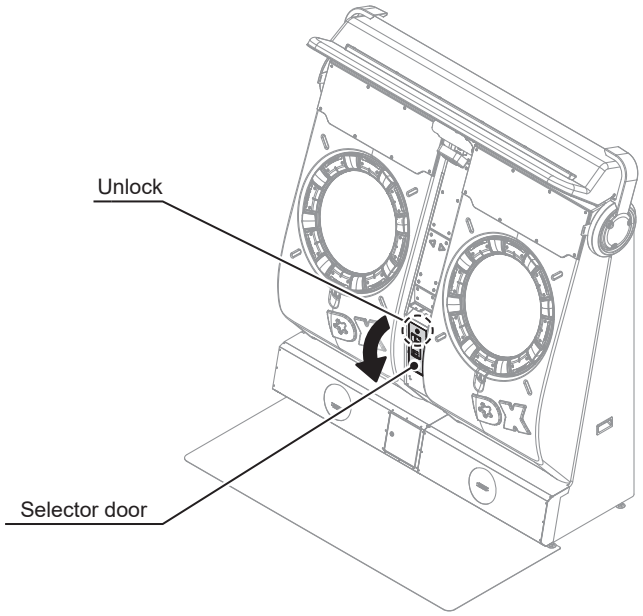

2 Turn OFF the sub power switch.

3 Remove the 4 tamper-proof screws, remove the select button panel unit, and disconnect 1 connector. Be careful not to pull too hard on the wiring connected to the select button panel unit.

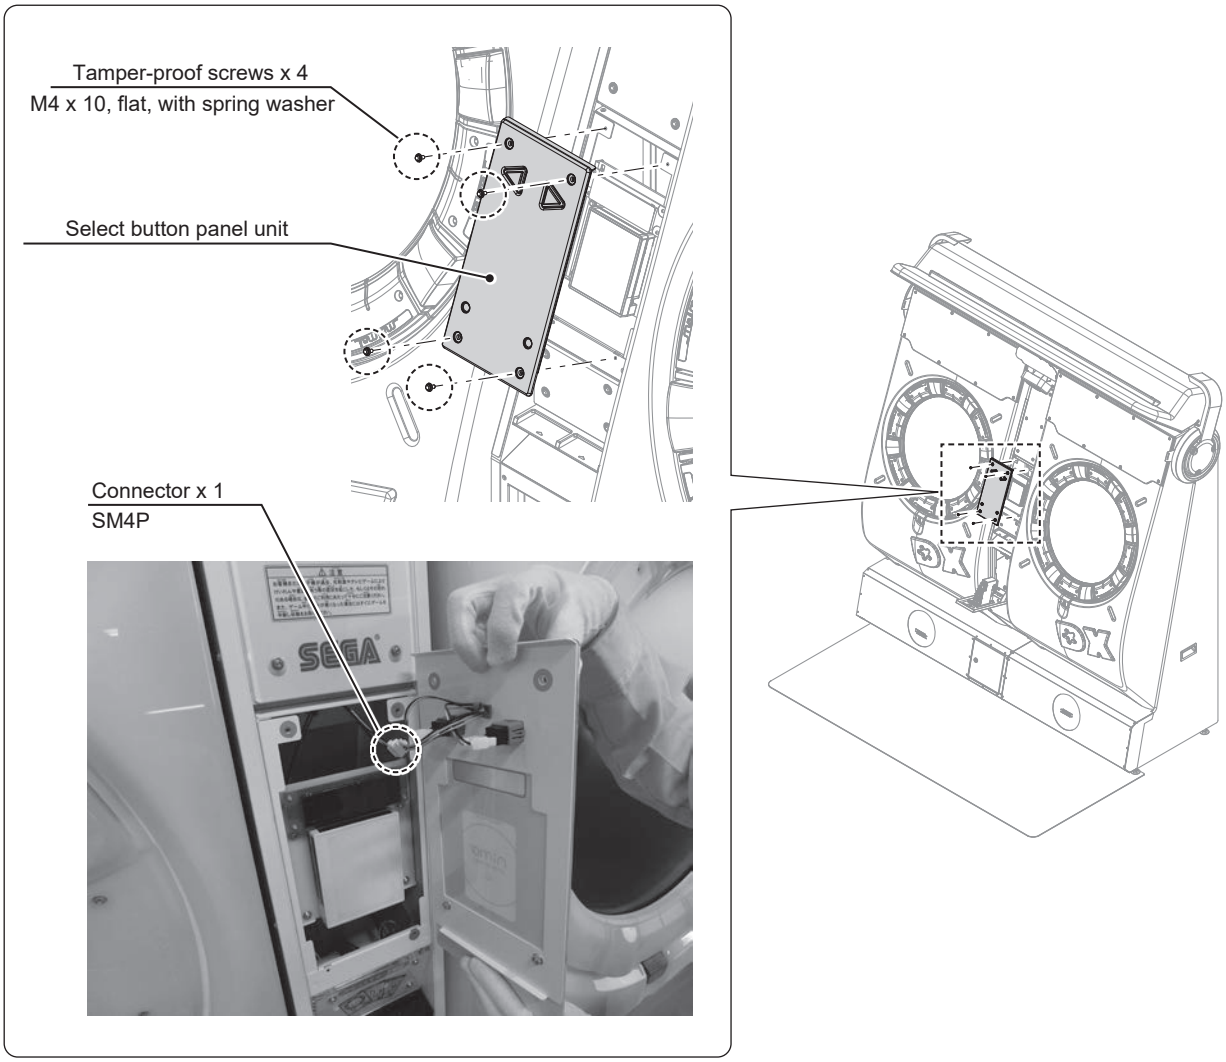

4 Remove the 4 screws, remove the touch-type card reader unit, and disconnect 2 connectors. Be careful not to pull too hard on the wiring connected to the touch-type card reader unit.

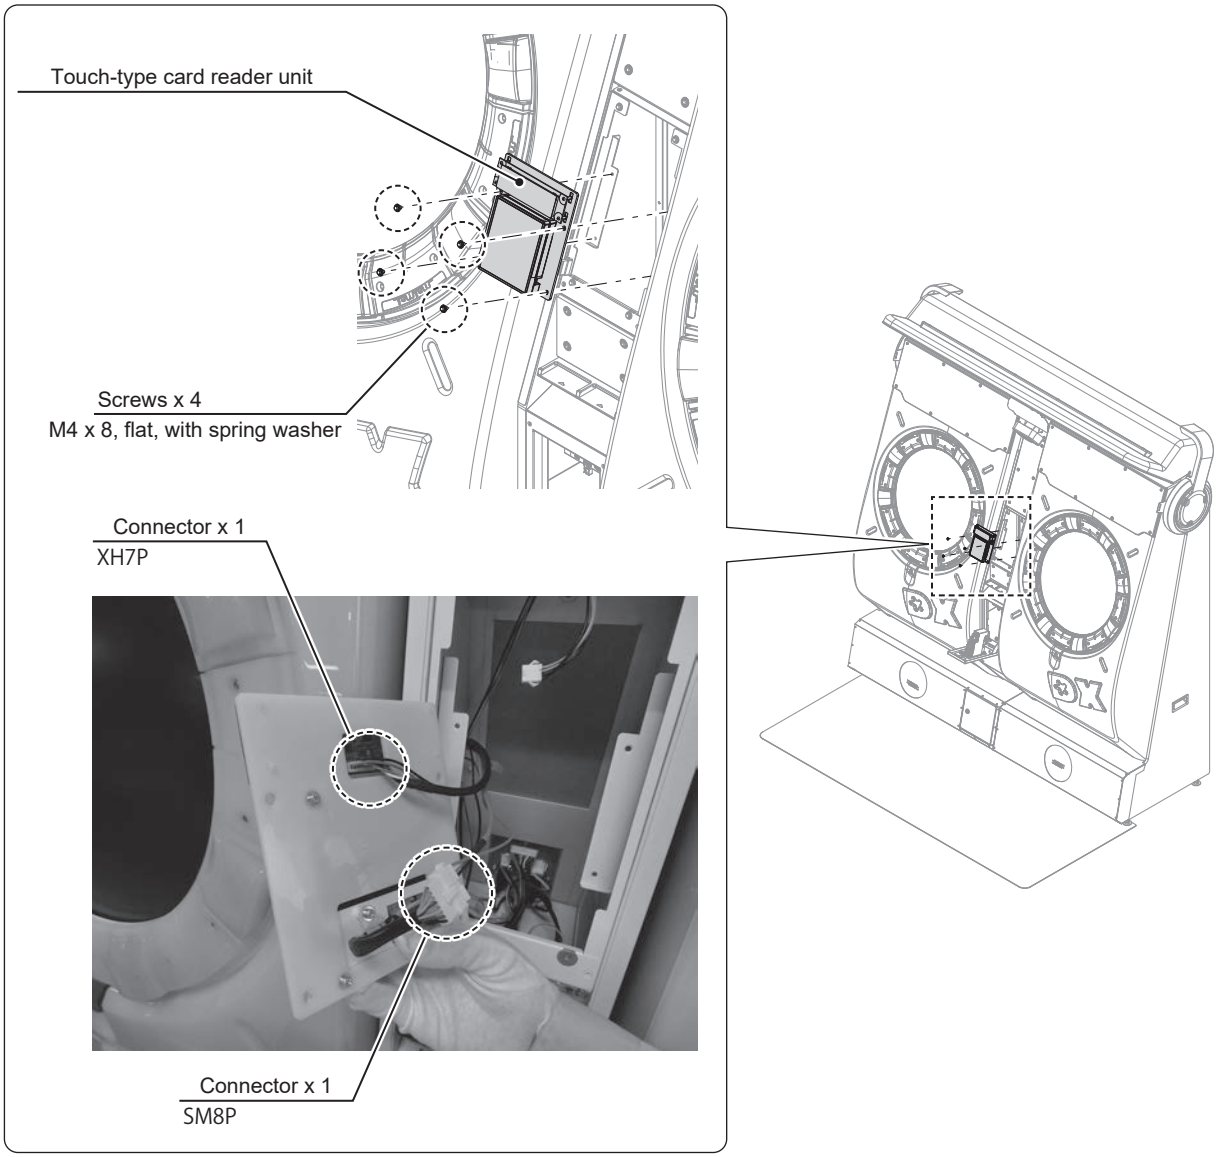

5 Untie 1 cord clamp.

6 Disconnect the 3 connectors.

7 Remove the 3 screws and remove the code reader unit.

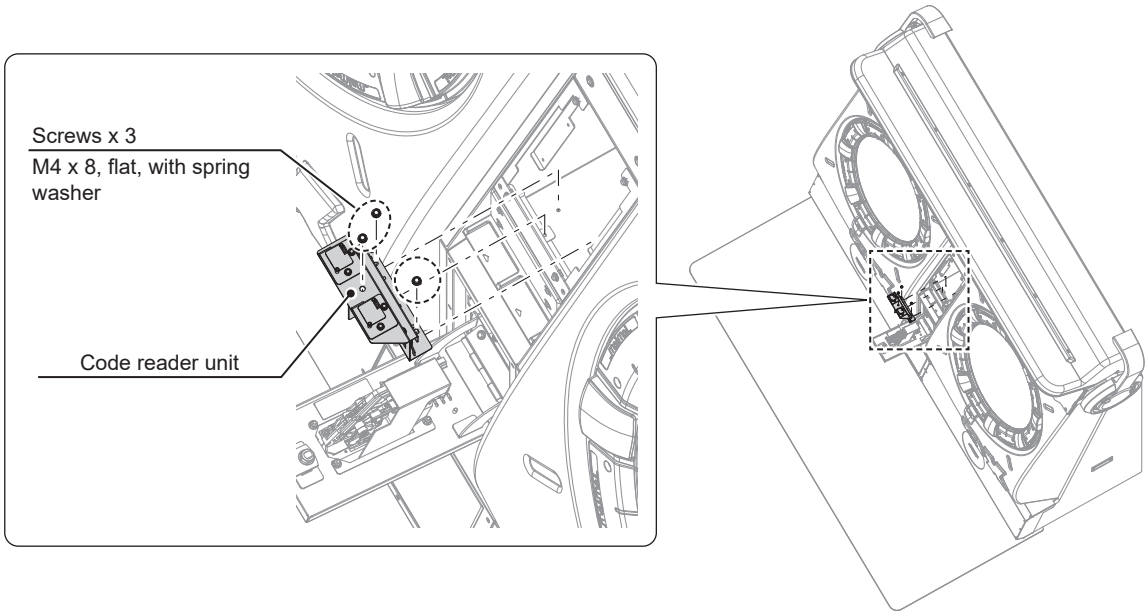

8 Disconnect 1 connector.

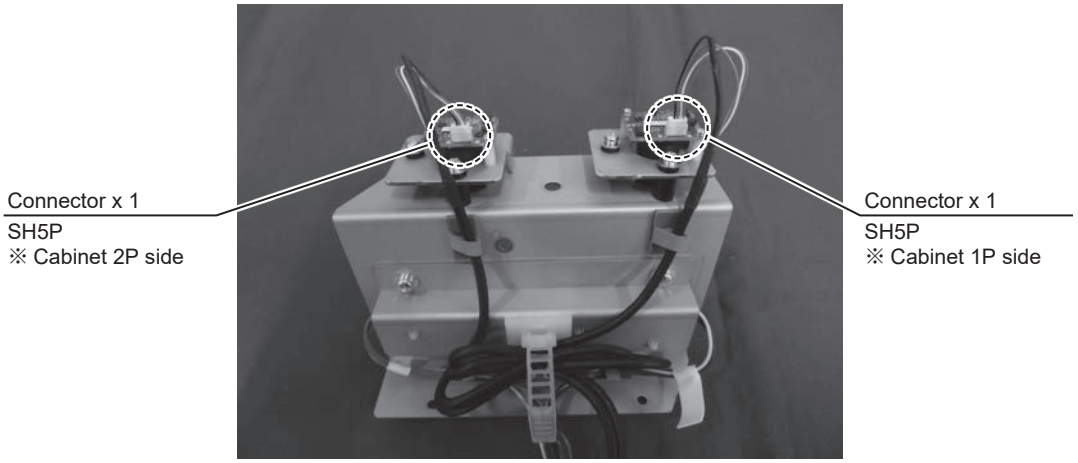

9 Remove the 2 screws and remove the code reader camera unit.

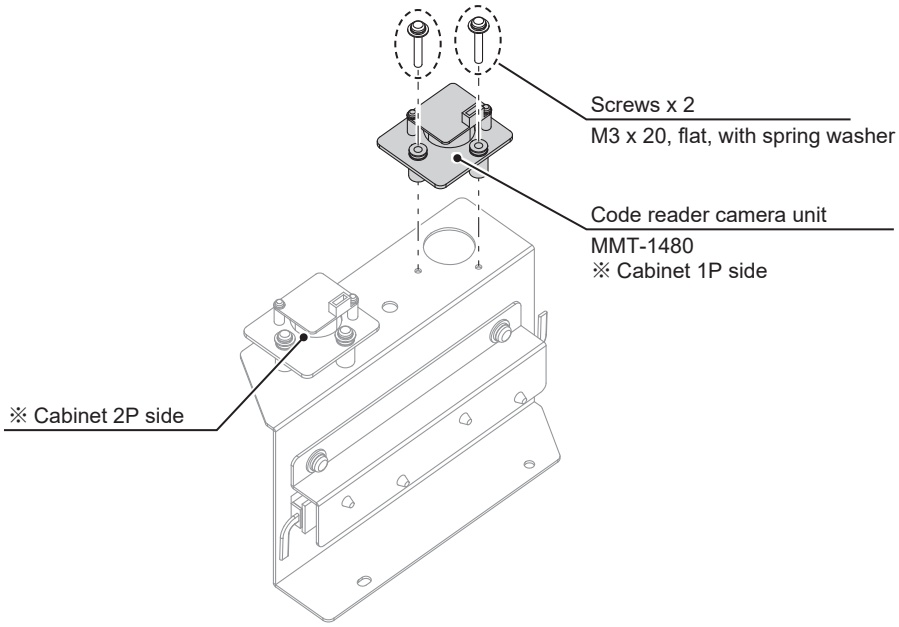

10 Refer to steps 3 to 9, install the replacement code reader camera unit in the reverse order, and reassemble.

11 Turn ON the sub power switch.

12 Check the operation of the code reader. <See Service Manual "3-6 Camera Test">

14-2 Cleaning the Camera Identification Code

⚠ CAUTION

- Handle plastic parts with care. Parts may break and cause injury from fragments or cracks.
- When fixing plastic parts, be careful not to overtighten screws and nuts. Parts may break and cause injury from fragments or cracks.

STOP

IMPORTANT

- Wipe off dirt with a dry soft cloth (flannel). Do not use coarse gauze or similar.
- Do not use water, chemical detergents or chemicals.
- Do not rub or scratch the surface with hard objects such as brushes or scrubbing brushes.

■ Tools and equipment required for the work

 Master key (supplied)	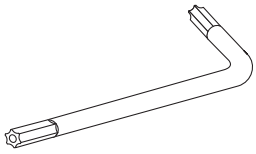 Tamper-proof wrench (for M4, supplied)	 Phillips screwdriver (for M3 and M4)	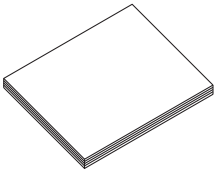 Service Manual (supplied)
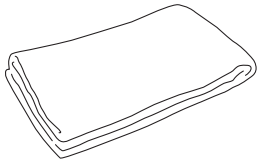 Soft cloth (flannel)			

1 Refer to steps 1 to 7 of "14-1" and carry out the work.

2 Clean the camera identification code with a dry soft cloth.

Inside the select button panel

3 Refer to steps 3 to 7 of "14-1" and work in the reverse order.

4 Turn ON the sub power switch.

5 Check the operation of the code reader. <See Service Manual "3-6 Camera Test">

15 Cleaning the Card Entry

⚠ CAUTION

- Handle plastic parts with care. Parts may break and cause injury from fragments or cracks.
- When fixing plastic parts, be careful not to overtighten screws and nuts. Parts may break and cause injury from fragments or cracks.

STOP
IMPORTANT

- Wipe off dirt with a dry soft cloth (flannel). Do not use coarse gauze or similar.
- If the dirt is heavy, wet a cloth with water or lukewarm water, wring it out well, and wipe. Do not use chemical detergents or chemicals.
- Do not rub or scratch the surface with hard objects such as brushes or scrubbing brushes.

■Tools and equipment required for the work

		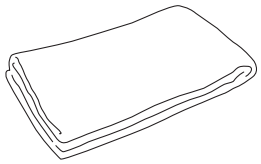
Phillips screwdriver (for M4)	Air spray	Soft cloth (flannel)

1 Remove the 2 truss-head screws and remove the card entry unit.

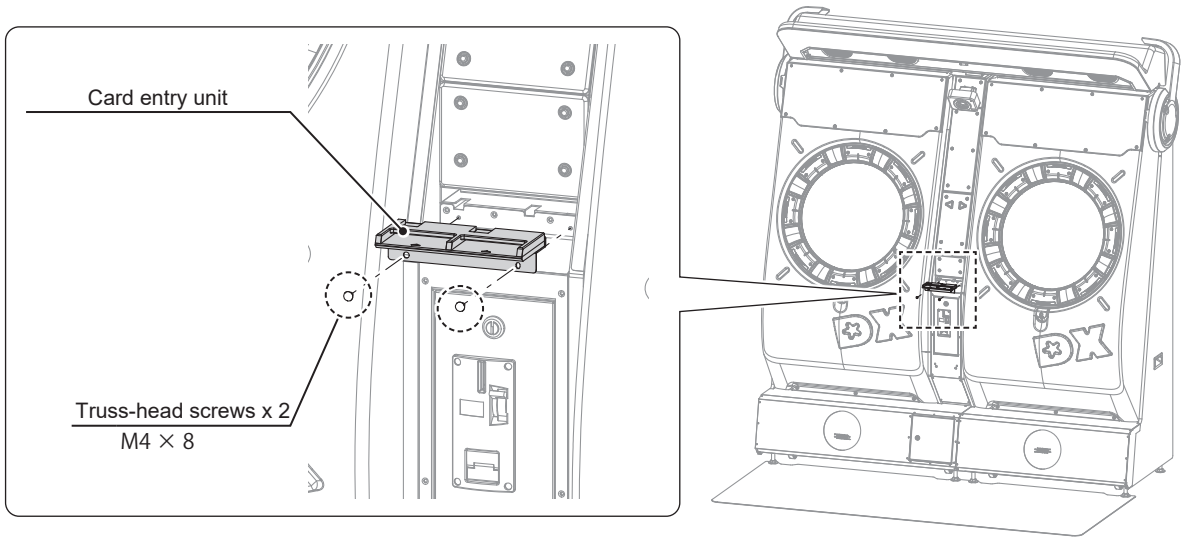

2 Remove the 2 flat-head screws and remove the card entry.

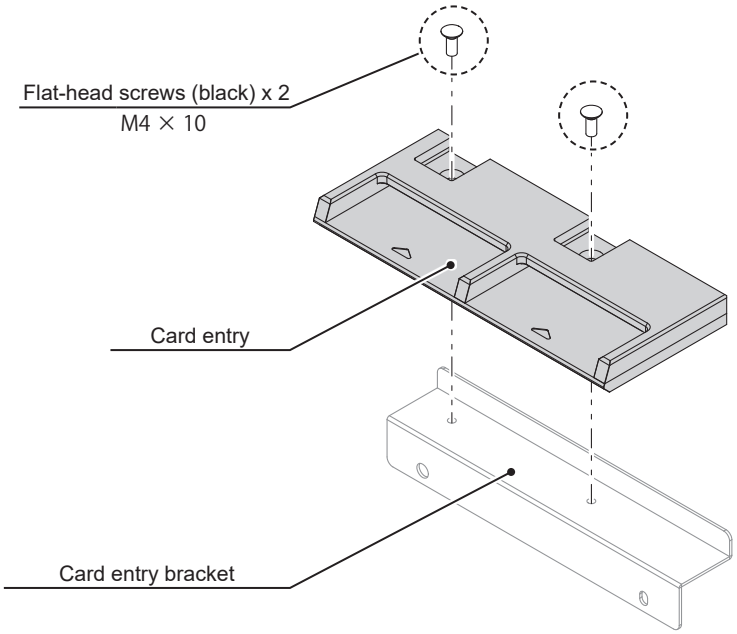

3 Clean the surfaces of the card entry and the card entry bracket that the card touches.

- Remove dust and dirt from the card entry with an air spray.
- Clean the card entry bracket with a dry soft cloth (flannel).

※If either part is very dirty, wet a cloth with water or lukewarm water, wring it out well, and wipe. Be careful not to leave scratches or dirt on the card entry.

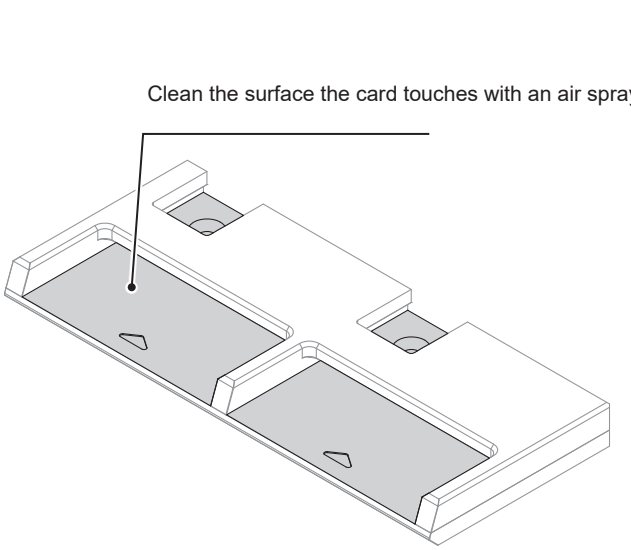

Card entry

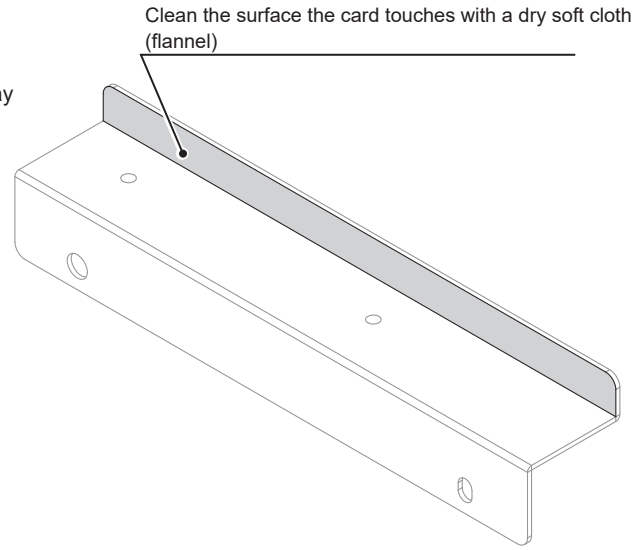

Card entry bracket

4 Install the card entry on the card entry bracket with the 2 flat-head screws.

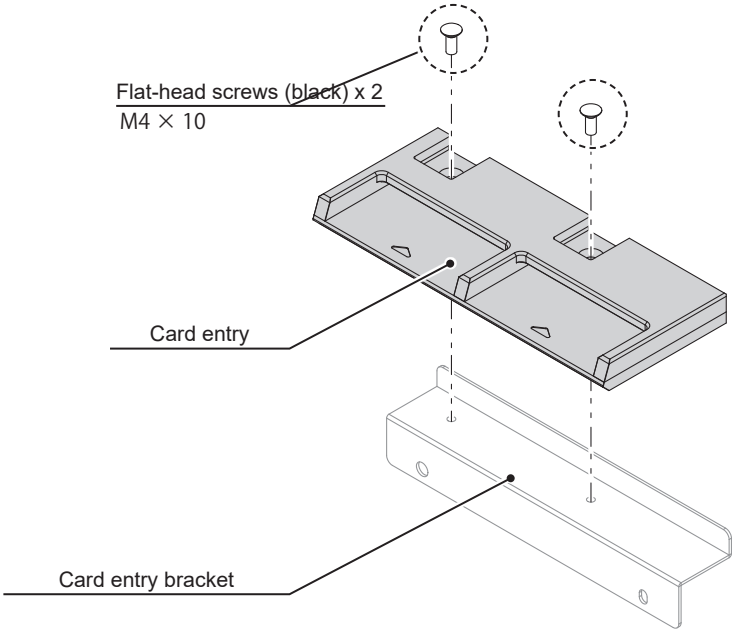

5 Install the card entry unit with the 2 truss-head screws.

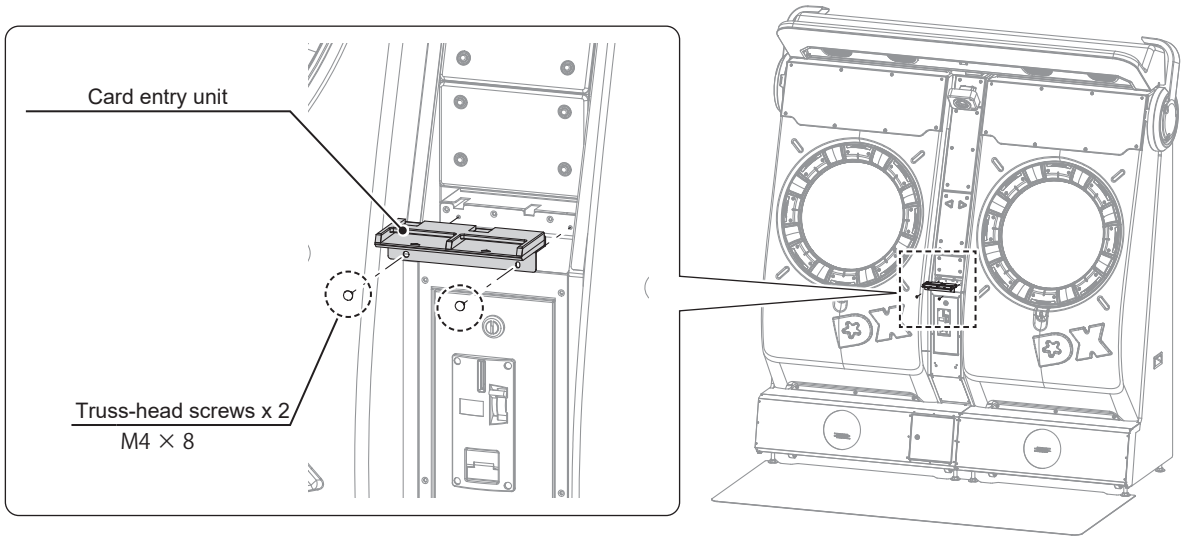

16 Player Camera

16-1 Cleaning

STOP

IMPORTANT

- Wipe off dirt with a dry soft cloth (flannel). Do not use coarse gauze or similar.
- If the dirt is heavy, wet a cloth with water or lukewarm water, wring it out well, and wipe. Do not use chemical detergents or chemicals.
- Do not rub or scratch the surface with hard objects such as brushes or scrubbing brushes.

■ Tools and equipment required for the work

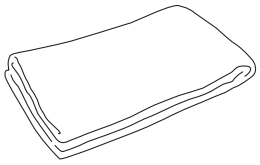

Soft cloth
(flannel)

Clean as needed.

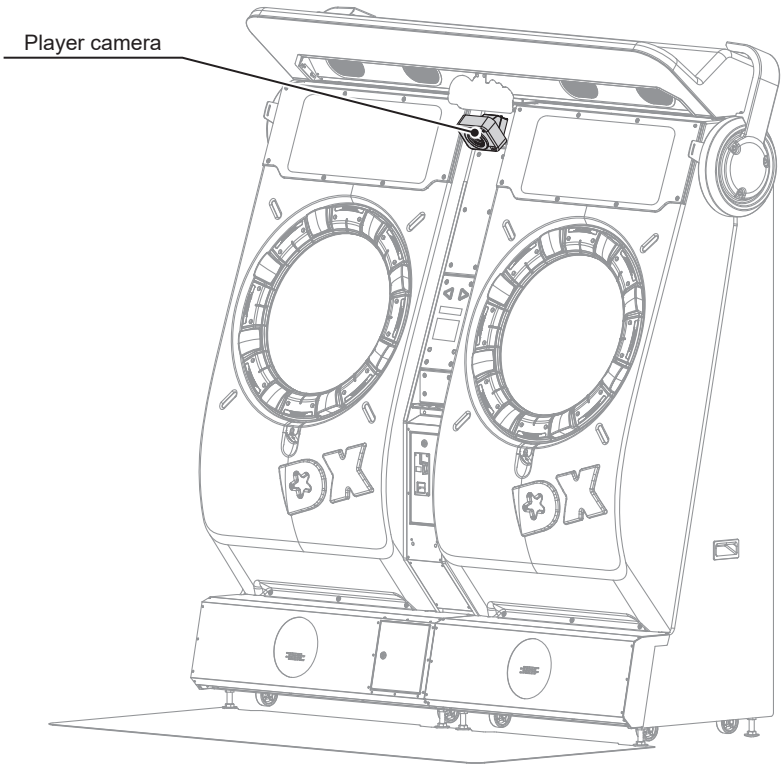

16-2 Replacement Procedure

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Turn off the power before starting work. Otherwise electric shock, short circuit or fire may result.
- Be careful not to damage the wiring. This may cause electric shock, short circuit or fire.

⚠ CAUTION

If all the fasteners (screws, nuts, washers, etc.) fixing a part are removed, the part may fall and cause an accident. Remove the fasteners while supporting the part firmly.

■ Tools and equipment required for the work

	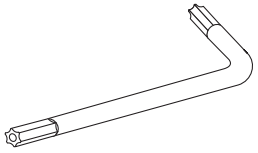		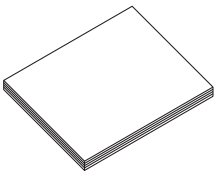
Master key (supplied)	Tamper-proof wrench (for M4, supplied)	Phillips screwdriver (for M4)	Service Manual (supplied)

1 Unlock with the master key and open the selector door.

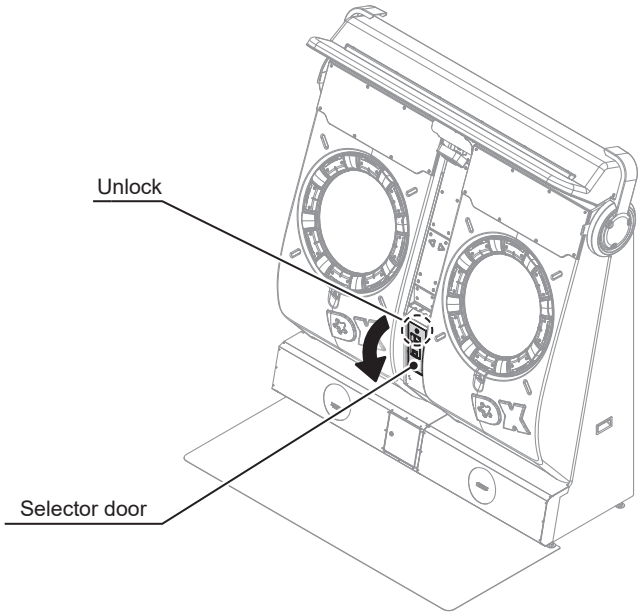

2 Turn OFF the sub power switch.

3 Remove the 2 truss-head screws and remove the billboard POP.

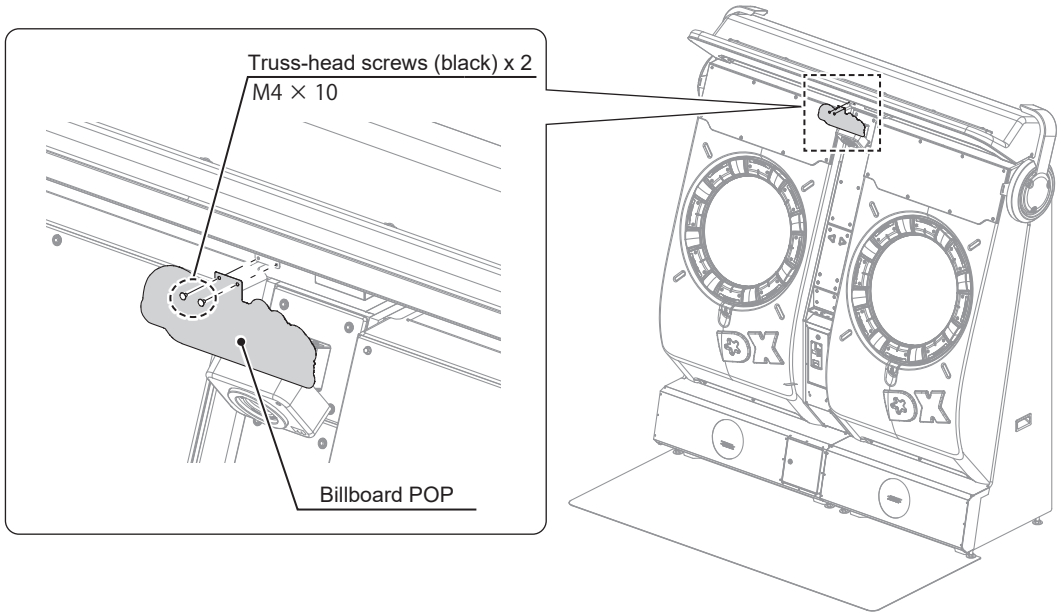

4 Remove the 2 tamper-proof screws, remove the player camera, and disconnect 2 connectors. Be careful not to pull too hard on the wiring connected to the player camera.

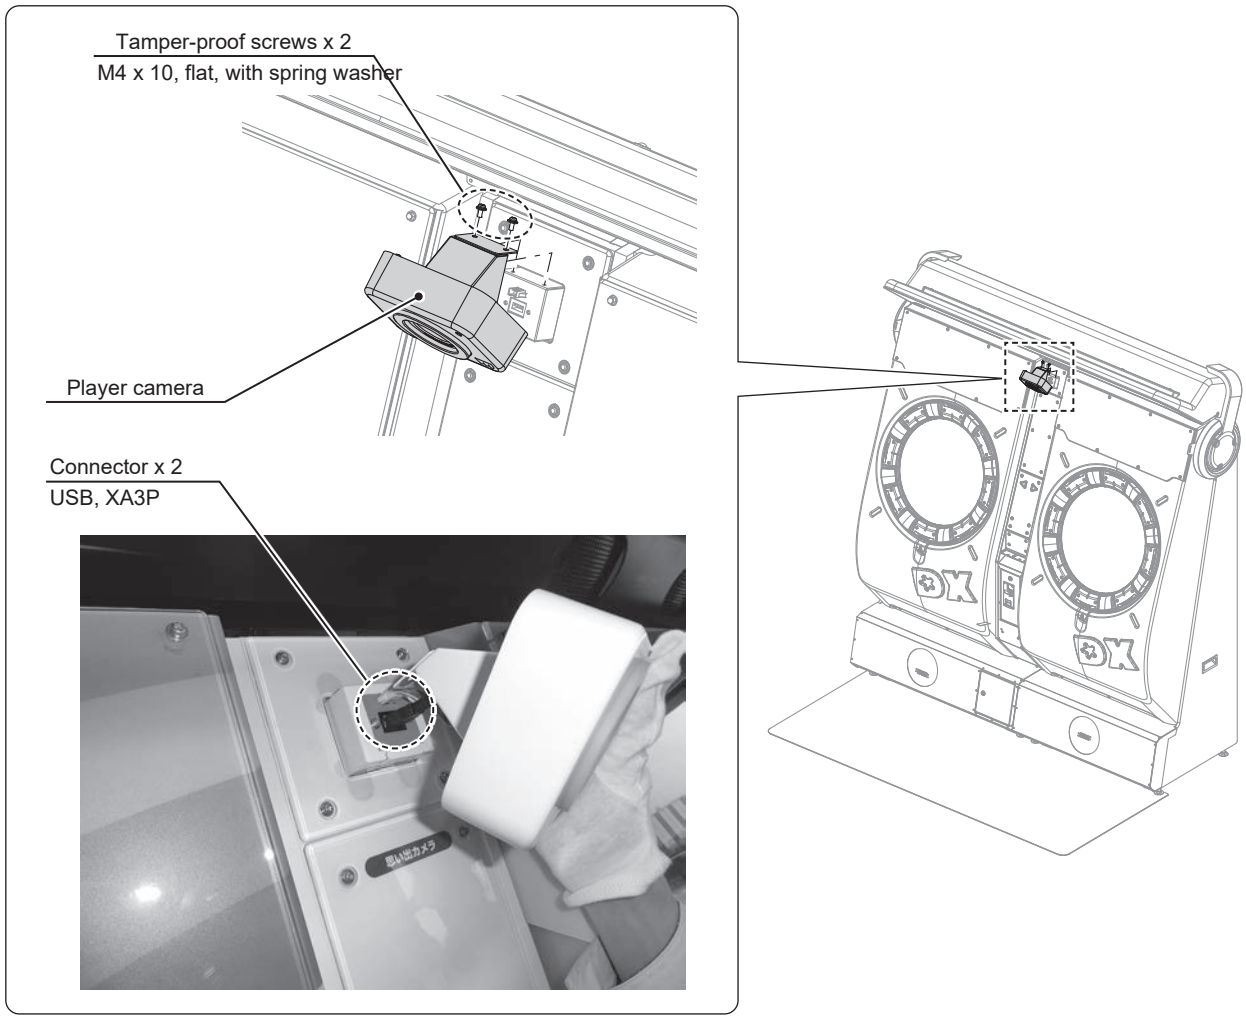

5 Remove the 4 screws and remove the player camera base.
When reinstalling, make sure the wiring outlet of the player camera base is on the lower side relative to the "UP" marking.

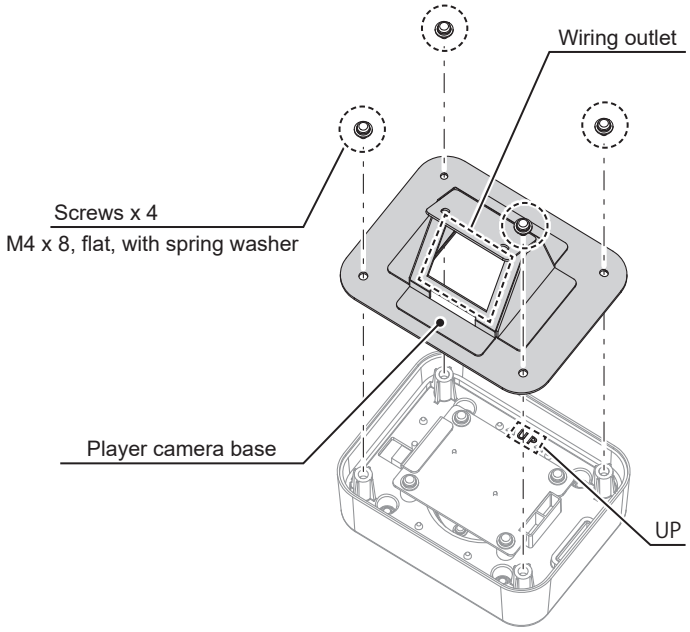

6 Untie 1 cord clamp.
When fixing the cord clamp, make a loop of about 2 cm and secure it.

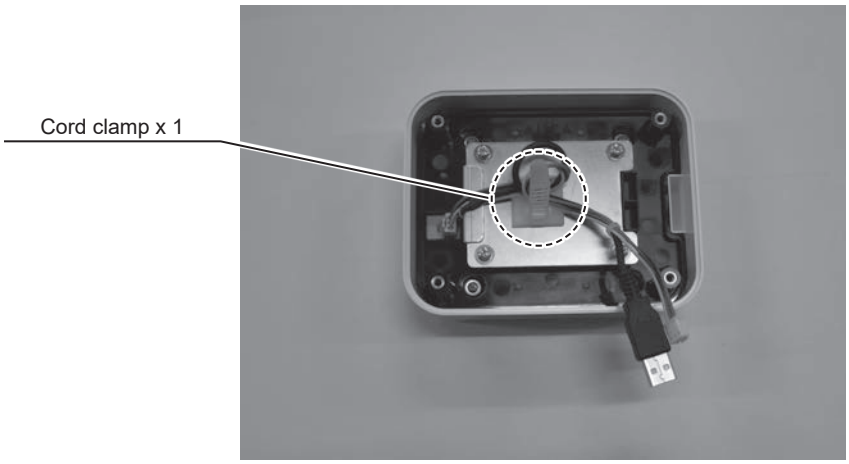

7 Disconnect 1 connector.

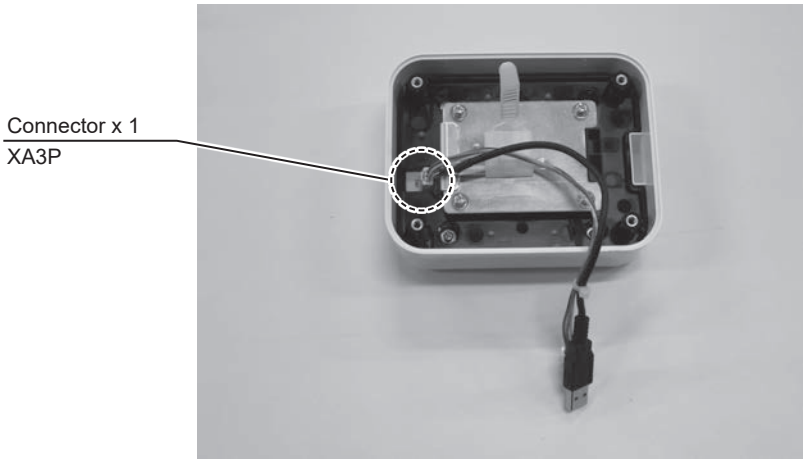

8 Remove the 4 screws and remove the player camera unit.

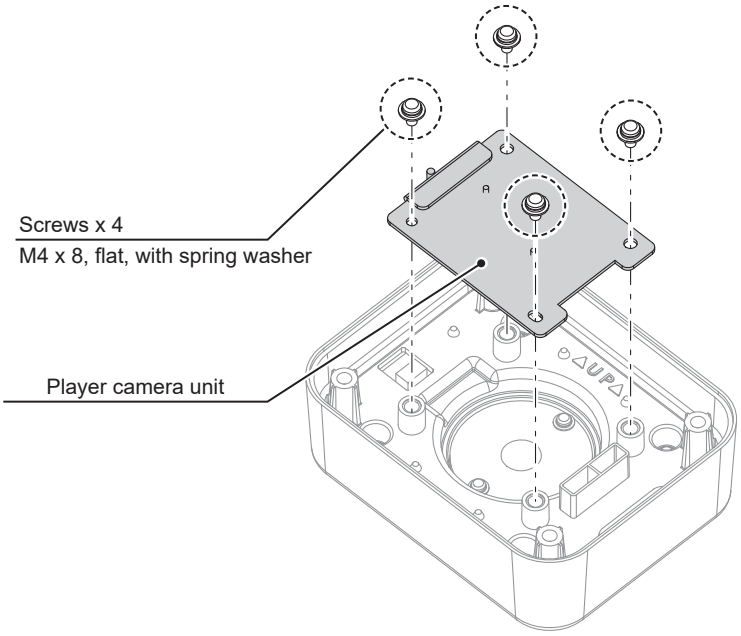

9 Disconnect 1 connector from the player camera unit.

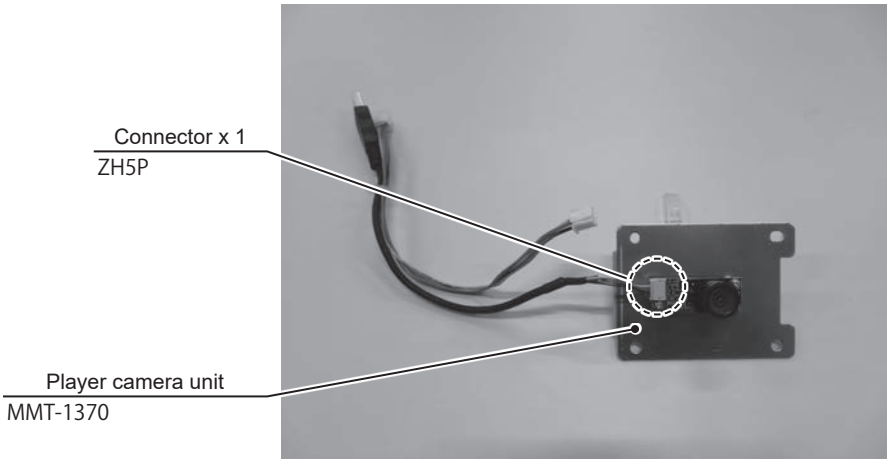

10 Refer to steps 3 to 9, install the replacement player camera unit in the reverse order, and reassemble.

11 Turn ON the sub power switch.

12 Check the operation of the player camera. <See Service Manual "3-6 Camera Test">

17 Replacing the Fuses

Perform this section after removing the cause of the blown fuse. If the cause is not removed, the fuse will blow again.

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Do not replace fuses with any that are not specified, as this may cause accidents. If you need to replace a fuse with one not specified in this manual, contact the place of purchase or the address listed under "Contact Information" in this manual.
- Use fuses of the specified rating. Using a fuse with a rating higher than specified may cause electric shock or fire.
- Replace the fuse after removing the cause of the blown fuse. Continuing to use the product as is may cause a fire.

■ Tools and equipment required for the work

		
Wrench (24 mm across flats)	Precision flat-head screwdriver	Phillips screwdriver (for M4)

1 Turn OFF the main power switch.

2 Unplug the power cord from the AC inlet.

3 Loosen the nuts of the 8 adjusters, raise the adjusters, and lower the 8 casters onto the floor.

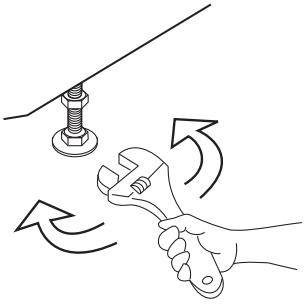

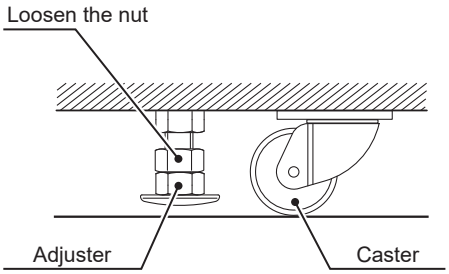

4 Move the cabinet to a place with at least 1.5 m of working space at the front, rear, left and right.

5 Set the 8 adjusters down on the floor.

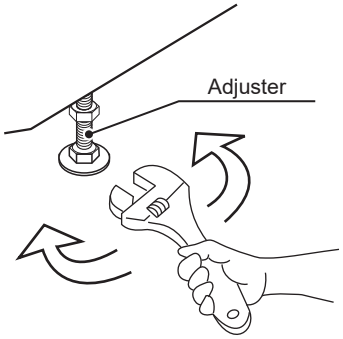

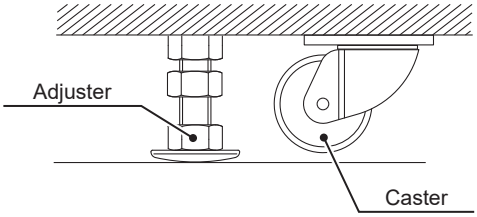

6 Remove the 2 truss-head screws and remove back door 1P (lower).

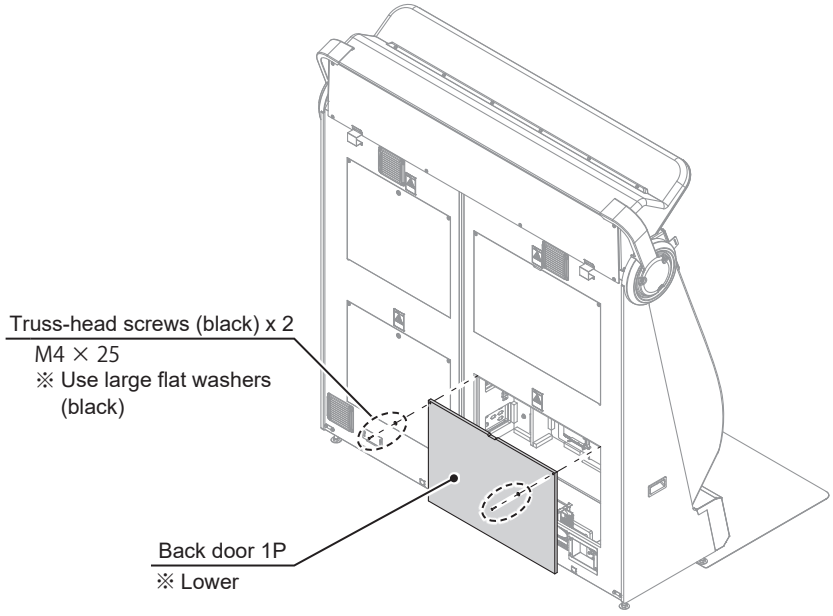

7 Unfasten 1 harness lug.

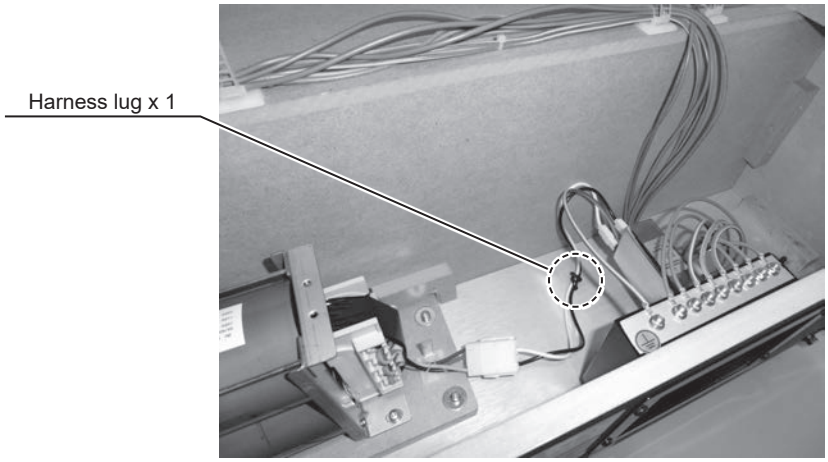

8 Remove the 2 screws and remove the multifunction inlet. Be careful not to damage the wiring.

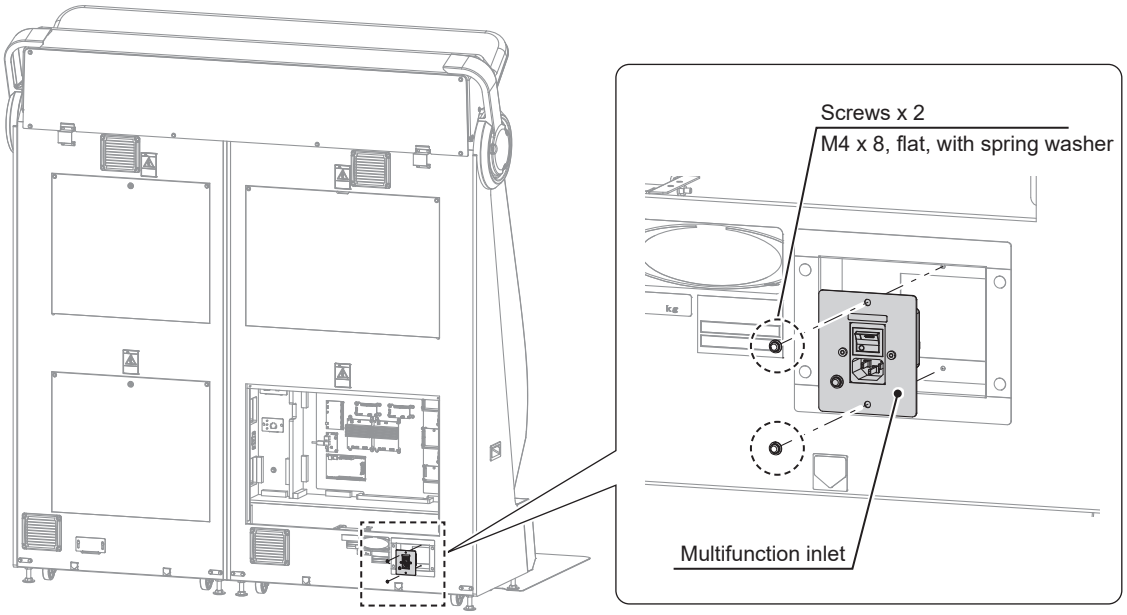

9 Use a precision flat-head screwdriver to remove the fuse case from the multifunction inlet. When reinstalling the fuse case, push it in all the way until it clicks.

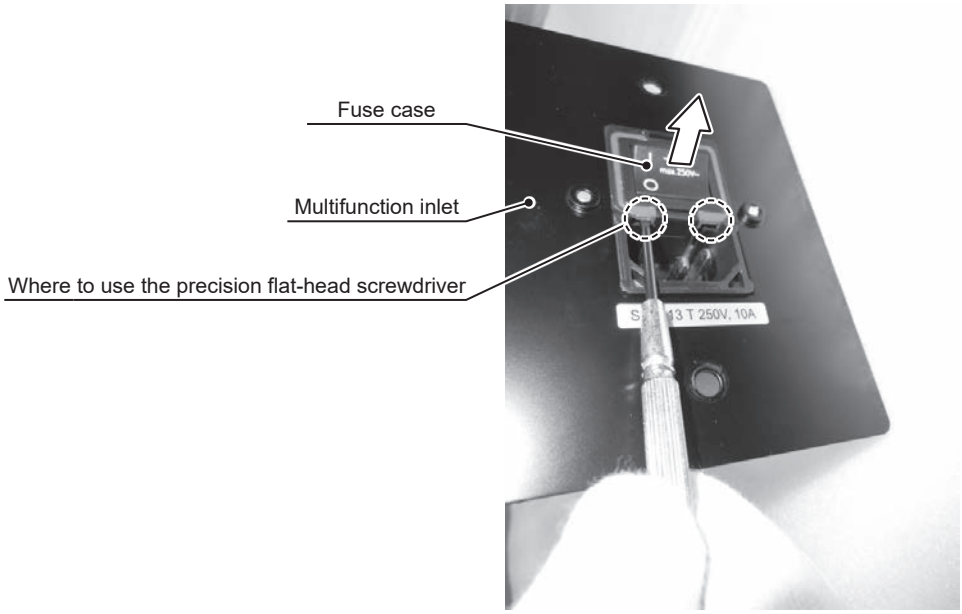

10 Use a precision flat-head screwdriver to remove the 2 fuses.

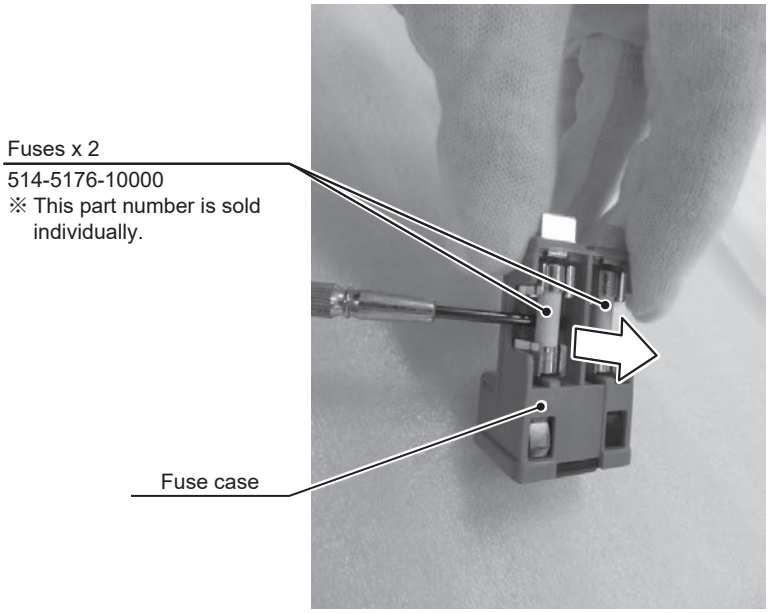

11 Refer to steps 2 to 10, install the replacement fuses in the reverse order, and reassemble.

18 ALLS HX2

⚠ WARNING

- Work must be done by store maintenance staff or a technician. Otherwise electric shock may result.
- Turn off the power before starting work. Otherwise electric shock, short circuit or fire may result.
- Do not expose the ALLS HX2 or other boards carelessly. This may cause electric shock or failure.
- Connectors other than those connected to and used by the ALLS HX2 at shipment are not used in this product. Do not connect wiring to unused connectors. This may cause a fire.
- When reinstalling the ALLS HX2 for replacement or repair, be careful not to connect the connectors incorrectly. Incorrect connection may cause electric shock, short circuit or fire.
- When connecting a connector, check its orientation carefully. Connectors can only be connected in a fixed orientation. Forcing a connection and applying load may break the connector or terminal fittings and cause electric shock, short circuit or fire.

⚠ CAUTION

Be careful not to pinch your fingers when opening, closing, installing or removing parts.

STOP

IMPORTANT

- Static electricity from the human body may damage electronic components on IC boards. Before working, discharge static electricity from your body, for example by touching a grounded metal surface.
- When sending an ALLS HX2 for replacement or repair, pack it securely so that it is not damaged in transit.
- When turning OFF the main power switch of the server unit during business hours, first make sure there are no players at the client units. Turning OFF the main power switch disables network communication. Also, turn on the power of the server unit first, then the client units. If the server unit is turned on later, the in-store network may not work correctly.

18-1 Removing the ALLS HX2 Unit

■ Tools and equipment required for the work

		
Wrench (24 mm across flats)	Precision flat-head screwdriver	Phillips screwdriver (for M4)

1 Turn OFF the main power switch.

2 Loosen the nuts of the 8 adjusters, raise the adjusters, and lower the 8 casters onto the floor.

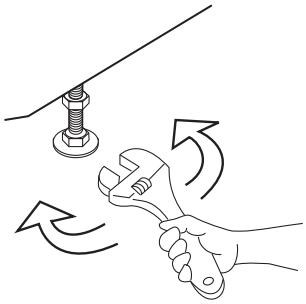

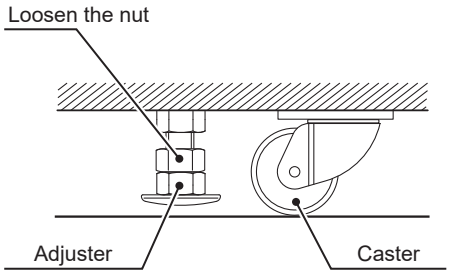

3 Move the cabinet to a place with at least 1.5 m of working space at the front, rear, left and right.

4 Set the 8 adjusters down on the floor.

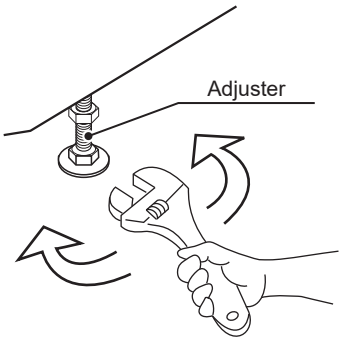

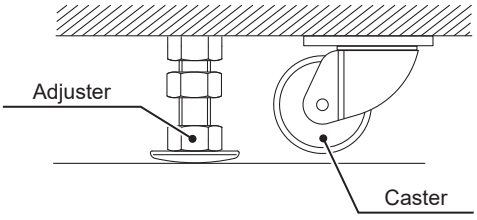

5 Remove the 2 truss-head screws. Unlock with the master key and remove back door 2P (lower).

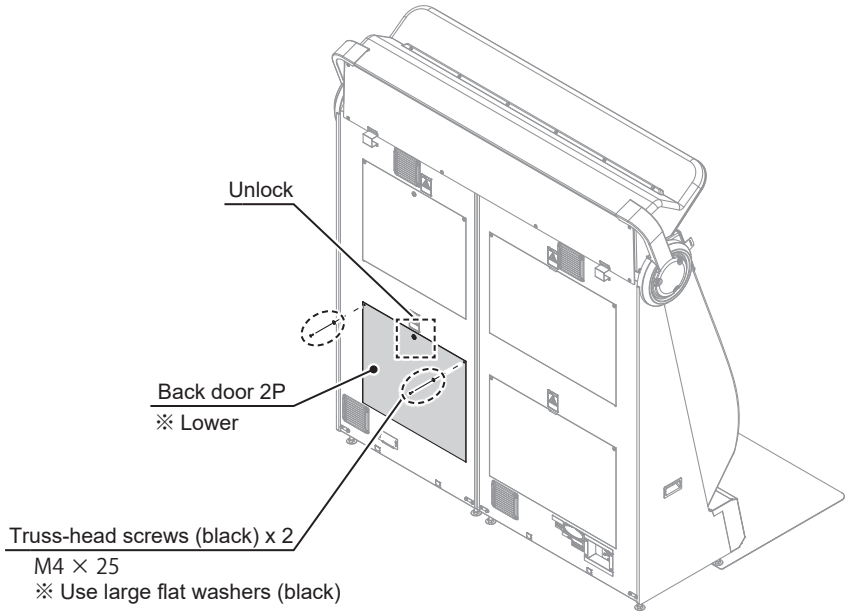

6 Disconnect the 16 connectors. Loosen the fixing screws of the DVI connector and the D-SUB9P connectors before pulling them out. Use a precision flat-head screwdriver for the D-SUB9P connectors.

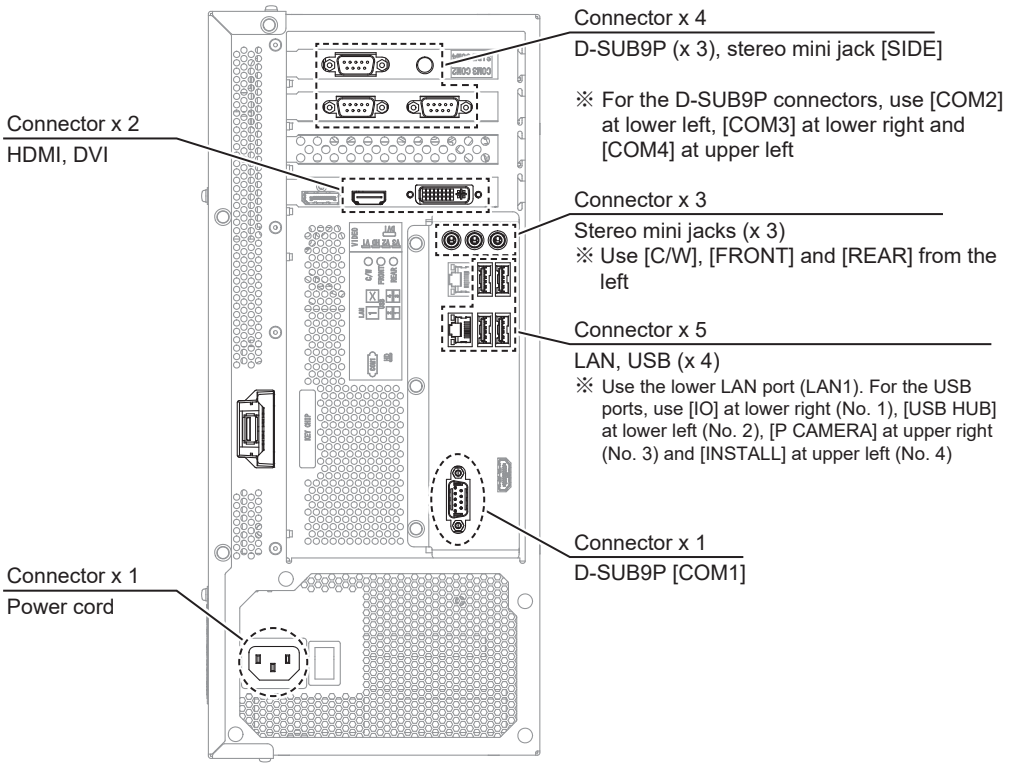

7 Remove the 2 screws and remove the ALLS HX2 unit.

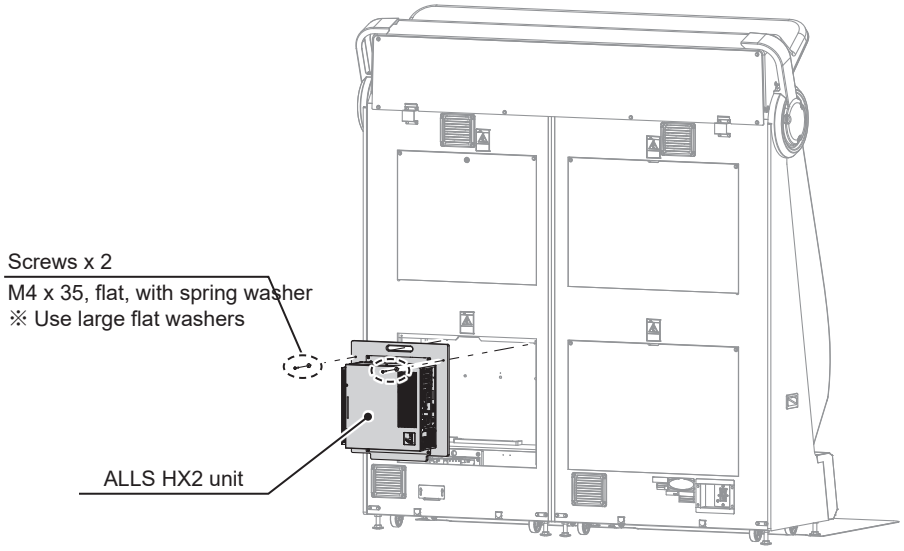

18-2 Cleaning the ALLS HX2

STOP

IMPORTANT

- Clean the ALLS HX2 once a year or when "Error0091" appears. Dust accumulating inside the ALLS HX2 may cause malfunctions and other problems.
- Each ALLS HX2 has different components, software and settings. After cleaning, return the ALLS HX2 to the cabinet it was removed from. Returning it to the wrong cabinet may cause malfunction or other problems.

■ Tools and equipment required for the work

			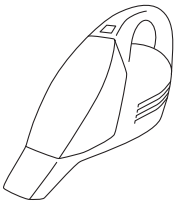
Wrench (24 mm across flats)	Precision flat-head screwdriver	Phillips screwdriver (for M4)	Vacuum cleaner

1 Refer to "18-1" and remove the ALLS HX2 unit.

2 Remove the 4 screws and remove the metal filter. The screws are on the side opposite the connector side.

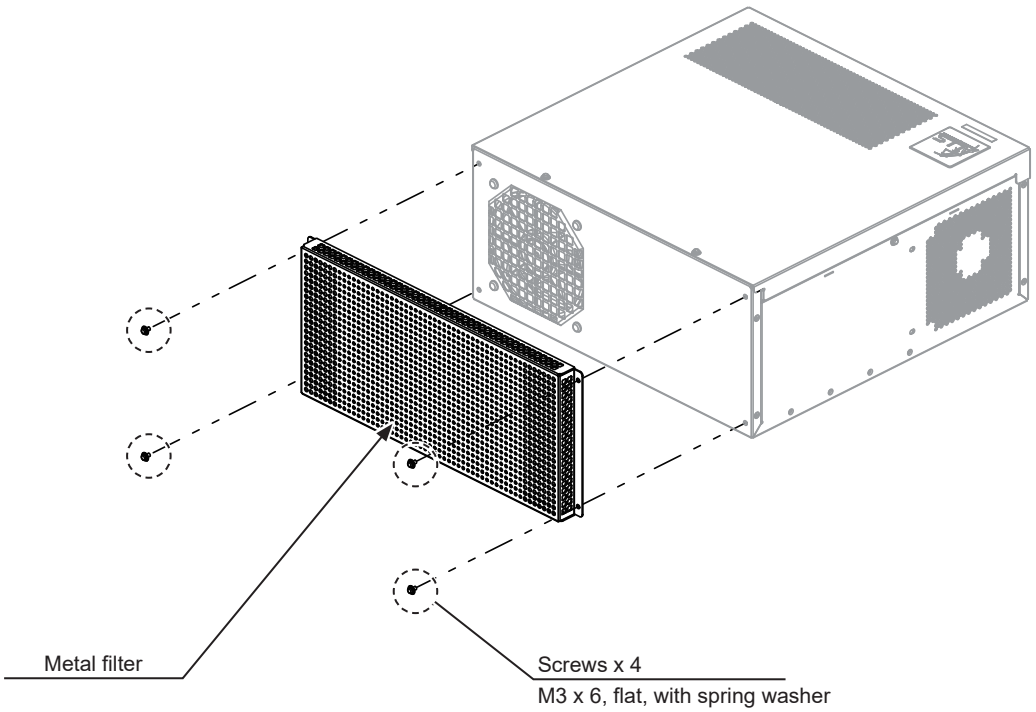

3 Vacuum around the air intake and exhaust openings of the ALLS HX2 and both sides of the metal filter.

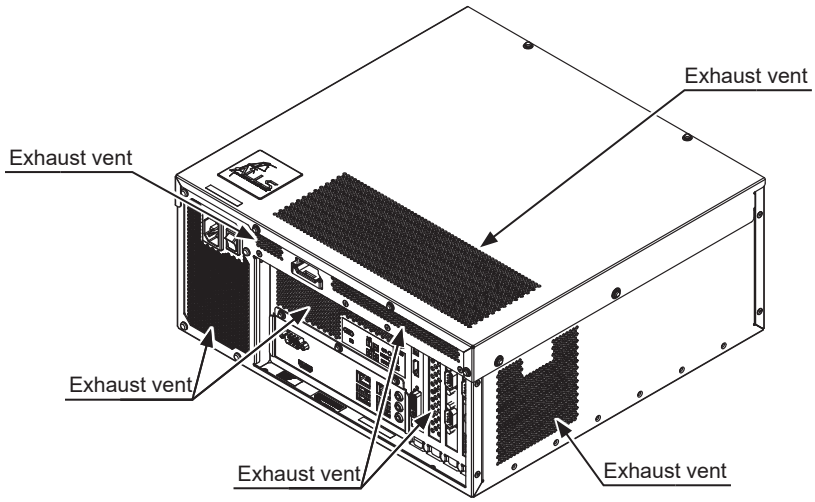

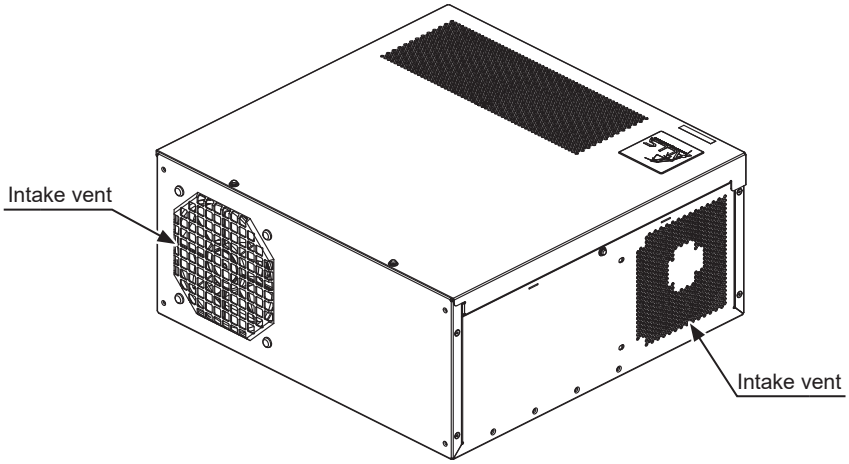

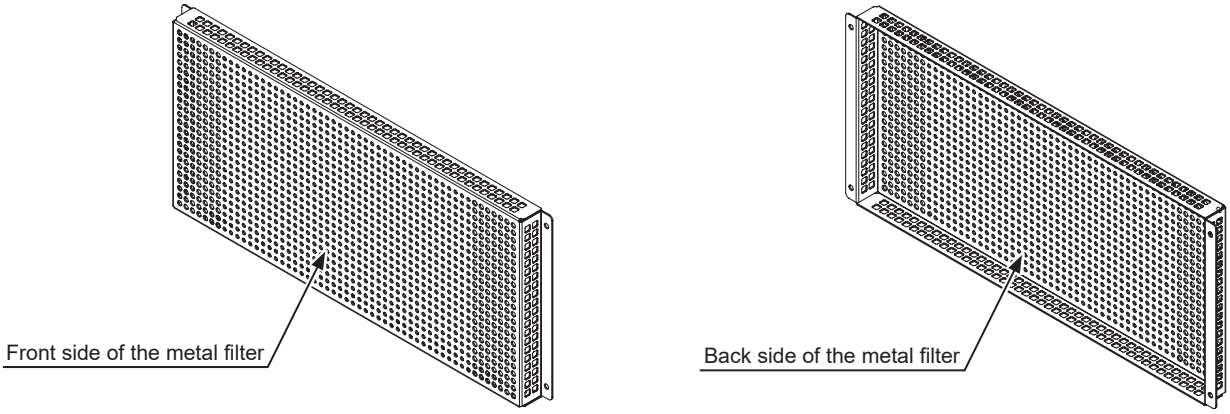

4 Vacuum the area around the ALLS HX2 mounting position inside the cabinet. Be careful not to damage the wiring.

5 Refer to step 2 and install the metal filter in the reverse order.

6 Refer to "18-1" and install the ALLS HX2 unit in the reverse order.

18-3 Replacing the ALLS HX2

■ Tools and equipment required for the work

		
Wrench (24 mm across flats)	Precision flat-head screwdriver	Phillips screwdriver (for M4)

1 Refer to "18-1" and remove the ALLS HX2 unit.

2 Remove the key chip. Pull the key chip out while pressing the tab.

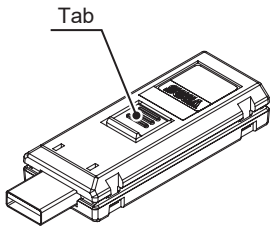

Key chip

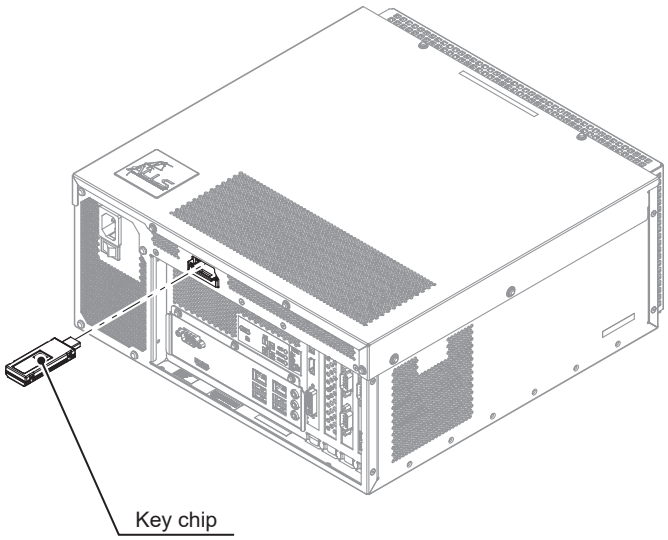

3 Remove the 4 screws and remove the wooden base from the ALLS HX2 unit.

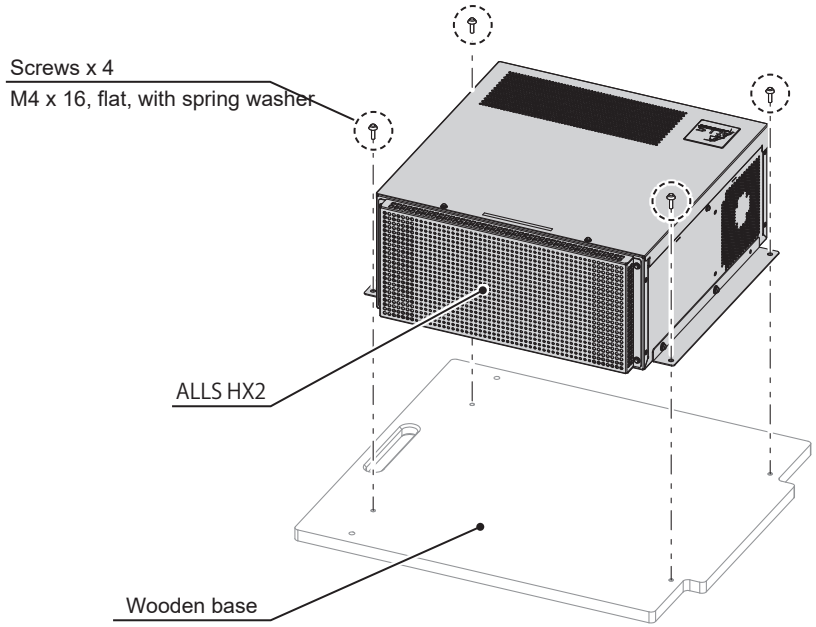

4 Remove the 5 screws and remove the game board brackets from the ALLS HX2.

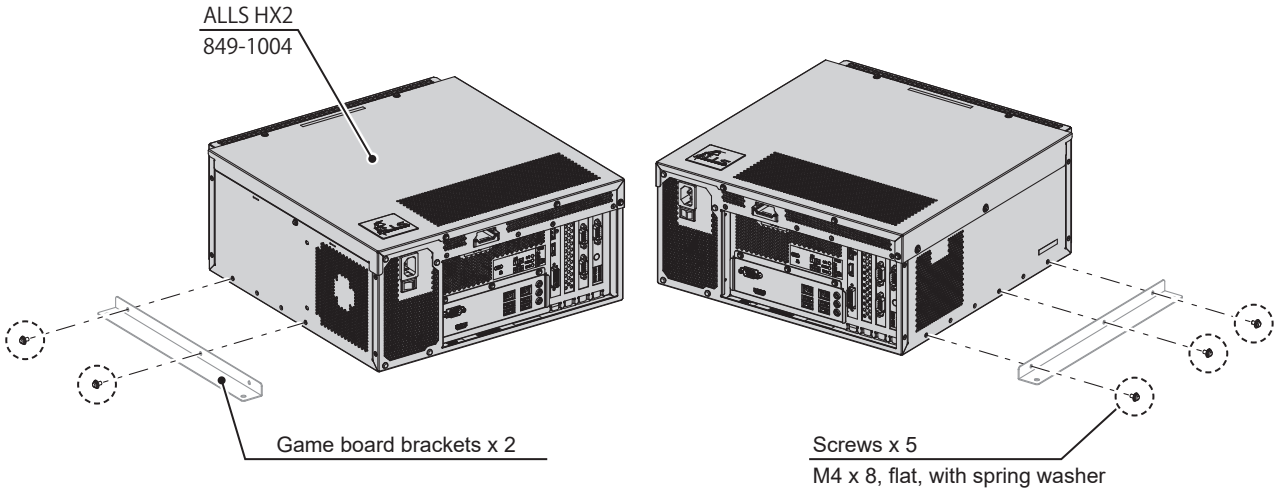

5 Refer to steps 1 to 4, install the replacement ALLS HX2 in the reverse order, and reassemble.

19 Multipurpose Bracket

STOP

IMPORTANT

When using the multipurpose bracket (this bracket), always display the "Notes on Using the Smartphone Stand" POP from SEGA's website (https://am.sega.jp/logopop).

This section explains how to install this bracket, which helps with the installation of recording equipment such as for taking photos and videos. Prepare the equipment to be connected to this bracket yourself.

Please use this bracket only after accepting the disclaimer below.

Disclaimer

- SEGA accepts no responsibility whatsoever for any damage caused by items connected to this bracket.
- SEGA accepts no responsibility whatsoever for theft of this bracket or of connected items.

Precautions When Handling Connected Items

- Place connected items where players and spectators cannot touch them.
- Secure connected items firmly so that they cannot fall.

Installation Method

Install the multipurpose bracket with 2 screws.

※The figure below is explained for the cabinet 1P side. The cabinet 2P side can be installed in the same way.

Parts used

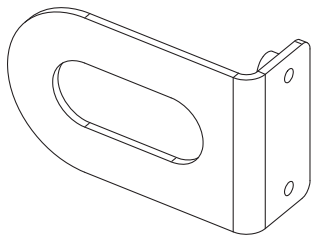

Multipurpose bracket

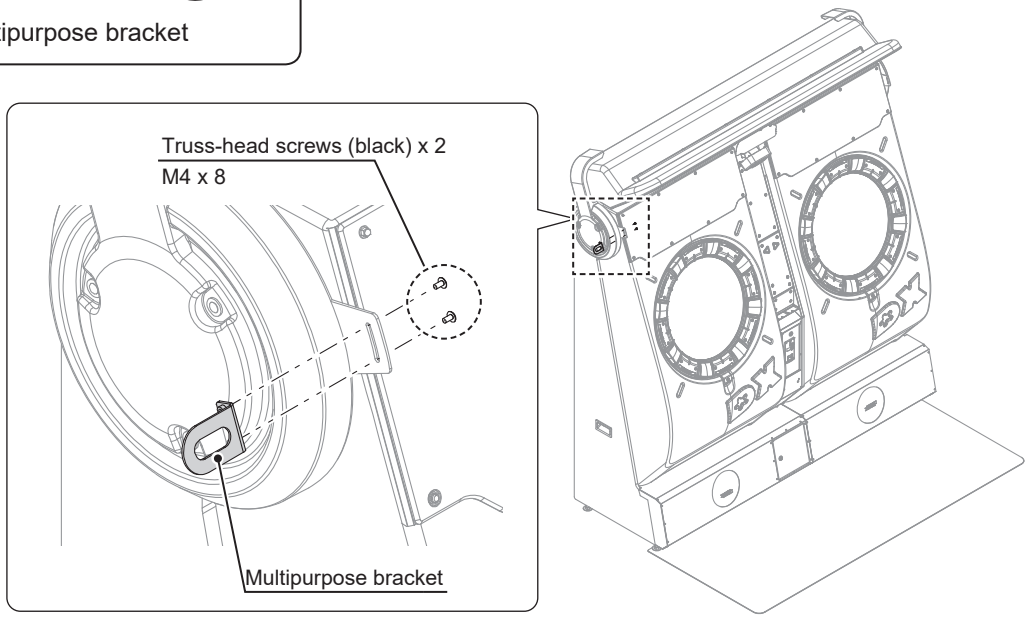

20 Design Parts

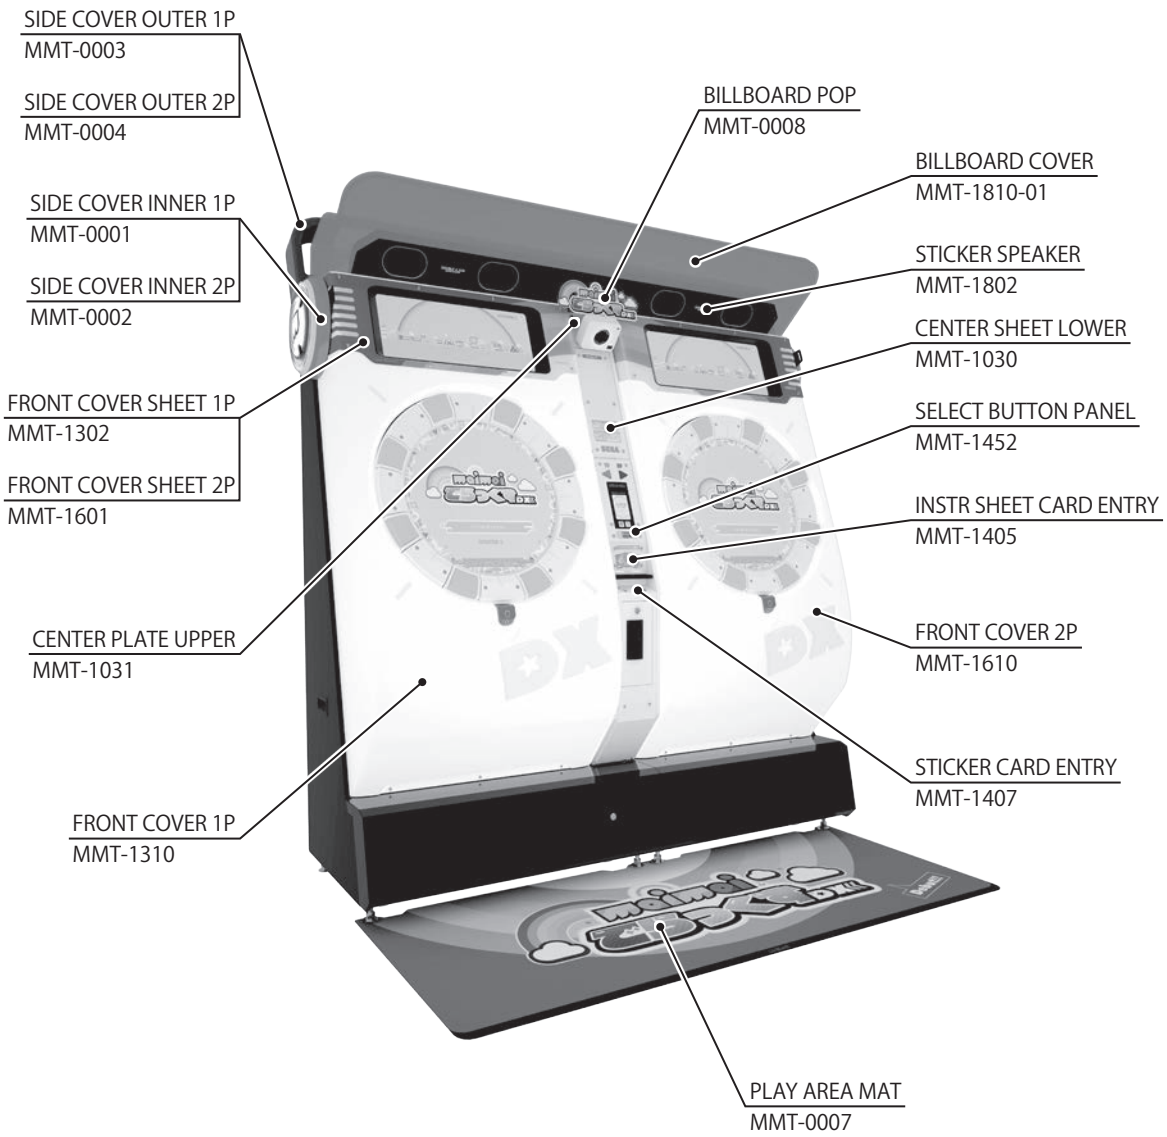

21 Parts List

21-1 Cabinet

Assembly Structure

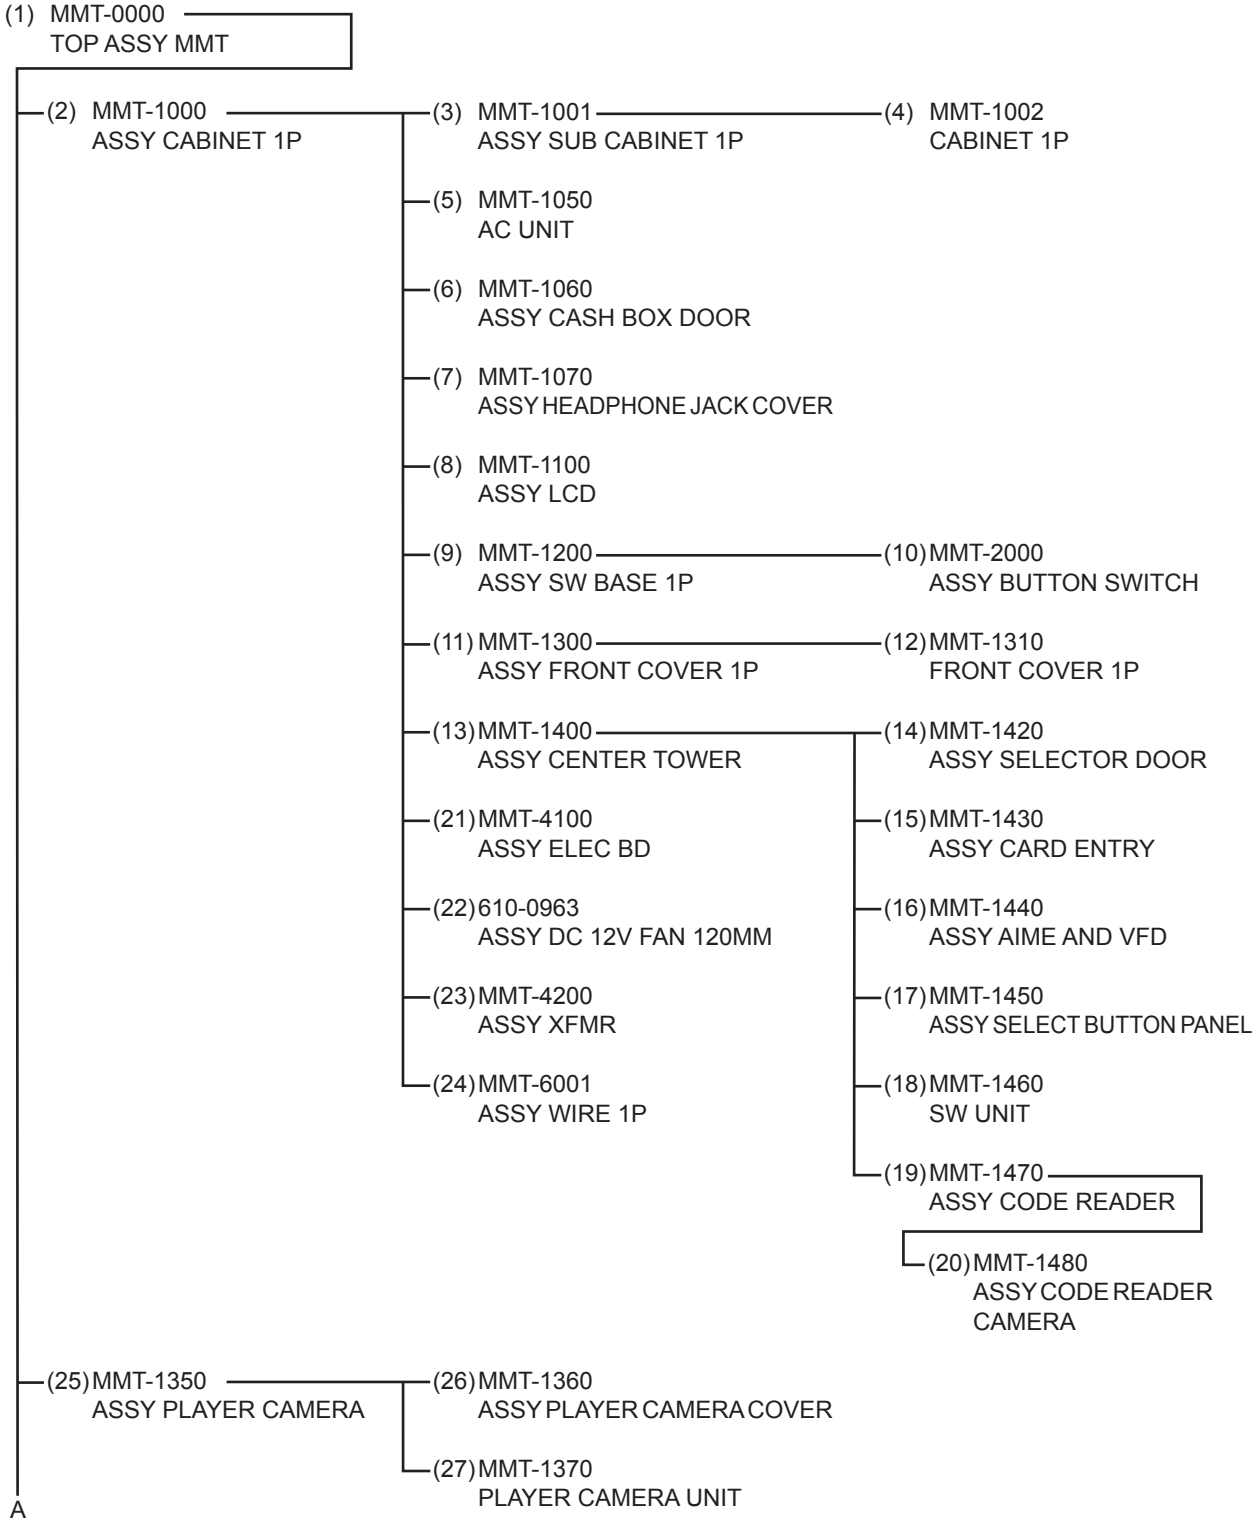

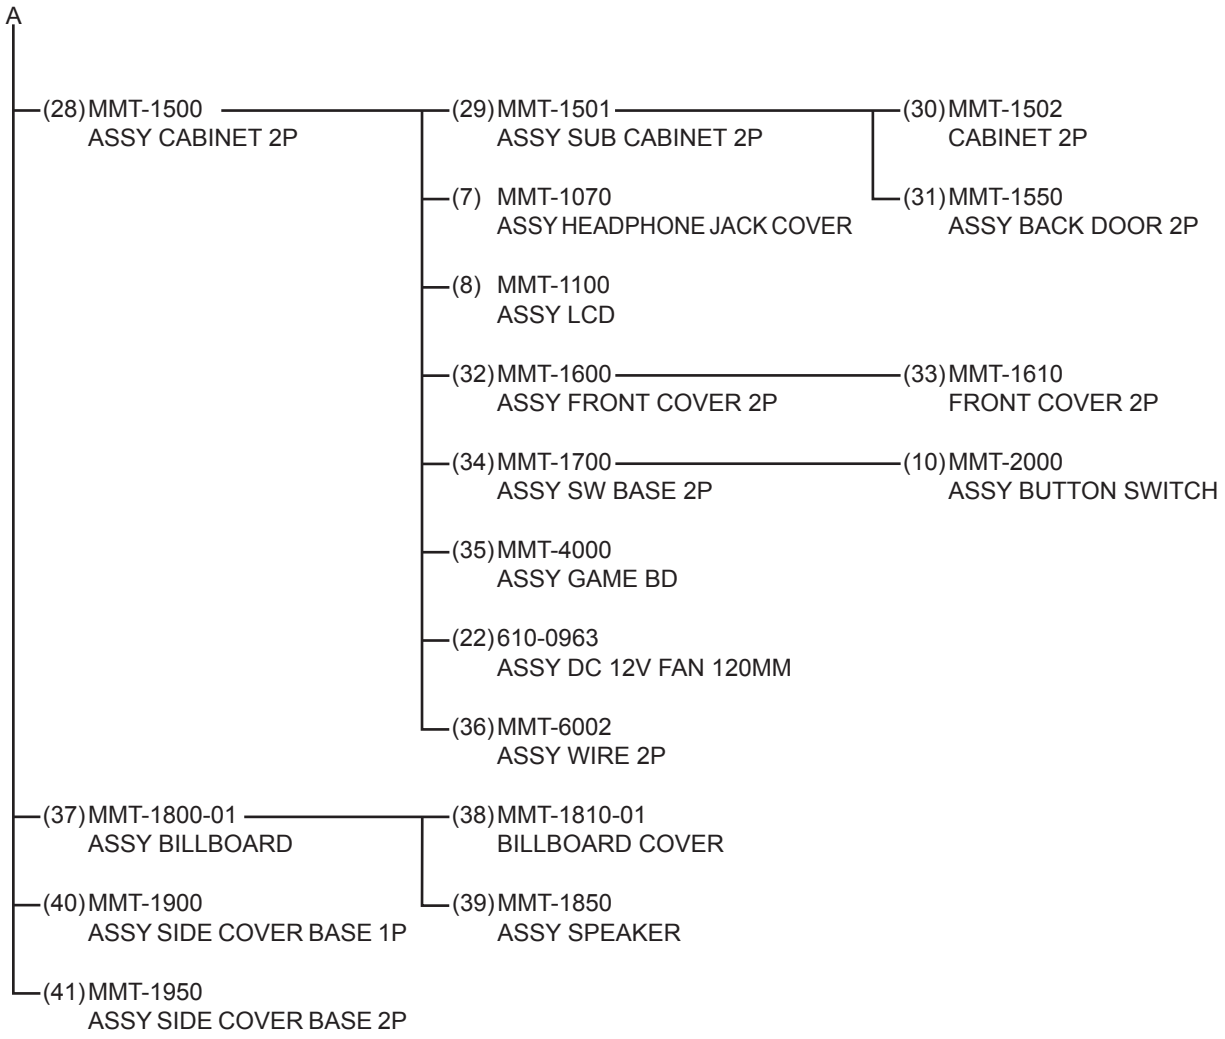
A
(28) MMT-1500
ASSY CABINET 2P
(29) MMT-1501
ASSY SUB CABINET 2P
(30) MMT-1502
CABINET 2P
(31) MMT-1550
ASSY BACK DOOR 2P
(7) MMT-1070
ASSY HEADPHONE JACK COVER
(8) MMT-1100
ASSY LCD
(32) MMT-1600
ASSY FRONT COVER 2P
(33) MMT-1610
FRONT COVER 2P
(34) MMT-1700
ASSY SW BASE 2P
(10) MMT-2000
ASSY BUTTON SWITCH
(35) MMT-4000
ASSY GAME BD
(22) 610-0963
ASSY DC 12V FAN 120MM
(36) MMT-6002
ASSY WIRE 2P
(37) MMT-1800-01
ASSY BILLBOARD
(38) MMT-1810-01
BILLBOARD COVER
(40) MMT-1900
ASSY SIDE COVER BASE 1P
(39) MMT-1850
ASSY SPEAKER
(41) MMT-1950
ASSY SIDE COVER BASE 2P

(1) MMT-0000 (D-1/2)
TOP ASSY MMT

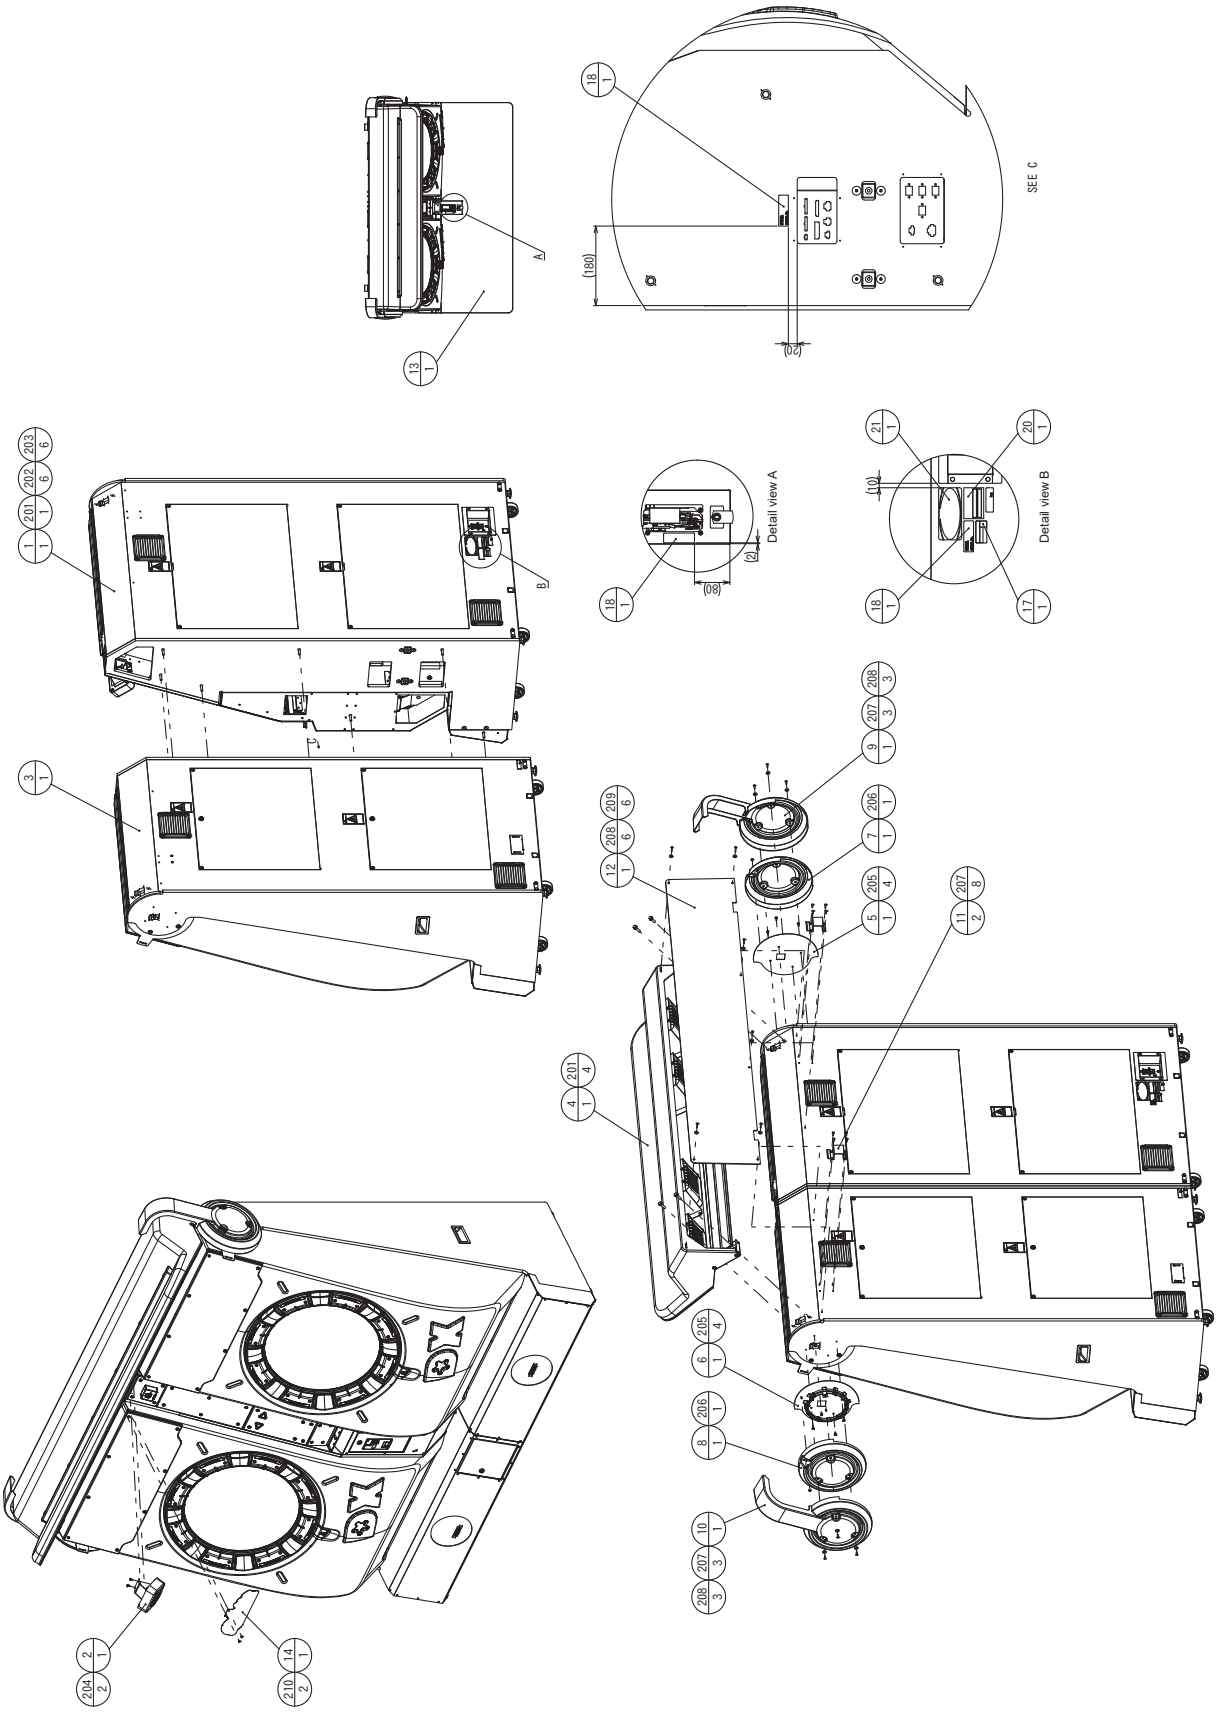

(1) MMT-0000 (D-2/2)
TOP ASSY MMT

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1000	ASSY CABINET 1P	
2	MMT-1350	ASSY PLAYER CAMERA	
3	MMT-1500	ASSY CABINET 2P	
4	MMT-1800-01	ASSY BILLBOARD	
5	MMT-1900	ASSY SIDE COVER BASE 1P	
6	MMT-1950	ASSY SIDE COVER BASE 2P	
7	MMT-0001	SIDE COVER INNER 1P	
8	MMT-0002	SIDE COVER INNER 2P	
9	MMT-0003	SIDE COVER OUTER 1P	
10	MMT-0004	SIDE COVER OUTER 2P	
11	MMT-0005	REAR PLATE BRKT	
12	MMT-0006	REAR PLATE	
13	MMT-0007	PLAY AREA MAT	
14	MMT-0008	BILLBOARD POP	
15	MMT-0009	STICKER CABLE AND PANEL	
16	SGM-4175	POLY COVER 1200x1200x2000	
22	421-14235	INSTR SH MMT SHIPPING 1P	
23	421-14236	INSTR SH MMT SHIPPING 2P	
201	030-000835-WB	HEX BLT W/FS BLK M8x35	
202	030-000850-S	HEX BLT W/S M8x50	
203	068-852216	FLT WSHR 8.5-22 X1.6	
204	FAS-080036	TMP PRF SCR PH W/FS STN M4x10	
205	000-P00416-W	M SCR PH W/FS M4x16	
206	050-F00400	FLG NUT M4	
207	000-T00416-0B	M SCR TH BLK M4x16	
208	068-441616-0B	FLT WSHR BLK 4.4-16x1.6	
209	000-T00425-0B	M SCR TH BLK M4x25	
210	000-T00408-0B	M SCR TH BLK M4x8	
301	600-8205	AC CABLE CONNECT TYPE 15A W/E	
401	SGM-4111Z	KEY BAG	
402	220-5793-2-A001	KEY MASTER A001	
403	514-5176-10000	FUSE SG5063 5x20 10A 250V	
404	600-7269-1000	ASSY LAN CABLE 1000CM	
405	610-0880	ASSY TOUCH PANEL TEST TOOL	
406	MMT-0010	OPTION BRKT	
407	421-14274	INSTR SH MMT OPTION PARTS	

am.sega.jp

(2) MMT-1000 (D-1/3)
ASSY CABINET 1P

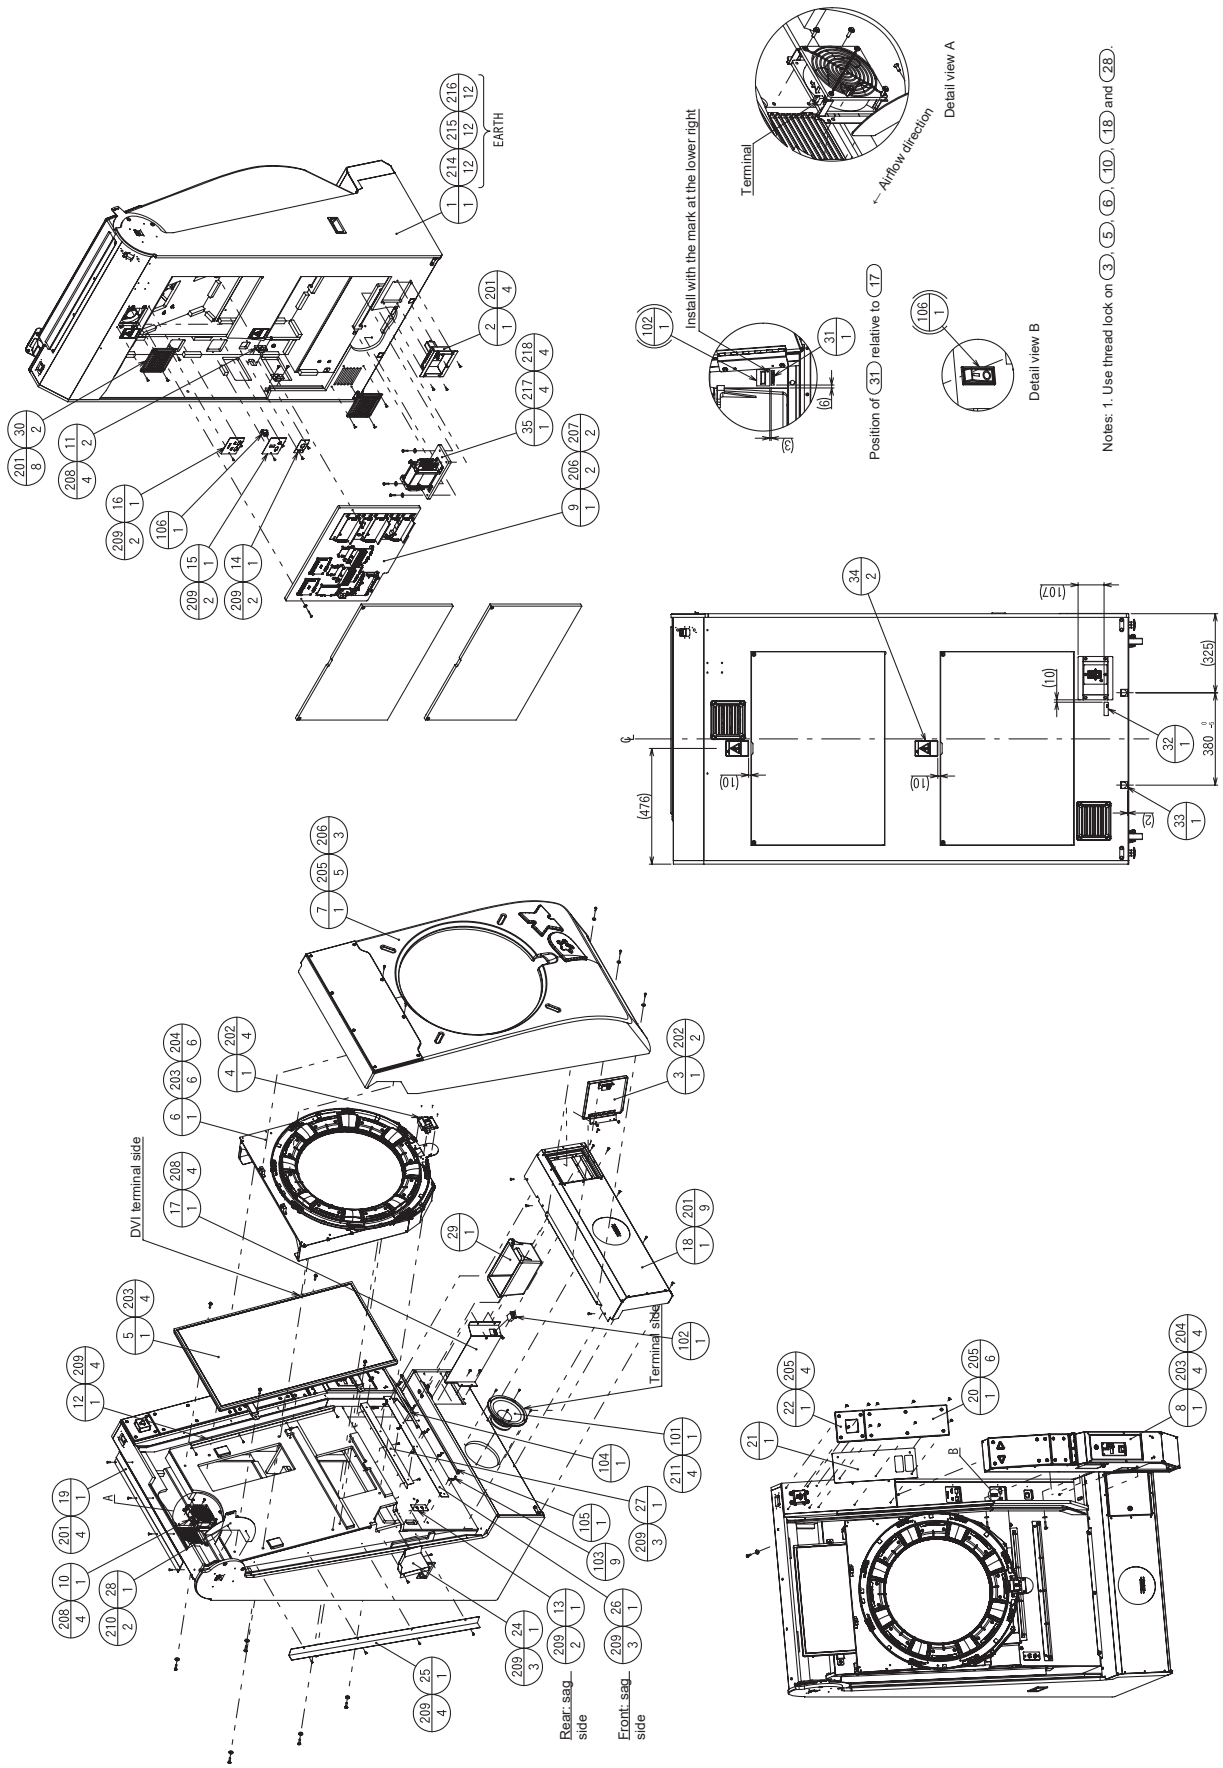

(2) MMT-1000 (D-2/3)
ASSY CABINET 1P

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1001	ASSY SUB CABINET 1P	
2	MMT-1050	AC UNIT	
3	MMT-1060	ASSY CASH BOX DOOR	
4	MMT-1070	ASSY HEADPHONE JACK COVER	
5	MMT-1100	ASSY LCD	
6	MMT-1200	ASSY SW BASE 1P	
7	MMT-1300	ASSY FRONT COVER 1P	
8	MMT-1400	ASSY CENTER TOWER	
9	MMT-4100	ASSY ELEC BD	
10	610-0963	ASSY DC 12V FAN 120MM	
11	MMT-1020	JOINT PIN 1P BRKT	
12	MMT-1021	CABINET EDGE COVER	
13	MMT-1022	FRONT LED CONN PLATE	
14	MMT-1023	CENTER TOWER CONN BRKT LOWER	
15	MMT-1024	CENTER TOWER CONN BRKT MIDDLE	
16	MMT-1025	CENTER TOWER CONN BRKT UPPER	
17	MMT-1026	COIN METER BRKT	
18	MMT-1027	FOOT COVER 1P	
19	MMT-1028	FRONT COVER SASH	
20	MMT-1029	CENTER PLATE LOWER	
21	MMT-1030	CENTER SHEET LOWER	
22	MMT-1031	CENTER PLATE UPPER	
24	MMT-1033	CABINET INNER REFLECTOR 1P	
25	MMT-1034	CABINET INNER REFLECTOR REAR	
26	MMT-1035	FRONT LED BRKT LOWER	
27	MMT-1036	FRONT LED BRKT UPPER	
28	MMT-1037	SIDE COVER REFLECTOR 1P	
29	253-5417	CASH BOX LOW	
30	253-5460-01	AIR VENT BLACK	
31	421-6591-01	STICKER COIN METER	
32	421-9107-92-153	STICKER UNIT WEIGHT 153KG	
33	421-11416	STICKER CAUTION FORK	
34	440-WS0002YJP	STICKER W POWER OFF	
35	MMT-4200	ASSY XFMR	
101	130-5280-01	WOOFER 4OHM 80W	
102	220-5798-01	MAG CNTR 4P MZ674-DC5V-D41 JC	
103	280-8001	CLAMP LWSM-0511 CLEAR NIX	
104	390-7244-0525	LED TAPE WHITE M3528W-A 0525MM	
105	390-7244-0675	LED TAPE WHITE M3528W-A 0675MM	
106	509-6386-V-B	SW ROCKER V-B CF-LA-2KZ2-5C	
107	280-7892	CORD CLAMP TL-19AN	
108	280-6676	CORD CLAMP TL-25A TKK	
109	280-5207	HARNESS LUG CC-1005	
110	280-5275-SR10	CORD CLAMP SR10	

(2) MMT-1000 (D-3/3)
ASSY CABINET 1P

Ref. No.	Part No.	Part Name	Remarks
201	000-T00416-0B	M SCR TH BLK M4x16	
202	000-P00408-W	M SCR PH W/FS M4x8	
203	030-000630-WB	HEX BLT W/FS BLK M6x30	
204	068-652016	FLT WSHR 6.5-20 X1.6	
205	FAS-080040	TMP PRF SCR PH W/FS STN M4x20	
206	068-441616-0C	FLT WSHR CRM 4.4-16x1.6	
207	000-P00435-S	M SCR PH W/S M4x35	
208	000-P00416-W	M SCR PH W/FS M4x16	
209	011-T03512	TAP SCR TH 3.5x12	
210	000-F00412-0B	M SCR FH BLK M4x12	
211	FAS-110032	TAP SCR PH #1 BLK 4x12	
212	011-F00312	TAP SCR #1 FH 3x12	
213	000-P00308-W	M SCR PH W/FS M3x8	
214	060-F00400	FLT WSHR M4	
215	060-S00400	SPR WSHR M4	
216	050-H00400	HEX NUT M4	
217	000-P00535-S	M SCR PH W/S M5x35	
218	068-552016	FLT WSHR 5.5-20 X1.6	
301	MMT-6001	ASSY WIRE 1P	
303	MMT-60004	WH AC 2	
304	MMT-60029	WH EXT WHITE LED 1P	
305	MMT-60033	WH EXT FAN 1P	
308	600-8206-100	CA USB A-A(FEM) FOR PNL 100CM	
309	600-8206-200	CA USB A-A(FEM) FOR PNL 200CM	
310	600-8272-100	CA USB3.0 A-A(F) FOR PNL 100CM	
311	600-8310-0200	CA HDMI/M TO DVI-D/M L=2M	
312	600-8292-050	USB CABLE A-MINI B 050CM K	

am.sega.jp

(3) MMT-1001
ASSY SUB CABINET 1P

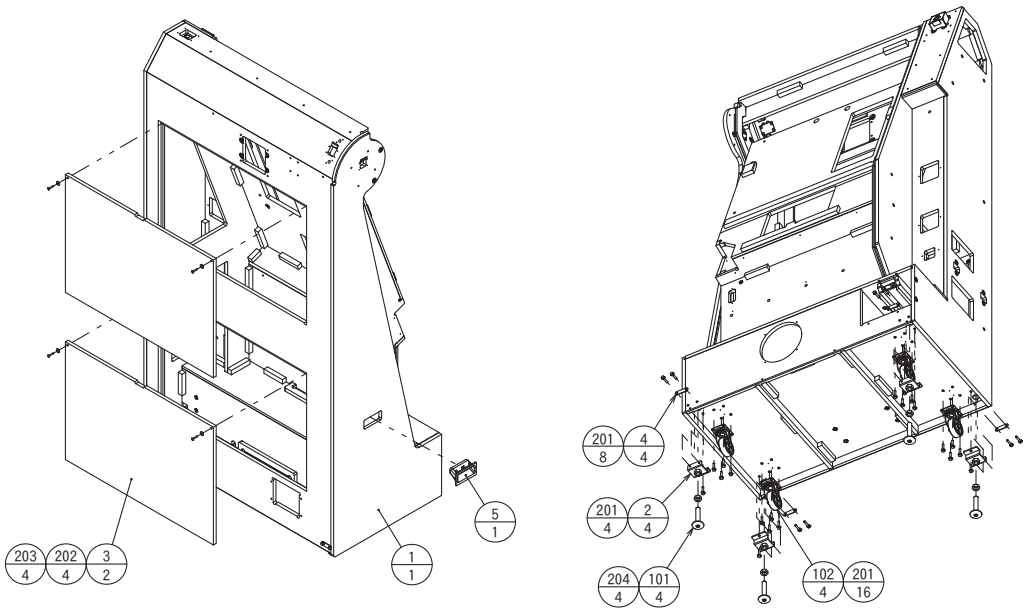

Notes: 1. Tighten (101) to a torque of 11 ± 1 N·m.

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1002	CABINET 1P	
2	MMT-1007X	LEG BRKT	
3	MMT-1008	BACK DOOR 1P	
4	117-5233-91	PLATE LEG BRACKET BLACK	
5	253-5396-91	CABINET HANDLE	
101	601-5699X	LEG ADJUSTER BOLT M16x75	
102	601-11223	CASTER 75 PAU	
201	030-000630-WB	HEX BLT W/FS BLK M6x30	
202	000-T00425-0B	M SCR TH BLK M4x25	
203	068-441616-0B	FLT WSHR BLK 4.4-16x1.6	
204	050-H01600-3	HEX NUT TYPE3 M16	

am.sega.jp

(4) MMT-1002 CABINET 1P

(D-1/2)

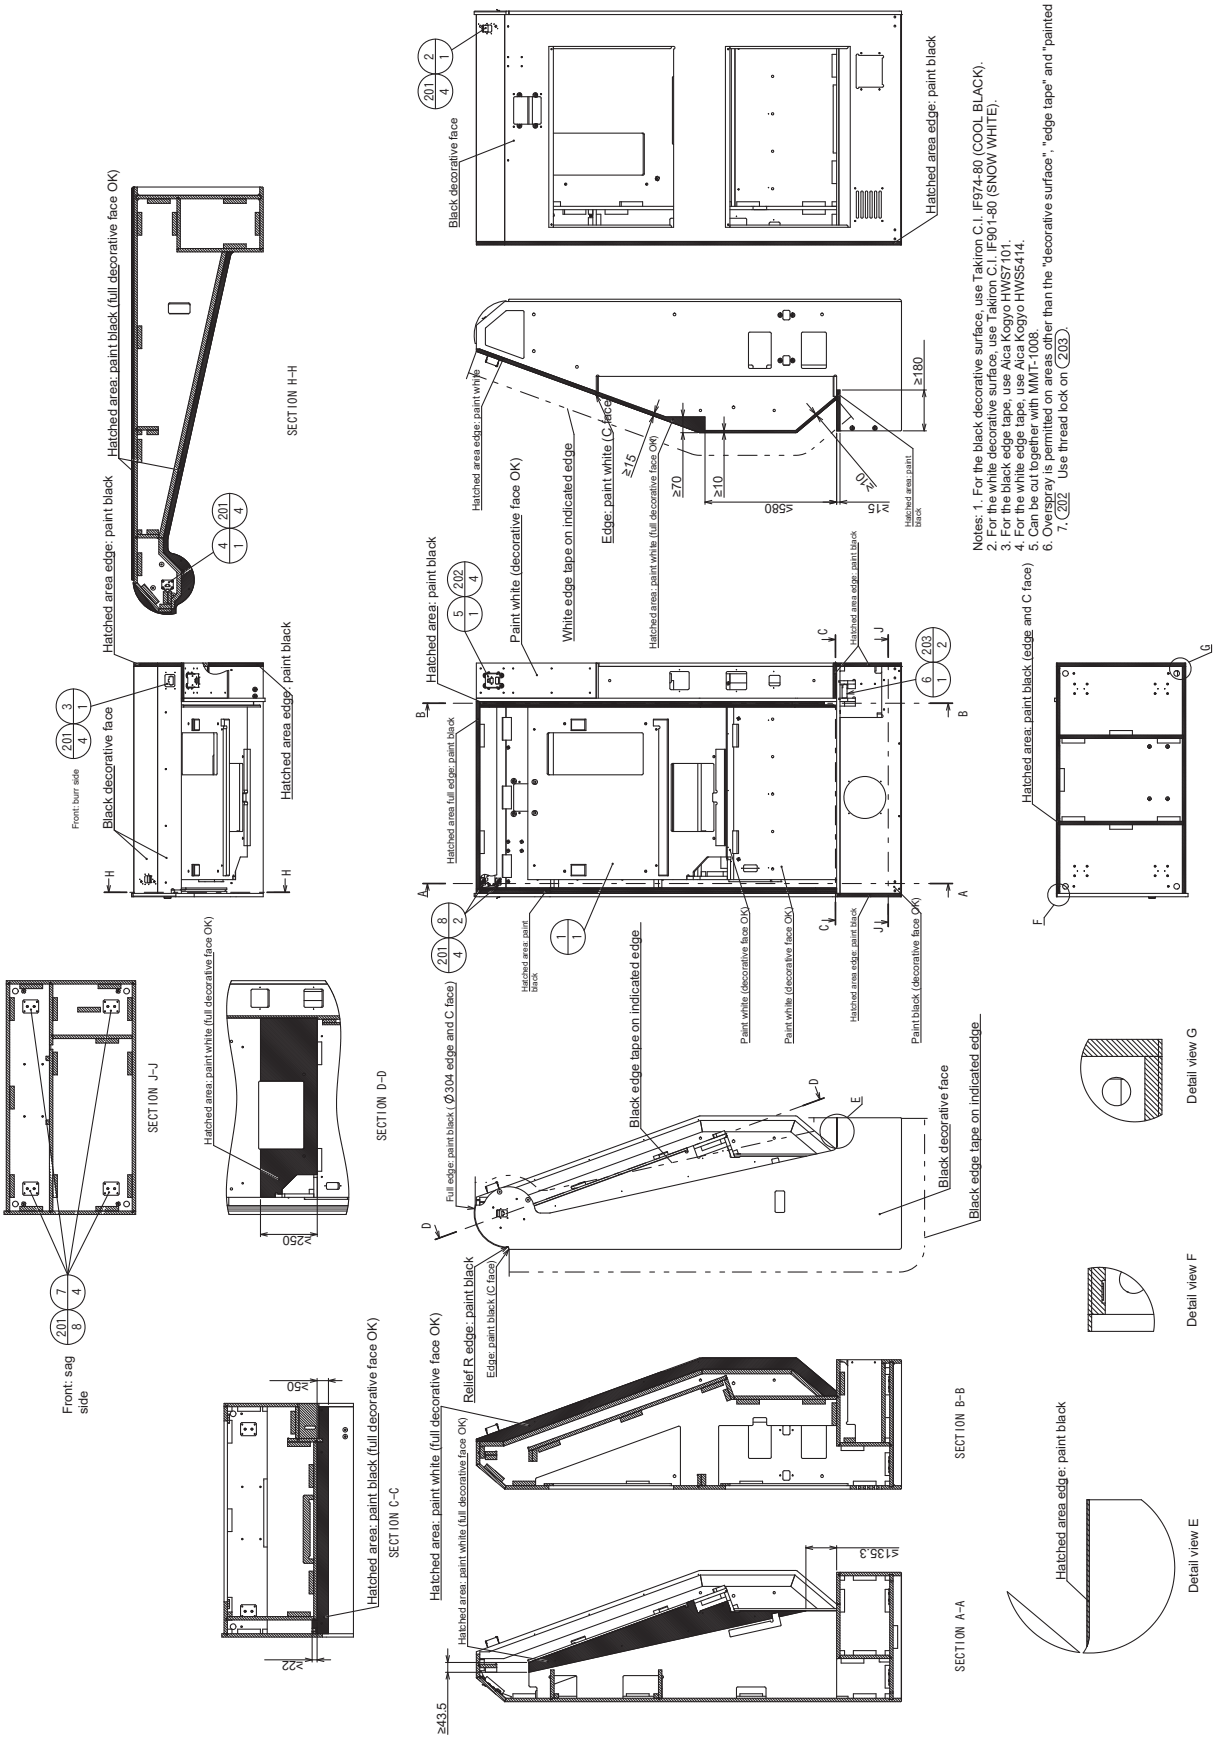

am.sega.jp

(4) MMT-1002 CABINET 1P (D-2/2)

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1002-A	CABINET 1P BLANK	
2	MMT-1003	BILLBOARD HOLD BRKT	
3	MMT-1004	BILLBOARD CONN PLATE	
4	MMT-1005	SIDE COVER BASE CONN BRKT	
5	MMT-1006	PLAYER CAMERA CONN BRKT	
6	CNI-1008X	LOCK BRKT	
7	CTF-1104	CASTER NUT PLATE	
8	117-5463	NUT PLATE M8	
201	011-T03512	TAP SCR TH 3.5x12	
202	000-P00416-W	M SCR PH W/FS M4x16	
203	000-P00425-W	M SCR PH W/FS M4x25	

(5) MMT-1050
AC UNIT

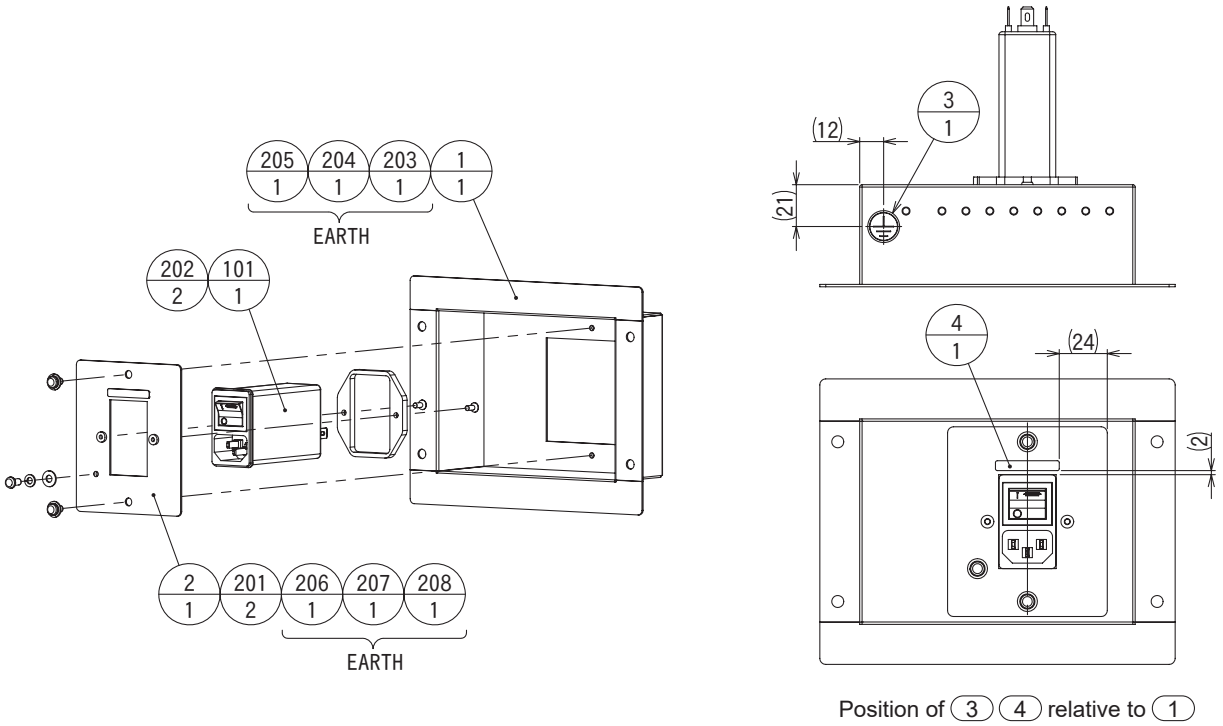

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1051	AC UNIT BASE	
2	ONG-1171	AC PLATE	
3	421-8202	STICKER EARTH MARK	
4	421-14157-10000	STICKER FUSE SG5063 T 10A	
101	270-5179-10	NOISE FILTER FN9280E-10-06	
102	514-5176-10000	FUSE SG5063 5x20 10A 250V	
201	000-P00408-W	M SCR PH W/FS M4x8	
202	000-F00308	M SCR FH M3x8	
203	060-F00400	FLT WSHR M4	
204	060-S00400	SPR WSHR M4	
205	050-H00400	HEX NUT M4	
206	FAS-600033	FLT WSHR STN M4	
207	FAS-600040	SPR WSHR STN M4	
208	FAS-000266	M SCR PH STN M4x8	
301	MMT-60001	WH AC UNIT	
302	MMT-60002	WH AC UNIT EARTH	

(6) MMT-1060
ASSY CASH BOX DOOR

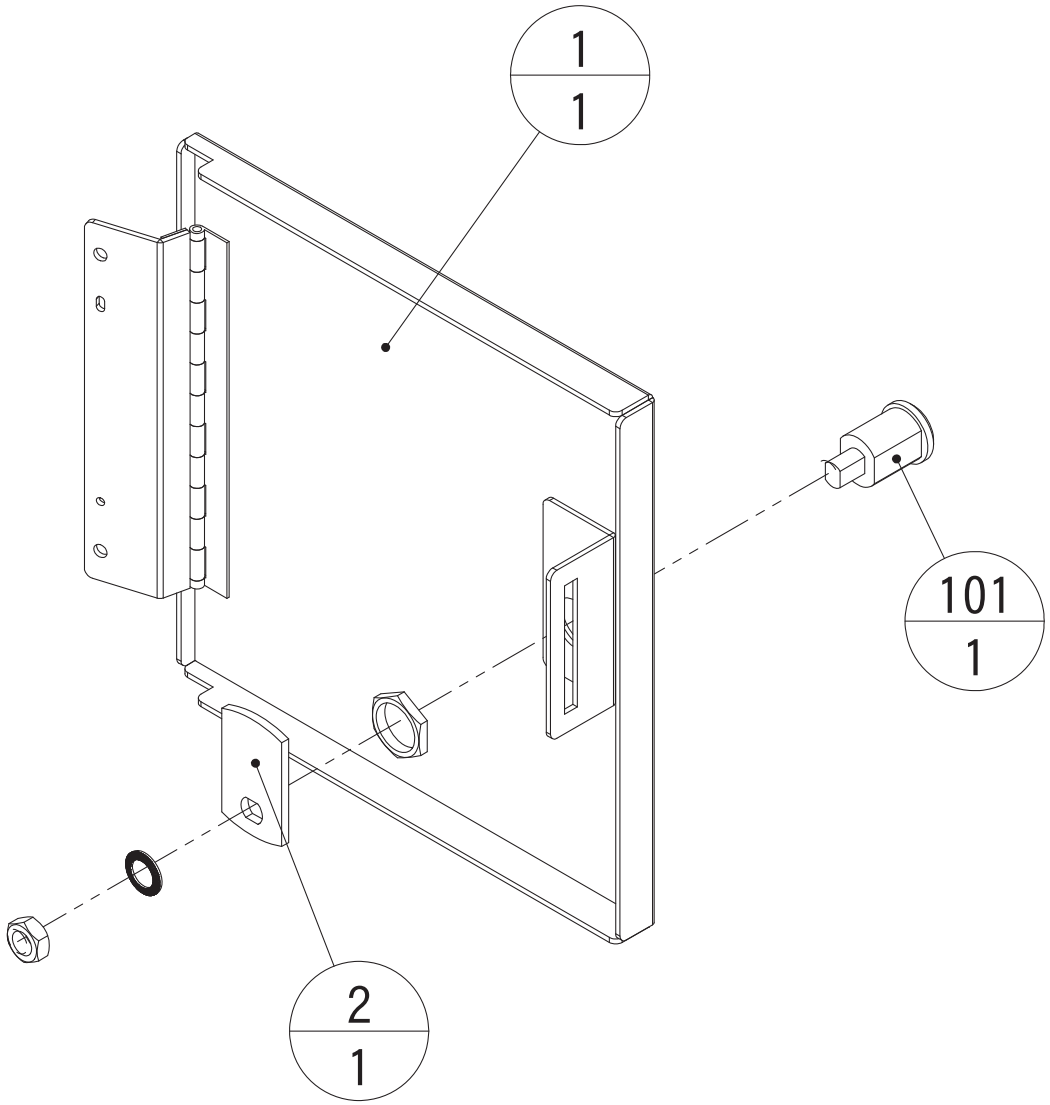

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1061	CASH BOX DOOR	
2	DP-1167	TNG LKG	
101	220-5794	CLY LOCK W/KEYS	

(7) MMT-1070
ASSY HEADPHONE JACK COVER

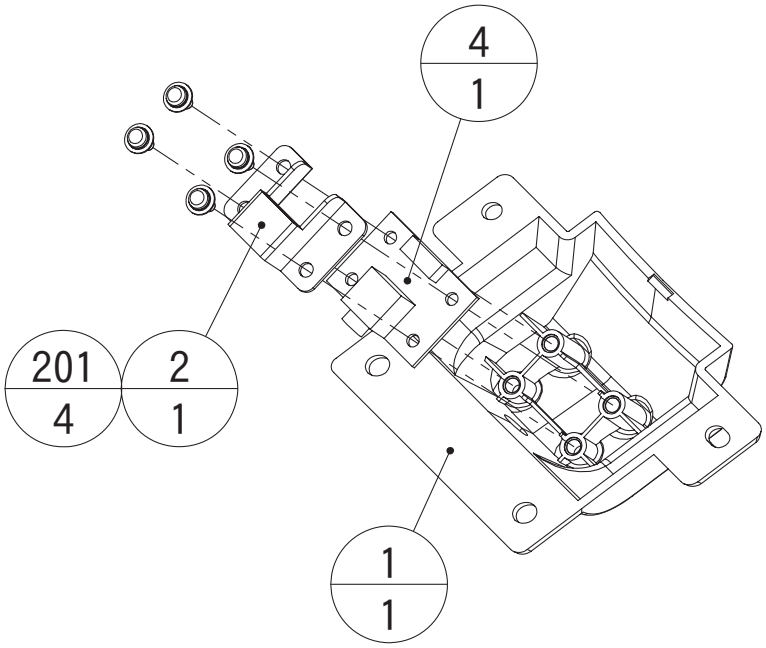

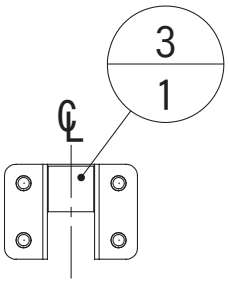

Position of (3) relative to (2)

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1071	HEADPHONE JACK COVER	
2	SRA-1903	HEADPHONE JACK HOLDER	
3	SRA-1906	HEADPHONE JACK HOLDER CUSHION	
4	837-20015	HEADPHONE JACK BD	
201	FAS-000159	M SCR PH W/SMALL FS M3x8	

(8) MMT-1100
ASSY LCD

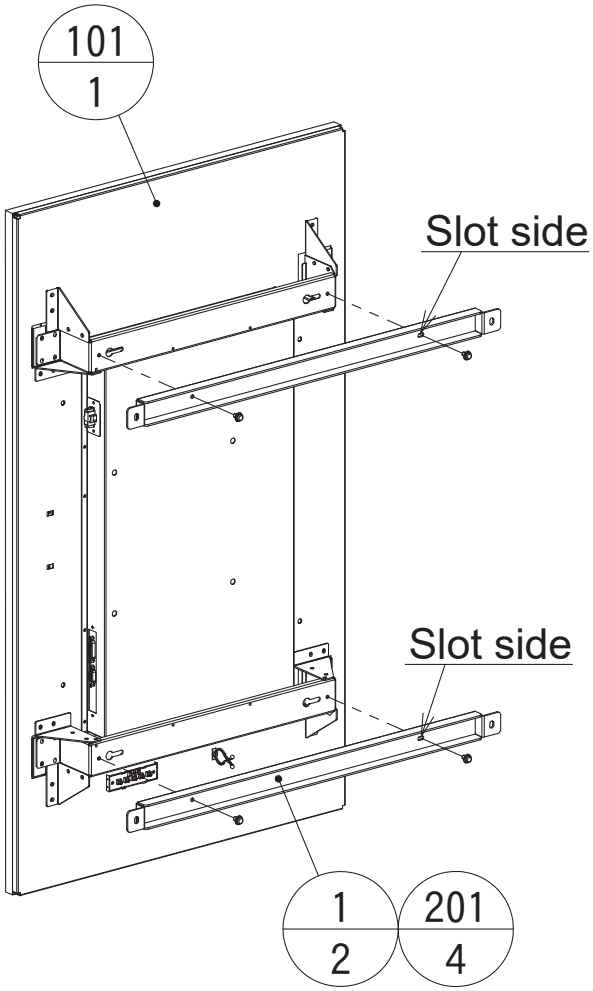

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1101	LCD BRKT	
101	200-6280	LCD DSPL 43 LED 6500K/9300K Y	
201	000-P00510-W	M SCR PH W/FS M5x10	

(9) MMT-1200 (D-1/2)
ASSY SW BASE 1P

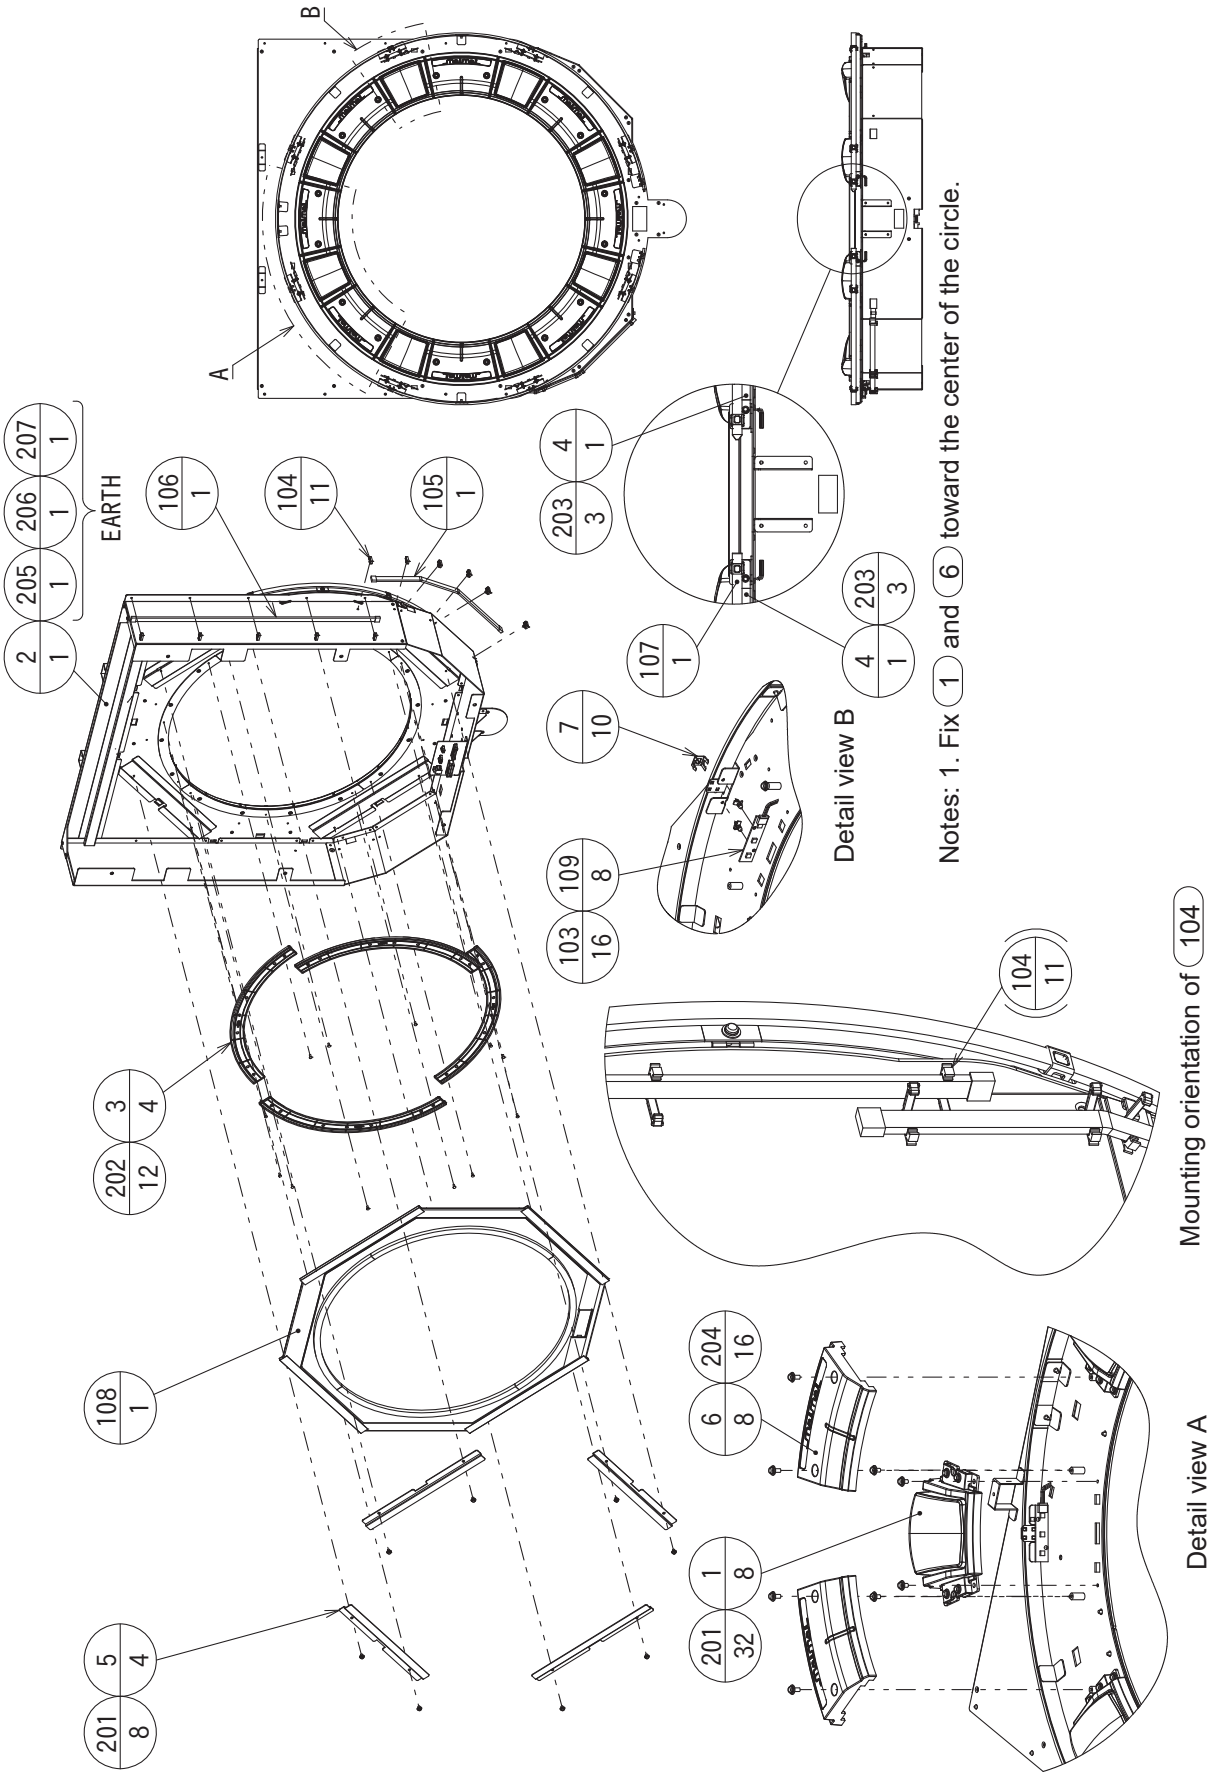

am.sega.jp

(9) MMT-1200 (D-2/2)
ASSY SW BASE 1P

Ref. No.	Part No.	Part Name	Remarks
1	MMT-2000	ASSY BUTTON SWITCH	
2	MMT-1201	SW BASE	
3	MMT-1202	TOUCH PANEL SPACER	
4	MMT-1203	TAPE LED SUPPORT	
5	MAI-1203	PANEL SASH	
6	MAI-1206X	SW COVER	
7	253-5748	TAPE LED HOLDER	
101	280-5275-SR10	CORD CLAMP SR10	
102	280-7892	CORD CLAMP TL-19AN	
103	280-7896-05	SPACER WN-05G (HIROSUGI)	
104	280-8001	CLAMP LWSM-0511 CLEAR NIX	
105	390-7244-0350	LED TAPE WHITE M3528W-A 0350MM	
106	390-7244-0525	LED TAPE WHITE M3528W-A 0525MM	
107	390-7244-2325	LED TAPE WHITE M3528W-A 2325MM	
108	509-6483	TOUCH SENSOR UNIT TPK	
109	838-15235-01	LED BD RGB 3x1BLOCK 5050	
201	000-P00408-W	M SCR PH W/FS M4x8	
202	000-F00308	M SCR FH M3x8	
203	FAS-000159	M SCR PH W/SMALL FS M3x8	
204	FAS-080036	TMP PRF SCR PH W/FS STN M4x10	
205	060-F00400	FLT WSHR M4	
206	060-S00400	SPR WSHR M4	
207	050-H00400	HEX NUT M4	
301	MMT-60036	WH SW BASE LED	
302	MMT-60037	WH SW BASE SENSOR	
303	MMT-60038	WH TOUCH SENSOR	
304	MMT-60039	WH BODY LED	
305	MMT-60041	WH HEADPHONE JACK	

am.sega.jp

(10) MMT-2000
ASSY BUTTON SWITCH

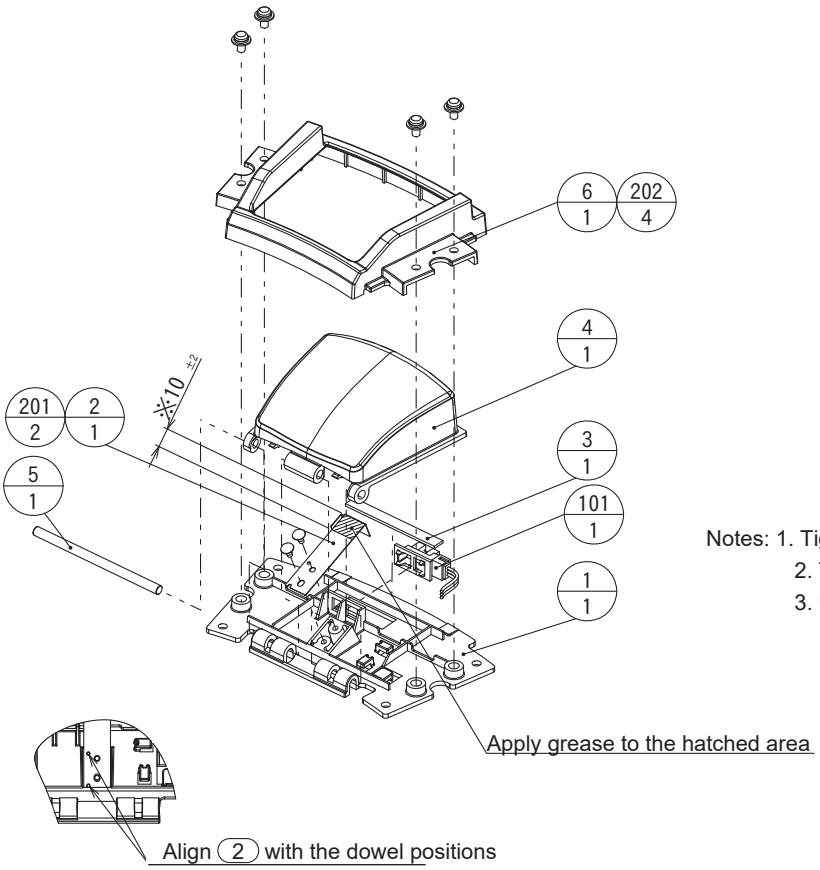

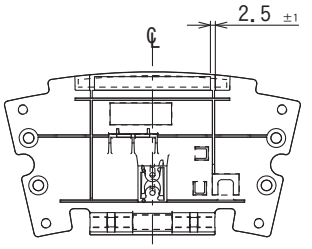

Detail of position of 3

Notes: 1. Tighten 2 to a torque of 0.7 ± 0.05 N·m.
2. Tighten 6 to a torque of 1.5 ± 0.1 N·m.
3. Use SOLVEST® 248 grease.

Ref. No.	Part No.	Part Name	Remarks
1	MAI-2001X	SW PLATE	
2	MMT-2001	SW SPRING	
3	MMT-2002	SW CUSHION	
4	MAI-2004X	SW BUTTON	
5	MAI-2005	SW SHAFT	
6	MAI-2006X	SW BEZEL	
101	370-5359	PHOTO INTERRUPTER OJ-535S-A5	
201	FAS-120028	TAP SCR TH #2 3x8	
202	000-P00408-W	M SCR PH W/FS M4x8	
301	MAI-60305	WH SENSOR	

am.sega.jp

(11) MMT-1300
ASSY FRONT COVER 1P

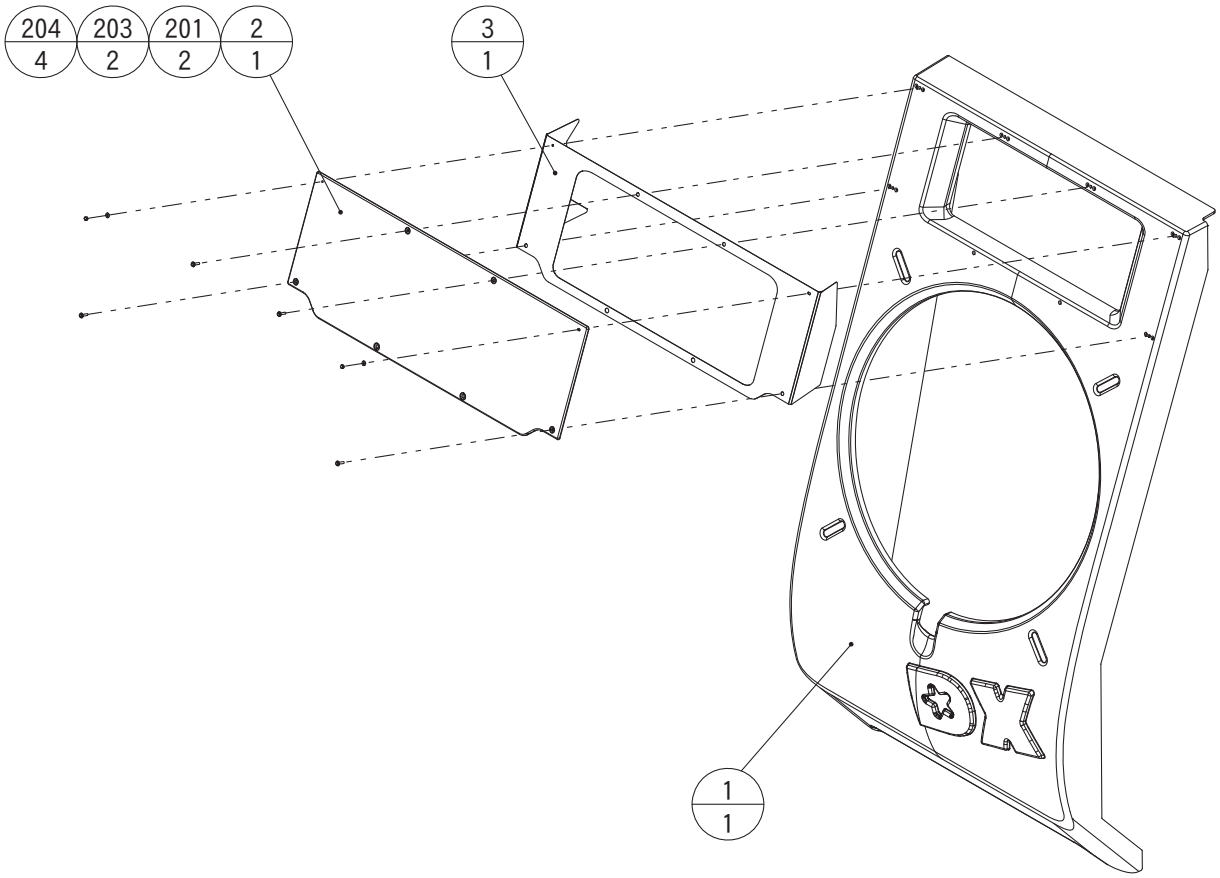

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1310	FRONT COVER 1P	
2	MMT-1301	SUB MONITOR PLATE	
3	MMT-1302	FRONT COVER SHEET 1P	
201	FAS-600033	FLT WSHR STN M4	
203	050-C00400-3C	CAP NUT TYPE3 CRM M4	
204	FAS-080040	TMP PRF SCR PH W/FS STN M4x20	

(12) MMT-1310
FRONT COVER 1P

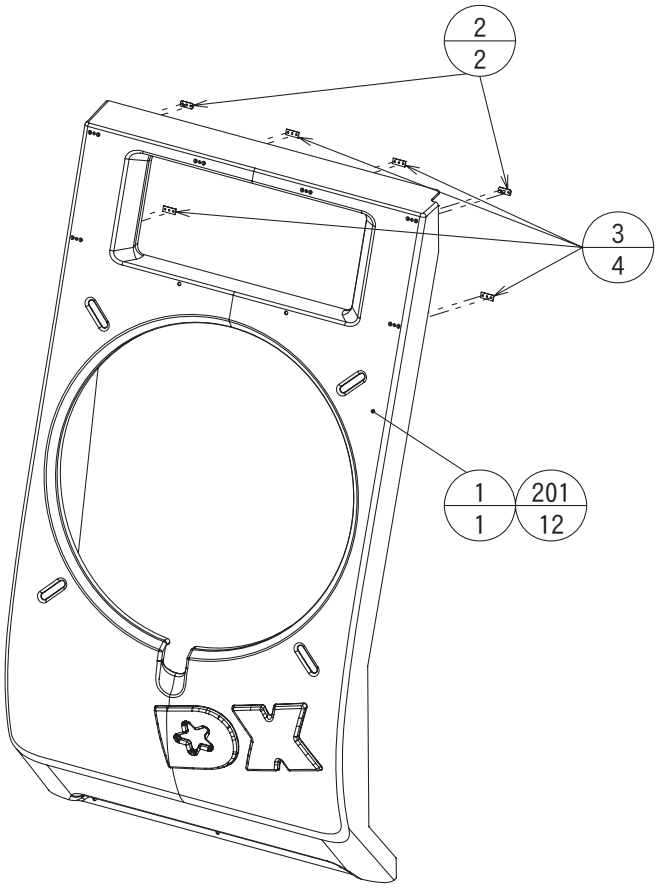

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1311	FRONT COVER 1P BLANK	
2	MMT-1312	STUD PLATE	
3	TX-1029X-A	NUT PLATE	

(13) MMT-1400 (D-1/2)
ASSY CENTER TOWER

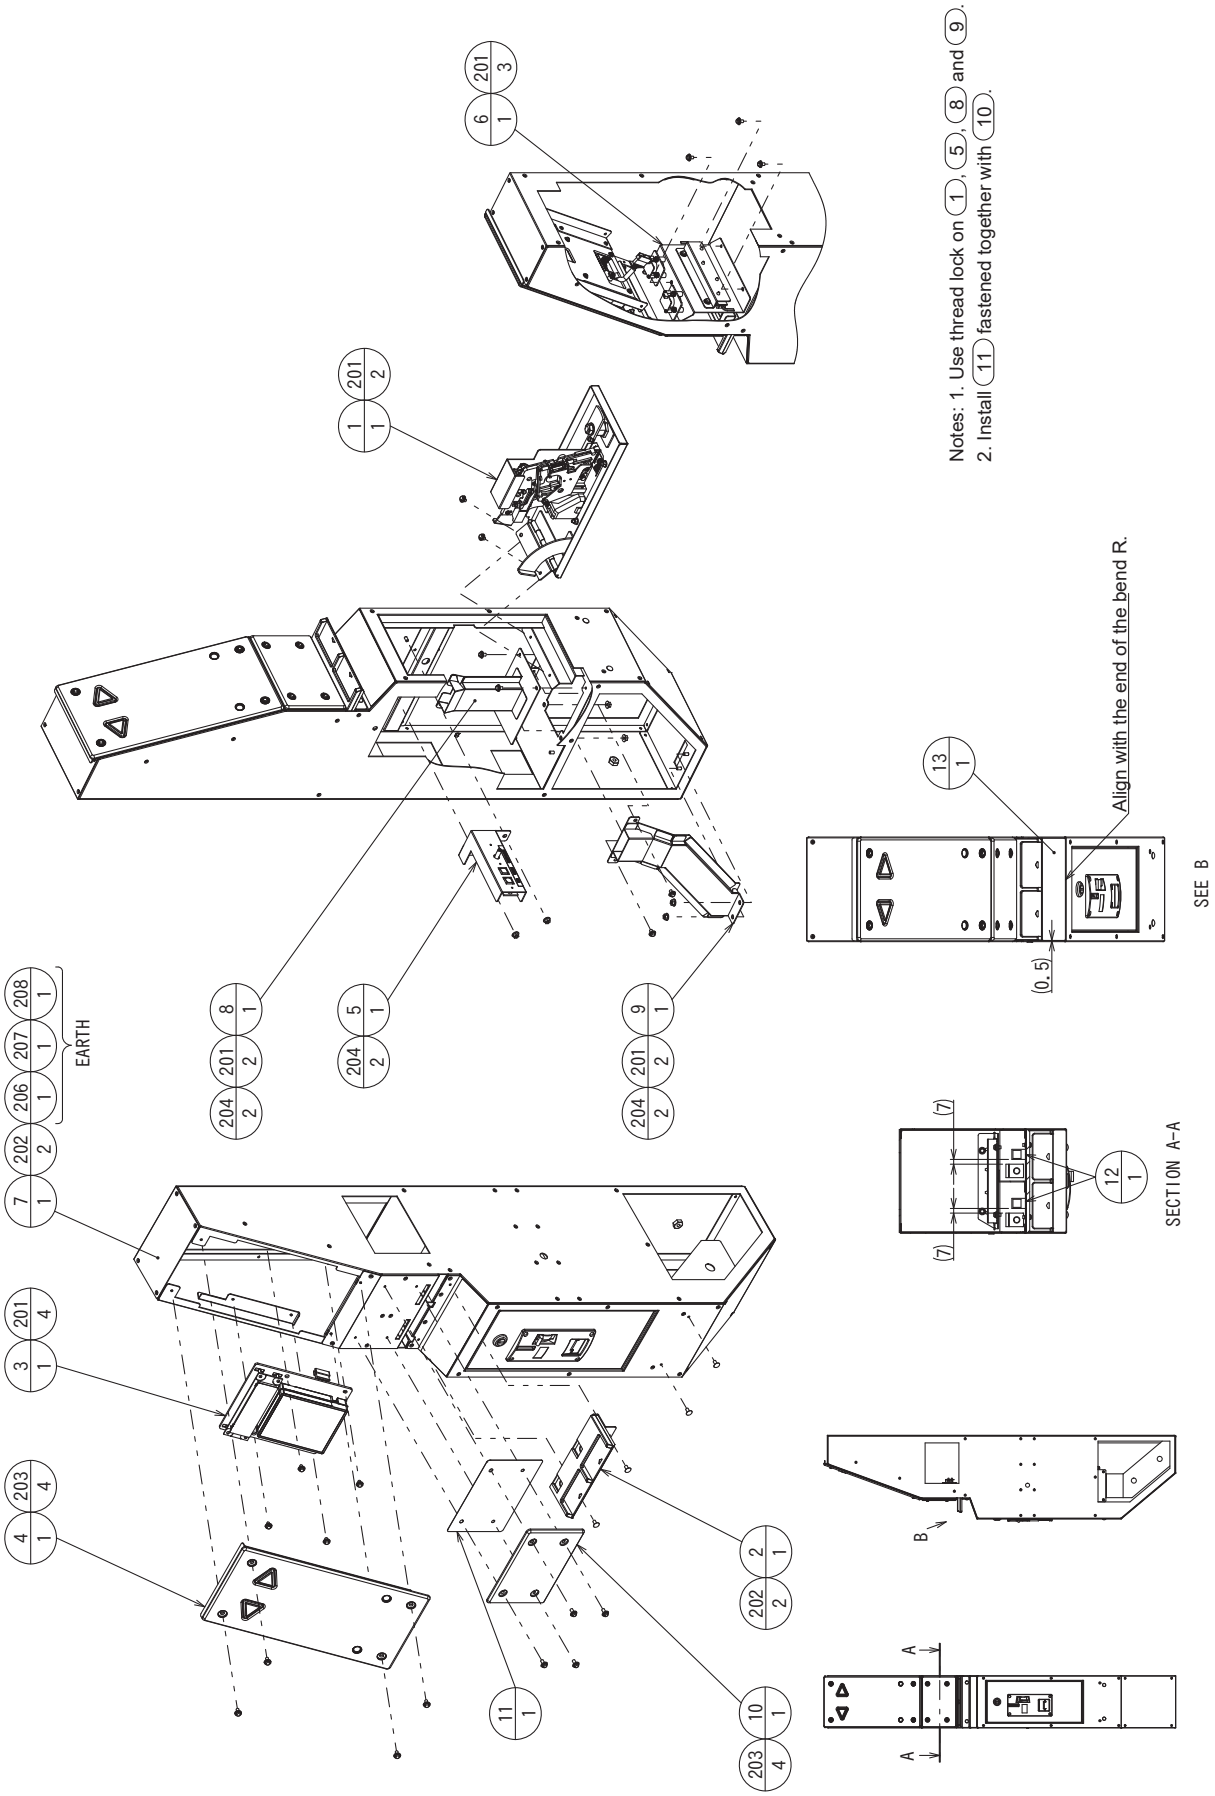

(13) MMT-1400 (D-2/2)
ASSY CENTER TOWER

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1420	ASSY SELECTOR DOOR	
2	MMT-1430	ASSY CARD ENTRY	
3	MMT-1440	ASSY AIME AND VFD	
4	MMT-1450	ASSY SELECT BUTTON PANEL	
5	MMT-1460	SW UNIT	
6	MMT-1470	ASSY CODE READER	
7	MMT-1401	CENTER TOWER BOX	
8	MMT-1402	COIN CHUTE UPPER	
9	MMT-1403	COIN CHUTE LOWER	
10	MMT-1404	CARD ENTRY PLATE	
11	MMT-1405	INSTR SHEET CARD ENTRY	
12	MMT-1406	STICKER CAMERA POSITION	
13	MMT-1407	STICKER CARD ENTRY	
102	280-7892	CORD CLAMP TL-19AN	
103	280-7973	REUSE LOCKING CLAMP RLWT-0.5V0	
201	000-P00408-W	M SCR PH W/FS M4x8	
202	000-T00408-0C	M SCR TH CRM M4x8	
203	FAS-080036	TMP PRF SCR PH W/FS STN M4x10	
204	050-F00400	FLG NUT M4	
206	060-F00400	FLT WSHR M4	
207	060-S00400	SPR WSHR M4	
208	050-H00400	HEX NUT M4	
301	MMT-60048	WH AIME VFD	
302	MMT-60049	WH EXT SELECT BUTTON	
303	MMT-60054	WH EXT COIN 2	

am.sega.jp

(14) MMT-1420
ASSY SELECTOR DOOR

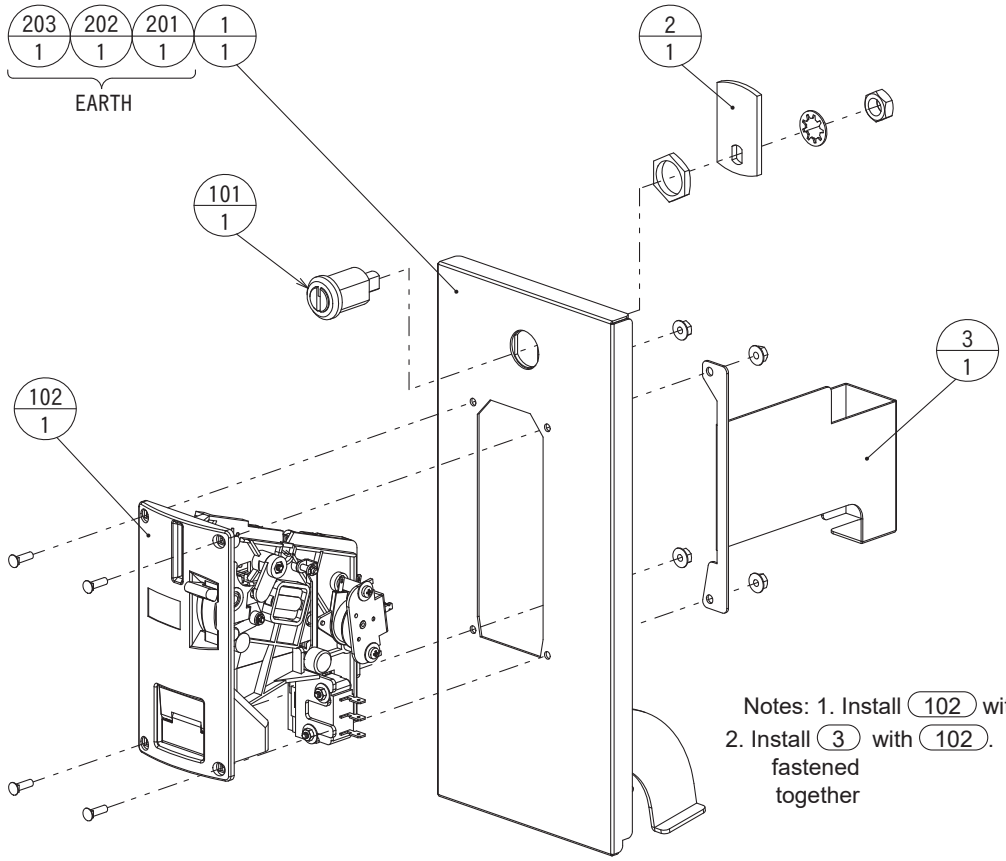

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1421	SELECTOR DOOR	
2	RVO-1112	TNG LKG VERT HOLE	
3	MAI-1422	SELECTOR COVER	
101	220-5793-1-A001	CLY LOCK MASTER W/O KEY A001	
102	220-5846-91-01	PFB-730 QL203 12VBK 100	
103	280-7892	CORD CLAMP TL-19AN	
104	280-5275-SR10	CORD CLAMP SR10	
201	060-F00400	FLT WSHR M4	
202	060-S00400	SPR WSHR M4	
203	050-H00400	HEX NUT M4	
301	MMT-60055	WH COIN	

am.sega.jp

(15) MMT-1430
ASSY CARD ENTRY

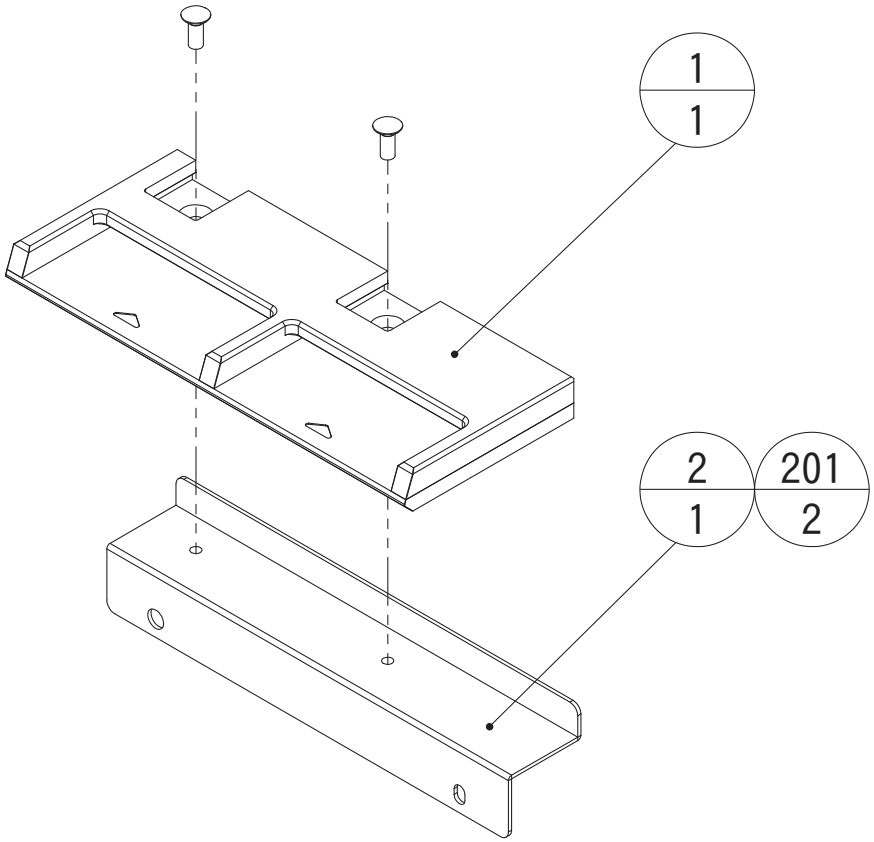

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1431	CARD ENTRY	
2	MMT-1432	CARD ENTRY BASE	
201	000-F00410-0B	M SCR FH BLK M4x10	

am.sega.jp

(16) MMT-1440
ASSY AIME AND VFD

⚠ WARNING

When handling the VFD, always turn off the power and wait 1 minute before starting work. Failure to do so may cause electric shock, short circuit or fire.

⚠ CAUTION

Wear gloves when handling the VFD. Failure to do so may cause an accident or injury.

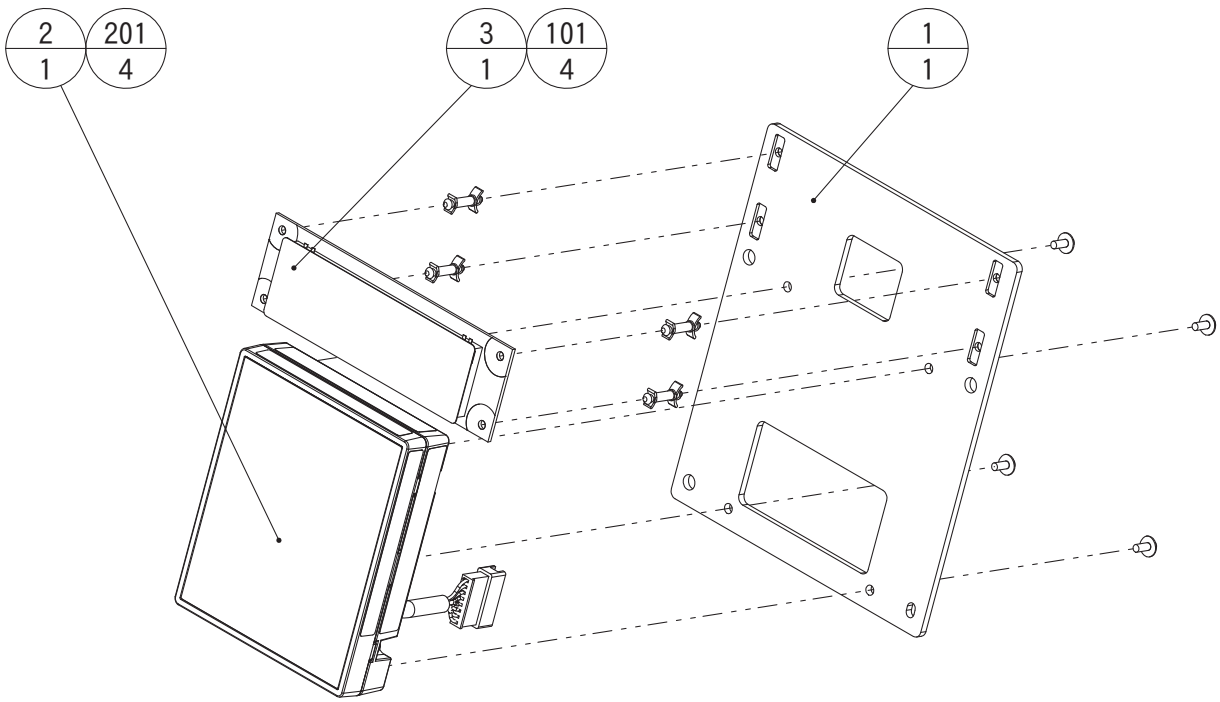

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1441	AIME AND VFD PLATE	
3	610-0959	ASSY VFD W/FILTER	
101	280-8004-13	SPACER WN-13D (HIROSUGI)	
201	000-P00308-W	M SCR PH W/FS M3x8	

(17) MMT-1450
ASSY SELECT BUTTON PANEL

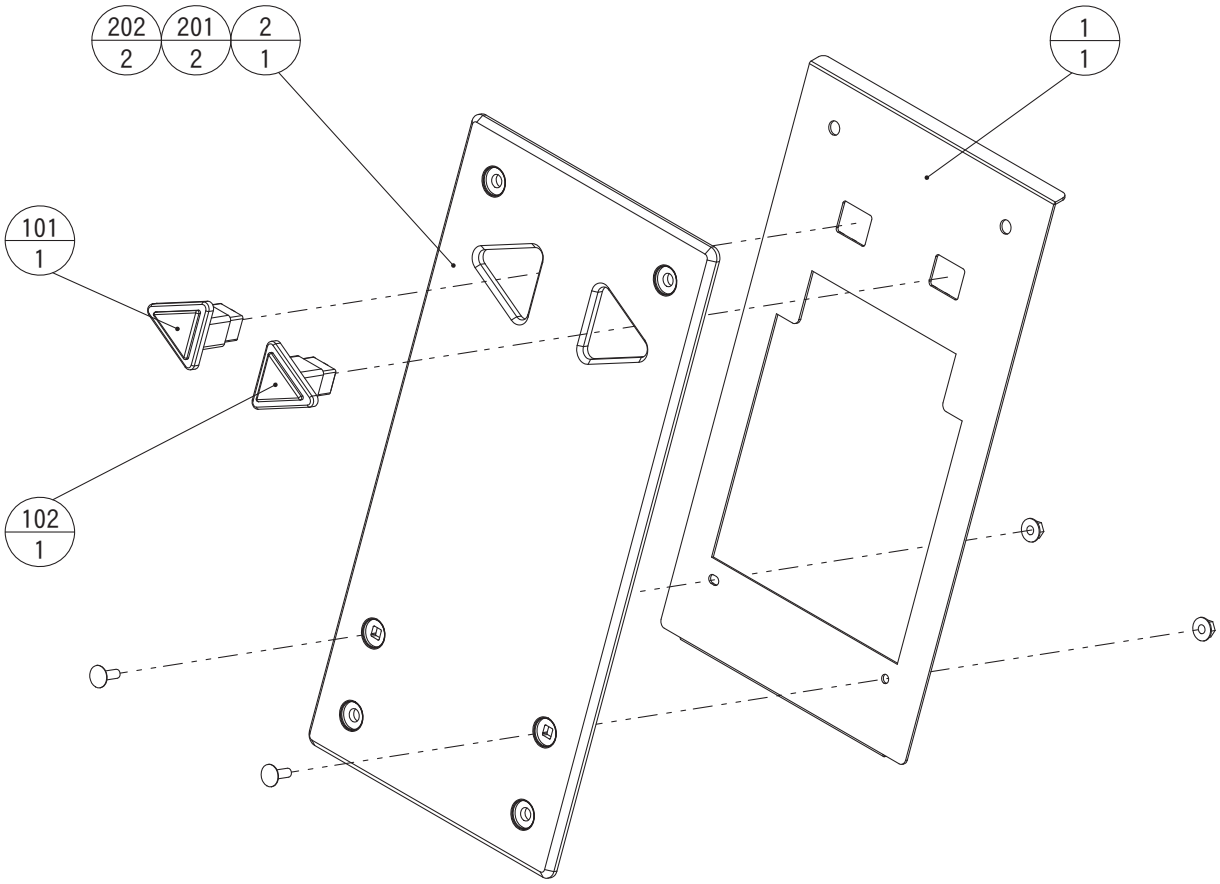

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1451	SELECT BUTTON BRKT	
2	MMT-1452	SELECT BUTTON PANEL	
101	509-5970-BL	SW PB OBSF-24TR BL	
102	509-5970-RE	SW PB OBSF-24TR RE	
103	280-5275-SR10	CORD CLAMP SR10	
201	031-000412-0C	CRG BLT CRM M4x12	
202	050-F00400	FLG NUT M4	
301	MMT-60050	WH SELECT BUTTON	

am.sega.jp

(18) MMT-1460
SW UNIT

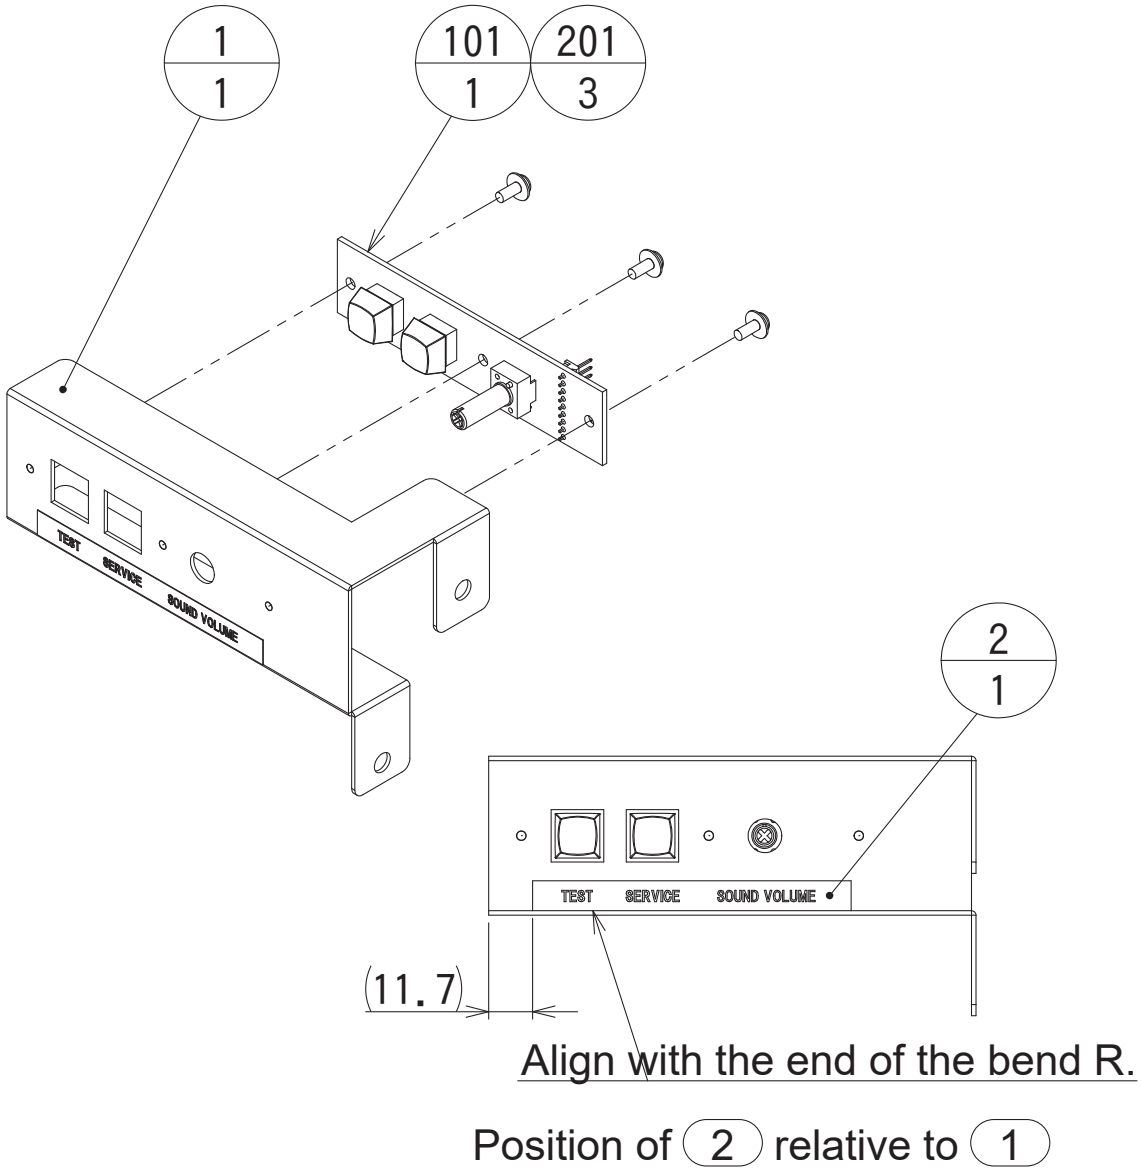

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1461	SW BRKT	
2	421-12136	STICKER SW PANEL LCA	
101	838-14548-10	SW & VOL BD	
201	000-P00308-W	M SCR PH W/FS M3x8	
301	MMT-60056	WH SW VOL	

am.sega.jp

(19) MMT-1470
ASSY CODE READER

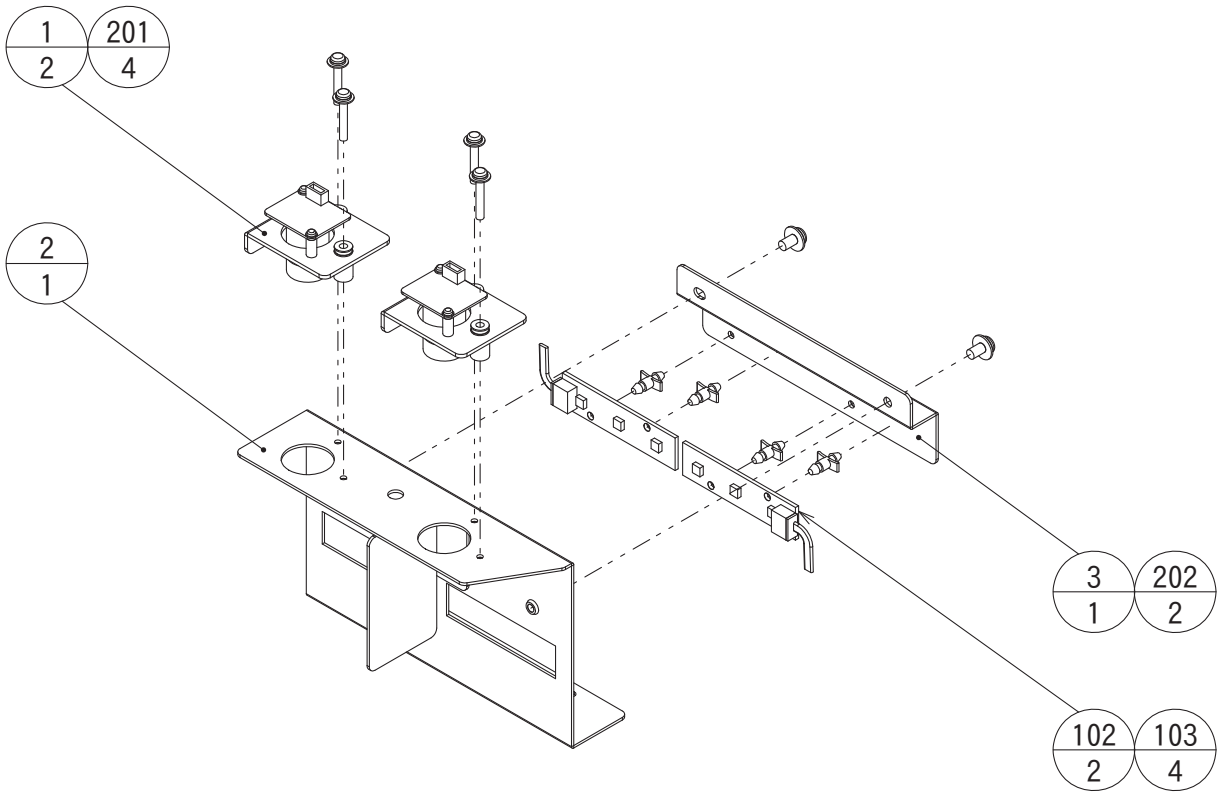

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1480	ASSY CODE READER CAMERA	
2	MMT-1471	CODE READER BRKT	
3	MMT-1472	CODE READER LED BRKT	
101	280-5275-SR10	CORD CLAMP SR10	
102	838-15235-01	LED BD RGB 3x1BLOCK 5050	
103	280-7896-05	SPACER WN-05G (HIROSUGI)	
201	000-P00320-W	M SCR PH W/FS M3x20	
202	000-P00408-W	M SCR PH W/FS M4x8	
301	MMT-60051	WH CODE READER LED	
302	600-8295	USB CABLE A-SHR5	

am.sega.jp

(20) MMT-1480
ASSY CODE READER CAMERA

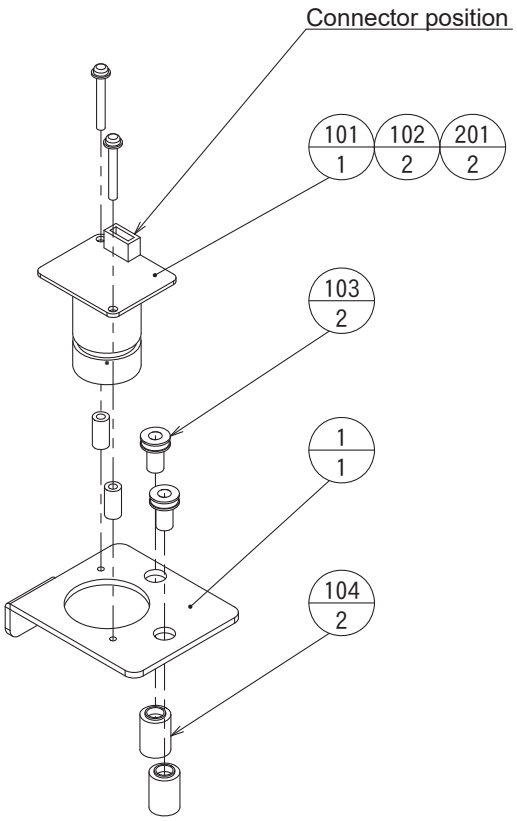

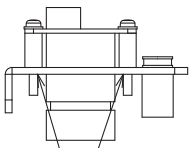

After fastening, apply thread lock to the screw tip.

Notes: 1. Tighten (101) to a torque of 0.11 ± 0.01 N·m.

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1481	CODE READER CAMERA BRKT	
101	601-13216	USB CAMERA MS-M33NU2AMSH43-S1	
102	601-11770-2408	SPACER M2 HIROSUGI C-2008-4	
103	280-5247	ONE TOUCH BUSHING	
104	280-5248-10	ONE TOUCH COLLAR M3 L=10	
201	FAS-000129	M SCR PH W/S M2x16	

(21) MMT-4100 ASSY ELEC BD

(D-1/2)

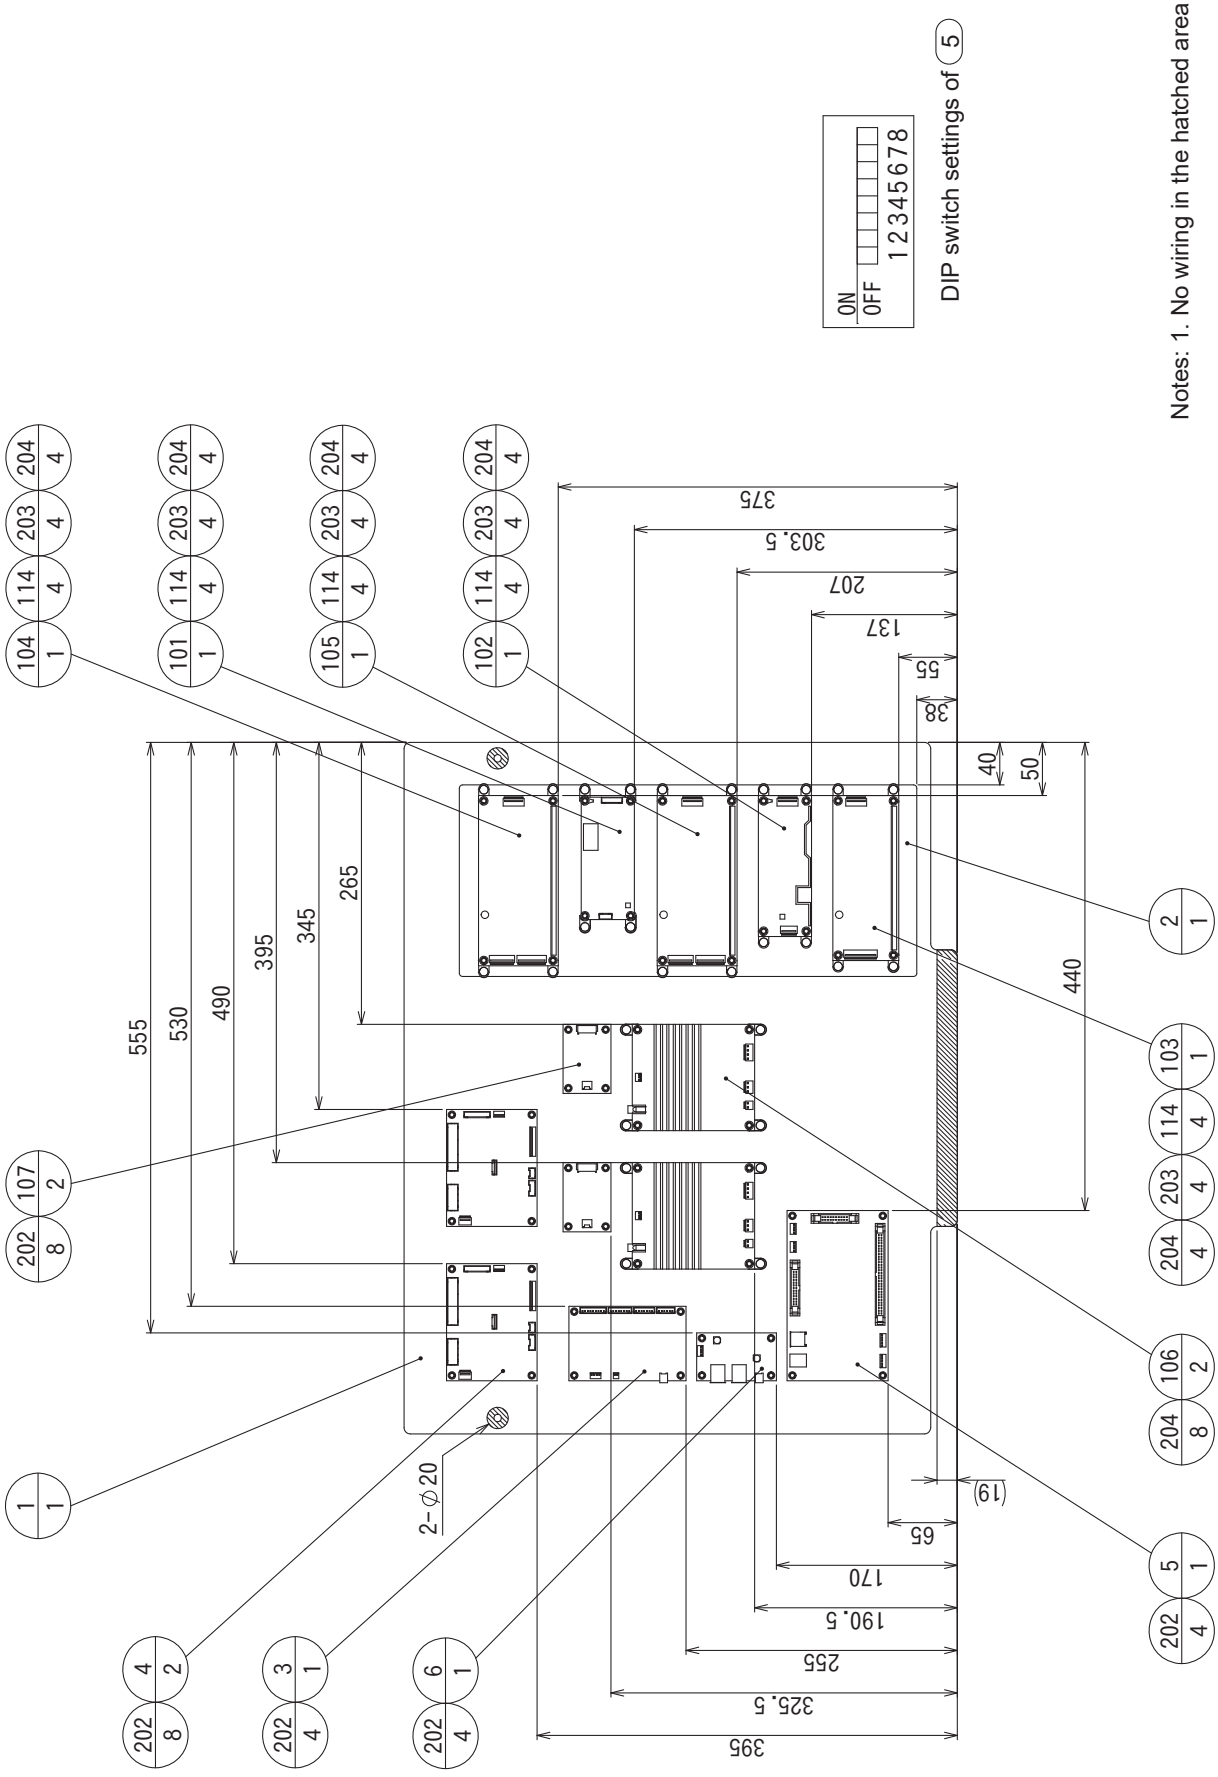

(21) MMT-4100 (D-2/2)
ASSY ELEC BD

Ref. No.	Part No.	Part Name	Remarks
1	MMT-4101	WOODEN BASE ELEC BD	
2	MMT-4103	SHIELD SHEET	
3	837-15067-02	IC BD USB TO 4SERIAL 232 IF	
4	837-15070-04	IC BD LED DRV32CH RS232	
5	837-15257-01	I/O CONTROL BD 4 FOR USB	
6	837-20008	4PORT USB HUB BD MINIB TO A	
101	400-5464-01505	SW REGU VS15C-5	
102	400-5464-03005	SW REGU VS30C-5	
103	400-5489-10012	SW REGU VS100E-12	
104	400-5489-15012	SW REGU VS150E-12	
105	400-5489-15024	SW REGU VS150E-24	
106	838-15228	2.1CH 40W STEREO AMP BD	
107	839-1363-01	HEADPHONE AMP BD SHC	
108	270-5116	FERRITE CORE TDK ZCAT2032-0930	
109	270-5117	FERRITE CORE TDK ZCAT3035-1330	
110	601-0460	PLASTIC TIE BELT 100 M/M	
111	280-7892	CORD CLAMP TL-19AN	
112	280-6676	CORD CLAMP TL-25A TKK	
113	280-5207	HARNESS LUG CC-1005	
114	280-6681	L-LOCK LT-320PCG	
201	011-T03512	TAP SCR TH 3.5x12	
202	011-P00325	TAP SCR PH 3x25	
203	000-P00308-W	M SCR PH W/FS M3x8	
204	011-T03516	TAP SCR TH 3.5x16	
205	011-F00312	TAP SCR #1 FH 3x12	
301	MMT-60009	WH SW REGU AC	
302	MMT-60010	WH AMP 24V	
303	MMT-60011	WH AMP IN	
304	MMT-60012	WH AMP OUT	
305	MMT-60013	WH AMP VOLUME	
306	MMT-60014	WH H AMP OUT 1P	
307	MMT-60015	WH H AMP OUT 2P	
308	MMT-60021	WH LED DRV 12V	
309	MMT-60022	WH I/O BD 5V	
310	MMT-60023	WH USB BD 5V	
311	MMT-60024	WH LED DRV SERIAL 1P	
312	MMT-60025	WH LED DRV SERIAL 2P	
313	MMT-60026	WH LED DRV OUT 1P	
314	MMT-60027	WH LED DRV OUT 2P	
315	MMT-60028	WH I/O BD	
316	600-8292-050	USB CABLE A-MINI B 050CM K	

(22) 610-0963
ASSY DC 12V FAN 120MM

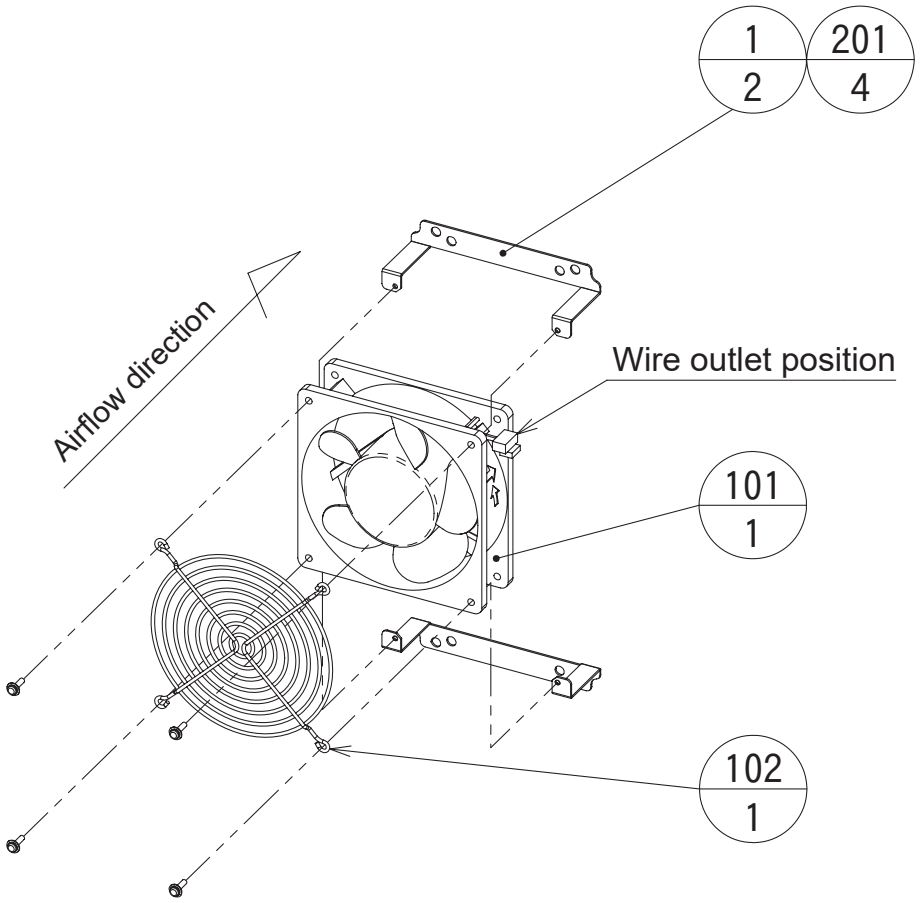

Ref. No.	Part No.	Part Name	Remarks
1	105-5561-92	FAN BRKT	
101	260-0154	FAN DC12V 11938KA-12M-EA-03	
102	601-12939	FAN GUARD 120 TOA R109-8	
102	601-12940	FAN GUARD 120 SANYO 109-019E	
102	601-8543	FAN GUARD	
201	000-P00312-W	M SCR PH W/FS M3x12	

am.sega.jp

(23) MMT-4200
ASSY XFMR

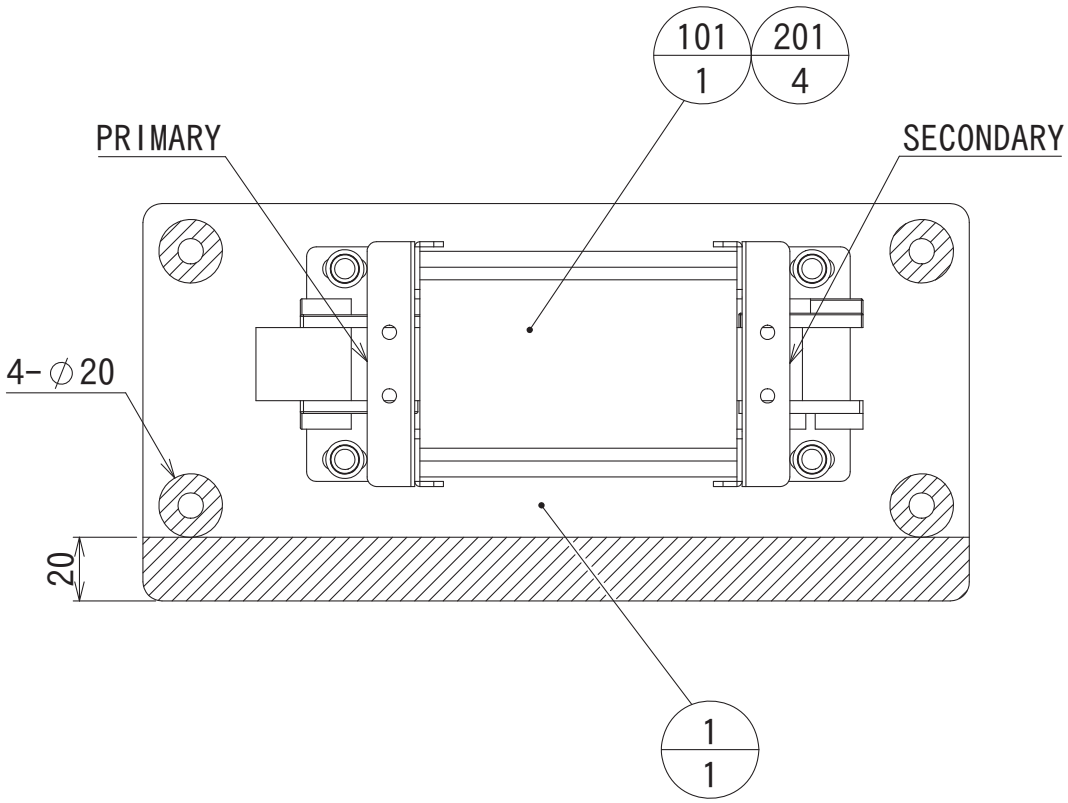

Notes: 1. No wiring in the hatched area.

Ref. No.	Part No.	Part Name	Remarks
1	MMT-4201	WOODEN BASE XFMR	
101	560-5628-V	XFMR 100-120V 100V7.5A NCW V	
102	280-7892	CORD CLAMP TL-19AN	
201	000-P00510-W	M SCR PH W/FS M5x10	
202	011-F00312	TAP SCR #1 FH 3x12	

am.sega.jp

(24) MMT-6001
ASSY WIRE 1P

This part is a bundle of wiring. There is no assembly drawing.

Ref. No.	Part No.	Part Name	Remarks
101	601-0460	PLASTIC TIE BELT 100 M/M	
102	MMT-60016	WH EXT HEADPHONE 2P 1	
103	MMT-60017	WH EXT AUDIO	
104	MMT-60030	WH EXT WHITE LED 2P 1	
105	MMT-60031	WH EXT SW BASE SENSOR 2P 1	
106	MMT-60032	WH EXT SW BASE LED 2P 1	
107	MMT-60040	WH EXT COIN 1	
108	MMT-60042	WH EXT BILLBOARD	
109	MMT-60045	WH EXT COM & DC	
110	MMT-60046	WH EXT PLAYER CAMERA LED	
111	600-7157-1650	WIRE HARN EARTH ID5 40U 1650MM	
112	600-7157-2800	WIRE HARN EARTH ID5 40U 2800MM	

am.sega.jp

(25) MMT-1350
ASSY PLAYER CAMERA

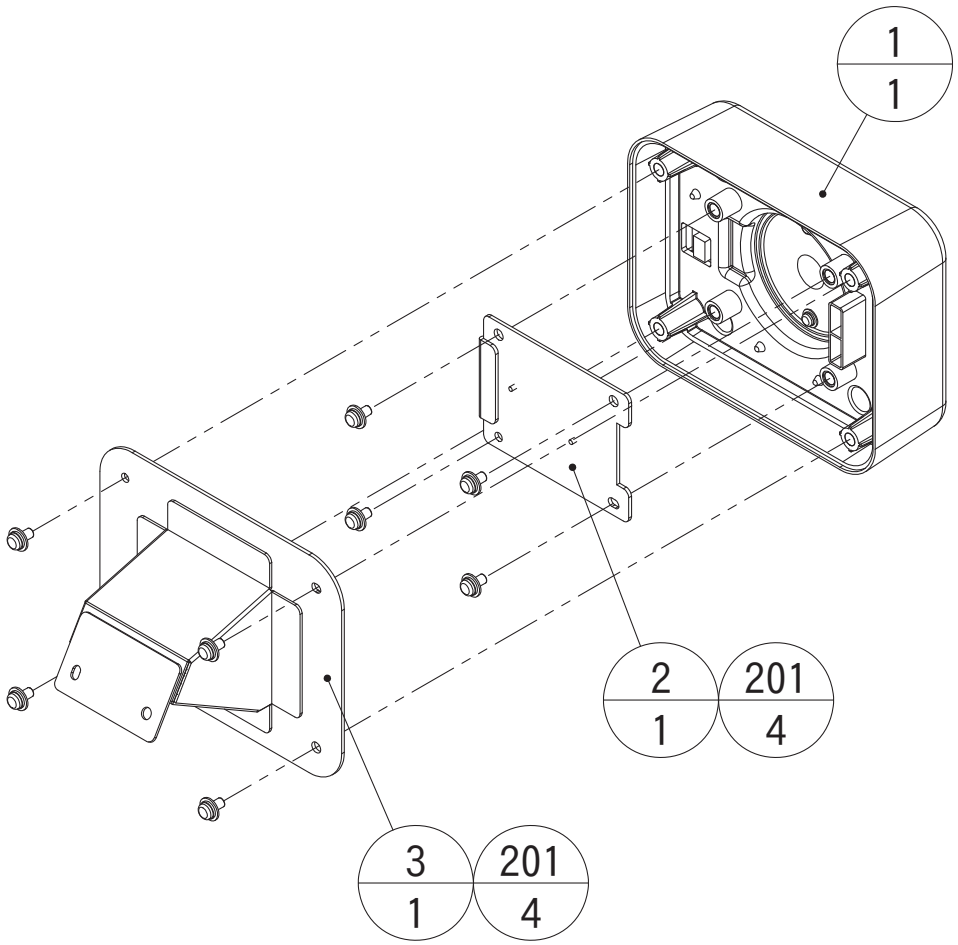

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1360	ASSY PLAYER CAMERA COVER	
2	MMT-1370	PLAYER CAMERA UNIT	
3	MMT-1351	PLAYER CAMERA BASE	
201	000-P00408-W	M SCR PH W/FS M4x8	
301	MMT-60047	WH PLAYER CAMERA LED	
302	600-8307	USB CABLE A-ZHR5	

(26) MMT-1360
ASSY PLAYER CAMERA COVER

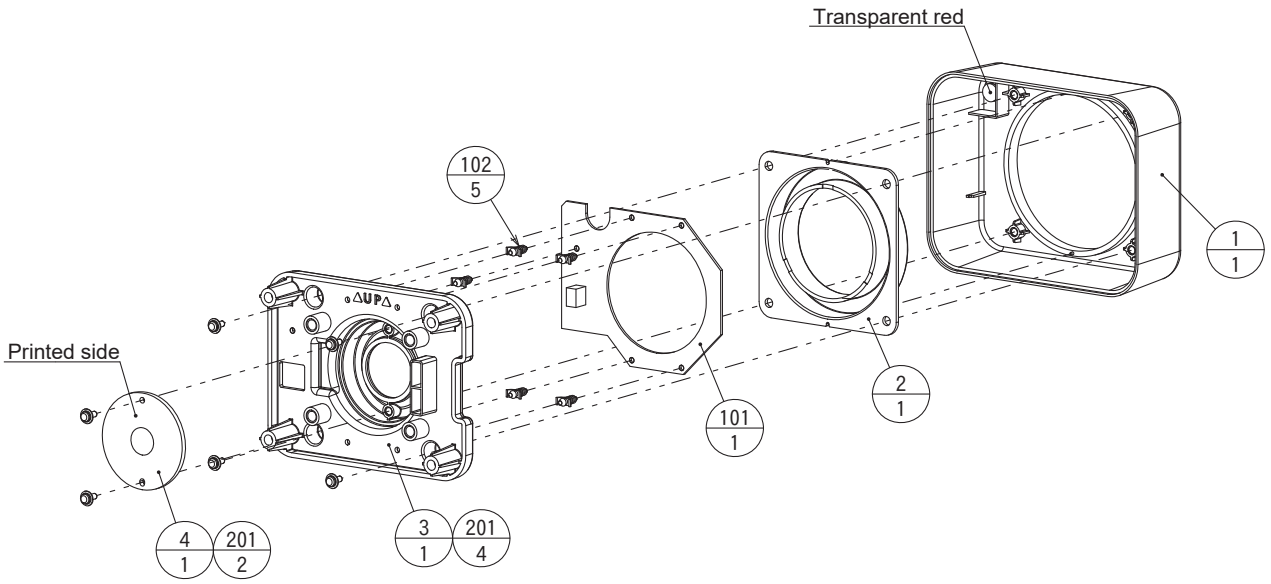

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1361	PLAYER CAMERA COVER	
2	MMT-1362	PLAYER CAMERA RING COVER	
3	MMT-1363	PLAYER CAMERA INNER BASE	
4	MMT-1364	PLAYER CAMERA LENS COVER	
101	390-7245	LED RING WARM COLOR 21+1	
102	280-7896-05	SPACER WN-05G (HIROSUGI)	
102	280-7909	SPACER PHI3 L=4.8	
201	000-P00308-W	M SCR PH W/FS M3x8	

am.sega.jp

(27) MMT-1370
PLAYER CAMERA UNIT

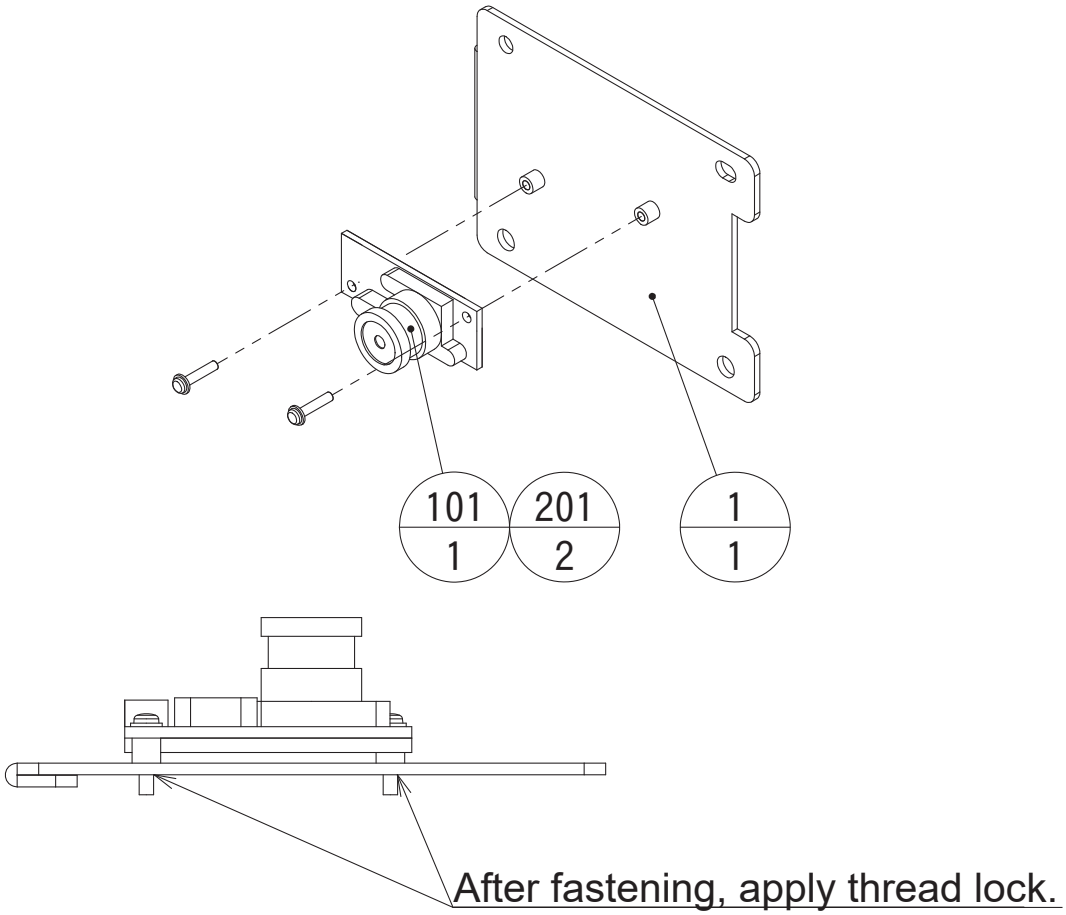

Notes: 1. (101) Tightening torque: 0.11 ± 0.01 N·m.

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1371	PLAYER CAMERA BRKT	
101	601-13249	CAMERA KBCR-S03MU-HPB2033-C300	
102	280-7892	CORD CLAMP TL-19AN	
201	FAS-000203	M SCR PH W/S M2x10	

(28) MMT-1500 (D-1/3)
ASSY CABINET 2P

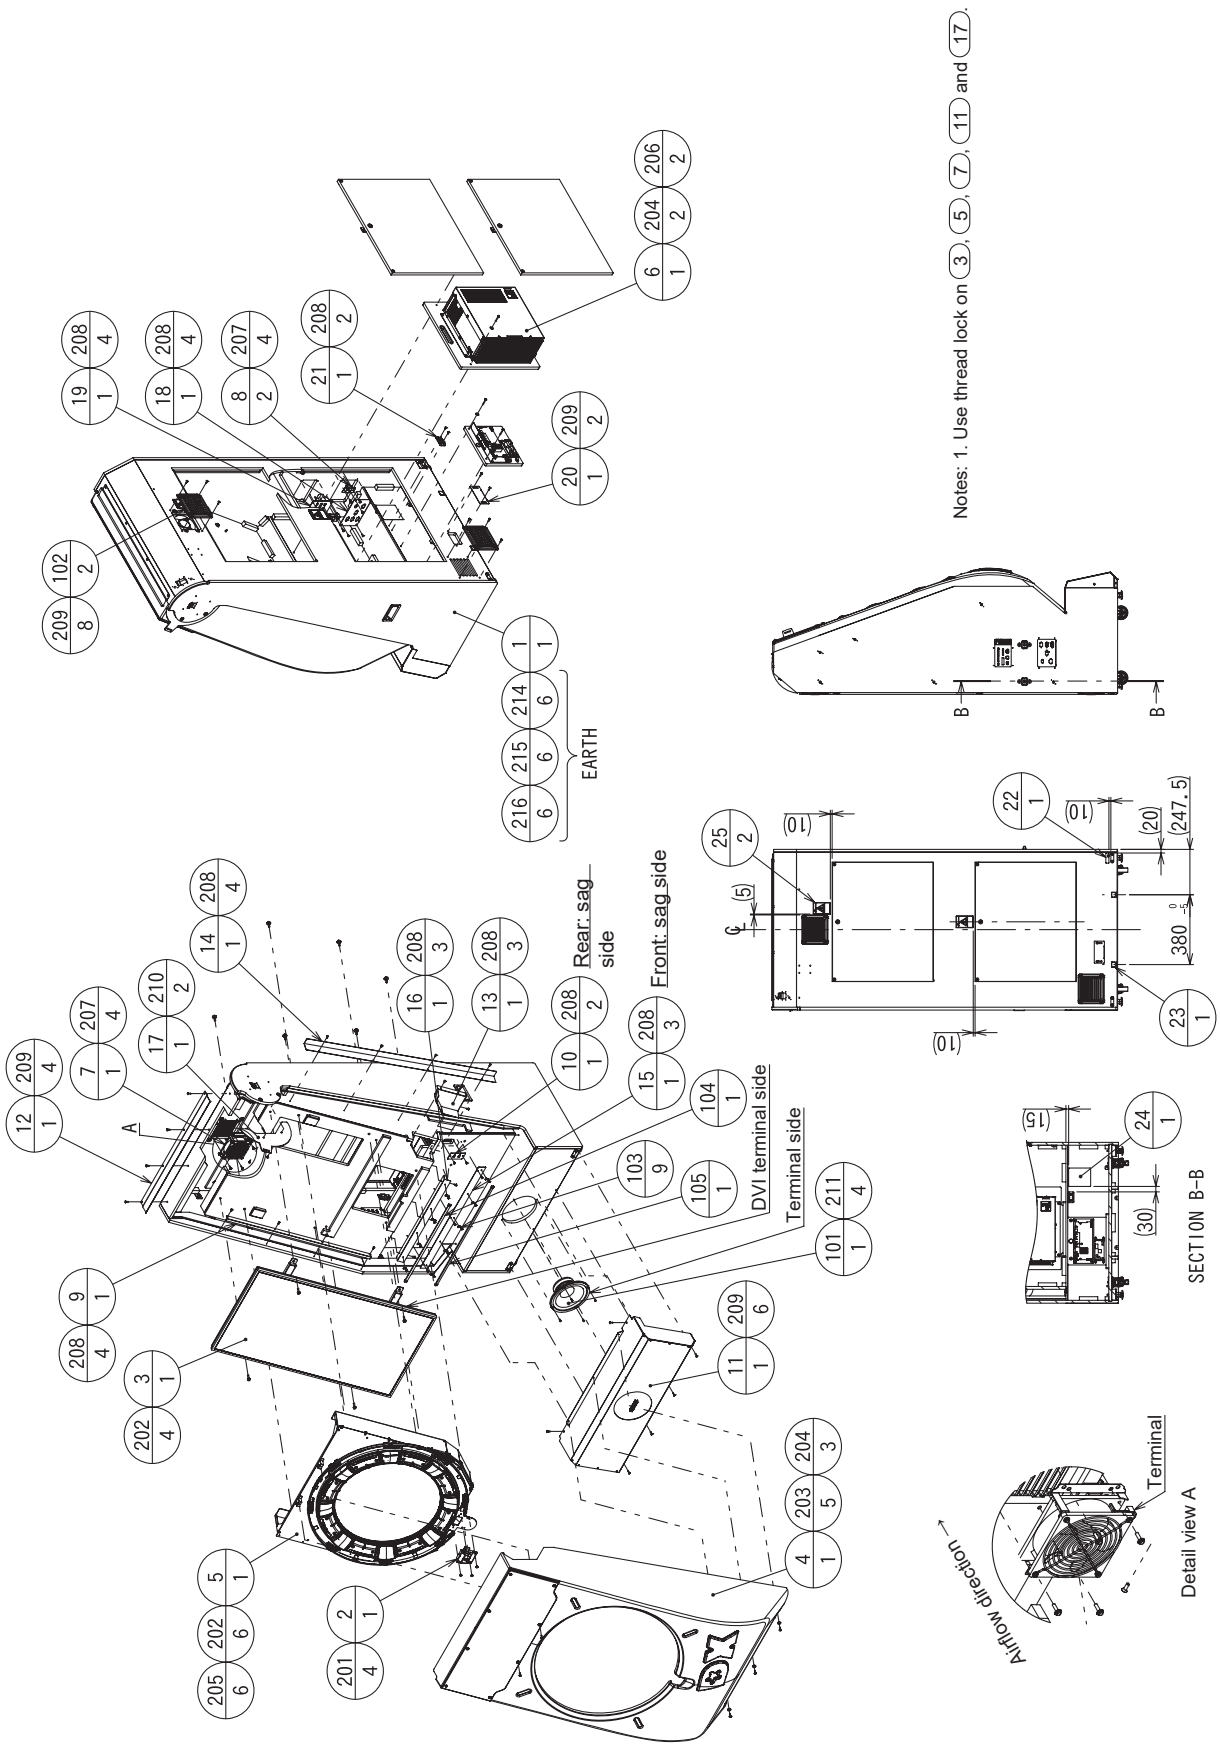

(28) MMT-1500 (D-2/3)
ASSY CABINET 2P

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1501	ASSY SUB CABINET 2P	
2	MMT-1070	ASSY HEADPHONE JACK COVER	
3	MMT-1100	ASSY LCD	
4	MMT-1600	ASSY FRONT COVER 2P	
5	MMT-1700	ASSY SW BASE 2P	
6	MMT-4000	ASSY GAME BD	
7	610-0963	ASSY DC 12V FAN 120MM	
8	MMT-1520	JOINT PIN 2P BRKT	
9	MMT-1021	CABINET EDGE COVER	
10	MMT-1022	FRONT LED CONN PLATE	
11	MMT-1521	FOOT COVER 2P	
12	MMT-1028	FRONT COVER SASH	
13	MMT-1525	CABINET INNER REFLECTOR 2P	
14	MMT-1034	CABINET INNER REFLECTOR REAR	
15	MMT-1035	FRONT LED BRKT LOWER	
16	MMT-1036	FRONT LED BRKT UPPER	
17	MMT-1526	SIDE COVER REFLECTOR 2P	
18	MMT-1522	JOINT CONN BRKT LOWER	
19	MMT-1523	JOINT CONN BRKT UPPER	
20	MMT-1524	LAN LID	
21	105-5639	EARTH PLATE	
22	421-9107-92-130	STICKER UNIT WEIGHT 130KG	
23	421-11416	STICKER CAUTION FORK	
24	421-14237	STICKER GAME BD MMT	
25	440-WS0002YJP	STICKER W POWER OFF	
101	130-5280-01	WOOFER 4OHM 80W	
102	253-5460-01	AIR VENT BLACK	
103	280-8001	CLAMP LWSM-0511 CLEAR NIX	
104	390-7244-0525	LED TAPE WHITE M3528W-A 0525MM	
105	390-7244-0675	LED TAPE WHITE M3528W-A 0675MM	
106	280-7892	CORD CLAMP TL-19AN	
107	280-6676	CORD CLAMP TL-25A TKK	
108	280-5207	HARNESS LUG CC-1005	
109	280-5275-SR10	CORD CLAMP SR10	
201	000-P00408-W	M SCR PH W/FS M4x8	
202	030-000630-WB	HEX BLT W/FS BLK M6x30	
203	FAS-080040	TMP PRF SCR PH W/FS STN M4x20	
204	068-441616-0C	FLT WSHR CRM 4.4-16x1.6	
205	068-652016	FLT WSHR 6.5-20 X1.6	
206	000-P00435-S	M SCR PH W/S M4x35	
207	000-P00416-W	M SCR PH W/FS M4x16	
208	011-T03512	TAP SCR TH 3.5x12	
209	000-T00416-0B	M SCR TH BLK M4x16	
210	000-F00412-0B	M SCR FH BLK M4x12	
211	FAS-110032	TAP SCR PH #1 BLK 4x12	

am.sega.jp

(28) MMT-1500 (D-3/3)
ASSY CABINET 2P

Ref. No.	Part No.	Part Name	Remarks
212	011-F00312	TAP SCR #1 FH 3x12	
213	000-P00308-W	M SCR PH W/FS M3x8	
214	060-F00400	FLT WSHR M4	
215	060-S00400	SPR WSHR M4	
216	050-H00400	HEX NUT M4	
301	MMT-6002	ASSY WIRE 2P	
302	MMT-60005	WH AC 3	
303	MMT-60006	WH EXT ROUTER AC	
304	MMT-60057	WH WOOFER 2P	
305	600-8206-100	CA USB A-A(FEM) FOR PNL 100CM	
306	600-8245	AC CABLE VL3P 7A W/E	
307	600-8248-2000	ASSY CA DVI-D EMC 2000MM KDK	
308	600-8272-100	CA USB3.0 A-A(F) FOR PNL 100CM	

am.sega.jp

(29) MMT-1501
ASSY SUB CABINET 2P

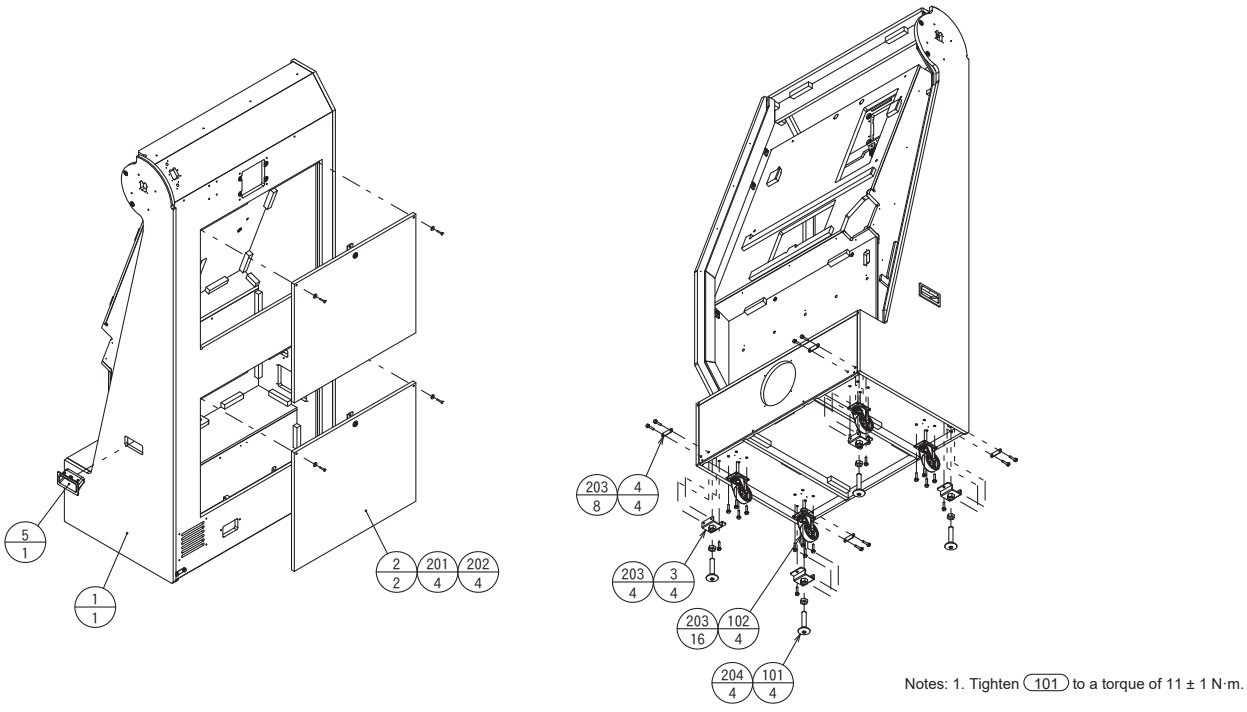

Notes: 1. Tighten (101) to a torque of 11 ± 1 N·m.

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1502	CABINET 2P	
2	MMT-1550	ASSY BACK DOOR 2P	
3	MMT-1007X	LEG BRKT	
4	117-5233-91	PLATE LEG BRACKET BLACK	
5	253-5396-91	CABINET HANDLE	
101	601-5699X	LEG ADJUSTER BOLT M16x75	
102	601-11223	CASTER 75 PAU	
201	000-T00425-0B	M SCR TH BLK M4x25	
202	068-441616-0B	FLT WSHR BLK 4.4-16x1.6	
203	030-000630-WB	HEX BLT W/FS BLK M6x30	
204	050-H01600-3	HEX NUT TYPE3 M16	

(30) MMT-1502 CABINET 2P

(D-1/2)

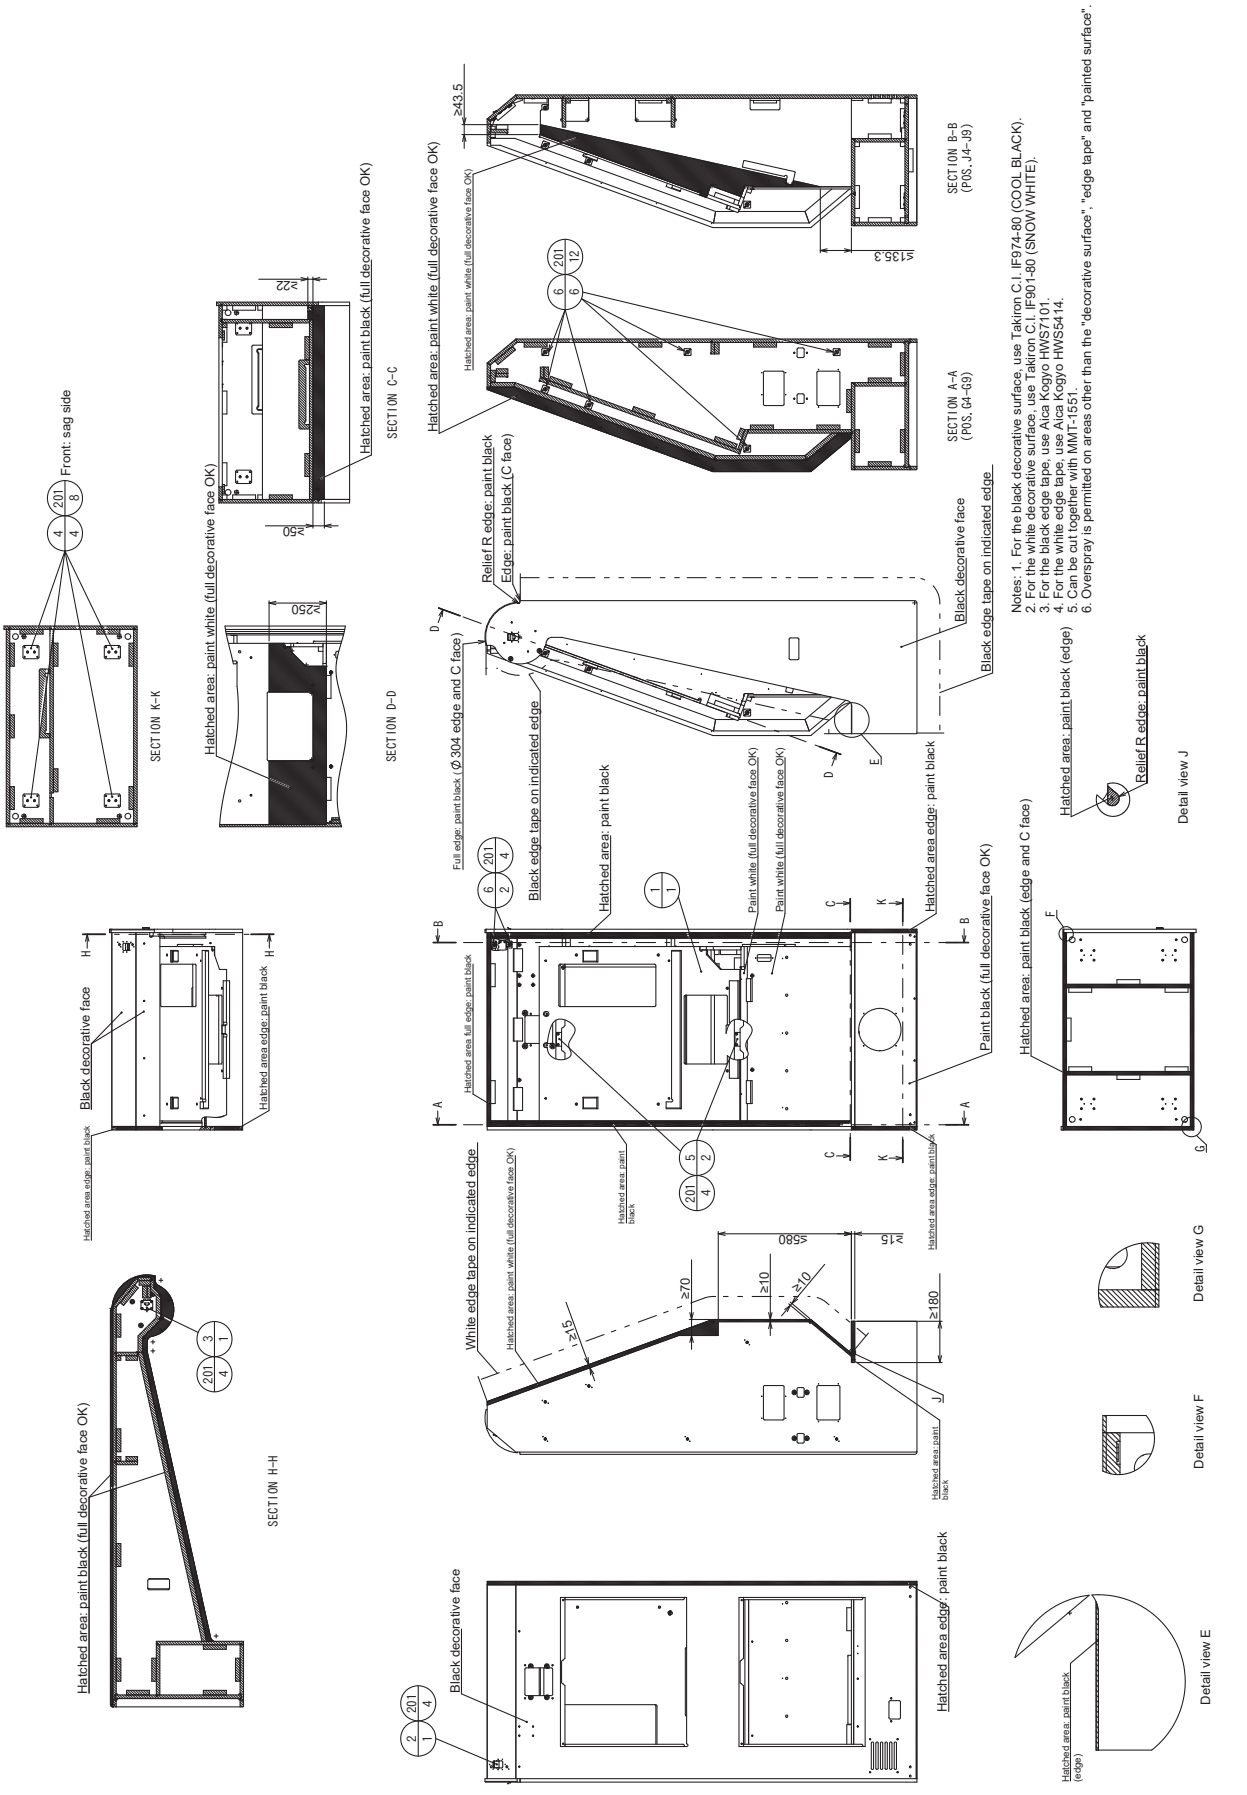

(30) MMT-1502 CABINET 2P (D-2/2)

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1502-A	CABINET 2P BLANK	
2	MMT-1003	BILLBOARD HOLD BRKT	
3	MMT-1005	SIDE COVER BASE CONN BRKT	
4	CTF-1104	CASTER NUT PLATE	
5	117-5098-91	TNG RETAINER PLATE	
6	117-5463	NUT PLATE M8	
201	011-T03512	TAP SCR TH 3.5x12	

am.sega.jp

(31) MMT-1550
ASSY BACK DOOR 2P

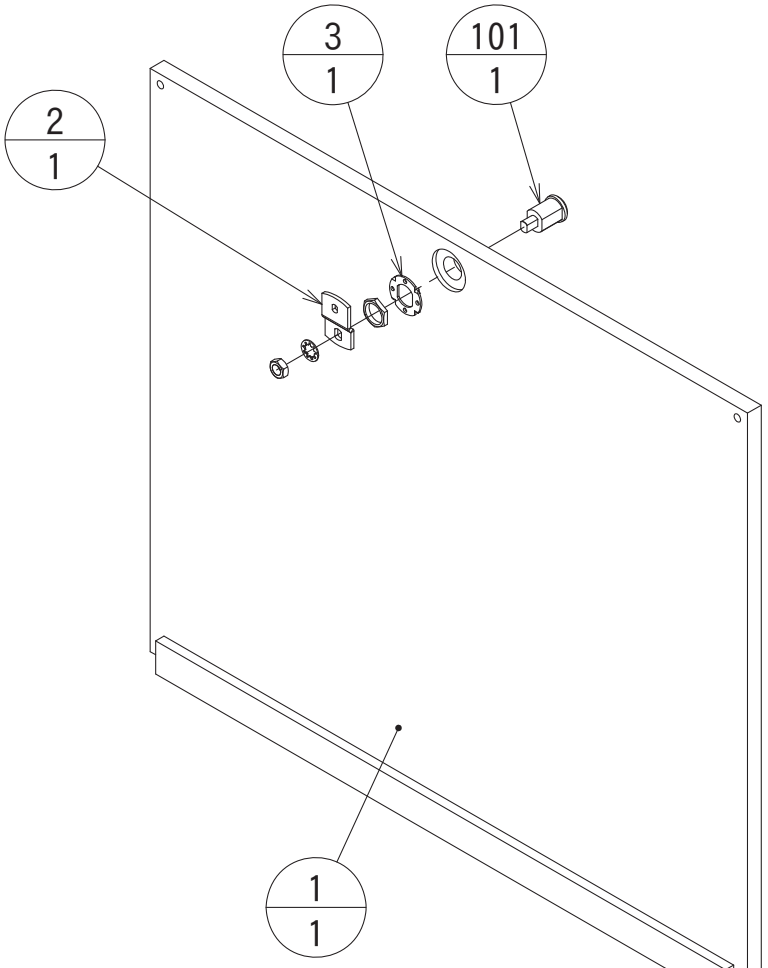

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1551	BACK DOOR 2P	
2	DP-1148X	LKG TNG	
3	117-0062	PLATE LOCK RETAINER	
101	220-5793-1-A001	CLY LOCK MASTER W/O KEY A001	

(32) MMT-1600
ASSY FRONT COVER 2P

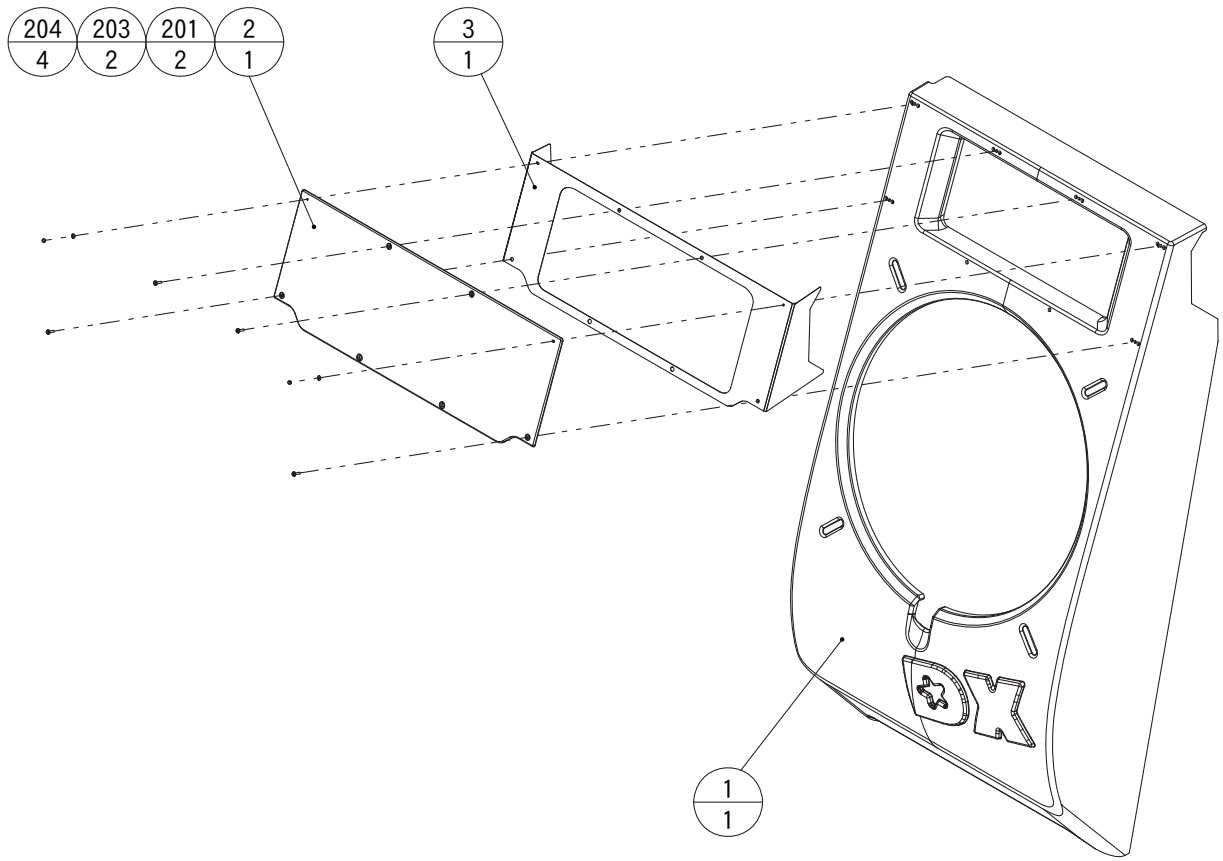

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1610	FRONT COVER 2P	
2	MMT-1301	SUB MONITOR PLATE	
3	MMT-1601	FRONT COVER SHEET 2P	
201	FAS-600033	FLT WSHR STN M4	
203	050-C00400-3C	CAP NUT TYPE3 CRM M4	
204	FAS-080040	TMP PRF SCR PH W/FS STN M4x20	

(33) MMT-1610
FRONT COVER 2P

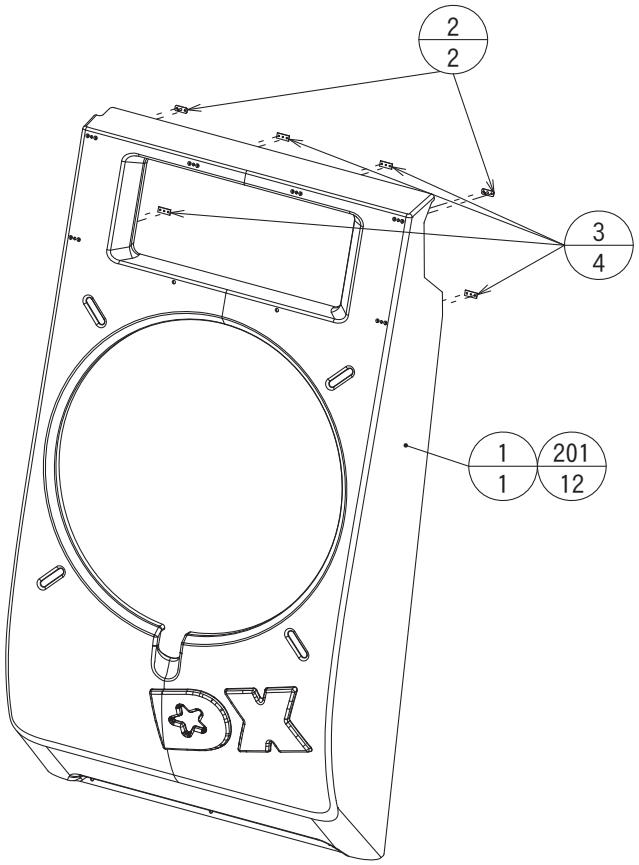

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1611	FRONT COVER 2P BLANK	
2	MMT-1312	STUD PLATE	
3	TX-1029X-A	NUT PLATE	

(34) MMT-1700 (D-1/2)
ASSY SW BASE 2P

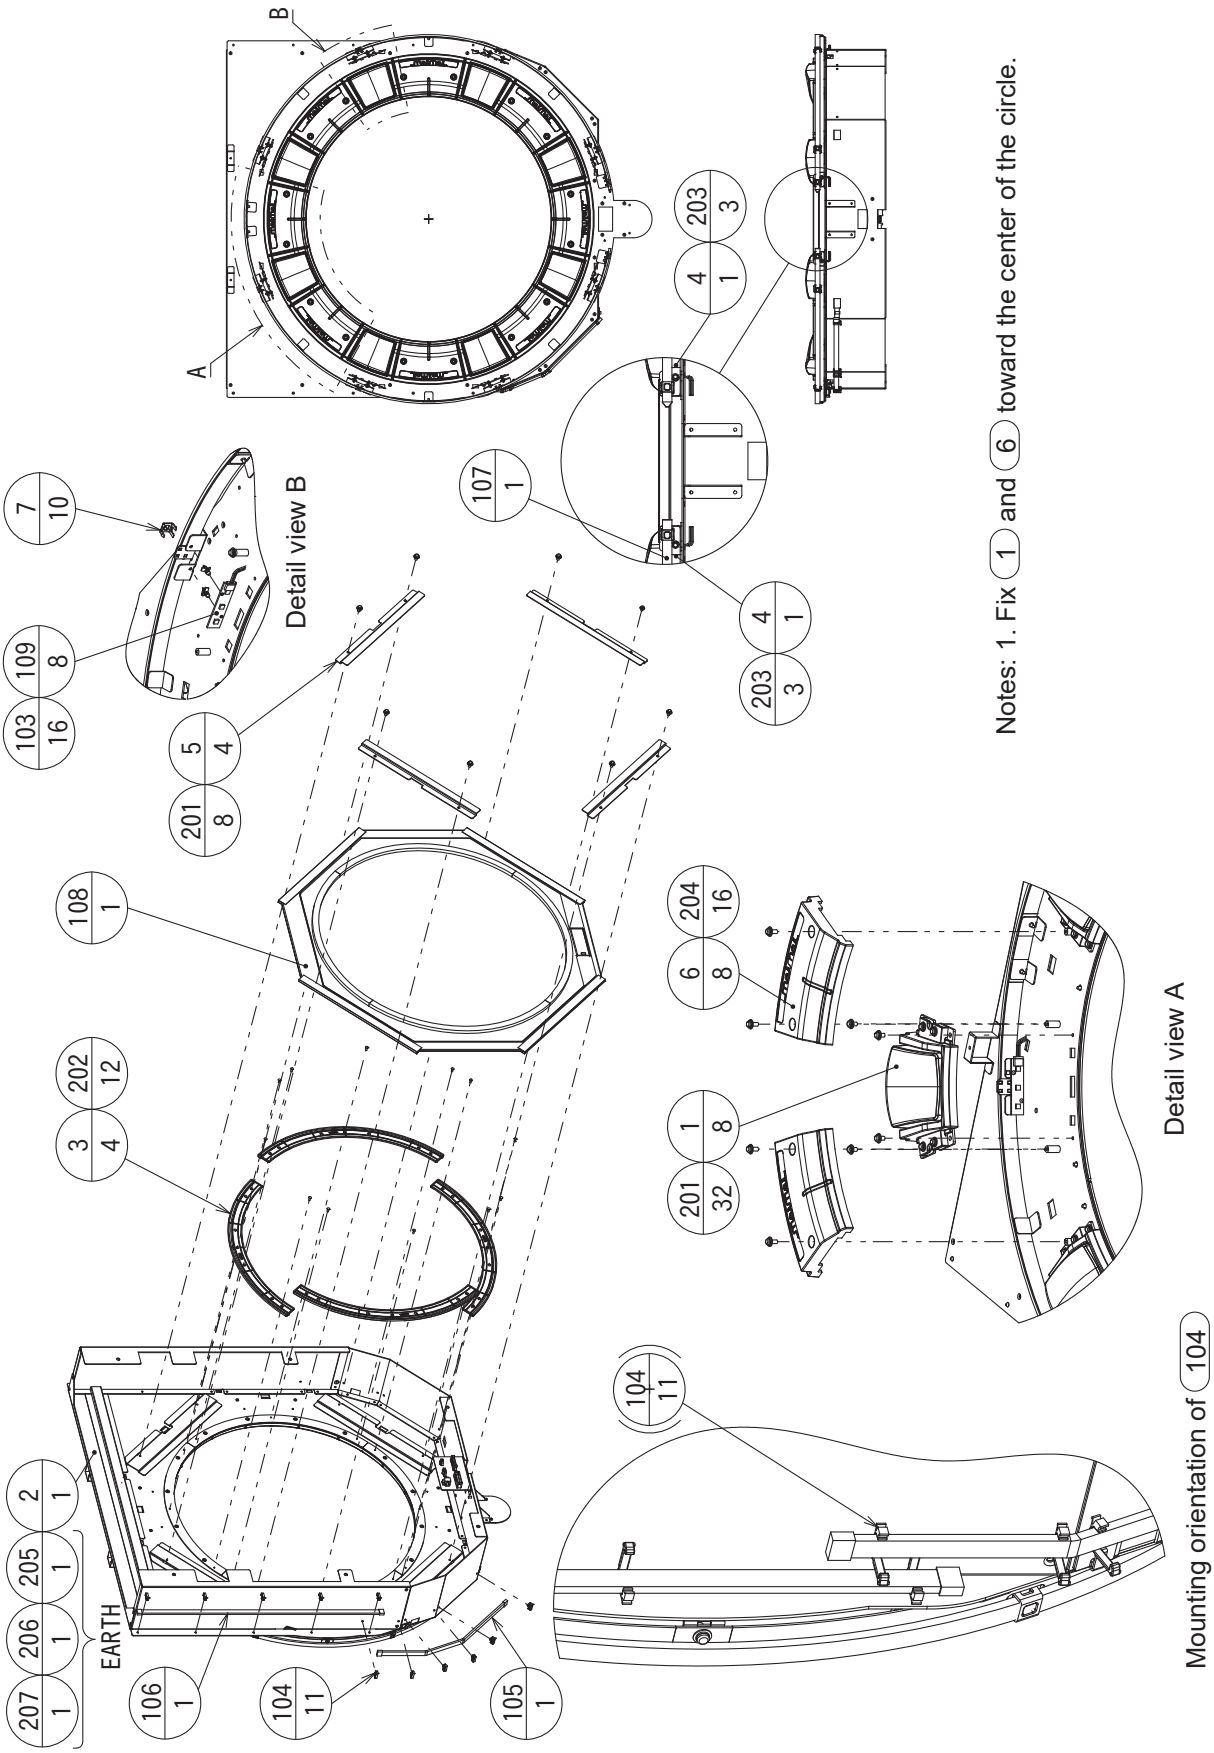

(34) MMT-1700 (D-2/2)
ASSY SW BASE 2P

Ref. No.	Part No.	Part Name	Remarks
1	MMT-2000	ASSY BUTTON SWITCH	
2	MMT-1201	SW BASE	
3	MMT-1202	TOUCH PANEL SPACER	
4	MMT-1203	TAPE LED SUPPORT	
5	MAI-1203	PANEL SASH	
6	MAI-1206X	SW COVER	
7	253-5748	TAPE LED HOLDER	
101	280-5275-SR10	CORD CLAMP SR10	
102	280-7892	CORD CLAMP TL-19AN	
103	280-7896-05	SPACER WN-05G (HIROSUGI)	
104	280-8001	CLAMP LWSM-0511 CLEAR NIX	
105	390-7244-0350	LED TAPE WHITE M3528W-A 0350MM	
106	390-7244-0525	LED TAPE WHITE M3528W-A 0525MM	
107	390-7244-2325	LED TAPE WHITE M3528W-A 2325MM	
108	509-6483	TOUCH SENSOR UNIT TPK	
109	838-15235-01	LED BD RGB 3x1BLOCK 5050	
201	000-P00408-W	M SCR PH W/FS M4x8	
202	000-F00308	M SCR FH M3x8	
203	FAS-000159	M SCR PH W/SMALL FS M3x8	
204	FAS-080036	TMP PRF SCR PH W/FS STN M4x10	
205	060-F00400	FLT WSHR M4	
206	060-S00400	SPR WSHR M4	
207	050-H00400	HEX NUT M4	
301	MMT-60036	WH SW BASE LED	
302	MMT-60037	WH SW BASE SENSOR	
303	MMT-60038	WH TOUCH SENSOR	
304	MMT-60039	WH BODY LED	
305	MMT-60041	WH HEADPHONE JACK	

am.sega.jp

(35) MMT-4000
ASSY GAME BD

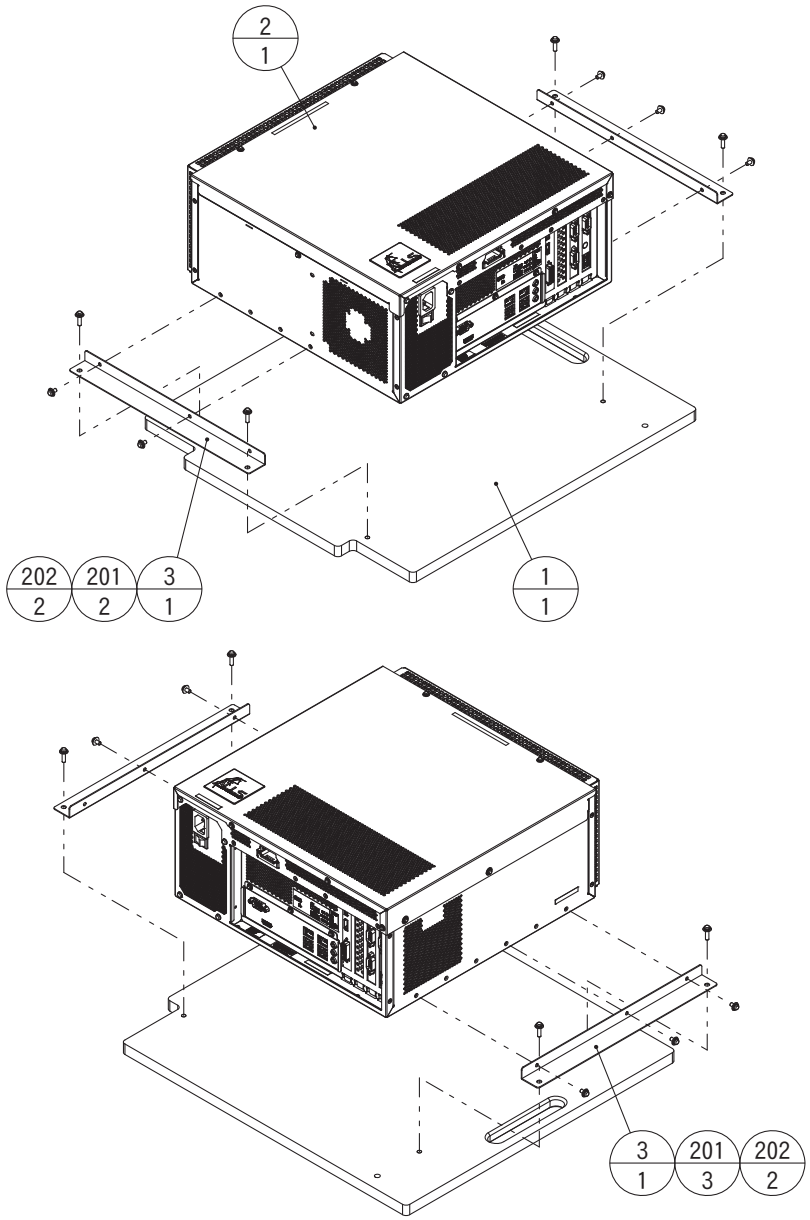

Ref. No.	Part No.	Part Name	Remarks
1	MMT-4001	WOODEN BASE GAME BD	
2	849-1004	ASSY CASE ALLS HX2 W HDD	
3	105-5689	GAME BD BRKT	
201	000-P00408-W	M SCR PH W/FS M4x8	
202	000-P00416-W	M SCR PH W/FS M4x16	

(36) MMT-6002
ASSY WIRE 2P

This part is a bundle of wiring. There is no assembly drawing.

Ref. No.	Part No.	Part Name	Remarks
101	601-0460	PLASTIC TIE BELT 100 M/M	
102	MMT-60018	WH EXT HEADPHONE 2P 2	
103	MMT-60019	WH ALLS AUDIO	
104	MMT-60020	WH ALLS COM	
105	MMT-60034	WH EXT SW BASE SENSOR 2P 2	
106	MMT-60035	WH EXT SW BASE LED 2P 2	
107	MMT-60052	WH EXT WHITE LED 2P 2	
108	MMT-60053	WH ALLS COM4	

am.sega.jp

(37) MMT-1800-01 (D-1/2)
ASSY BILLBOARD

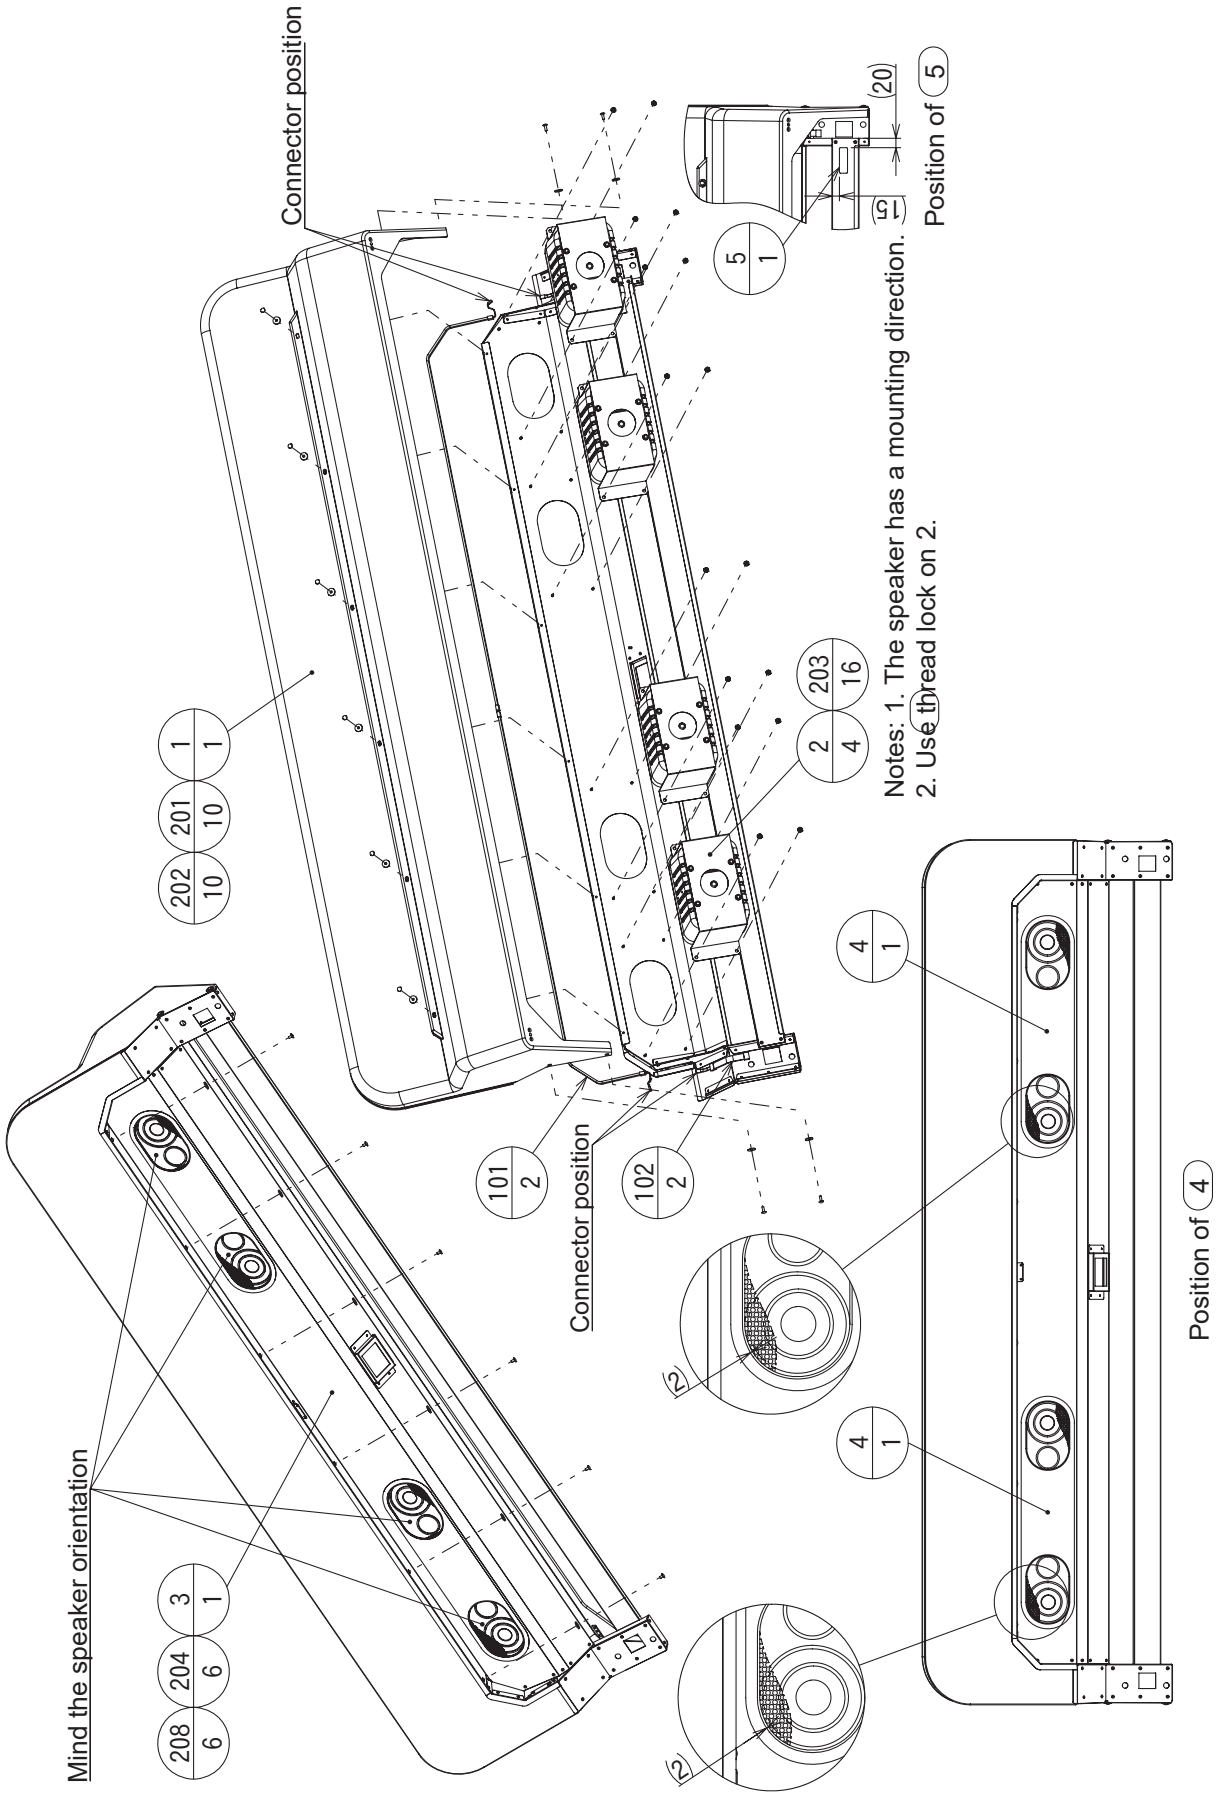

(37) MMT-1800-01 (D-2/2)
ASSY BILLBOARD

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1810-01	BILLBOARD COVER	
2	MMT-1850	ASSY SPEAKER	
3	MMT-1801X	BILLBOARD BASE	
4	MMT-1802	STICKER SPEAKER	
5	421-9107-92-024	STICKER UNIT WEIGHT 24KG	
101	390-5768-0950	LED TAPE RGB 16.7 12V 0950MM	
102	390-5768-0100	LED TAPE RGB 16.7 12V 0100MM	
103	280-8002	CLAMP LWST-0512 CLEAR NIX	
104	280-7892	CORD CLAMP TL-19AN	
105	280-5275-SR10	CORD CLAMP SR10	
201	000-T00408-0C	M SCR TH CRM M4x8	
202	068-441616-0C	FLT WSHR CRM 4.4-16x1.6	
203	050-F00400	FLG NUT M4	
204	000-T00408-0B	M SCR TH BLK M4x8	
205	060-F00400	FLT WSHR M4	
206	060-S00400	SPR WSHR M4	
207	050-H00400	HEX NUT M4	
208	068-441616-0B	FLT WSHR BLK 4.4-16x1.6	
301	MMT-60043	WH BILLBOARD	

am.sega.jp

(38) MMT-1810-01
BILLBOARD COVER

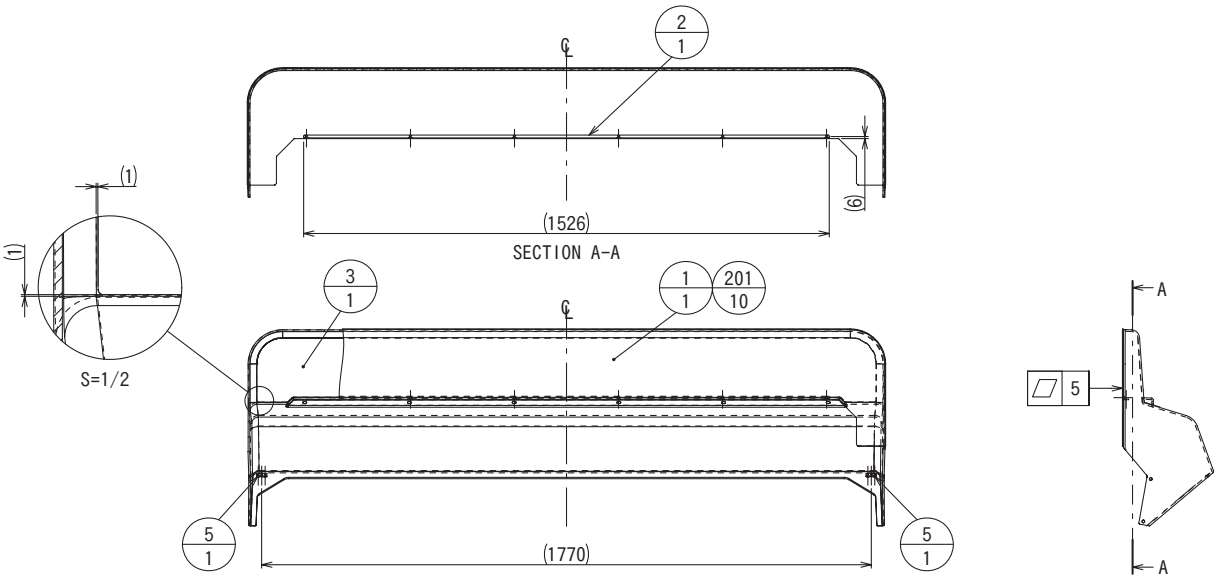

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1811	BILLBOARD COVER BLANK	
2	MMT-1815	BILLBOARD COVER SASH	
3	MMT-1813	REFLECTION SHEET A	
5	TX-1029X-A	NUT PLATE	

(39) MMT-1850
ASSY SPEAKER

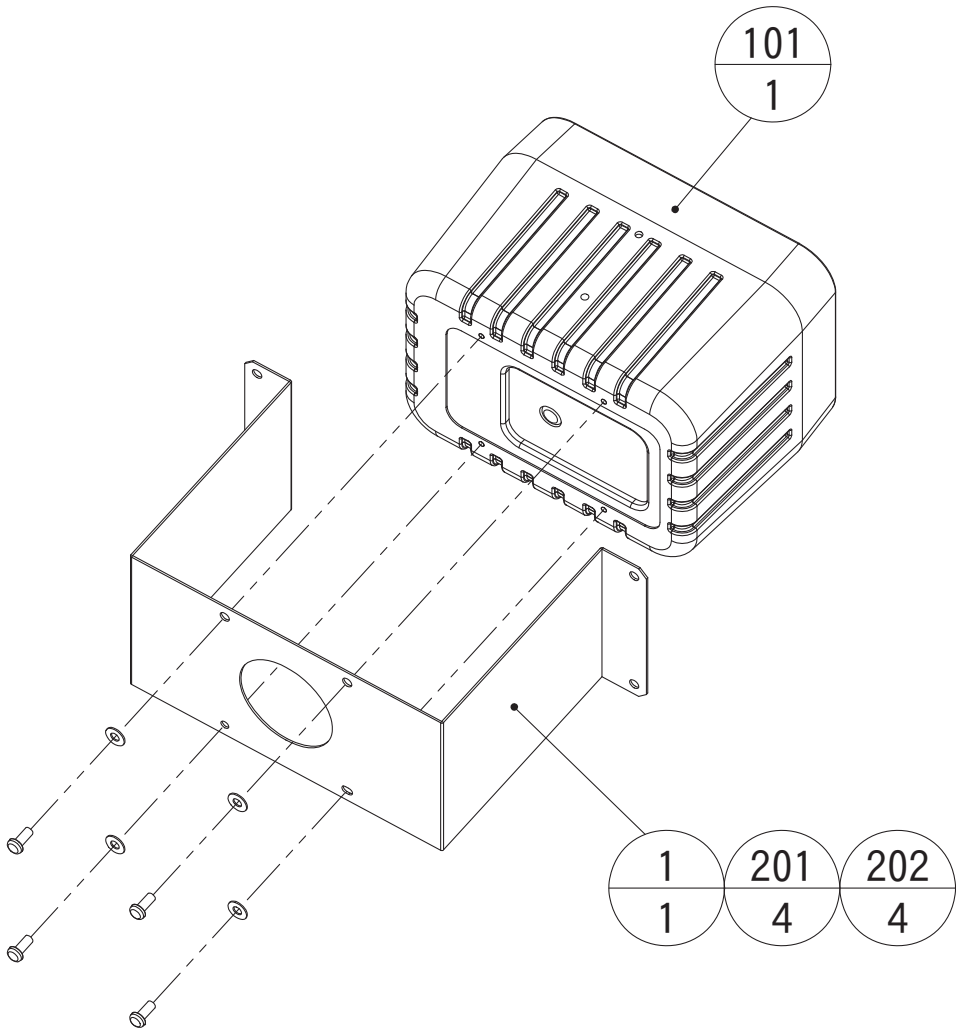

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1851	SPEAKER BRKT	
101	130-5310	SPKR BOX 4OHM 40W S010D15104W	
102	280-5275-SR10	CORD CLAMP SR10	
201	012-P00512	TAP SCR #2 PH 5x12	
202	060-F00500	FLT WSHR M5	

(40) MMT-1900
ASSY SIDE COVER BASE 1P

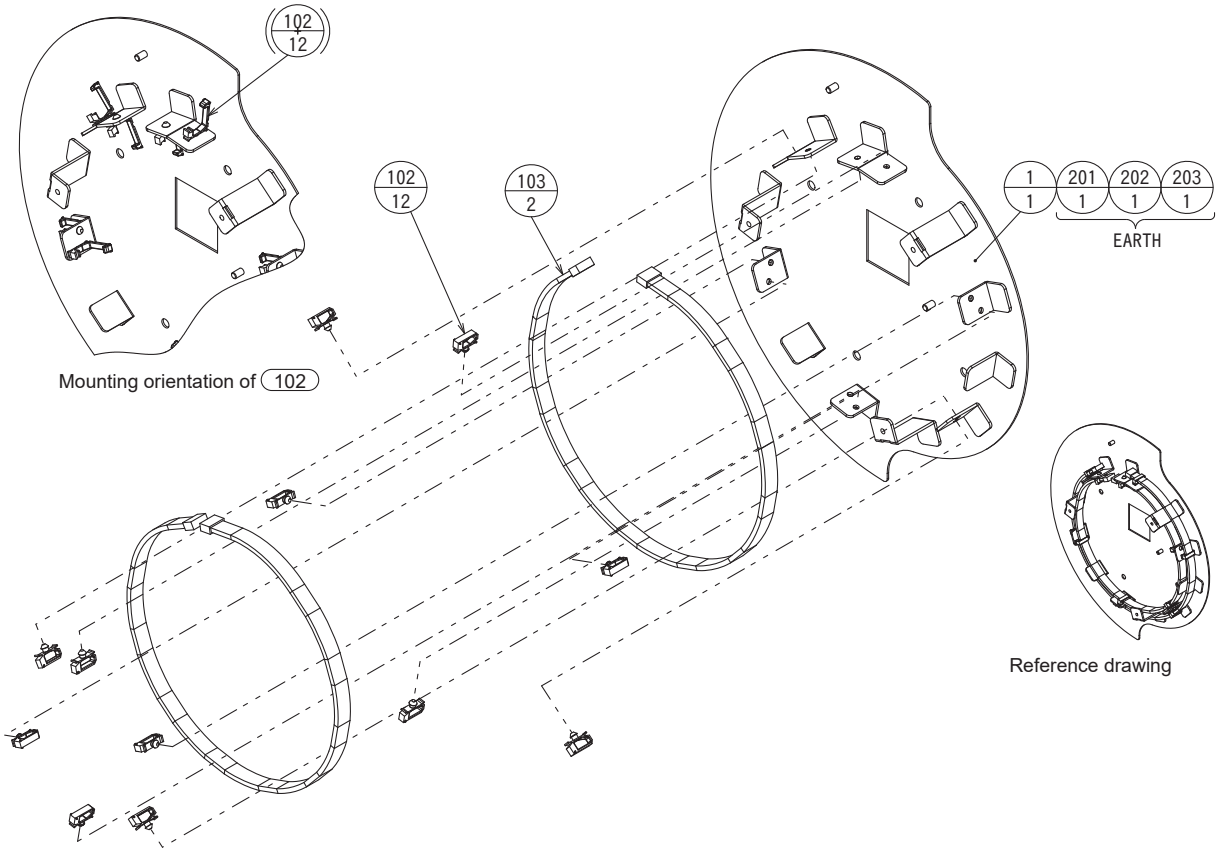

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1901	SIDE COVER BASE 1P	
101	280-5275-SR10	CORD CLAMP SR10	
102	280-8001	CLAMP LWSM-0511 CLEAR NIX	
103	390-7244-0525	LED TAPE WHITE M3528W-A 0525MM	
201	060-F00400	FLT WSHR M4	
202	060-S00400	SPR WSHR M4	
203	050-H00400	HEX NUT M4	
301	MMT-60044	WH SIDE HEADPHONE LED	

am.sega.jp

(41) MMT-1950
ASSY SIDE COVER BASE 2P

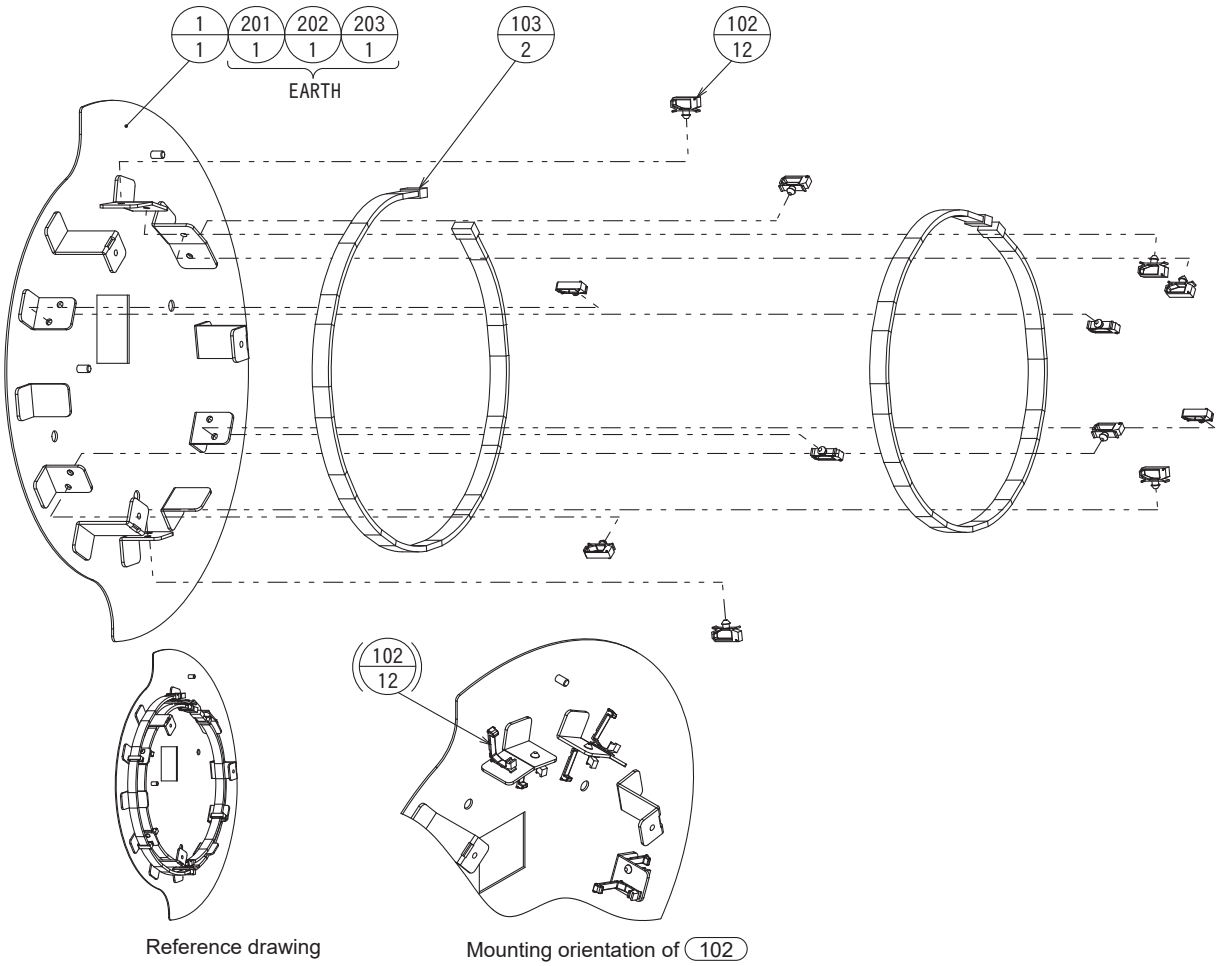

Ref. No.	Part No.	Part Name	Remarks
1	MMT-1951	SIDE COVER BASE 2P	
101	280-5275-SR10	CORD CLAMP SR10	
102	280-8001	CLAMP LWSM-0511 CLEAR NIX	
103	390-7244-0525	LED TAPE WHITE M3528W-A 0525MM	
201	060-F00400	FLT WSHR M4	
202	060-S00400	SPR WSHR M4	
203	050-H00400	HEX NUT M4	
301	MMT-60044	WH SIDE HEADPHONE LED	

am.sega.jp

21-2 Router Kit

Assembly Structure

(1) XKT-2293 ROUTER KIT MMT ——— (2) MMT-4300 ASSY ROUTER

(1) XKT-2293 ROUTER KIT MMT

This unit represents an option kit. There is no assembly drawing. <See Chapter 5>

Ref. No.	Part No.	Part Name	Remarks
1	MMT-4300	ASSY ROUTER	
401	420-7651	OWNERS MANUAL MMT	
403	420-7653	SERVICE MANUAL ALLS HX2	
404	421-11708	STICKER SERVER	
405	540-0006-01	WRENCH M4 TMP SCR	
406	600-7269-0100	ASSY LAN CABLE 0100CM	
407	600-7269-5000	ASSY LAN CABLE 5000CM	
408	068-441616-0C	FLT WSHR CRM 4.4-16x1.6	
409	000-P00435-S	M SCR PH W/S M4x35	

(2) MMT-4300
ASSY ROUTER

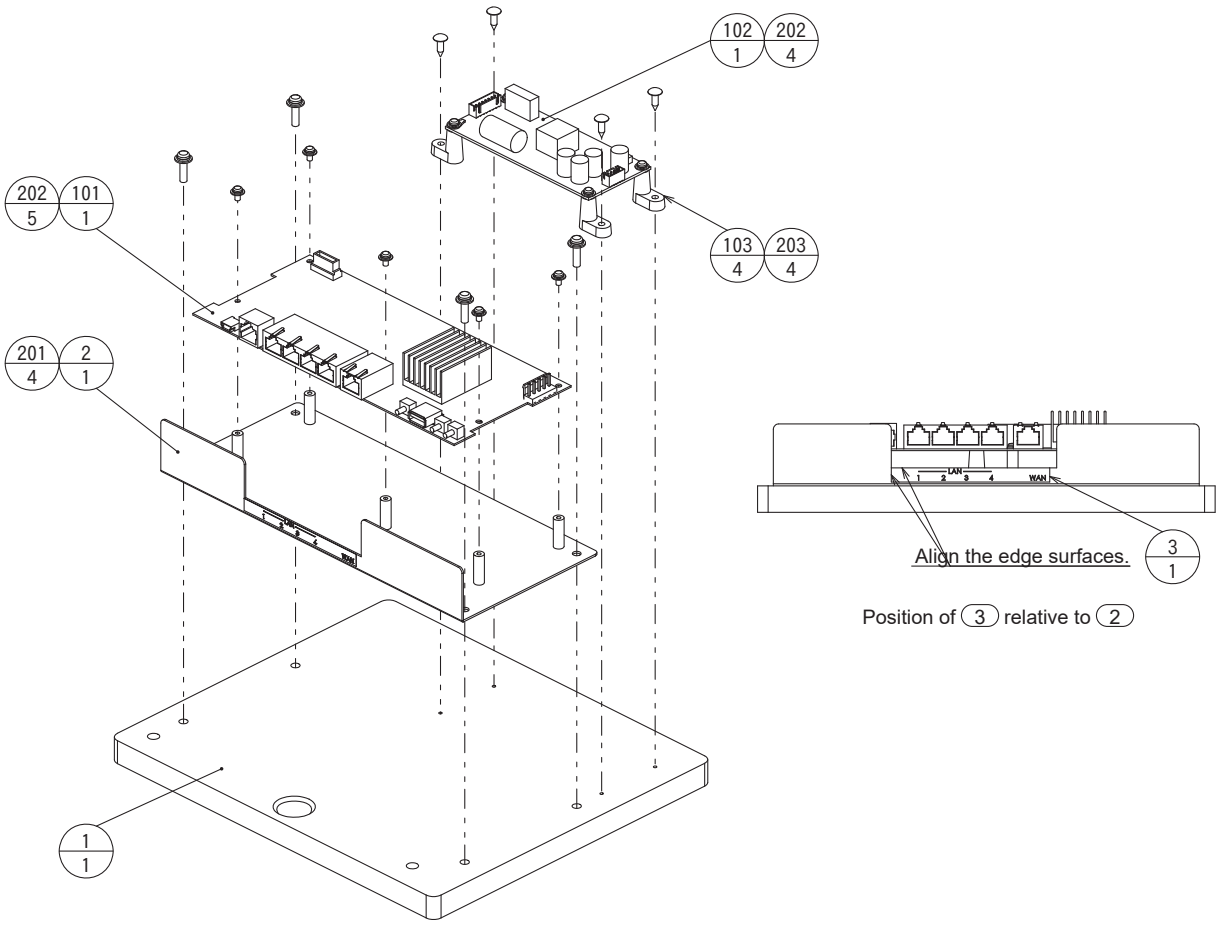

Ref. No.	Part No.	Part Name	Remarks
1	MMT-4301	WOODEN BASE ROUTER	
2	105-5700	ROUTER HOLDER FOR RTX830	
3	421-12471	STICKER WAN AND LAN	
101	601-13203-63	ROUTER RTX830 BD MMT	
102	400-5464-01505	SW REGU VS15C-5	
103	280-6681	L-LOCK LT-320PCG	
104	280-5207	HARNESS LUG CC-1005	
201	000-P00416-W	M SCR PH W/FS M4x16	
202	000-P00306-W	M SCR PH W/FS M3x6	
203	011-T03516	TAP SCR TH 3.5x16	
204	011-T03512	TAP SCR TH 3.5x12	
301	MMT-60007	WH ROUTER AC	
302	MMT-60008	WH ROUTER 5V	

22 Overall Wiring Diagram (D-1/4)

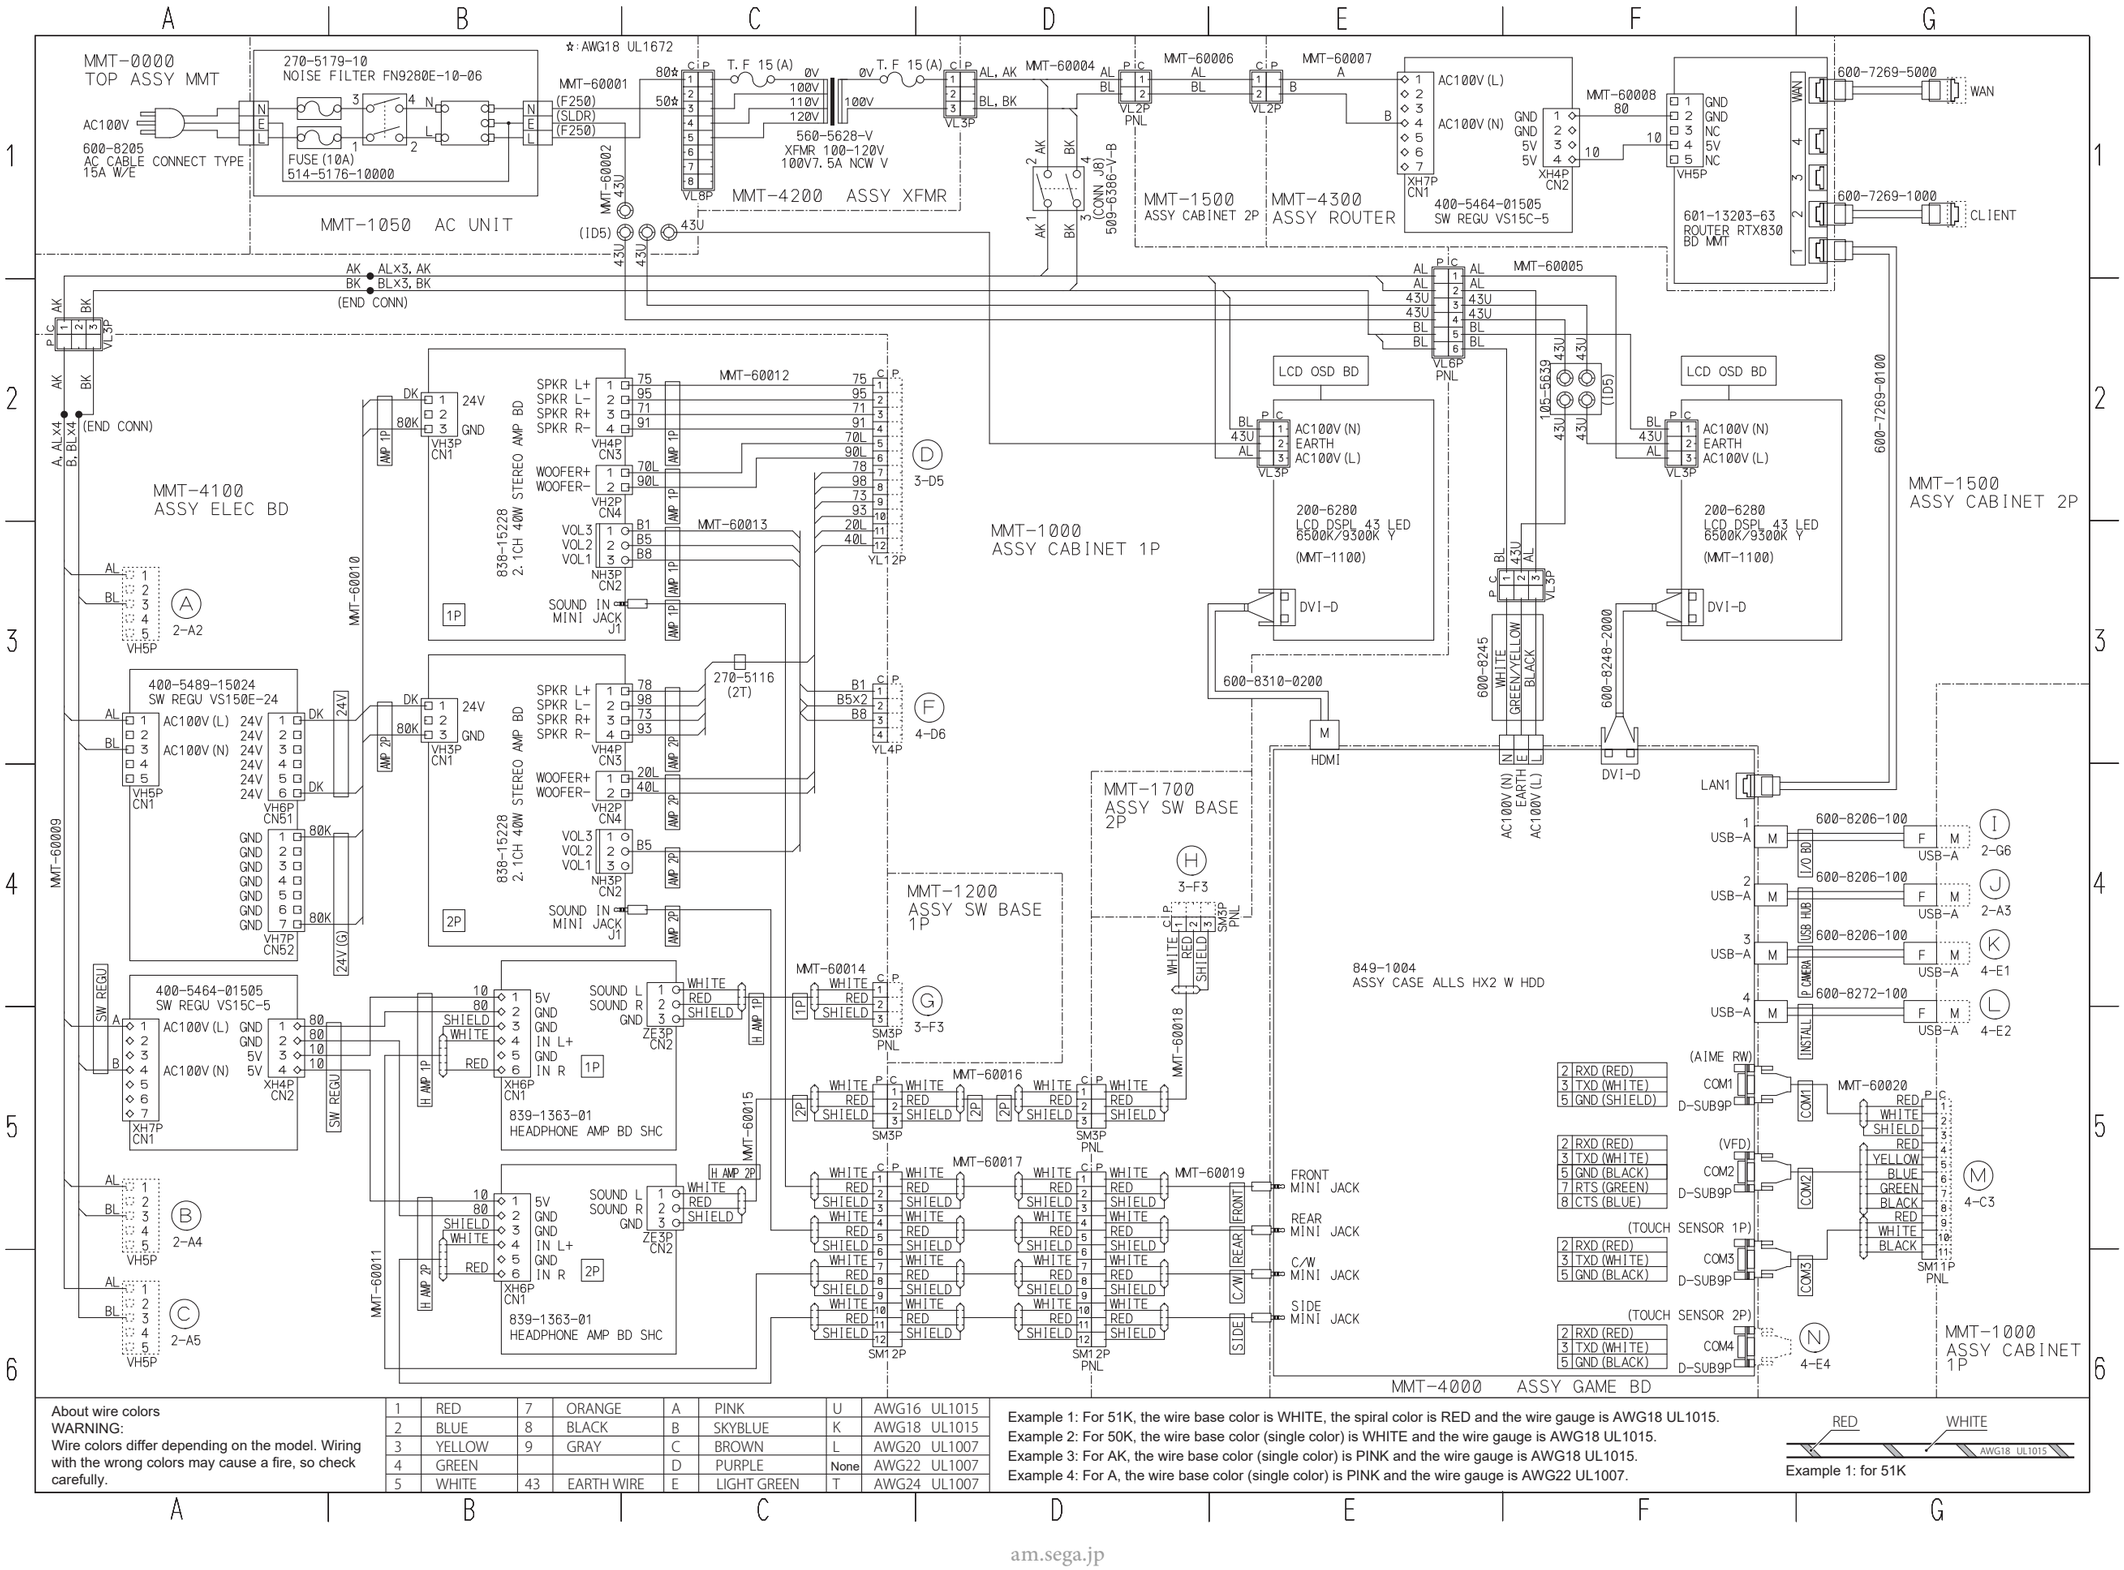

About wire colors
WARNING:
Wire colors differ depending on the model. Wiring with the wrong colors may cause a fire, so check carefully.

1	RED	7	ORANGE	A	PINK	U	AWG16 UL1015
2	BLUE	8	BLACK	B	SKYBLUE	K	AWG18 UL1015
3	YELLOW	9	GRAY	C	BROWN	L	AWG20 UL1007
4	GREEN			D	PURPLE	None	AWG22 UL1007
5	WHITE	43	EARTH WIRE	E	LIGHT GREEN	T	AWG24 UL1007

Example 1: For 51K, the wire base color is WHITE, the spiral color is RED and the wire gauge is AWG18 UL1015.
Example 2: For 50K, the wire base color (single color) is WHITE and the wire gauge is AWG18 UL1015.
Example 3: For AK, the wire base color (single color) is PINK and the wire gauge is AWG18 UL1015.
Example 4: For A, the wire base color (single color) is PINK and the wire gauge is AWG22 UL1007.

Example 1: for 51K

am.sega.jp

(D-2/4)

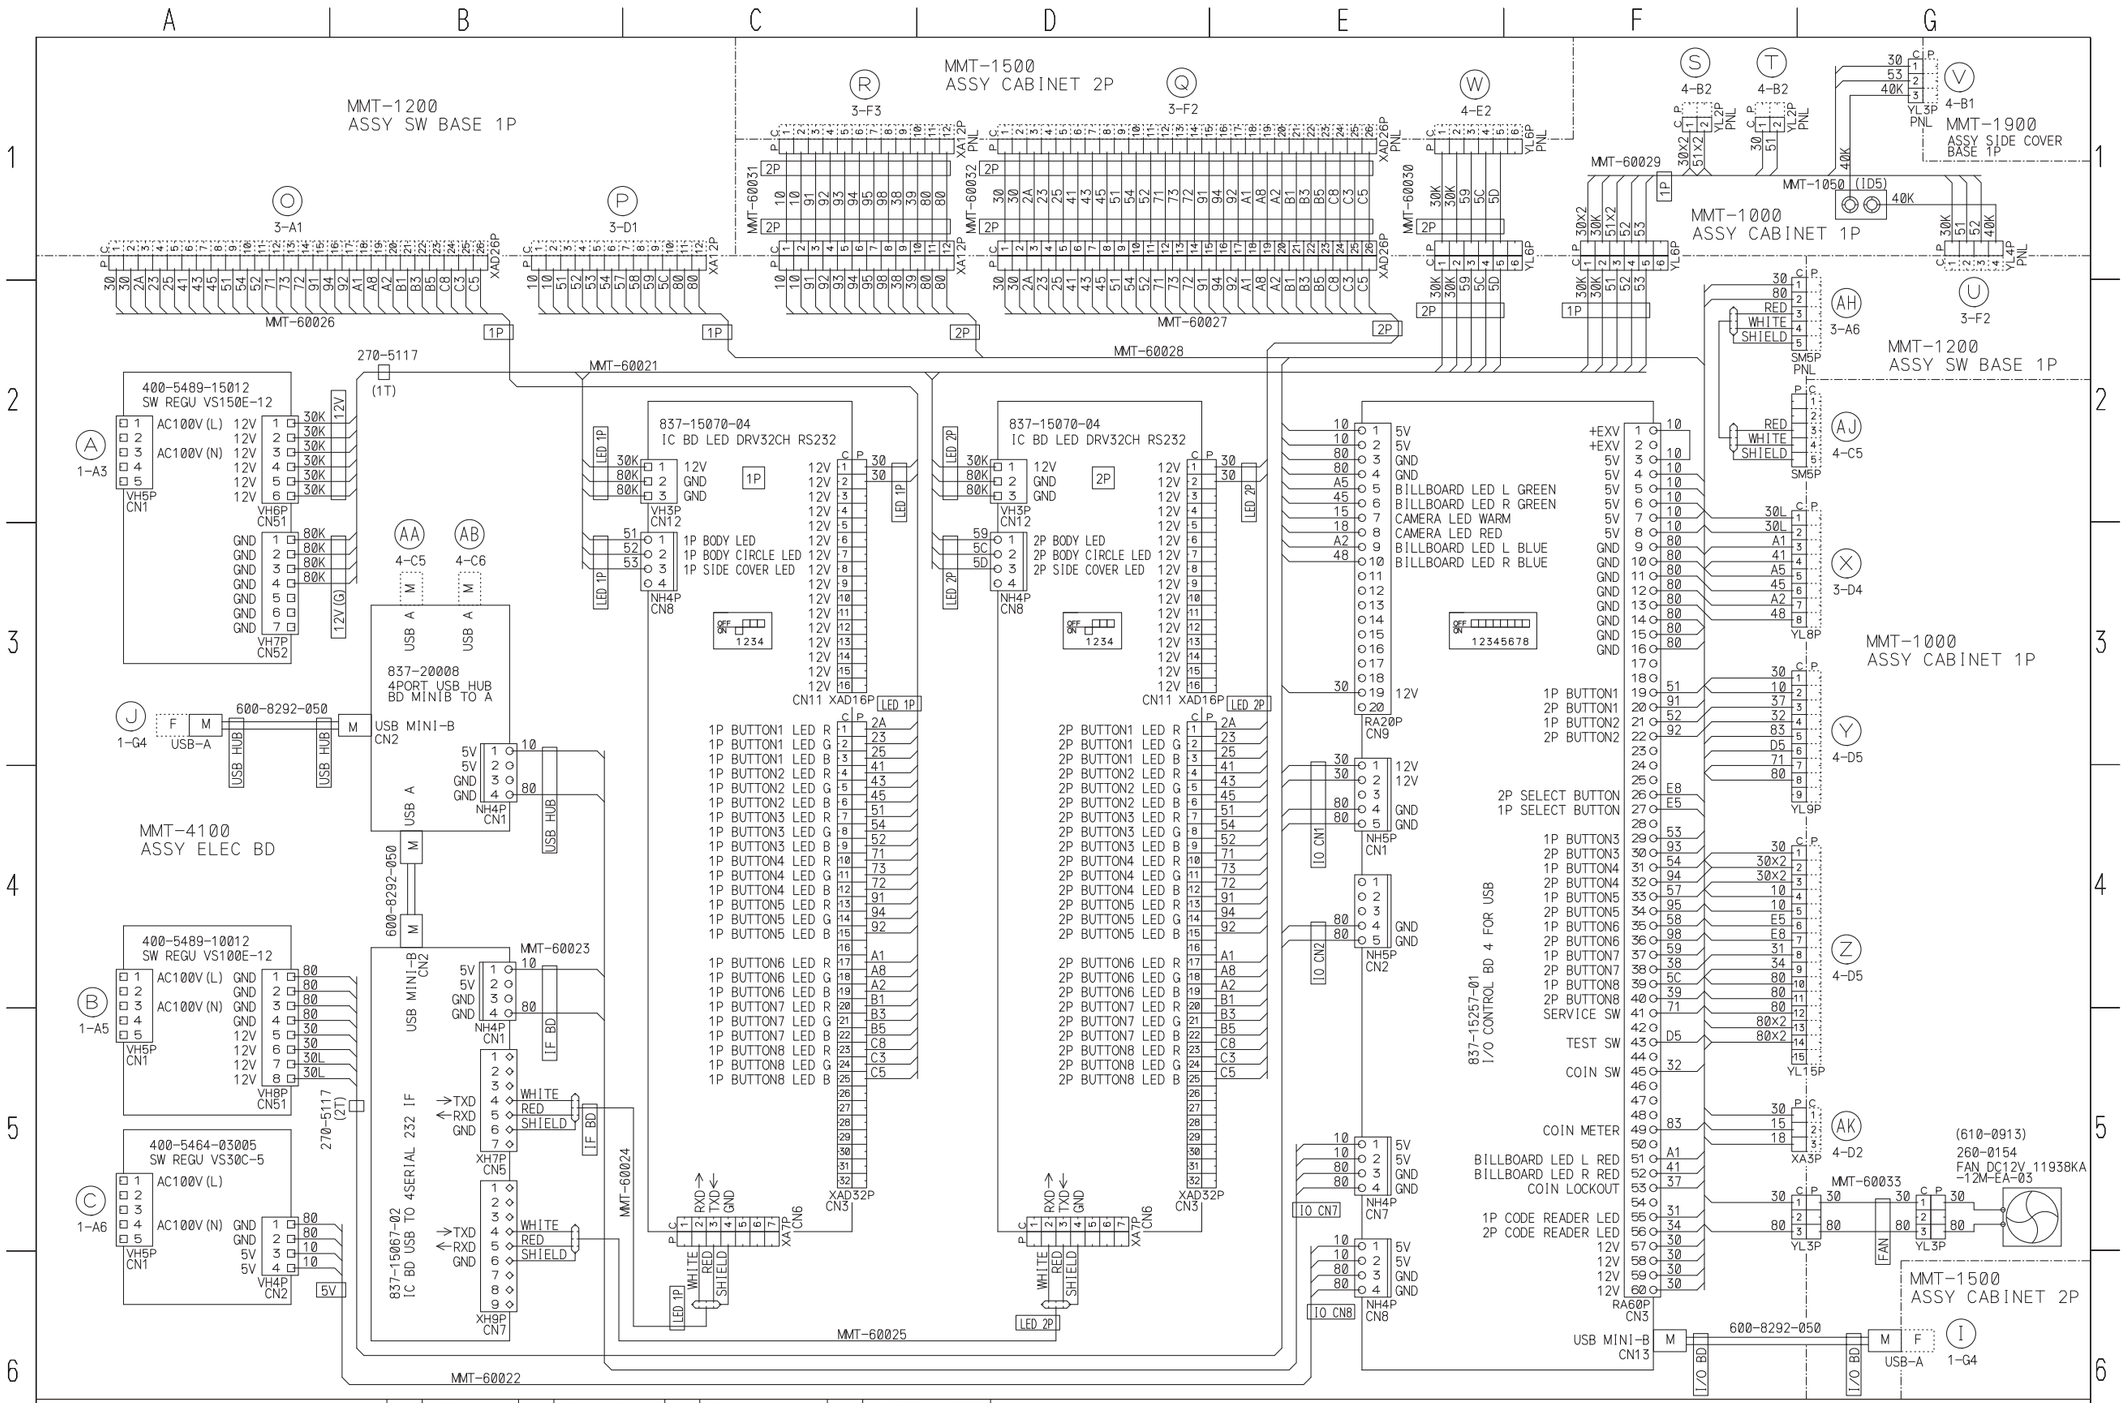

About wire colors
WARNING:
Wire colors differ depending on the model. Wiring with the wrong colors may cause a fire, so check carefully.

1	RED	7	ORANGE	A	PINK	U	AWG16 UL1015
2	BLUE	8	BLACK	B	SKYBLUE	K	AWG18 UL1015
3	YELLOW	9	GRAY	C	BROWN	L	AWG20 UL1007
4	GREEN			D	PURPLE	None	AWG22 UL1007
5	WHITE	43	EARTH WIRE	E	LIGHT GREEN	T	AWG24 UL1007

Example 1: For 51K, the wire base color is WHITE, the spiral color is RED and the wire gauge is AWG18 UL1015.
Example 2: For 50K, the wire base color (single color) is WHITE and the wire gauge is AWG18 UL1015.
Example 3: For AK, the wire base color (single color) is PINK and the wire gauge is AWG18 UL1015.
Example 4: For A, the wire base color (single color) is PINK and the wire gauge is AWG22 UL1007.



Example 1: for 51K

am.sega.jp

(D-3/4)

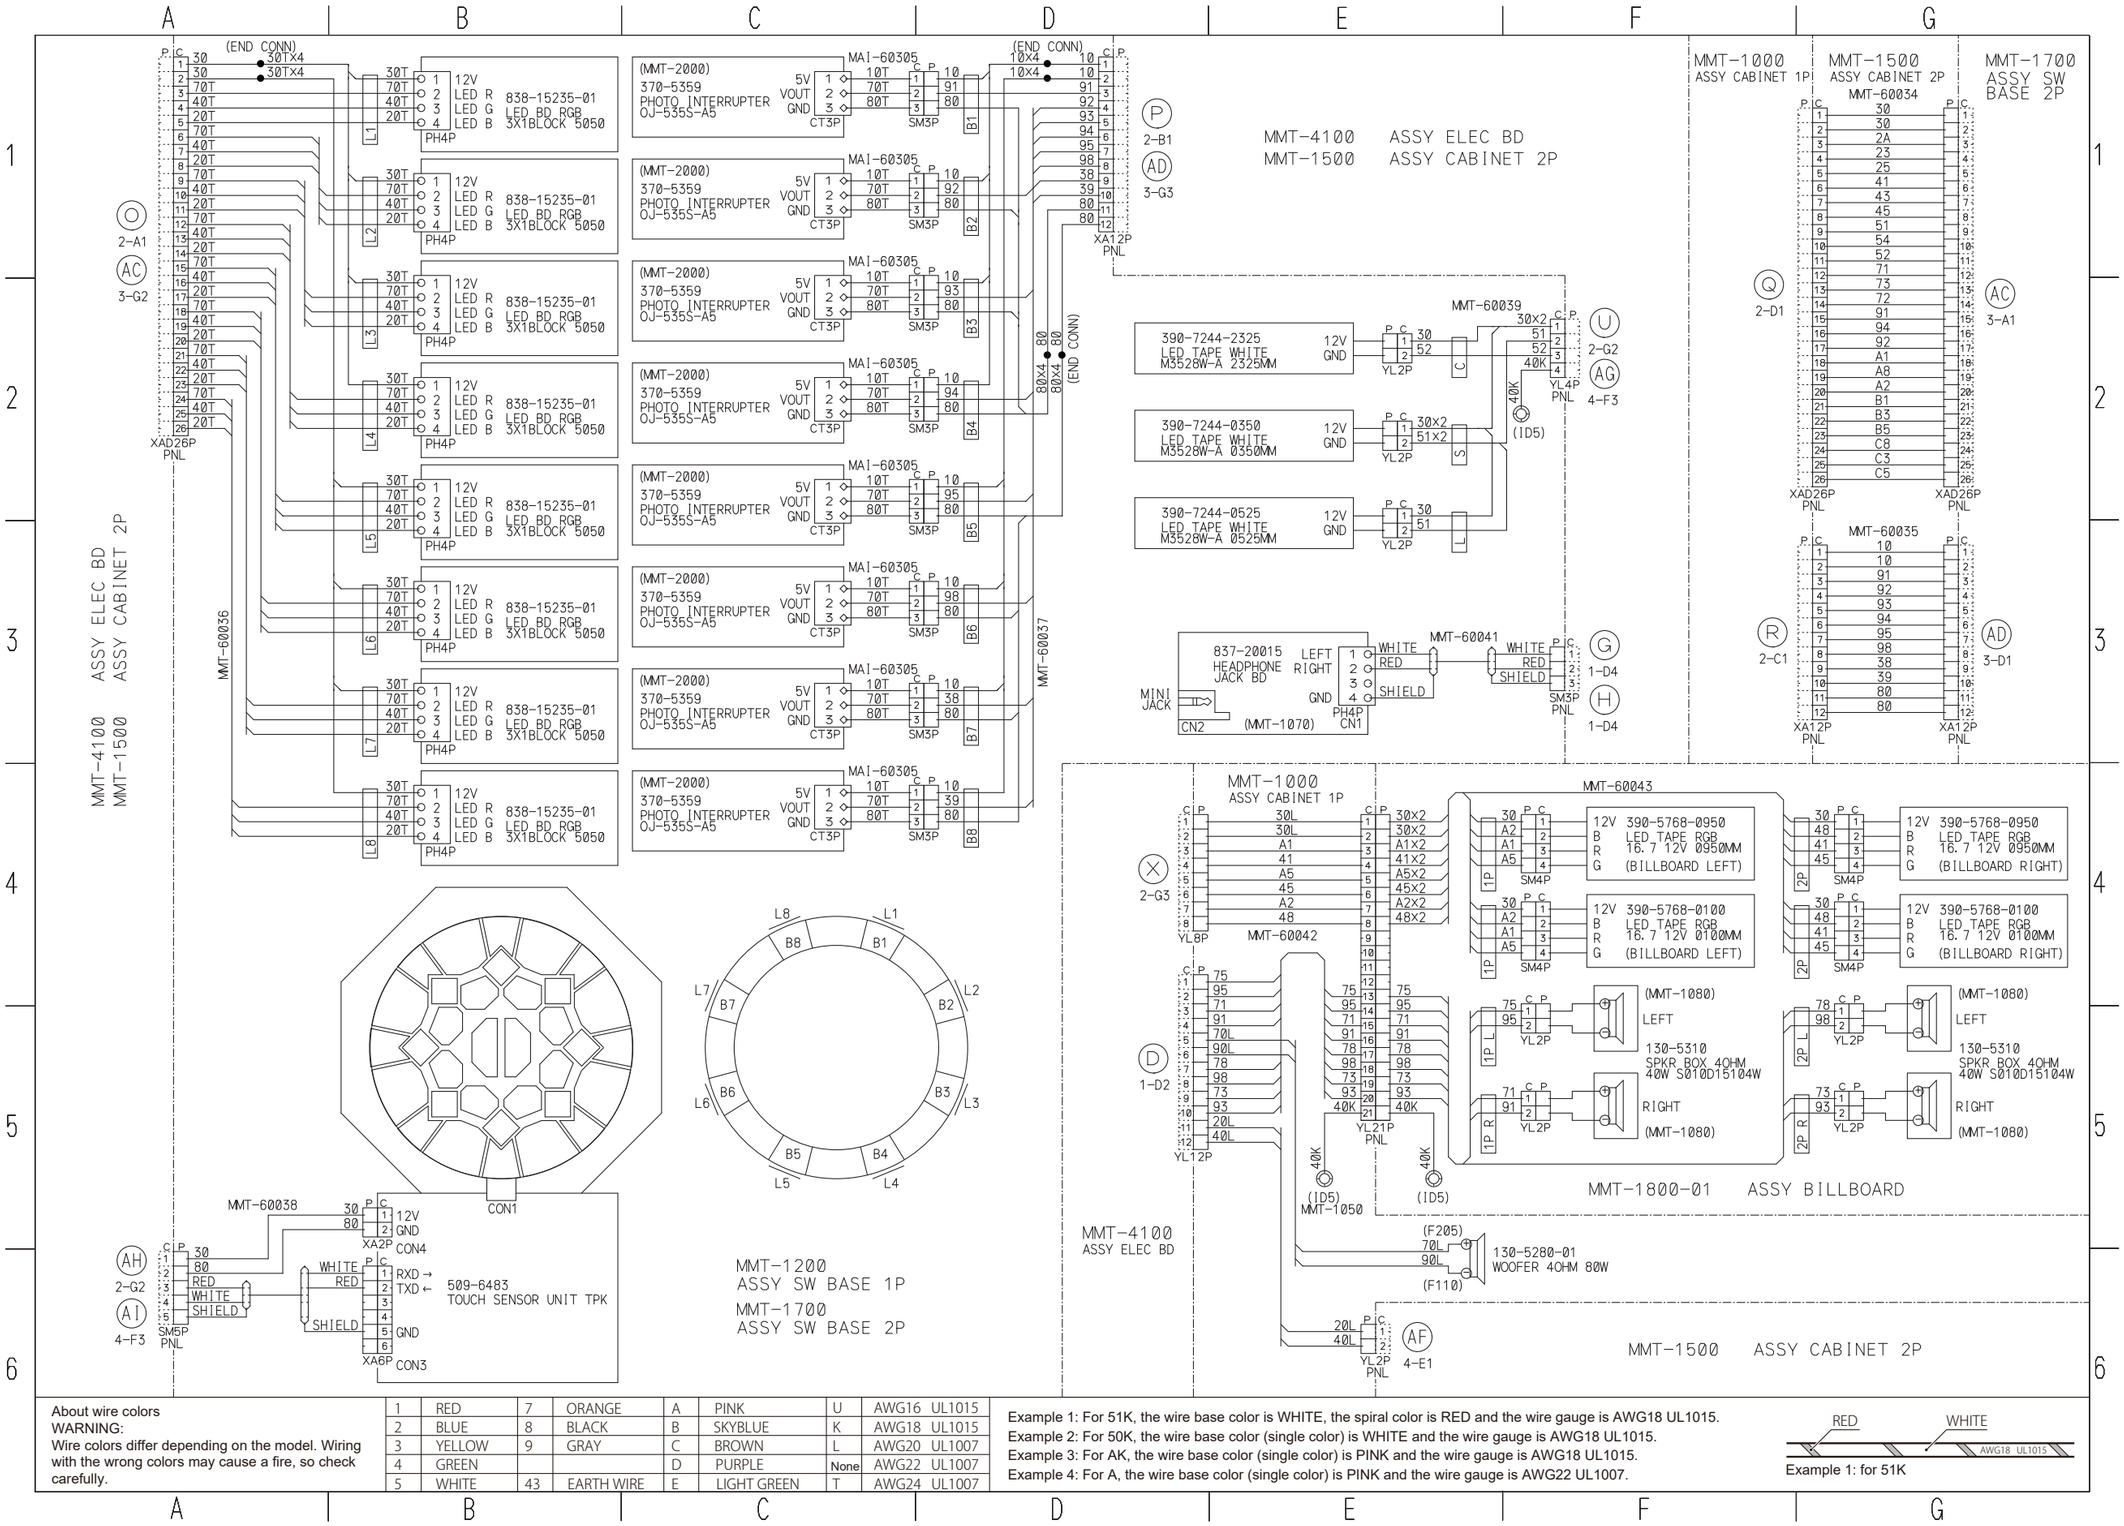

About wire colors
WARNING:
Wire colors differ depending on the model. Wiring with the wrong colors may cause a fire, so check carefully.

1	RED	7	ORANGE	A	PINK	U	AWG16 UL1015
2	BLUE	8	BLACK	B	SKYBLUE	K	AWG18 UL1015
3	YELLOW	9	GRAY	C	BROWN	L	AWG20 UL1007
4	GREEN			D	PURPLE	None	AWG22 UL1007
5	WHITE	43	EARTH WIRE	E	LIGHT GREEN	T	AWG24 UL1007

Example 1: For 51K, the wire base color is WHITE, the spiral color is RED and the wire gauge is AWG18 UL1015.
Example 2: For 50K, the wire base color (single color) is WHITE and the wire gauge is AWG18 UL1015.
Example 3: For AK, the wire base color (single color) is PINK and the wire gauge is AWG18 UL1015.
Example 4: For A, the wire base color (single color) is PINK and the wire gauge is AWG22 UL1007.

Example 1: for 51K

am.sega.jp

(D-4/4)

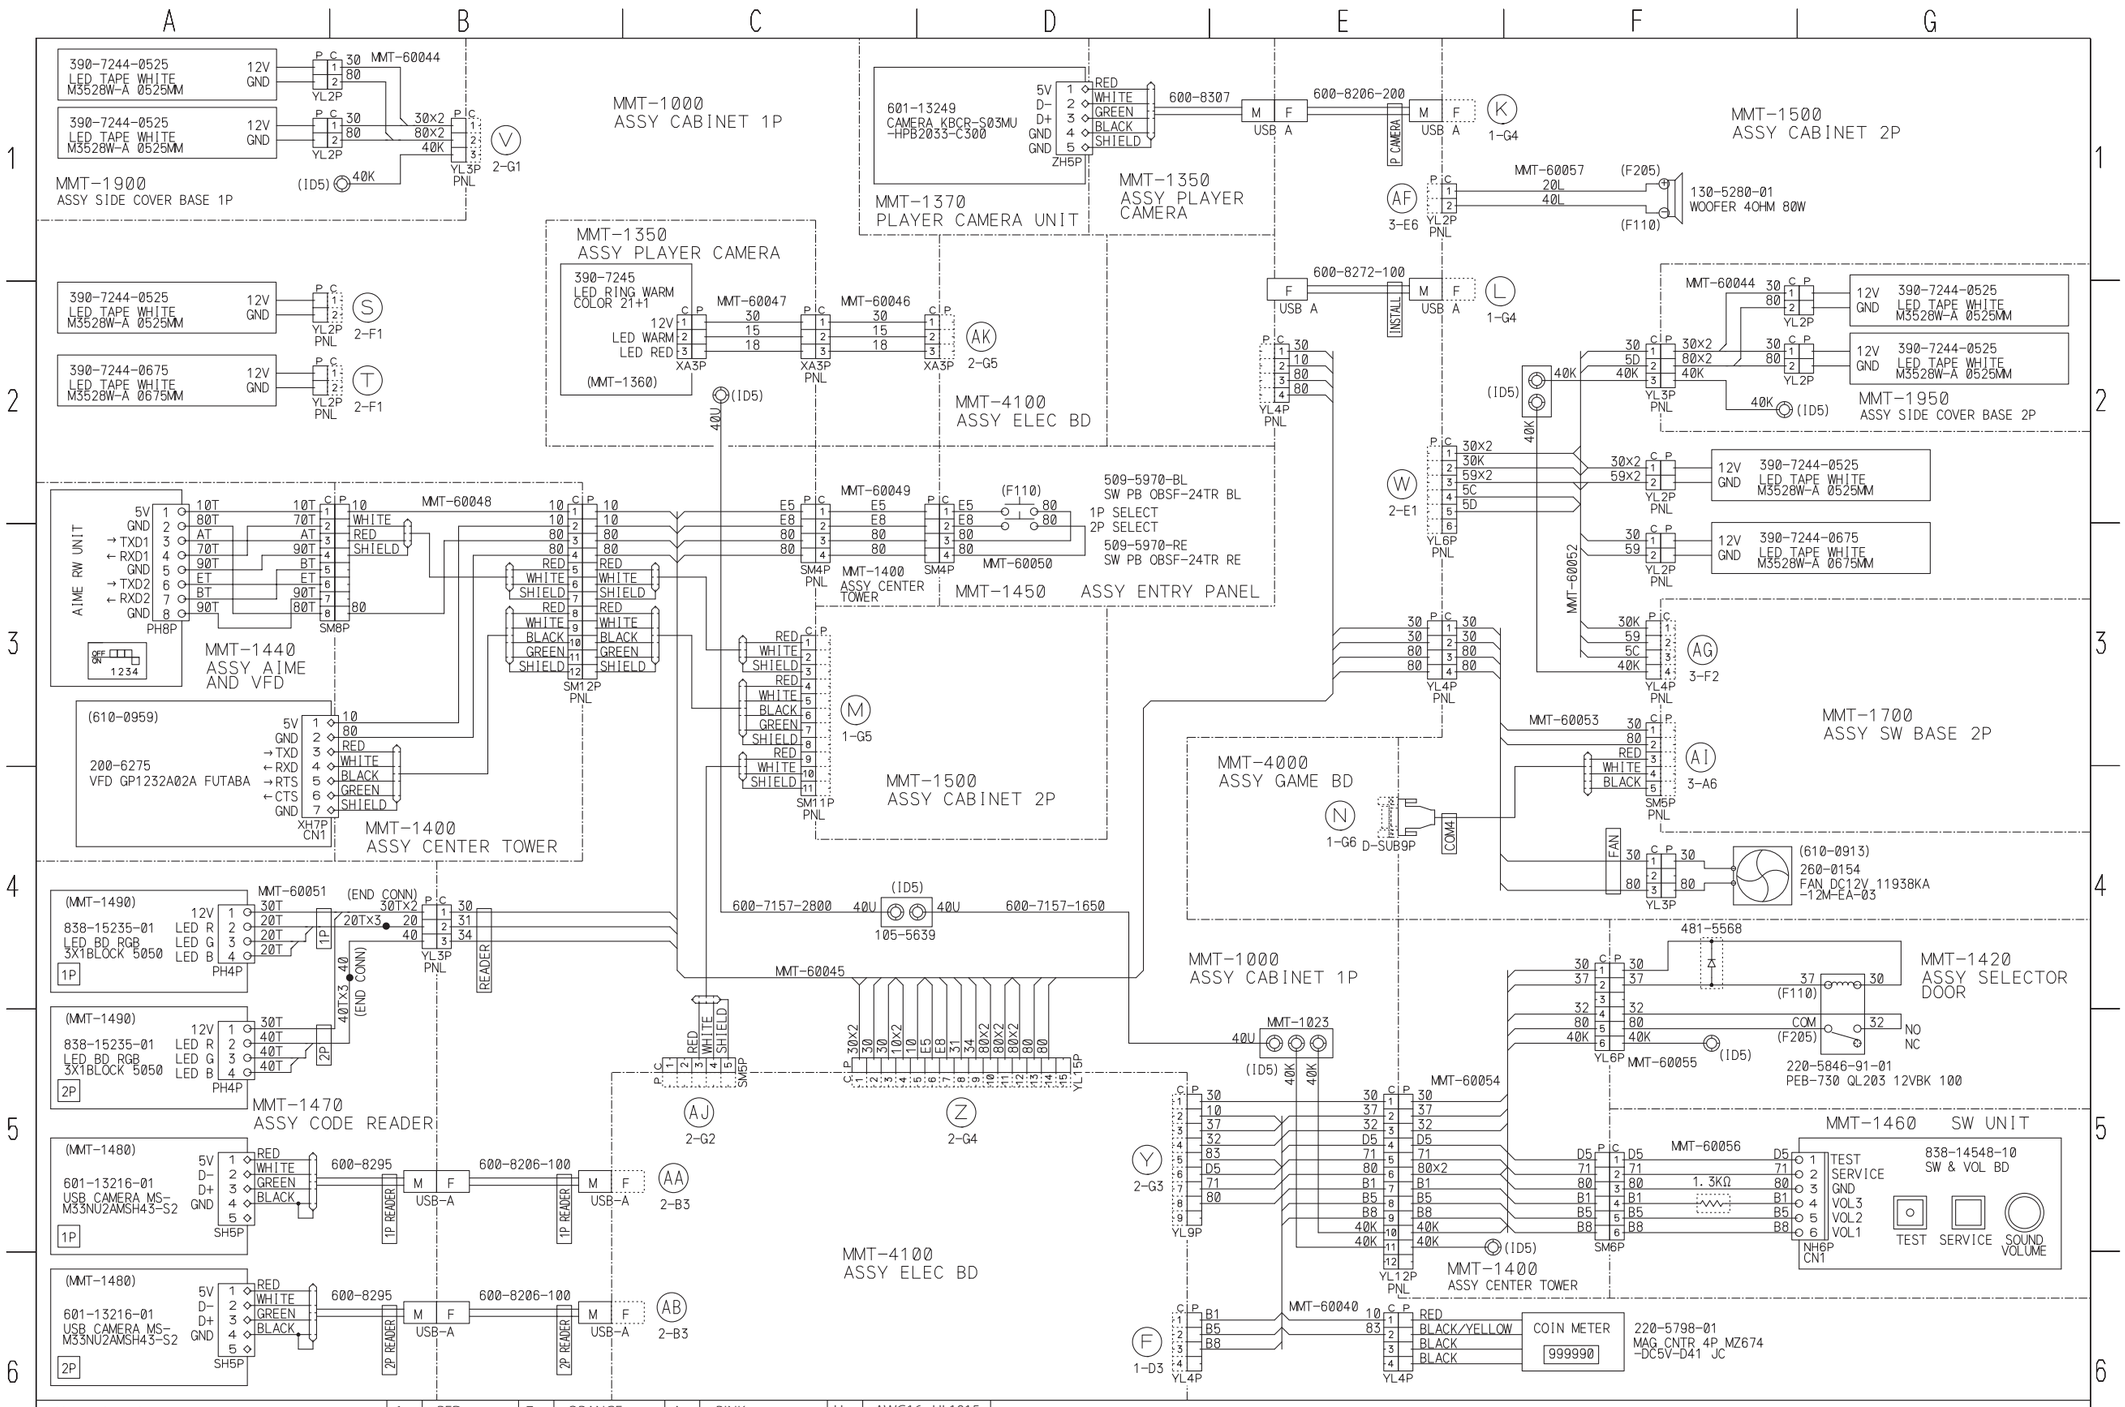

About wire colors
WARNING:
Wire colors differ depending on the model. Wiring with the wrong colors may cause a fire, so check carefully.

1	RED	7	ORANGE	A	PINK	U	AWG16 UL1015
2	BLUE	8	BLACK	B	SKYBLUE	K	AWG18 UL1015
3	YELLOW	9	GRAY	C	BROWN	L	AWG20 UL1007
4	GREEN			D	PURPLE	None	AWG22 UL1007
5	WHITE	43	EARTH WIRE	E	LIGHT GREEN	T	AWG24 UL1007

Example 1: For 51K, the wire base color is WHITE, the spiral color is RED and the wire gauge is AWG18 UL1015.
Example 2: For 50K, the wire base color (single color) is WHITE and the wire gauge is AWG18 UL1015.
Example 3: For AK, the wire base color (single color) is PINK and the wire gauge is AWG18 UL1015.
Example 4: For A, the wire base color (single color) is PINK and the wire gauge is AWG22 UL1007.



Example 1: for 51K

am.sega.jp

Third-Party Rights Notices

avr-libc

Portions of avr-libc are Copyright (c) 1999-2008
Werner Boellmann,
Dean Camera,
Pieter Conradie,
Brian Dean,
Keith Gudger,
Wouter van Gulik,
Bjoern Haase,
Steinar Haugen,
Peter Jansen,
Reinhard Jessich,
Magnus Johansson,
Harald Kipp,
Carlos Lamas,
Cliff Lawson,
Artur Lipowski,
Marek Michalkiewicz,
Todd C. Miller,
Rich Neswold,
Colin O'Flynn,
Bob Paddock,
Andrey Pashchenko,
Reiner Patommel,
Florin-Viorel Petrov,
Alexander Popov,
Michael Rickman,
Theodore A. Roth,
Juergen Schilling,
Philip Soeberg,
Anatoly Sokolov,
Nils Kristian Strom,
Michael Stumpf,
Stefan Swanepoel,
Helmut Wallner,
Eric B. Weddington,
Joerg Wunsch,
Dmitry Xmelkov,
Atmel Corporation,
egnite Software GmbH,
The Regents of the University of California.
All rights reserved.

Redistribution and use in source and binary forms, with or without
modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright
notice, this list of conditions and the following disclaimer.

* Redistributions in binary form must reproduce the above copyright
notice, this list of conditions and the following disclaimer in
the documentation and/or other materials provided with the
distribution.

* Neither the name of the copyright holders nor the names of
contributors may be used to endorse or promote products derived
from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"
AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE
IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE
ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE
LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR
CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF
SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS
INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN
CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)
ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE
POSSIBILITY OF SUCH DAMAGE.

Third-Party Rights Notices for the Router

CSVJSON

Copyright (c) 2014 Aaron Snoswell
Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:
The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.
THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR
PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT
OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER
DEALINGS IN THE SOFTWARE.

D3

Copyright 2010-2016 Mike Bostock

All rights reserved.

Redistribution and use in source and binary forms, with or without modification,

are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright notice, this

list of conditions and the following disclaimer.

* Redistributions in binary form must reproduce the above copyright notice,

this list of conditions and the following disclaimer in the documentation

and/or other materials provided with the distribution.

* Neither the name of the author nor the names of contributors may be used to

endorse or promote products derived from this software without specific prior

written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED

WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE

DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR

ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES

(INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;

LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON

ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS

SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Dynatree

jquery.dynatree.js

Dynamic tree view control, with support for lazy loading of branches.

Copyright (c) 2006-2013, Martin Wendt (http://wwWendt.de)

Dual licensed under the MIT or GPL Version 2 licenses.

http://code.google.com/p/dynatree/wiki/LicenseInfo

ExplorerCanvas

Copyright 2006 Google Inc.

Licensed under the Apache License, Version 2.0 (the "License");

you may not use this file except in compliance with the License.

You may obtain a copy of the License at

http://www.apache.org/licenses/LICENSE-2.0

Unless required by applicable law or agreed to in writing, software

distributed under the License is distributed on an "AS IS" BASIS,

WITHOUT WARRANTIES OR CONDITIONS OF ANY KIND, either express or implied.

See the License for the specific language governing permissions and

limitations under the License.

jqcanvas

Copyright (c) 2008 David Kwast <david _dot_ kwast _at_ gmail>

Permission is hereby granted, free of charge, to any person obtaining a copy

of this software and associated documentation files (the "Software"), to deal

in the Software without restriction, including without limitation the rights

to use, copy, modify, merge, publish, distribute, sublicense, and/or sell

copies of the Software, and to permit persons to whom the Software is

furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in

all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR

IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY,

FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE

AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER

LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,

OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN

THE SOFTWARE.

jqPlot

jqPlot

Pure JavaScript plotting plugin using jQuery

Version: 1.0.4

Revision: 1121

Copyright (c) 2009-2012 Chris Leonello

jqPlot is currently available for use in all personal or commercial projects

under both the MIT (http://www.opensource.org/licenses/mit-license.php) and GPL

version 2.0 (http://www.gnu.org/licenses/gpl-2.0.html) licenses. This means that you can

choose the license that best suits your project and use it accordingly.

Although not required, the author would appreciate an email letting him

know of any substantial use of jqPlot. You can reach the author at:

chris at jqplot dot com or see http://www.jqplot.com/info.php .

If you are feeling kind and generous, consider supporting the project by

making a donation at: http://www.jqplot.com/donate.php .

sprintf functions contained in jqplot.sprintf.js by Ash Searle:

version 2007.04.27

author Ash Searle

http://hexmen.com/blog/2007/03/printf-sprintf/

http://hexmen.com/js/sprintf.js

The author (Ash Searle) has placed this code in the public domain:

"This code is unrestricted: you are free to use it however you like."

jQuery

jQuery JavaScript Library v1.9.1

http://jquery.com/

Includes Sizzle.js

http://sizzlejs.com/

Copyright 2005, 2012 jQuery Foundation, Inc. and other contributors

Released under the MIT license

http://jquery.org/license

Date: 2013-2-4

jQuery blockUI plugin

Copyright (c) 2007-2013 M. Alsup.

The BlockUI plugin is dual licensed under the MIT and GPL licenses.

You may use either license. The MIT license is recommended for most projects because it is simple and easy to

understand and it places almost no restrictions on what you can do with the plugin.

If the GPL suits your project better you are also free to use the plugin under that license.

You do not have to do anything special to choose one license or the other and you don't have to notify anyone

which license you are using. You are free to use the BlockUI plugin in commercial projects as long as the

copyright header is left intact.

jQuery Cookie Plugin

Copyright 2014 Klaus Hartl

Permission is hereby granted, free of charge, to any person obtaining

a copy of this software and associated documentation files (the

"Software"), to deal in the Software without restriction, including

without limitation the rights to use, copy, modify, merge, publish,

distribute, sublicense, and/or sell copies of the Software, and to

permit persons to whom the Software is furnished to do so, subject to

the following conditions:

The above copyright notice and this permission notice shall be

included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND,

EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF

MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND

NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE

LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION

OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION

WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

jQuery DateTimePicker plugin

Copyright (c) 2013 http://xdsoft.net

Permission is hereby granted, free of charge, to any person obtaining a copy

of this software and associated documentation files (the "Software"), to deal

in the Software without restriction, including without limitation the rights

to use, copy, modify, merge, publish, distribute, sublicense, and/or sell

copies of the Software, and to permit persons to whom the Software is

furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in

all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR

IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY,

FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE

AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER

LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,

OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN

THE SOFTWARE.

jQuery UI

Copyright jQuery Foundation and other contributors, https://jquery.org/

This software consists of voluntary contributions made by

many

individuals. For exact contribution history, see the revision history

available at https://github.com/jquery/jquery-ui

The following license applies to all parts of this software except as

documented below:

====

Permission is hereby granted, free of charge, to any person obtaining

a copy of this software and associated documentation files (the

"Software"), to deal in the Software without restriction, including

without limitation the rights to use, copy, modify, merge, publish,

distribute, sublicense, and/or sell copies of the Software, and to

permit persons to whom the Software is furnished to do so, subject to

the following conditions:

The above copyright notice and this permission notice shall be

included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND,

EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF

MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND

NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE

LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION

OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION

WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

====

Copyright and related rights for sample code are waived via CC0. Sample

code is defined as all source code contained within the demos directory.

CC0: http://creativecommons.org/publicdomain/zero/1.0/

====

All files located in the node_modules and external directories are

externally maintained libraries used by this software which have their

own licenses; we recommend you read them, as their terms may differ from

the terms above.

jQuery UI Touch Punch

jQuery UI Touch Punch 0.2.2

Copyright 2011, Dave Furfero

Dual licensed under the MIT or GPL Version 2 licenses.

Depends:

jquery.ui.widget.js

jquery.ui.mouse.js

JSON

Copyright (c) 2005 JSON.org

Permission is hereby granted, free of charge, to any person obtaining a copy

of this software and associated documentation files (the "Software"), to deal

in the Software without restriction, including without limitation the rights

to use, copy, modify, merge, publish, distribute, sublicense, and/or sell

copies of the Software, and to permit persons to whom the Software is

furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all

copies or substantial portions of the Software.

The Software shall be used for Good, not Evil.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR

IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY,

FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT. IN NO EVENT SHALL THE

AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER

LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM,

OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE

SOFTWARE.

Part of the Kernel Clock implementation

Copyright (c) 1982, 1986, 1991, 1993

The Regents of the University of California. All rights reserved.

(c) UNIX System Laboratories, Inc.

All or some portions of this file are derived from material licensed

to the University of California by American Telephone and Telegraph

Co. or Unix System Laboratories, Inc. and are reproduced herein with

the permission of UNIX System Laboratories, Inc.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software

must display the following acknowledgement:

This product includes software developed by the University of

California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

libevent

Libevent is available for use under the following license, commonly known

as the 3-clause (or "modified") BSD license:

==========

Copyright (c) 2000-2007 Niels Provos <provos@citi.umich.edu>

Copyright (c) 2007-2010 Niels Provos and Nick Mathewson

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products

derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES

OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT,

INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT

NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,

DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY

THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF

THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

==========

Portions of Libevent are based on works by others, also made available by

them under the three-clause BSD license above. The copyright notices are

available in the corresponding source files; the license is as above. Here's

a list:

log.c:

Copyright (c) 2000 Dug Song <dugsong@monkey.org>

Copyright (c) 1993 The Regents of the University of California.

strlcpy.c:

Copyright (c) 1998 Todd C. Miller <Todd.Miller@courtesan.com>

win32select.c:

Copyright (c) 2003 Michael A. Davis <mike@datanerds.net>

evport.c:

Copyright (c) 2007 Sun Microsystems

ht-internal.h:

Copyright (c) 2002 Christopher Clark

minheap-internal.h:

Copyright (c) 2006 Maxim Yegorushkin <maxim.yegorushkin@gmail.com>

==========

The arc4module is available under the following, sometimes called the

"OpenBSD" license:

Copyright (c) 1996, David Mazieres <dm@uun.org>

Copyright (c) 2008, Damien Miller <djm@openbsd.org>

Permission to use, copy, modify, and distribute this software for any

purpose with or without fee is hereby granted, provided that the above

copyright notice and this permission notice appear in all copies.

THE SOFTWARE IS PROVIDED "AS IS" AND THE AUTHOR DISCLAIMS ALL WARRANTIES

WITH REGARD TO THIS SOFTWARE INCLUDING ALL IMPLIED WARRANTIES OF

MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR

ANY SPECIAL, DIRECT, INDIRECT, OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES

WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN

ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF

OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Libxml2

Copyright (C) 1998 Bjorn Reese and Daniel Stenberg.

Copyright (C) 2000 Bjorn Reese and Daniel Stenberg.

Copyright (C) 2000 Gary Pennington and Daniel Veillard.

Copyright (C) 2001 Bjorn Reese and Daniel Stenberg.

Copyright (C) 2001 Bjorn Reese <breese@users.sourceforge.net>

Copyright (C) 2003 Daniel Veillard.

Permission to use, copy, modify, and distribute this software for any

purpose with or without fee is hereby granted, provided that the above

copyright notice and this permission notice appear in all copies.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED

WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF

MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE AUTHORS AND

CONTRIBUTORS ACCEPT NO RESPONSIBILITY IN ANY CONCEIVABLE MANNER.

Lua

Copyright (C) 1994–2012 Lua.org, PUC-Rio.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated

documentation files (the "Software"), to deal in the Software without restriction, including without limitation the

rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to

permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of

the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING

BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND

NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY

CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE,

ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN

THE SOFTWARE.

LuaSocket

Copyright (C) 2004-2007 Diego Nehab. All rights reserved.

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated

documentation files (the "Software"), to deal in the Software without restriction, including without limitation the

rights to use, copy, modify, merge, publish, distribute, sublicense, and/or sell copies of the Software, and to

permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of

the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING

BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND

NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE LIABLE FOR ANY

CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE,

ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN

THE SOFTWARE.

MT19937

A C-program for MT19937, with initialization improved 2002/2/10.

Coded by Takuji Nishimura and Makoto Matsumoto.

This is a faster version by taking Shawn Cokus's optimization,

Matthe Bellew's simplification, Isaku Wada's real version.

Before using, initialize the state by using init_genrand(seed)

or init_by_array(init_key, key_length).

Copyright (C) 1997 - 2002, Makoto Matsumoto and Takuji Nishimura,

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. The names of its contributors may not be used to endorse or promote

products derived from this software without specific prior written

permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS

"AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT

LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR

A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR

CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL,

EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO,

PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR

PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF

LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING

NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS

SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Any feedback is very welcome.

http://www.math.sci.hiroshima-u.ac.jp/~m-mat/MT/emt.html

email: m-mat @ math.sci.hiroshima-u.ac.jp (remove space)

MS-CHAP compatible implementation

Copyright (c) 1995 Eric Rosenquist, Strata Software Limited.

http://www.strataware.com/

All rights reserved.

Redistribution and use in source and binary forms are permitted

provided that the above copyright notice and this paragraph

are

duplicated in all such forms and that any documentation,

advertising materials, and other materials related to such

distribution and use acknowledge that the software was developed

by Eric Rosenquist. The name of the author may not be used to

endorse or promote products derived from this software without

specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Net-SNMP

Copyright 1988, 1989, 1991, 1992 by Carnegie Mellon University

All Rights Reserved

Permission to use, copy, modify, and distribute this software and its

documentation for any purpose and without fee is hereby granted,

provided that the above copyright notice appear in all copies and that

both that copyright notice and this permission notice appear in

supporting documentation, and that the name of CMU not be

used in advertising or publicity pertaining to distribution of the

software without specific, written prior permission.

CMU DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING

ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL

CMU BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR

ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS,

WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION,

ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS

SOFTWARE.

OpenSSH

The licences which components of this software fall under are as

follows. First, we will summarize and say that all components

are under a BSD licence, or a licence more free than that.

OpenSSH contains no GPL code.

1)

* Copyright (c) 1995 Tatu Ylonen <ylo@cs.hut.fi>, Espoo, Finland

* All rights reserved

*

* As far as I am concerned, the code I have written for this software

* can be used freely for any purpose. Any derived versions of this

* software must be clearly marked as such, and if the derived work is

* incompatible with the protocol description in the RFC file, it

must be

* called by a name other than "ssh" or "Secure Shell".

[Tatu continues]

* However, I am not implying to give any licenses to any patents or

* copyrights held by third parties, and the software includes parts that

* are not under my direct control. As far as I know, all included

* source code is used in accordance with the relevant license agreements

* and can be used freely for any purpose (the GNU license being the most

* restrictive); see below for details.

[However, none of that term is relevant at this point in time. All of

these restrictively licenced software components which he talks about

have been removed from OpenSSH, i.e.,

- RSA is no longer included, found in the OpenSSL library

- IDEA is no longer included, its use is deprecated

- DES is now external, in the OpenSSL library

- GMP is no longer used, and instead we call BN code from OpenSSL

- Zlib is now external, in a library

- The make-ssh-known-hosts script is no longer included

- TSS has been removed

- MD5 is now external, in the OpenSSL library

- RC4 support has been replaced with ARC4 support from OpenSSL

- Blowfish is now external, in the OpenSSL library

[The licence continues]

Note that any information and cryptographic algorithms used in this

software are publicly available on the Internet and at any major

bookstore, scientific library, and patent office worldwide. More

information can be found e.g. at "http://www.cs.hut.fi/crypto".

The legal status of this program is some combination of all these

permissions and restrictions. Use only at your own responsibility.

You will be responsible for any legal consequences yourself; I am not

making any claims whether possessing or using this is legal or not in

your country, and I am not taking any responsibility on your behalf.

NO WARRANTY

BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY

FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN

OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES

PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED

OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF

MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS

TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE

PROGRAM PROVE DEFECTIVE, YOU ASSUME THE

COST OF ALL NECESSARY SERVICING,

REPAIR OR CORRECTION.

IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING

WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR

REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES,

INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING

OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED

TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY

YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER

PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE

POSSIBILITY OF SUCH DAMAGES.

3)

ssh-keyscan was contributed by David Mazieres under a BSD-style

license.

* Copyright 1995, 1996 by David Mazieres <dm@lcs.mit.edu>.

*

* Modification and redistribution in source and binary forms is

* permitted provided that due credit is given to the author and the

* OpenBSD project by leaving this copyright notice intact.

4)

The Rijndael implementation by Vincent Rijmen, Antoon Bosselaers

and Paulo Barreto is in the public domain and distributed

with the following license:

* @version 3.0 (December 2000)

*

* Optimised ANSI C code for the Rijndael cipher (now AES)

*

* @author Vincent Rijmen <vincent.rijmen@esat.kuleuven.ac.be>

* @author Antoon Bosselaers <antoon.bosselaers@esat.kuleuven.ac.be>

* @author Paulo Barreto <paulo.barreto@terra.com.br>

*

* This code is hereby placed in the public domain.

*

* THIS SOFTWARE IS PROVIDED BY THE AUTHORS "AS IS" AND ANY EXPRESS

* OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED

* WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHORS OR CONTRIBUTORS BE

* LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR

* CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF

* SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR

* BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY,

* WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE

* OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE,

* EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

5)

One component of the ssh source code is under a 3-clause BSD license,

held by the University of California, since we pulled these parts from

original Berkeley code.

* Copyright (c) 1983, 1990, 1992, 1993, 1995

* The Regents of the University of California. All rights reserved.

*

* Redistribution and use in source and binary forms, with or without

* modification, are permitted provided that the following conditions

* are met:

* 1. Redistributions of source code must retain the above copyright

* notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright

* notice, this list of conditions and the following disclaimer in the

* documentation and/or other materials provided with the distribution.

* 3. Neither the name of the University nor the names of its contributors

* may be used to endorse or promote products derived from this software

* without specific prior written permission.

*

* THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS ``AS IS'' AND

* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

* ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE

* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

* SUCH DAMAGE.

6)

Remaining components of the software are provided under a standard

2-term BSD licence with the following names as copyright holders:

Markus Friedl

Theo de Raadt

Niels Provos

Dug Song

Aaron Campbell

Damien Miller

Kevin Steves

Daniel Kouril

Wesley Griffin

Per Allansson

Nils Nordman

Simon Wilkinson

* Redistribution and use in source and binary forms, with or without

* modification, are permitted provided that the following conditions

* are met:

* 1. Redistributions of source code must retain the above copyright

* notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright

* notice, this list of conditions and the following disclaimer in the

* documentation and/or other materials provided with the distribution.

*

* THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS'' AND ANY EXPRESS OR

* IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES

* OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

* IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT,

* INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT

* NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,

* DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY

* THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

* (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF

* THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

OpenSSL

LICENSE ISSUES

==============

The OpenSSL toolkit stays under a double license, i.e. both the conditions of

the OpenSSL License and the original SSLeay license apply to the toolkit.

See below for the actual license texts.

OpenSSL License

/* ==

* Copyright (c) 1998-2002 The OpenSSL Project. All rights reserved.

*

* Redistribution and use in source and binary forms, with or without

* modification, are permitted provided that the following conditions

* are met:

*

* 1. Redistributions of source code must retain the above copyright

* notice, this list of conditions and the following disclaimer.

*

* 2. Redistributions in binary form must reproduce the above copyright

* notice, this list of conditions and the following disclaimer in

* the documentation and/or other materials provided with the

* distribution.

*

* 3. All advertising materials mentioning features or use of this

* software must display the following acknowledgment:

* "This product includes software developed by the OpenSSL Project

* for use in the OpenSSL Toolkit. (http://www.openssl.org/)"

*

* 4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to

* endorse or promote products derived from this software without

* prior written permission. For written permission, please contact

* openssl-core@openssl.org.

*

* 5. Products derived from this software may not be called "OpenSSL"

* nor may "OpenSSL" appear in their names without prior written

* permission of the OpenSSL Project.

*

* 6. Redistributions of any form whatsoever must retain the following

* acknowledgment:

* "This product includes software developed by the OpenSSL Project

* for use in the OpenSSL Toolkit (http://www.openssl.org/)"

*

* THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT ``AS IS'' AND ANY

* EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR

* PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR

* ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,

* SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT

* NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;

* LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT,

* STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)

* ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED

* OF THE POSSIBILITY OF SUCH DAMAGE.

* ==

*

* This product includes cryptographic software written by Eric Young

* (eay@cryptsoft.com). This product includes software written by Tim

* Hudson (tjh@cryptsoft.com).

*

*/

Original SSLeay License

/* Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com)

* All rights reserved.

*

* This package is an SSL implementation written

* by Eric Young (eay@cryptsoft.com).

* The implementation was written so as to conform with Netscapes SSL.

*

* This library is free for commercial and non-commercial use as long as

* the following conditions are aheared to. The following conditions

* apply to all code found in this distribution, be it the RC4, RSA,

* lhash, DES, etc., code; not just the SSL code. The SSL documentation

* included with this distribution is covered by the same copyright terms

* except that the holder is Tim Hudson (tjh@cryptsoft.com).

*

* Copyright remains Eric Young's, and as such any Copyright notices in

* the code are not to be removed.

* If this package is used in a product, Eric Young should be given attribution

* as the author of the parts of the library used.

* This can be in the form of a textual message at program startup or

* in documentation (online or textual) provided with the package.

*

* Redistribution and use in source and binary forms, with or without

* modification, are permitted provided that the following conditions

* are met:

* 1. Redistributions of source code must retain the copyright

* notice, this list of conditions and the following disclaimer.

* 2. Redistributions in binary form must reproduce the above copyright

* notice, this list of conditions and the following disclaimer in the

* documentation and/or other materials provided with the distribution.

* 3. All advertising materials mentioning features or use of this software

* must display the following acknowledgement:

* "This product includes cryptographic software written by

* Eric Young (eay@cryptsoft.com)"

* The word 'cryptographic' can be left out if the rouines from the library

* being used are not cryptographic related :-).

* 4. If you include any Windows specific code (or a derivative thereof) from

* the apps directory (application code) you must include an acknowledgement:

* "This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

*

* THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND

* ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

* IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

* ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

* FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

* DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

* OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

* HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

* LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

* OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

* SUCH DAMAGE.

*

* The licence and distribution terms for any publically available version or

* derivative of this code cannot be changed. i.e. this code cannot simply be

* copied and put under another distribution licence

* [including the GNU Public Licence.]

*/

PCRE

PCRE is a library of functions to support regular expressions whose syntax

and semantics are as close as possible to those of the Perl 5 language.

Written by Philip Hazel

Copyright (c) 1997-2010 University of Cambridge

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions are met:

* Redistributions of source code must retain the above copyright notice,

this list of conditions and the following disclaimer.

* Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

* Neither the name of the University of Cambridge nor the names of its

contributors may be used to endorse or promote products derived from

this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS"

AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE

LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR

CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF

SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS

INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN

CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE)

ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE

POSSIBILITY OF SUCH DAMAGE.

PowerTip

Copyright (c) 2013 Steven Benner (http://stevenbenner.com/)

Permission is hereby granted, free of charge, to any person obtaining

a copy of this software and associated documentation files (the

"Software"), to deal in the Software without restriction, including

without limitation the rights to use, copy, modify, merge, publish,

distribute, sublicense, and/or sell copies of the Software, and to

permit persons to whom the Software is furnished to do so, subject to

the following conditions:

The above copyright notice and this permission notice shall be

included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND,

EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF

MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND

NONINFRINGEMENT. IN NO EVENT SHALL THE AUTHORS OR COPYRIGHT HOLDERS BE

LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION

OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION

WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Part of the PPP implementation

Copyright (c) 1989 Carnegie Mellon University.

All rights reserved.

Redistribution and use in source and binary forms are permitted

provided that the above copyright notice and this paragraph are

duplicated in all such forms and that any documentation,

advertising materials, and other materials related to such

distribution and use acknowledge that the software was developed

by Carnegie Mellon University. The name of the

University may not be used to endorse or promote products derived

from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Copyright (c) 1989 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms are permitted

provided that the above copyright notice and this paragraph are

duplicated in all such forms and that any documentation,

advertising materials, and other materials related to such

distribution and use acknowledge that the software was developed

by the University of California, Berkeley. The name of the

University may not be used to endorse or promote products derived

from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Van Jacobson (van@helios.ee.lbl.gov), Dec 31, 1989:

- Initial distribution.

Modified June 1993 by Paul Mackerras, paulus@cs.anu.edu.au,

so that the entire packet being decompressed doesn't have

to be in contiguous memory (just the compressed header).

Copyright (c) 1991 Gregory M. Christy.

All rights reserved.

Redistribution and use in source and binary forms are permitted

provided that the above copyright notice and this paragraph are

duplicated in all such forms and that any documentation,

advertising materials, and other materials related to such

distribution and use acknowledge that the software was developed

by Gregory M. Christy. The name of the author may not be used to

endorse or promote products derived from this software without

specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Copyright (c) 1993 The Australian National University.

All rights reserved.

Redistribution and use in source and binary forms are permitted

provided that the above copyright notice and this paragraph are

duplicated in all such forms and that any documentation,

advertising materials, and other materials related to such

distribution and use acknowledge that the software was developed

by the Australian National University. The name of the University

may not be used to endorse or promote products derived from this

software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Copyright (c) 1995 ?rp?d Magoss?nyi

All rights reserved.

Copyright (c) 1999 Tim Hockin, Cobalt Networks Inc.

Redistribution and use in source and binary forms are permitted

provided that the above copyright notice and this paragraph are

duplicated in all such forms and that any documentation,

advertising materials, and other materials related to such

distribution and use acknowledge that the software was developed

by Pedro Roque Marques. The name of the author may not be used to

endorse or promote products derived from this software without

specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Part of the SHA2 algorithm implementation

FILE: sha2.c

AUTHOR: Aaron D. Gifford

http://www.aarongifford.com/computers/sha.html

Copyright (c) 2000-2003, Aaron D. Gifford

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. Neither the name of the copyright holder nor the names of contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTOR(S) "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTOR(S) BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

SNMP Development Kit

Written by James R. Davin

Advanced Network Architecture group

M.I.T Laboratory for Computer Science

545 Technology Square

Cambridge, MA 02139

Copyright 1988, 1989 Massachusetts Institute of Technology

Permission to use, copy, modify, and distribute this software for any

purpose and without fee is hereby granted, provided that this

copyright and permission notice appear on all copies and supporting

documentation, the name of M.I.T. not be used in advertising or

publicity pertaining to distribution of the program without specific

prior permission, and notice be given in supporting documentation that

copying and distribution is by permission of M.I.T. M.I.T. makes no

representations about the suitability of this software for any

purpose. It is provided "as is" without express or implied

warranty.

Part of the TCP implementation

Copyright 1979, 1980, 1983, 1986, 1988, 1989, 1991, 1992, 1993, 1994

The Regents of the University of California. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the

following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the

following disclaimer.

2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the

following disclaimer in the documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software must display the following

acknowledgement:

This product includes software developed by the University of California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors may be used to endorse or promote

products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY

AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS

OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR

CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON

ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE

OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE

POSSIBILITY OF SUCH DAMAGE.

The Institute of Electrical and Electronics Engineers and the American National Standards Committee X3, on

Information Processing Systems have given us permission to reprint portions of their documentation.

In the following statement, the phrase "this text" refers to portions of the system documentation.

Portions of this text are reprinted and reproduced in electronic form in the second BSD Networking Software

Release, from IEEE Std 1003.1-1988, IEEE Standard Portable Operating System Interface for Computer

Environments (POSIX), copyright C 1988 by the Institute of Electrical and Electronics Engineers, Inc. In the

event of any discrepancy between these versions and the original IEEE Standard, the original IEEE Standard is

the referee document.

In the following statement, the phrase "This material" refers to portions of the system documentation.

This material is reproduced with permission from American National Standards Committee X3, on Information

Processing Systems. Computer and Business Equipment Manufacturers Association (CBEMA), 311 First St.,

NW, Suite 500, Washington, DC 20001-2178. The developmental work of Programming Language C was

completed by the X3J11 Technical Committee.

The views and conclusions contained in the software and documentation are those of the authors and should

not be interpreted as representing official policies, either expressed or implied, of the Regents of the University

of California.

NOTE: The copyright of UC Berkeley's Berkeley Software Distribution "BSD") source has been updated. The

copyright addendum may be found at ftp://ftp.cs.berkeley.edu/pub/4bsd/README.Impt.License.Change and is

included below.

July 22, 1999

To All Licensees, Distributors of Any Version of BSD:

As you know, certain of the Berkeley Software Distribution ("BSD") source code files require that further

distributions of products containing all or portions of the software, acknowledge within their advertising

materials that such products contain software developed by UC Berkeley and its contributors.

Specifically, the provision reads:

" * 3. All advertising materials mentioning features or use of this software

* must display the following acknowledgement:

* This product includes software developed by the University of

* California, Berkeley and its contributors."

Effective immediately, licensees and distributors are no longer required to include the acknowledgement within

advertising materials. Accordingly, the foregoing paragraph of those BSD Unix files containing it is hereby

deleted in its entirety.

William Hoskins

Director, Office of Technology Licensing

University of California, Berkeley

Copyright (c) 1982, 1986, 1989, 1990, 1991, 1993

The Regents of the University of California. All rights reserved.

Copyright (c) 2000

Poul-Henning Kamp. All rights reserved.

(c) UNIX System Laboratories, Inc.

All or some portions of this file are derived from material licensed

to the University of California by American Telephone and Telegraph

Co. or Unix System Laboratories, Inc. and are reproduced herein with

the permission of UNIX System Laboratories, Inc.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software

must display the following acknowledgement:

This product includes software developed by the University of

California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND

FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1982, 1986, 1989, 1990, 1993

The Regents of the University of California. All rights reserved.

sendfile(2) and related extensions:

Copyright (c) 1998, David Greenman. All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software

must display the following acknowledgement:

This product includes software developed by the University of

California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1988, 1992, 1993

The Regents of the University of California. All rights reserved.

Copyright (c) 1996

Matt Thomas <matt@3am-software.com>

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software

must display the following acknowledgement:

This product includes software developed by the University of

California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1988 University of Utah.

Copyright (c) 1982, 1990, 1992, 1993

The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by

the Systems Programming Group of the University of Utah Computer

Science Department and Ralph Campbell.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software

must display the following acknowledgement:

This product includes software developed by the University of

California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1988 Stephen Deering.

Copyright (c) 1992, 1993

The Regents of the University of California. All rights reserved.

This code is derived from software contributed to Berkeley by

Stephen Deering of Stanford University.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software

must display the following acknowledgement:

This product includes software developed by the University of

California, Berkeley and its contributors.

4. Neither the name of the University nor the names of its contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE REGENTS AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE REGENTS OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright 1994, 1995 Massachusetts Institute of Technology

Permission to use, copy, modify, and distribute this software and

its documentation for any purpose and without fee is hereby

granted, provided that both the above copyright notice and this

permission notice appear in all copies, that both the above

copyright notice and this permission notice appear in all

supporting documentation, and that the name of M.I.T. not be used

in advertising or publicity pertaining to distribution of the

software without specific, written prior permission. M.I.T. makes

no representations about the suitability of this software for any

purpose. It is provided "as is" without express or implied

warranty.

THIS SOFTWARE IS PROVIDED BY M.I.T. ``AS IS''. M.I.T. DISCLAIMS

ALL EXPRESS OR IMPLIED WARRANTIES WITH REGARD TO THIS SOFTWARE,

INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF

MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT

SHALL M.I.T. BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL,

SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT

LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF

USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND

ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY,

OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT

OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (C) 1995, 1996, 1997, 1998 and 1999 WIDE Project.

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. Neither the name of the project nor the names of its contributors

may be used to endorse or promote products derived from this software

without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE PROJECT AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE PROJECT OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1996, 1997 Berkeley Software Design, Inc. All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. Berkeley Software Design Inc's name may not be used to endorse or

promote products derived from this software without specific prior

written permission.

THIS SOFTWARE IS PROVIDED BY BERKELEY SOFTWARE DESIGN INC "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL BERKELEY SOFTWARE DESIGN INC BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (C) 1992-1994,2001 by Joerg Wunsch, Dresden

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR(S) "AS IS" AND ANY

EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR

PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR(S) BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR

CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT

OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR

BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF

LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE

USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH

DAMAGE.

Copyright (c) 1994, Henrik Vestergaard Draboel

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. All advertising materials mentioning features or use of this software

must display the following acknowledgement:

This product includes software developed by (name).

4. The name of the author may not be used to endorse or promote products

derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1996 Matthew R. Green

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products

derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS" AND ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES

OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT,

INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,

BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES;

LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED

AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY,

OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1997 Peter Wemm <peter@freebsd.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products

derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1997, 1998, 2000 Doug Rabson

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1998 HD Associates, Inc.

All rights reserved.

contact: dufault@hda.com

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1998-2000 Luigi Rizzo, Universita` di Pisa

Portions Copyright (c) 2000 Akamba Corp.

All rights reserved

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1999 Luoqi Chen <luoqi@freebsd.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1999 Marcel Moolenaar

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer

in this position and unchanged.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products

derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES

OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT,

INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT

NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,

DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY

THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF

THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 1999 Michael Smith <msmith@freebsd.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1999 John D. Polstra

Copyright (c) 1999,2001 Peter Wemm <peter@FreeBSD.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1999, 2000, 2001 Robert N. M. Watson

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 1999,2000,2001 Jonathan Lemon <jlemon@FreeBSD.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 2000 Brian Somers <brian@Awfulhak.org>

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 2000 Mark R. V. Murray

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer

in this position and unchanged.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES

OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED.

IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT,

INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT

NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE,

DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY

THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF

THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Copyright (c) 2000, 2001 Jake Burkholder <jake@freebsd.org>.

All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO,

PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Copyright (c) 2001

Bosko Milekic <bmilekic@FreeBSD.org>. All rights reserved.

Redistribution and use in source and binary forms, with or without

modification, are permitted provided that the following conditions

are met:

1. Redistributions of source code must retain the above copyright

notice, this list of conditions and the following disclaimer.

2. Redistributions in binary form must reproduce the above copyright

notice, this list of conditions and the following disclaimer in the

documentation and/or other materials provided with the distribution.

3. The name of the author may not be used to endorse or promote products

derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR AND CONTRIBUTORS "AS IS" AND

ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE

IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE

ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE

FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL

DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS

OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION)

HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT

LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY

OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF

SUCH DAMAGE.

Part of the TELNET implementation

Copyright (c) 1983 Regents of the University of California.

All rights reserved.

Copyright (c) 1985 Regents of the University of California.

All rights reserved.

Copyright (c) 1989 The Regents of the University of California.

All rights reserved.

Copyright (c) 1991 The Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms are permitted

provided that: (1) source distributions retain this entire copyright

notice and comment, and (2) distributions including binaries display

the following acknowledgement: ``This product includes software

developed by the University of California, Berkeley and its contributors"

in the documentation or other materials provided with the distribution

and in all advertising materials mentioning features or use of this

software. Neither the name of the University nor the names of its

contributors may be used to endorse or promote products derived

from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Part of the TFTP implementation

Copyright (c) 1983 Regents of the University of California.

All rights reserved.

Redistribution and use in source and binary forms are permitted

provided that the above copyright notice and this paragraph are

duplicated in all such forms and that any documentation,

advertising materials, and other materials related to such

distribution and use acknowledge that the software was developed

by the University of California, Berkeley. The name of the

University may not be used to endorse or promote products derived

from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR

IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED

WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

MEMO

Request date (Y/M/D): / /

株式会社 セガ・ロジスティクスサービス
Sega Logistics Service Co., Ltd.

Customer Support

On-site Service Request Form

Visit site		TEL		Person in charge
Address	Postal code: Customer code （ ）			
Bill to		TEL		Contact person
Address	Postal code: Customer code （ ）			

Machine SER #	Machine name

Request details: [Repair / Inspection / Installation / Technical explanation / Other ( )]

Error No.	Error message

Remarks

ALL.Net entry

Line type: □ B-FLET'S □ ISDN

PCB SER #	Software name

Date received	/ /	
Work site change	Sender	Date sent
		／

Special notes

Customer Support contact		
	TEL	FAX
Toll-free	0120-412-159	0120-492-041

To request a repair, fill in the required items inside the bold frame and send it by FAX.
If you call in advance, we can check your request sooner.
Always enter the serial number (SER #) of the machine to be repaired.
If the customer's area and the installation site's area differ, we will sort the request on our side.
Depending on the request, some time may be needed to arrange parts, etc.

19A9

Cut here

Service Parts Order Form

Request date (Y/M/D): / /

FAX: 0120-011-422

株式会社 セガ・ロジスティクスサービス
Sega Logistics Service Co., Ltd.

Customer Support

Inquiries (toll-free, nationwide): 0120-412-159

Your order no.:

Bill to:	Ship to:
Postal code / Address: Contact name:	Postal code / Address: Contact name:
TEL: ( )	TEL: ( )
FAX: ( )	FAX: ( )
Bill-to code: —	Ship-to code: —

Be sure to fill in the part numbers without omission.

Model	Part No.	Part name	Qty	Remarks

Shipping: collect / prepaid / COD (land / air)	Remarks:	SLS receiving staff
Est. ship date: / /		
Payment terms:		

19A10

Cut here

Advance Loan / Item Repair Request Form

※ Circle the applicable request above.

Request date (Y/M/D): / /

FAX: 0120-011-422

株式会社 セガ・ロジスティクスサービス
Sega Logistics Service Co., Ltd.

Inquiries (toll-free, nationwide): 0120-412-159

Customer Support

Fill in all required items inside the bold frame and send your request by FAX.

Bill to: Name:	Ship to: Name:
Postal code / Address: Contact name:	Postal code / Address: Contact name:
TEL: ( ) FAX: ( )	TEL: ( ) FAX: ( )

Machine name / game title	Product serial number (serial no.)	Installation date

Order details / fault description

☐ Repeat loan (previous slip no.:)

	Part No.	Part name	Qty	Remarks
1				
2				
3				
4				
5				

※ Be sure to enter the product serial number (serial no.). If you do not, the request may be treated as chargeable even within the warranty period.

※ Requests received after 16:00 on regular business days will be shipped on the next business day.

※ Orders cannot be canceled after the goods have shipped. Check the FAX contents before sending.

For SLS use
Entry information

	Completed	Part No.	Receipt No.	Staff	Remarks
1					
2					
3					
4					
5					

19A11

Cut here

Contact Information

SEGA INTERACTIVE CO., LTD.

Head Office Osaki Garden Tower, 1-1-1 Nishi-Shinagawa, Shinagawa-ku, Tokyo 141-0033, Japan

Sales Dept. Osaki Garden Tower, 1-1-1 Nishi-Shinagawa, Shinagawa-ku, Tokyo 141-0033, Japan
TEL: 03-6864-6974

SEGA LOGISTICS SERVICE CO., LTD.

Customer Support (general contact for game machines)

0120-412-159 (Nationwide)

Business hours: Weekdays 9:00-12:00 / 13:00-18:30

※ Technical inquiries are accepted every day of the year.

※ Can also be used from mobile phones and PHS.

On-site service requests

FAX: 0120-492-041 (Nationwide)

Parts orders / advance loan requests

FAX: 0120-011-422 (Nationwide)

※ Same-day shipping deadline for parts orders and advance loans: 16:00

※ For part numbers, part names, prices and other parts information, use P-support (Parts Support NET) on the SLS e-site, which shows parts with images.
<URL> http://www.sls-net.co.jp/e-site/ (Prior registration required.)

1st Edition
May 2019

19A13