



SEGA Interactive Co., Ltd.

Sumitomo Fudosan Osaki Garden Tower 1-1-1 Nishi-Shinagawa,
Shinagawa-ku, Tokyo 141-0033 , Japan

© SEGA

ALLS HX2


SERVICE MANUAL

420-7653-01

http://op.sega.jp/op_e/



SERVICE MANUAL

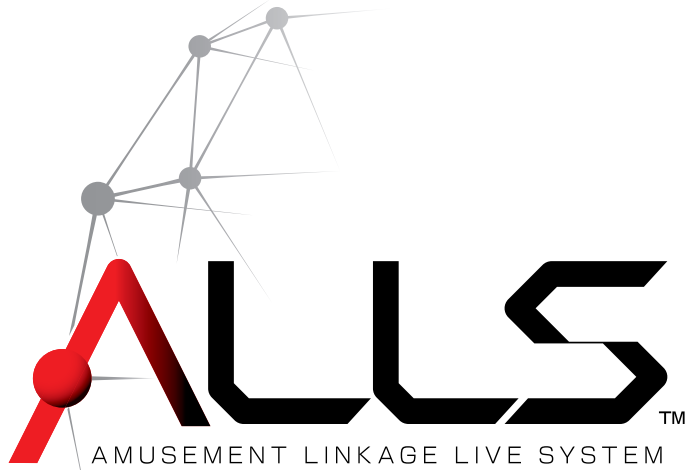

ALLS HX2

IMPORTANT


- Before using this product, read this manual carefully to understand the contents herein stated.
- After reading this manual, be sure to keep it near the product or in a convenient place for easy reference when necessary.

WEEE Statement (for CE only)

The WEEE (Waste of Electrical and Electronic Equipment) directive places an obligation on all EU based manufacturers and importers of Electrical and Electronic Equipment to take back products at the end of their useful life. Sega Amusements Europe Ltd accepts its responsibility to finance the cost of treatment and recovery of redundant WEEE in the United Kingdom in accordance with the specified WEEE recycling requirements.

The following symbol will be on all products manufactured from 13th August 2005, which indicates this product must NOT be disposed of with other normal waste. Instead, it is the user's responsibility to dispose of their waste equipment by arranging to return it to a designated UK collection point for the correct recycling of waste electrical and electronic equipment.


For more information about where you can send your waste equipment for recycling contact your local authority office.

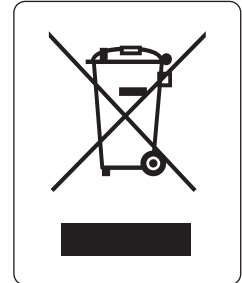**Battery Recycling Statement (for CE only)**

The EC Directive on Batteries and Accumulators (2006/66/EC) aims to minimize the impact of batteries on the environment and encourage the recovery of the materials they contain. To achieve increased collection and recycling of waste batteries, the Directive places 'producer responsibility' obligations on manufacturers and importers of portable, industrial and automotive batteries.

The following symbol will be on all equipment fitted with batteries from 26th September 2008 and indicates they must NOT be disposed of with other normal waste. Instead, it is the user's responsibility to dispose of used batteries by arranging to return them to a designated collection point for the correct recycling of waste batteries.

For more information about where you can send your waste batteries for recycling contact your local authority office.

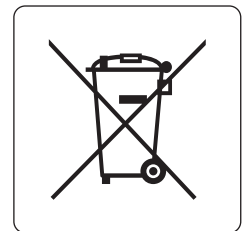

INTRODUCTION

This manual presents information and explanations on how to manage settings and run software, maintenance, inspection for, "ALLS HX2".

This manual is intended for the owners, personnel and managers in charge of operation of the product. Operate the product after carefully reading and sufficiently understanding the instructions. After reading this manual, be sure to keep it near the product or in a convenient place for easy reference when necessary.
If the product is relocated or resold, ensure that it is accompanied by this manual.

In the event that you cannot carry out the work in accordance with the instructions provided in this manual, or, if you cannot achieve normal functioning of the product, contact the office listed in this manual or the point-of-purchase for this product.

Do not touch the internal system unless you are a technician.

The product has a software update feature that uses a network. Some features or modes that are not listed in the manual may be added.

Notes:

- *Descriptions herein contained may be subject to improvement changes without notice.*

DESCRIPTION OF WARNING DISPLAYS

To ensure the safe operation of this product, be sure to read the following before usage.

After carefully reading and sufficiently understanding the warning displays and cautions, handle the product appropriately.

Depending on the degree of severity, the terms of DANGER, WARNING, CAUTION, etc., are used. Be sure to understand the contents of the warning displays before reading the text.

 DANGER	Indicates that mishandling the product by disregarding this pictograph will cause severe injury or death.
 WARNING	Indicates that mishandling the product by disregarding this warning will cause a potentially hazardous situation which can result in death or serious injury.
 CAUTION	Indicates that mishandling the product by disregarding this caution will cause a slightly hazardous situation which can result in personal injury and/or material damage.

For the safe usage of the product, the following pictographs are used:

	"Caution: Electric shock" Indicates a risk of electric shock under specific conditions.
	"Caution: High temperature" Indicates a risk of injury due to high temperature under specific conditions.
	"Caution: Risk of trapping hands/fingers" Indicates a risk of injury caused by trapping hands or fingers in doors, etc.
	"Forbidden" Indicates something you must not do when handling the product.
	Indicates a "protective earth terminal." Before operating the equipment, be sure to connect it to the ground.

Use of this product is unlikely to cause physical injuries or damage to property. However, points that require special attention are indicated by bold text, the word "IMPORTANT" and the symbol below.

 IMPORTANT	Indicates an important detail when installing, operating, or maintaining/inspecting the product.
--	--

Definition of 'Site Maintenance Personnel or Other Qualified Professionals' **WARNING**

Procedures not described in this manual or marked as 'to be carried out by site maintenance personnel or other qualified professionals' should not be carried out by personnel without the required knowledge and technical expertise. Work carried out by unqualified persons may cause serious accidents, including electrocution.

If there is no one with the required knowledge and technical expertise available, for the sake of safety, commission the work to the office listed in this manual or the point-of-purchase for this product.

Parts replacement, maintenance inspections and troubleshooting should be carried out by site maintenance personnel or other qualified professionals. This manual includes directions for potentially dangerous procedures which should only be carried out by professionals with the appropriate specialized knowledge.

The site maintenance personnel or other qualified professionals mentioned in this manual are defined as follows:

Site maintenance personnel:

Individuals with experience in maintaining amusement equipment, vending machines, etc., working under the supervision of the owner/operator of this product to maintain machines within amusement facilities or similar premises by carrying out everyday procedures such as assembly, maintenance inspections, and replacement of units/expendable parts.

Activities to be carried out by site maintenance personnel:

Amusement equipment/vending machine assembly, maintenance inspection and replacement of units/expendable parts.

Other qualified professionals:

Persons employed by amusement equipment manufacturers, or involved in design, production, testing or maintenance of amusement equipment. The individual should have either graduated from technical school or hold similar qualifications in electrical/electronics/mechanical engineering.


Activities to be carried out by other qualified professionals:

Amusement equipment/vending machine assembly, repair/adjustment of electrical/electronic/mechanical parts.

NOTATION USED IN THIS MANUAL


Notation in diagrams

Information regarding fasteners (screws, nuts, washers, etc.) and connectors is shown in the diagrams in this manual as follows.

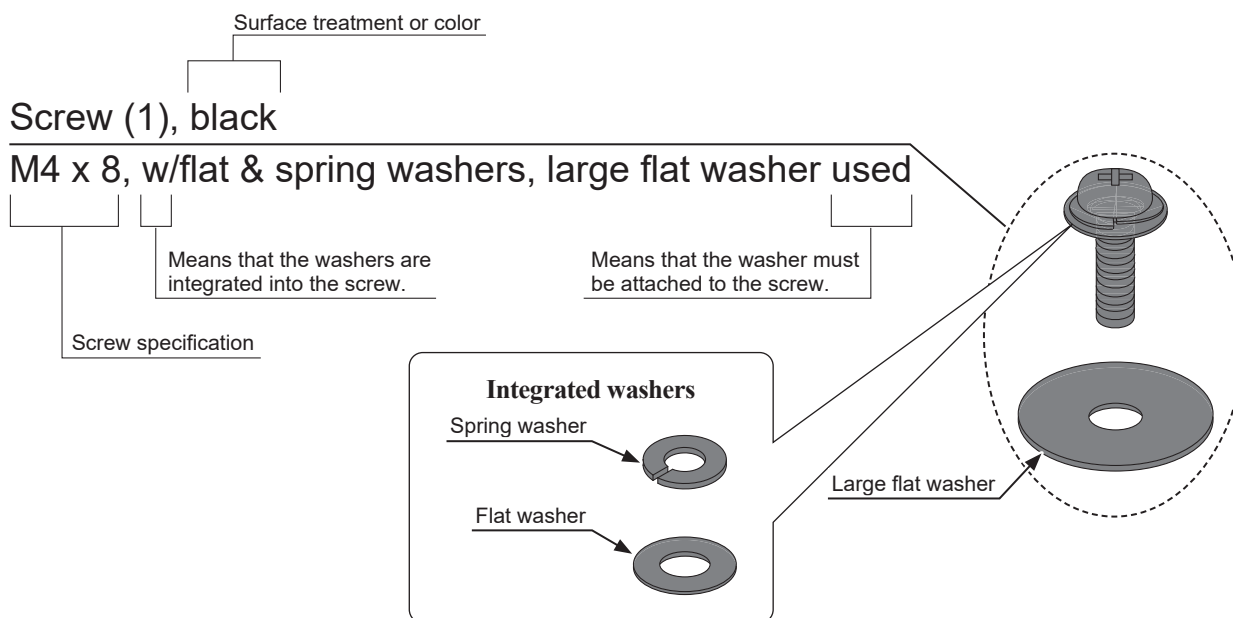


Connector (3)

XA3P red [SATL] (2), YL6P

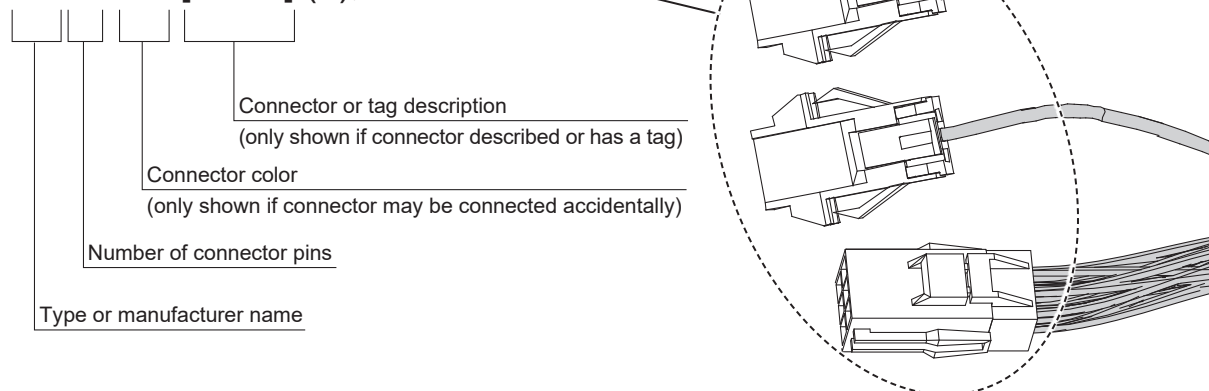

Game version notation







Version numbers appearing in TEST MODE are indicated by the asterisks below. When describing software version upgrades, only major version and minor version numbers are shown. Release version numbers are for SEGA's administrative use only. If you require these numbers, contact the office listed in this manual.

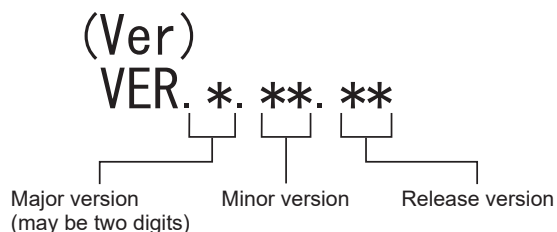

ABOUT TOOLS

Refer to the chart below to decide which tools to use for fixing fasteners (screws, nuts).

Matching chart of fasteners and tools

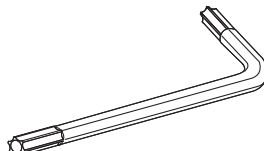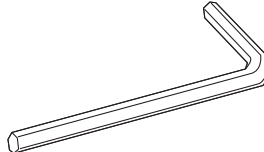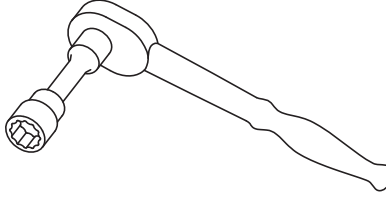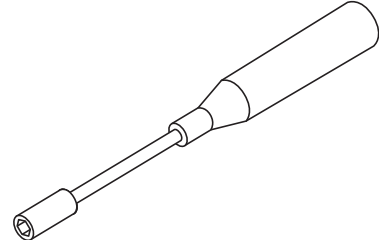Fasteners		Tools	
Truss head screw (M3)		Phillips screwdriver #1	
Truss head screw (M4 , M5)		Phillips screwdriver #2	
Flat head screw (M3-M5)			
Screw (M3-M5)			
Tamperproof screw		Tamperproof wrench	
Hexagon socket head screw		Hexagonal wrench	
Slim head hex socket bolt			
Extra slim head hex socket bolt			
Hex socket button head screw			
Set screw			
Hexagon head bolt		Socket wrench (Nut driver)	 
Hexagon head nut			
Cap nut			
Flange nut			

Note: Refer to the chart on the next page to decide which hexagonal wrench or nut driver to use for each size of fastener.

Matching chart of hexagonal wrench

Standard	WAF (width across flats) of tools				
	Hexagon head screw	Slim head hex socket bolt	Extra slim head hex socket bolt	Hex socket button head screw	Set screw
M3	2.5 mm (0.0984 in)	2 mm (0.0787 in)	1.5 mm (0.0591 in)	2 mm (0.0787 in)	1.5 mm (0.0591 in)
M4	3 mm (0.1181 in)	2.5 mm (0.0984 in)	2 mm (0.0787 in)	2.5 mm (0.0984 in)	2 mm (0.0787 in)
M5	4 mm (0.1575 in)	3 mm (0.1181 in)	3 mm (0.1181 in)	3 mm (0.1181 in)	2.5 mm (0.0984 in)
M6	5 mm (0.1969 in)	4 mm (0.1575 in)	3 mm (0.1181 in)	4 mm (0.1575 in)	3 mm (0.1181 in)
M8	6 mm (0.2362 in)	5 mm (0.1969 in)	4 mm (0.1575 in)	5 mm (0.1969 in)	4 mm (0.1575 in)

**Matching chart of socket wrench (nut driver)**

Standard	WAF (width across flats) of tools			
	Hexagon head bolt	Hexagon head nut	Cap nut	Flange nut
M3	5.5 mm (0.2165 in)			
M4	7 mm (0.2756 in)			
M5	8 mm (0.3150 in)			
M6	10 mm (0.3937 in)			
M8	13 mm (0.5118 in)			12 mm (0.4724 in)
M10	17 mm (0.6693 in)	-		
M12	19 mm (0.7480 in)	-		
M16	24 mm (0.9449 in)	-		

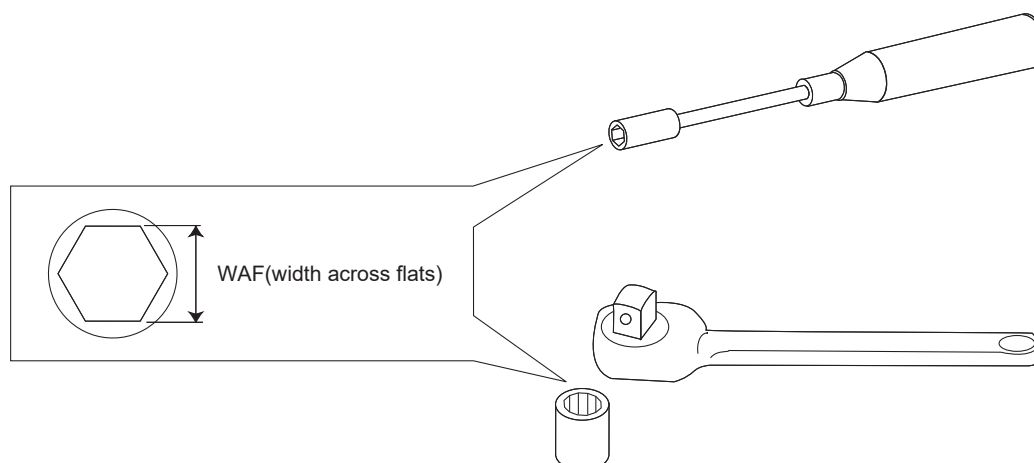


TABLE OF CONTENTS

INTRODUCTION	ii
DESCRIPTION OF WARNING DISPLAYS	iii
Definition of 'Site Maintenance Personnel or Other Qualified Professionals'	iv
NOTATION USED IN THIS MANUAL	v
ABOUT TOOLS	vi
TABLE OF CONTENTS	viii
1 HANDLING PRECAUTIONS	1
2 SPECIFICATIONS	2
2-1 CABINET	2
2-2 PARTS DETAILS	2
3 SYSTEM TEST MODE	4
3-1 SYSTEM INFORMATION	6
3-2 STORAGE INFORMATION	8
3-3 USB I/O BD TEST	10
3-3-1 Input test	11
3-4 MONITOR TEST	12
3-5 SPEAKER TEST	13
3-6 COIN ASSIGNMENTS	14
3-6-1 Detail setting	17
3-6-2 Game cost setting	19
3-6-3 Emoney setting	19
3-7 CREDIT CLEAR	20
3-8 CLOCK SETTING	22
3-9 NETWORK SETTING	24
3-9-1 Main network	25
3-9-2 Network test	27
3-10 SYSTEM CONFIGURATION	28
3-11 THIRD PARTY LICENSE	28
3-12 TOUCH PANEL CALIBRATION	29
4 ERROR MESSAGES	31
5 CLEANING THE ALLS HX2	40
6 REPLACING THE LITHIUM BATTERY	43
SEGA AMUSEMENTS OFFICES	49

1 HANDLING PRECAUTIONS

1

WARNING

- The ALLS HX2 is provided with ventilating fans. Do not block the air outlets of these fans. Also do not place anything closely to the ALLS HX2. Failure to observe these instructions may cause an overheating and fire.
- Always follow the usage conditions from SEGA as well as the usage conditions for the cabinet you are using for the ALLS HX2. Failure to do so may cause an overheating and fire.
- To prevent electric shock or IC Board malfunctioning, be sure to turn off the power for the cabinet when installing or removing the ALLS HX2.

CAUTION

As it remains hot, do not touch around the Exhaust vents right after the power switch is turned off.

Perform works on the ALLS HX2 after confirming it is sufficiently cooled down.

IMPORTANT

- Ensure that connectors are properly connected. Insufficient insertion can damage ALLS HX2, etc.
- Static electricity from your body may damage some electronics devices on the ALLS HX2. Before handling the ALLS HX2, touch a grounded metallic surface so that the static electricity can be discharged.
- Some parts are not designed and manufactured specifically for this product. The manufacturers may discontinue, or change the specifications of such general-purpose parts. If this is the case, SEGA cannot repair or replace a failed product whether or not a warranty period has expired.
- Do not perform any disassembly work not described in this manual, which can result in improper operation and breakdowns.

Electricity Consumption (Max.)	1.6 A (100-120 V, 50/60 Hz)
	0.8 A (AC 200 - 240 V, 50/60 Hz)


2 SPECIFICATIONS

There are two types of ALLS HX2 ; with sub storage (Part No.: 849-1004) / without sub storage (Part No.: 849-1003).

2-1 CABINET

Always follow the usage conditions for the cabinet you are using for the ALLS HX2.
Refer to each Owner's manual supplied with the cabinet for psitions of TEST button and SERVICE button.


2-2 PARTS DETAILS

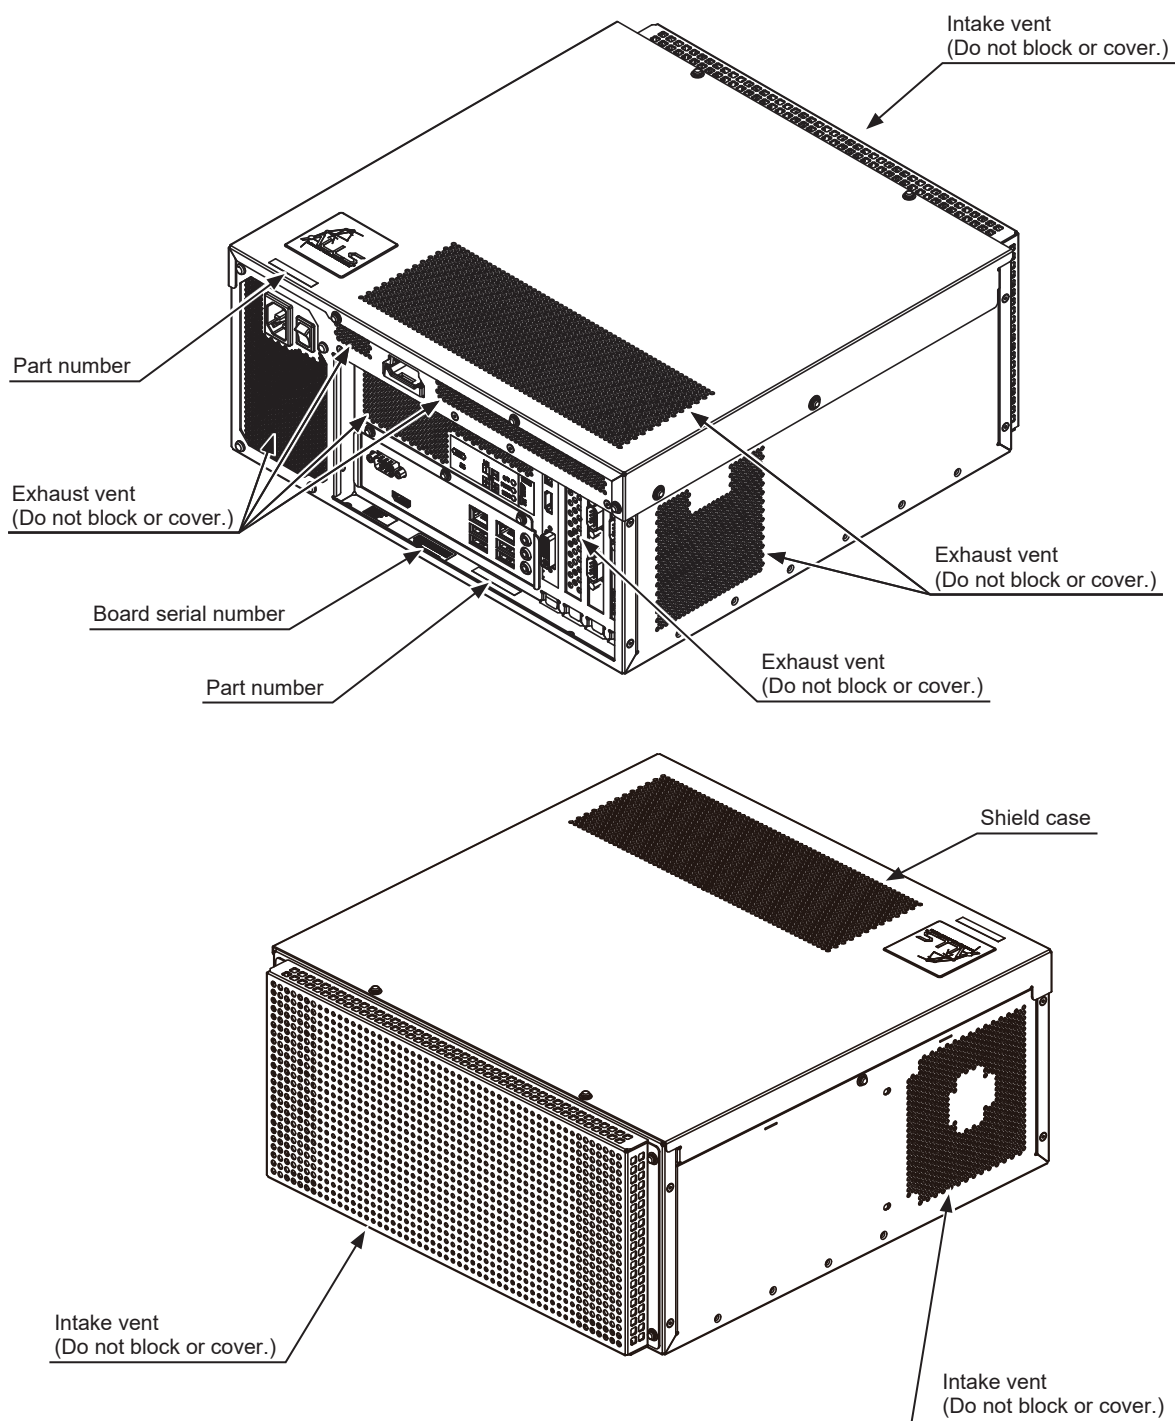

Connectors and switches

⚠ WARNING

When inserting or removing a connector, be sure to hold it by its main part. If you hold it by anything else while doing so, the connections between cable and connector terminal fixtures could be damaged; and there could be an electric shock, short circuit or fire.

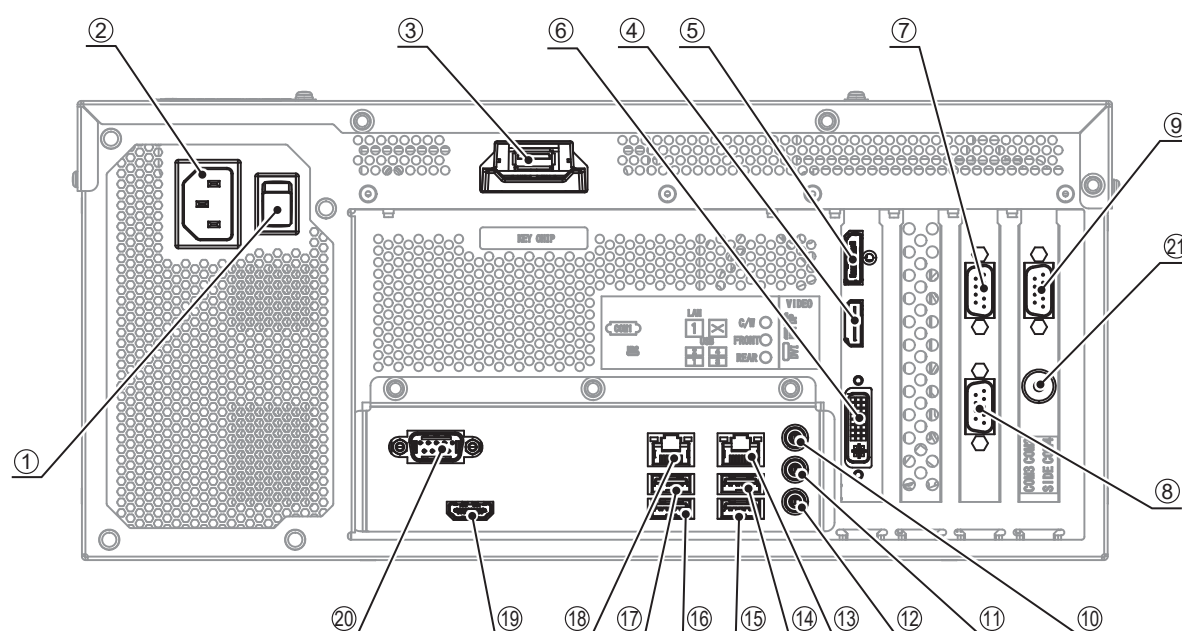

① Power switch

(The switch should always be ON during use.)

Note: The position of the power switch may differ depending on the production lot.

② AC power input port

③ Key chip slot

④ HDMI output 1

⑤ Video output 1

⑥ DVI output

⑦ Serial communication port 2

⑧ Serial communication port 3

⑨ Serial communication port 4

⑩ Center woofer lineout

⑪ Front lineout

⑫ Rear lineout

⑬ Not used

⑭ USB port 4

⑮ USB port 3

⑯ USB port 1

⑰ USB port 2

⑱ LAN port 1

⑲ HDMI output 2

⑳ Serial communication port 1

㉑ Side speaker lineout / Microphone in


3 SYSTEM TEST MODE

STOP IMPORTANT

- Various settings start saving by selecting "EXIT" on each test screen and pressing the TEST button. Saving is complete when it displays previous screen automatically. Note that the settings will be lost if the power is turned off before saving is complete.
- This manual does not explain the GAME TEST MODE that is used for such as setting the difficulty of games. Refer to the manual for each game.
- The TEST screen display may change depending on the OS version.

SYSTEM TEST MODE can be used to check the information or the operation of the ALLS HX2, adjust monitor color, and perform coin/credit settings.

Press the TEST button to enter the GAME TEST MENU screen. Select SYSTEM TEST MODE and press the TEST button to enter the SYSTEM TEST MODE screen.

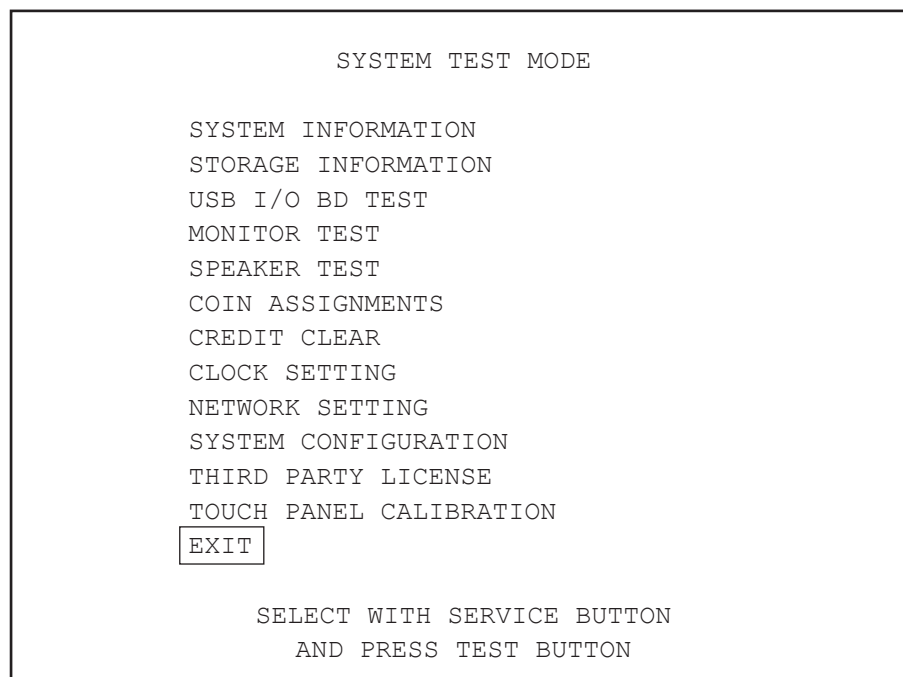

SYSTEM TEST MODE screen

Controls


- Press the SERVICE button to select menu item.
- Press the TEST button to execute the selected item.
- Select EXIT and press TEST button to return to the gameplay screen.

Menu items

SYSTEM INFORMATION	Displays system information. (See 3-1.)
STORAGE INFORMATION	Displays information on the game. (See 3-2.)
USB I/O BD TEST	Displays information on the connected USB I/O boards. (See 3-3.)
MONITOR TEST	Displays the screen to check the output of the monitor. (See 3-4.)
SPEAKER TEST	Displays the Speaker output test screen. (See 3-5.)
COIN ASSIGNMENTS	Displays the Coin assignments screen. (See 3-6.)
CREDIT CLEAR	Displays the Credit clear screen. (See 3-7.)
CLOCK SETTING	Displays the Clock setting screen. (See 3-8.)
NETWORK SETTING	Displays the Network setting screen. (See 3-9.)
SYSTEM CONFIGURATION	Displays the System configuration screen. (See 3-10.) Setting values and screen display will vary depending on the game program. Refer to the Service manual of each game for details.
THIRD PARTY LICENSE	Displays the screen of third party license. (See 3-11.)
TOUCH PANEL CALIBRATION	Displays the Touch panel calibration screen. (See 3-12.) Depending on the game program, it may be necessary to use the touch panel adjustment displayed in GAME TEST MODE instead of this item. Refer to the Service manual of each game for details.

3-1 SYSTEM INFORMATION

The SYSTEM INFORMATION screen displays system information.

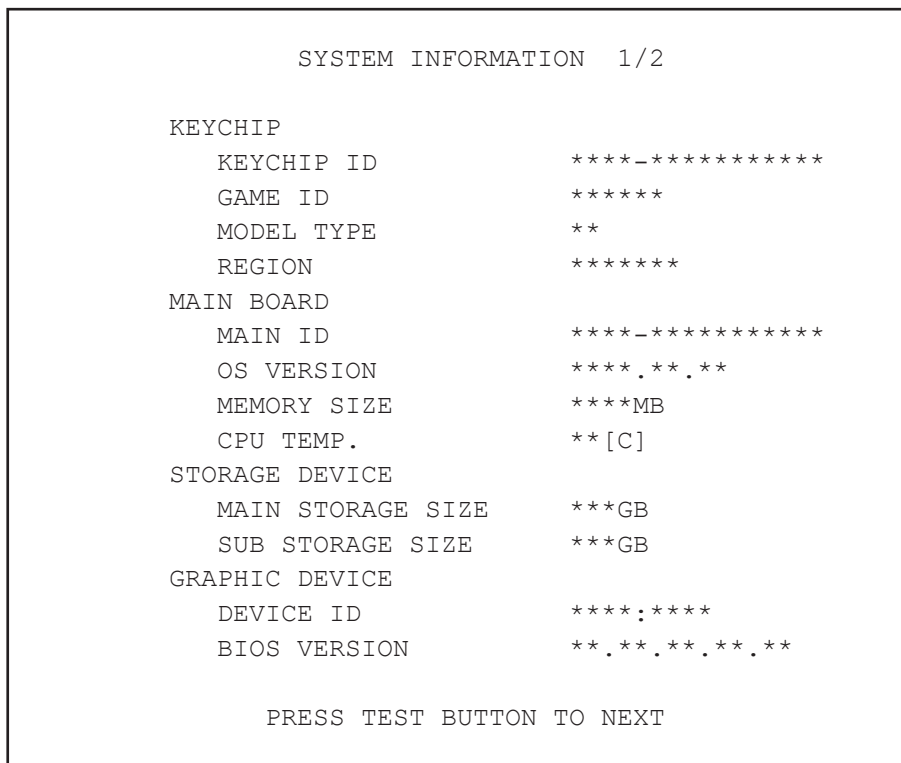


SYSTEM INFORMATION 1/2 screen

Controls

Press the TEST button to move to the SYSTEM INFORMATION 2/2 screen.

Menu items

KEYCHIP	KEYCHIP ID	Serial number of the key chip
	GAME ID	Game ID of the key chip
	MODEL TYPE	Model type
	REGION	Region setting of the key chip
MAIN BOARD	MAIN ID	Serial number of the game board
	OS VERSION	Version of the system program (OS)
	MEMORY SIZE	Onboard memory size
	CPU TEMP.	Temperature of the CPU in Celsius
STORAGE DEVICE	MAIN STORAGE SIZE	Capacity of the main storage
	SUB STORAGE SIZE	Capacity of the sub storage. When the board without sub storage (849-1003) installed, "N/A" is displayed.
GRAPHIC DEVICE	DEVICE ID	Graphic device's ID
	BIOS VERSION	Video BIOS version

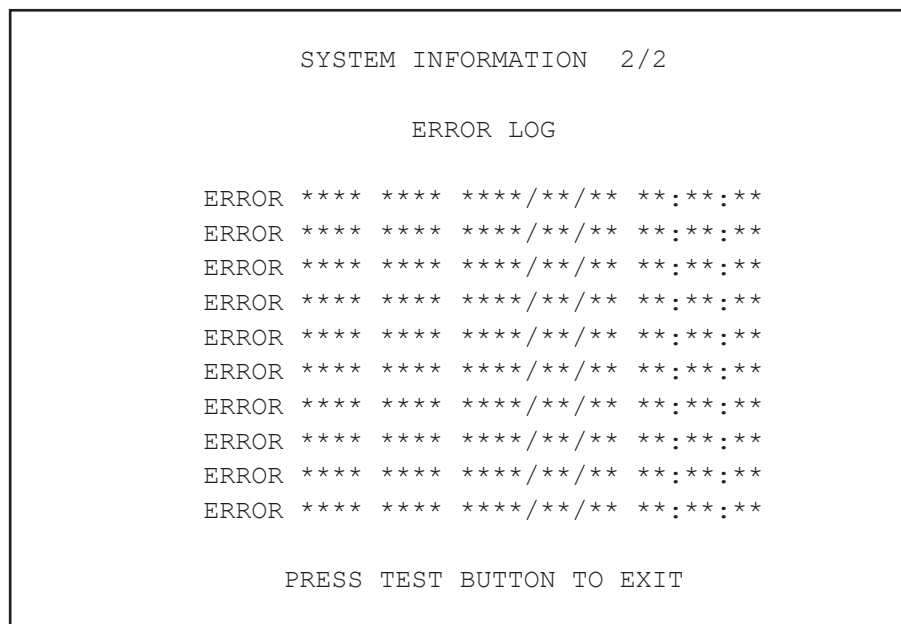

SYSTEM INFORMATION 2/2 screen

Controls

Press the TEST button to return to the SYSTEM TEST MODE screen.

Menu items

ERROR LOG	History list of the error occurred. Displays the most recent 10 errors that have occurred in the past. It may not also be displayed depending on the error.
------------------	---

3-2 STORAGE INFORMATION


(STOP) IMPORTANT

Do not inadvertently execute "UNINSTALL". Using the command will require the game program to be reinstalled.

The STORAGE INFORMATION screen displays information on the game stored in the ALLS HX2. This screen is also used when uninstalling the game program stored within the ALLS HX2.

Some time may be required to display the file list depending on the timing that TEST MODE was entered. The game program cannot be erased until UNINSTALL is selectable.

If the ALLS HX2 does not contain any game data, "GAME PROGRAM NOT FOUND" screen will be displayed on the item of [Application Title] part.

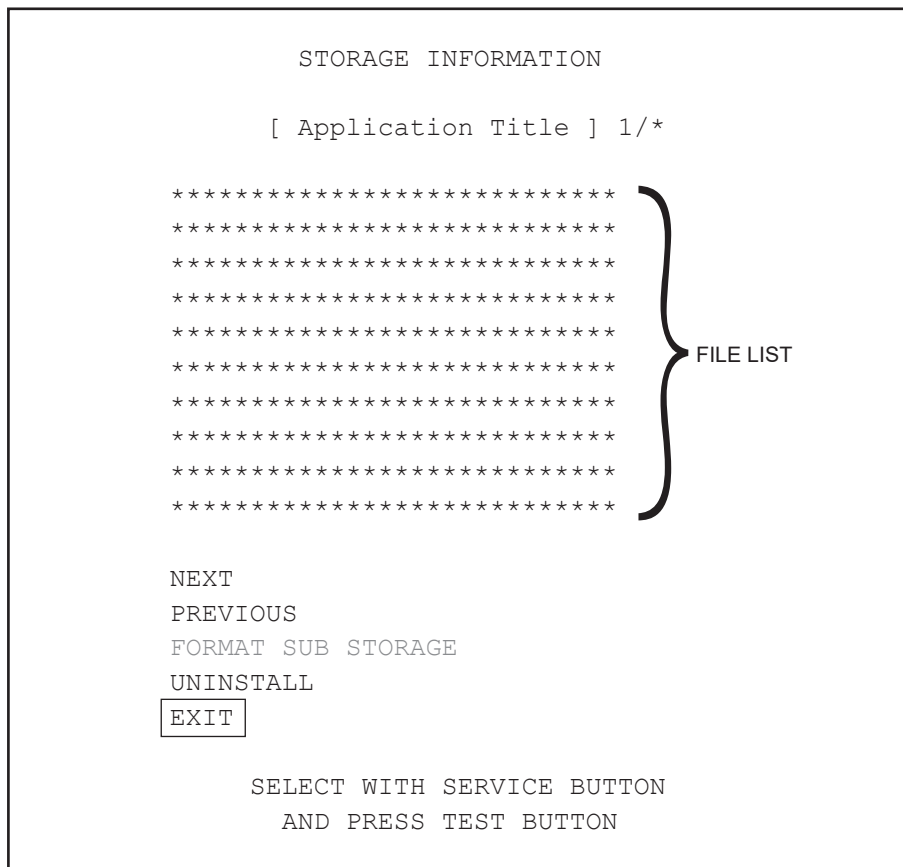

STORAGE INFORMATION screen

Controls


- Press the SERVICE button to select menu item. Items displayed in gray cannot be selected.
- Press the TEST button to execute the selected item.
- Select EXIT and press the TEST button to return to the SYSTEM TEST MODE screen.

Menu items

Application Title	Name of installed game program
FILE LIST	Displays the file name for the installed game image. A single page displays up to 10 files. If the files cannot be displayed on a single page, it is possible to switch to and view other pages by selecting NEXT and PREVIOUS.
NEXT	Advances to the next page.
PREVIOUS	Returns to the previous page.
FORMAT SUB STORAGE	- When the board without sub storage (849-1003) is installed, it is displayed in gray and unable to select. - Formats the hard disk drive. All files including the game program currently installed can be erased. Select an item and press TEST button to display "YES", "NO" on the right side of the item. Press the SERVICE button to move the underline for selecting items. Move the underline to YES and press the TEST button to execute the initialization and reboot. When all procedures after reboot are complete, "Ready to install..." is displayed. When NO is selected, the screen returns to the STORAGE INFORMATION screen without erasing files.
UNINSTALL	The game program currently installed can be erased. Performing this action erases all game programs. It is not possible to select and erase specific files. Select an item and press TEST button to display "YES", "NO" on the right side of the item. Press the SERVICE button to move the underline for selecting items. Move the underline to YES and press the TEST button to erase the files. When TEST MODE ends, an error is displayed. (See Chapter 4.) When NO is selected, the screen returns to the STORAGE INFORMATION screen without erasing files.

3-3 USB I/O BD TEST

The USB I/O BD TEST screen displays information on the connected USB I/O boards. The screen display will vary depending on the USB I/O board that is connected. The following figure is one example. Also, there may be no USB I/O board depending on the model.

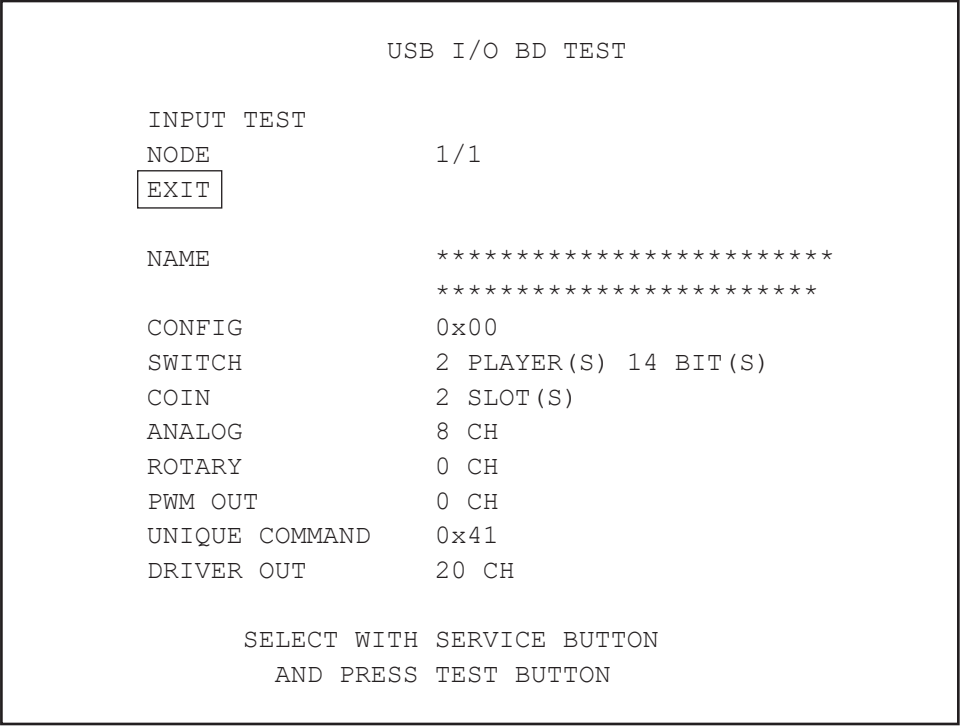

USB I/O BD TEST screen (when connecting USB I/O boards)

Controls

- Press the SERVICE button to select menu item.
- Press the TEST button to execute the selected item.
- Select EXIT and press the TEST button to return to the SYSTEM TEST MODE screen.


Menu items

INPUT TEST	Advances to the USB I/O board INPUT TEST screen.
NODE	The currently displayed USB I/O board number and the total number of connected USB I/O board. When there are multiple USB I/O boards, press the TEST button while selecting a board to switch between the USB I/O boards.
NAME	Name of the connected USB I/O board, etc
CONFIG	DIP switch setting value on the USB I/O board
SWITCH	Number of players and number of IP switches
COIN	Number of coin slots
ANALOG	Number of analog channels
ROTARY	Number of rotary encoders
PWM OUT	Number of PWM output channels
UNIQUE COMMAND	Unique command set on the board
DRIVER OUT	Number of standard output drivers

3-3-1 Input test

Use the INPUT TEST to test the USB I/O board input. The hexadecimal input information from the USB I/O board will be displayed in real time.

The screen display will vary depending on the USB I/O board that is connected. The following figure is one example.

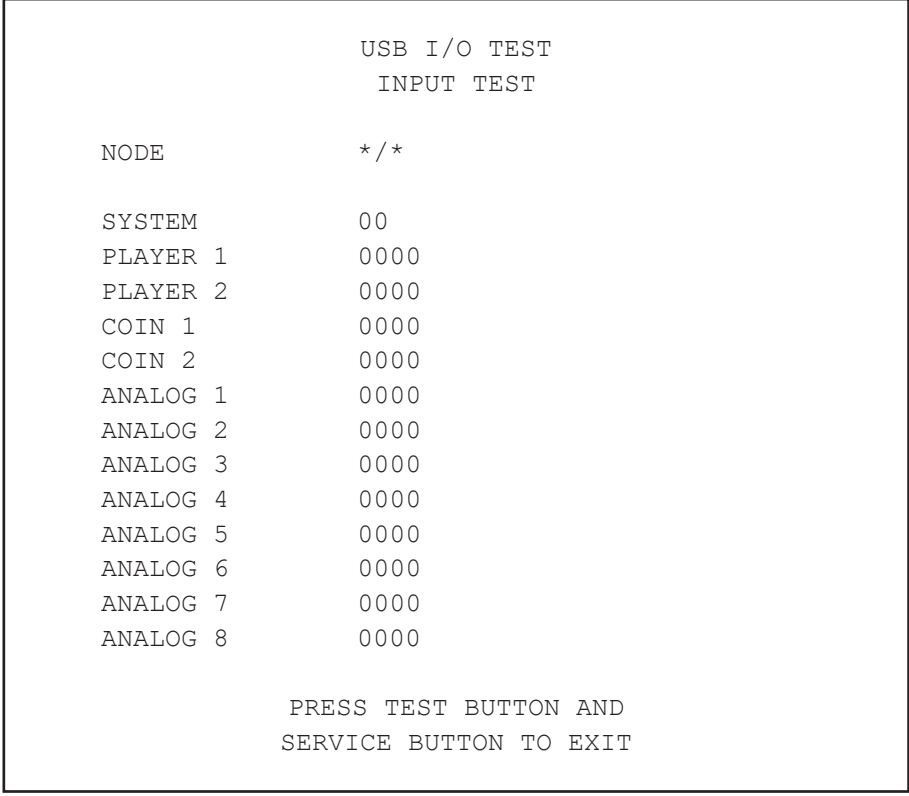

The screenshot shows a terminal window titled "USB I/O TEST" and "INPUT TEST". It displays a list of nodes and their corresponding hexadecimal input data. The nodes are: SYSTEM, PLAYER 1, PLAYER 2, COIN 1, COIN 2, ANALOG 1, ANALOG 2, ANALOG 3, ANALOG 4, ANALOG 5, ANALOG 6, ANALOG 7, and ANALOG 8. The input data for all nodes is 00 or 0000. At the bottom, it says "PRESS TEST BUTTON AND SERVICE BUTTON TO EXIT".

NODE	* / *
SYSTEM	00
PLAYER 1	0000
PLAYER 2	0000
COIN 1	0000
COIN 2	0000
ANALOG 1	0000
ANALOG 2	0000
ANALOG 3	0000
ANALOG 4	0000
ANALOG 5	0000
ANALOG 6	0000
ANALOG 7	0000
ANALOG 8	0000

PRESS TEST BUTTON AND
SERVICE BUTTON TO EXIT

INPUT TEST screen

Controls


Press the SERVICE and TEST buttons simultaneously to return to the USB I/O TEST screen.

Menu items

SYSTEM	System switch input data
PLAYER	Player number and player switch input data
COIN	Slot number and coin input data
ANALOG	Channel number and analog input data


3-4 MONITOR TEST

Use MONITOR TEST to check the output of the monitor.

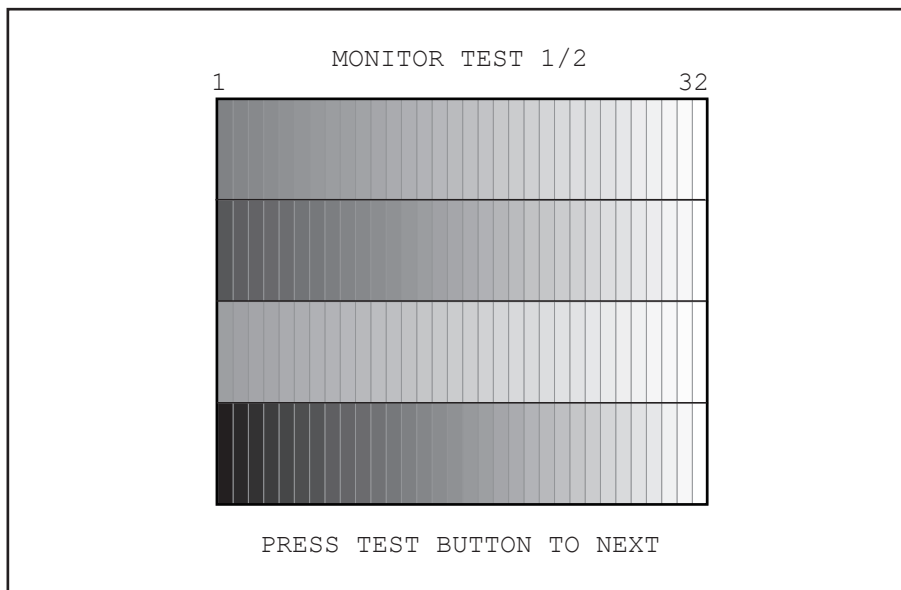

Controls

- Displays a gradation of red, green, blue and white from the top in that order. "1" is the darkest, and moving towards "32" incrementally becomes lighter. Ensure that each color displays correctly.
- Press the TEST button to move to the MONITOR TEST 2/2 screen.

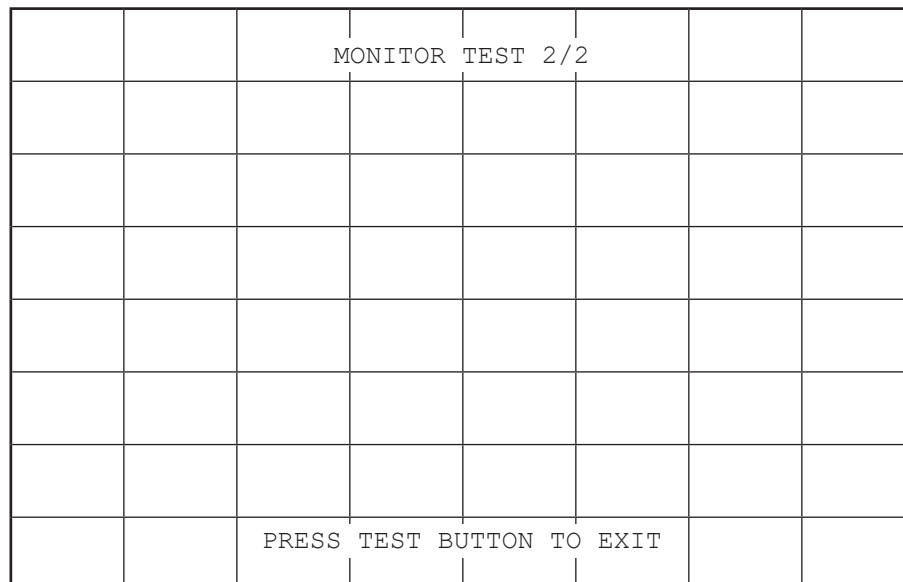


Controls

- It displays 8 x 8 cells on the entire screen. Confirm that no cells are missing and that they are all being displayed evenly.
- Press the TEST button to return to the SYSTEM TEST MODE screen.

3-5 SPEAKER TEST

Output test sound from each speaker.

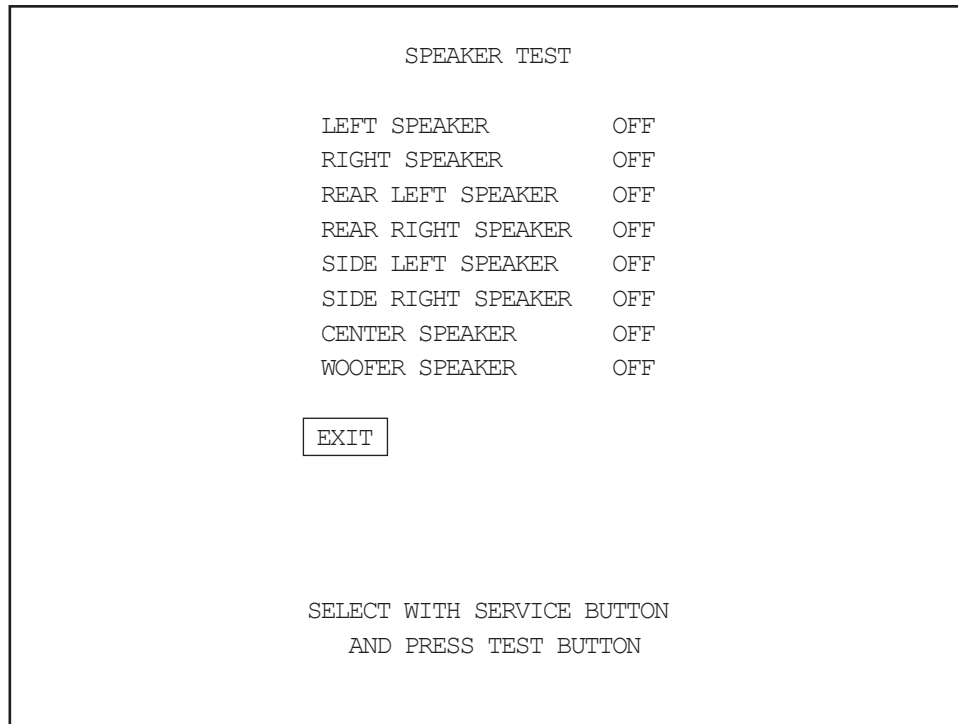

3

SPEAKER TEST screen

Controls

- Press the SERVICE button to select the speaker.
- If you press the TEST button , "ON" and "OFF" on the right side of the selected speaker will be switched.
When set to "ON", a test tone is played from the selected speaker.
Test tones can be played from multiple speakers at the same time .
Some items may not be available for testing depending on the cabinet used.
- Select EXIT and press the TEST button to return to the SYSTEM TEST MODE screen.

3-6 COIN ASSIGNMENTS

Sets the coin/credit (charge).

There are designated coin/credit settings depending on the game program. Refer to the manual for each game for details.

3

COIN ASSIGNMENTS

COIN CHUTE TYPECOMMON

SERVICE TYPECOMMON

COIN CHUTE #1 COIN TO CREDIT RATE

1 COIN(S) COUNT AS 1 CREDIT(S)

COIN CHUTE #2 COIN TO CREDIT RATE

1 COIN(S) COUNT AS 1 CREDIT(S)

DETAIL SETTING

GAME COST SETTING

E-MONEY SETTING

EXIT

SELECT WITH SERVICE BUTTON

AND PRESS TEST BUTTON

COIN ASSIGNMENTS screen (COIN CHUTE TYPE: COMMON)

Controls

- Press the SERVICE button to select menu item.
- Press the TEST button to change settings for the selected item, or proceed to the selected settings screen.
- Select EXIT and press the TEST button to return to the SYSTEM TEST MODE screen.

Menu items

COIN CHUTE TYPE	Specify according to the cabinet coin chute specifications.	
	COMMON	This is for cabinets that use a coin chute shared by multiple players. Coins inserted by each player are handled as shared credit. Up to two coin chutes (#1, #2) can be used, and it is possible to set a coin chute multiplier for #1 and #2 separately.
	INDIVIDUAL	This is for cabinets set up for each coin chute for multiple players. Coins inserted by each player are handled as credit for each individual player. The setting for the coin chute multiplier is common to each coin chute.
SERVICE TYPE	Sets the operation for when pressing the SERVICE button, when there are multiple SERVICE buttons.	
	COMMON	All players receive service credit no matter which SERVICE button is pressed.
	INDIVIDUAL	The player that corresponds to the SERVICE button being pressed only receives credit.
COIN/CREDIT SETTING	Sets the amount of credit associated with inserted coins. "X COIN(S) COUNT AS Y CREDIT(S)" indicates that when X coins are inserted, Y credits are received. Setting to FREE PLAY allows you to play the game without credits. When COIN CHUTE TYPE is set to COMMON, the coin chute #2 setting is limited to a certain extent more than the coin chute #1 setting.	
DETAIL SETTING	Advances to a screen for more detailed settings than COIN/CREDIT SETTING to set the amount of credit associated with inserted coins. (See 3-6-1.) When using DETAIL SETTINGS, settings for the COIN/CREDIT SETTING are disabled.	
GAME COST SETTING	Advances to a screen where settings can be specified such as for the required quantity of credits to begin a game. (See 3-6-2.) The range for setting values, the screen display and other similar items are different depending on the game program. Refer to the manual for each game for details.	
E-MONEY SETTING	Proceeds to screen where e-money (hereinafter "EMONEY") settlement amount can be set. (See 3-6-3.)	

COIN/CREDIT SETTING table

Depending on the game program, some of the following items may not be selectable.

TABLE 1-1 (COIN CHUTE TYPE: COMMON)

When operating coin chute #1, coin chute #2 is linked to the operation and changes accordingly.

However, when set to 1 coin insertion, coin chute #2 does not change with 1 credit. To change it, operate coin chute #2.

COIN CHUTE #1 COIN TO CREDIT RATE	COIN CHUTE #2 COIN TO CREDIT RATE
1 coin counts as 1 credit	1 coin counts as 1 credit
2 coins count as 1 credit	2 coins count as 1 credit
3 coins count as 1 credit	3 coins count as 1 credit
4 coins count as 1 credit	4 coins count as 1 credit
5 coins count as 1 credit	5 coins count as 1 credit
1 coin counts as 2 credits	1 coin counts as 1 credit
1 coin counts as 3 credits	1 coin counts as 1 credit
1 coin counts as 4 credits	1 coin counts as 1 credit
1 coin counts as 5 credits	1 coin counts as 1 credit
Free play (no coins required)	Free play (no coins required)

TABLE 1-2 (COIN CHUTE TYPE: COMMON)

When operating coin chute #2, coin chute #1 does not change.

When chute #1 is set to at least 2 coin insertion, it cannot be changed.

COIN CHUTE #1 COIN TO CREDIT RATE	COIN CHUTE #2 COIN TO CREDIT RATE
Not changed.	1 coin counts as 1 credit
	1 coin counts as 2 credits
	1 coin counts as 3 credits
	1 coin counts as 4 credits
	1 coin counts as 5 credits

TABLE 2 (COIN CHUTE TYPE: INDIVIDUAL)

COIN CHUTE #1 COIN TO CREDIT RATE	COIN CHUTE #2 COIN TO CREDIT RATE
1 coin counts as 1 credit	When set to INDIVIDUAL, coin chute #1 and coin chute #2 have the same coin/credit setting.
2 coins count as 1 credit	
3 coins count as 1 credit	
4 coins count as 1 credit	
5 coins count as 1 credit	
1 coin counts as 2 credits	
1 coin counts as 3 credits	
1 coin counts as 4 credits	
1 coin counts as 5 credits	
Free play (no coins required)	

3-6-1 Detail setting

It configures the amount of credits to increase based on the amount of inserted coins. This setting has more options than the COIN TO CREDIT.

The figure below is an example.

```

                                COIN ASSIGNMENTS
                                DETAIL SETTING

COIN CHUTE #1 MULTIPLIER
  1 COIN COUNT AS  1 COIN(S)
COIN CHUTE #2 MULTIPLIER
  1 COIN COUNT AS  1 COIN(S)
BONUS ADDER          NO BONUS ADDER

COIN TO CREDIT      1 COIN(S) 1 CREDIT
EXIT
  
```

```

                                COIN CHUTE #1 OPERATION
COIN      1    2    3    4    5    6    7    8    9
CREDIT    1    2    3    4    5    6    7    8    9

                                COIN CHUTE #2 OPERATION
COIN      1    2    3    4    5    6    7    8    9
CREDIT    1    2    3    4    5    6    7    8    9

                                SELECT WITH SERVICE BUTTON
                                AND PRESS TEST BUTTON
  
```

DETAIL SETTING screen (COIN CHUTE TYPE: COMMON)

Controls

- Press the SERVICE button to select menu item.
- Press the TEST button to change the selected item's setting.
- Select EXIT and press the TEST button to return to the COIN ASSIGNMENTS screen.

Menu items

COIN CHUTE #* MULTIPLIER	Sets how many coins to count for a single inserted coin. "1 COIN COUNT AS X COIN(S)" [1 coin inserted counts as X coin(s)] indicates that 1 coin is converted into X number of coins. When COIN CHUTE TYPE is set to COMMON, coin chute #1 and #2 can be set separately.
BONUS ADDER	Sets how many coins converted at COIN CHUTE #* MULTIPLIER are required to give 1 bonus coin. When COIN CHUTE TYPE is set to COMMON, the sum of the number of coins for coin chute #1 and #2 is used for the calculation. "X COINS GIVE 1 EXTRA COIN" (X coins inserted successively award 1 bonus coin) indicates that 1 bonus coin is given for X amount of coins. The NO BONUS ADDER setting means that no bonus coin is given.
COIN TO CREDIT	Configure number of coins to count as 1 credit. "X COIN(S) 1 CREDIT" [X coin(s) give 1 credit] indicates that X number of coins is converted to 1 credit.

DETAIL SETTING table

Depending on the game program, some of the following items may not be selectable.

TABLE 1 (COIN CHUTE TYPE: COMMON)

COIN CHUTE #1 MULTIPLIER	COIN CHUTE #2 MULTIPLIER
1 coin inserted counts as 1 coin	1 coin inserted counts as 1 coin
1 coin inserted counts as 2 coins	1 coin inserted counts as 2 coins
1 coin inserted counts as 3 coins	1 coin inserted counts as 3 coins
1 coin inserted counts as 4 coins	1 coin inserted counts as 4 coins
1 coin inserted counts as 5 coins	1 coin inserted counts as 5 coins
1 coin inserted counts as 6 coins	1 coin inserted counts as 6 coins
1 coin inserted counts as 7 coins	1 coin inserted counts as 7 coins
1 coin inserted counts as 8 coins	1 coin inserted counts as 8 coins
1 coin inserted counts as 9 coins	1 coin inserted counts as 9 coins

TABLE 2 (COIN CHUTE TYPE: INDIVIDUAL)

COIN CHUTE #1 MULTIPLIER	COIN CHUTE #2 MULTIPLIER
1 coin inserted counts as 1 coin	When set to INDIVIDUAL, coin chute #1 and coin chute #2 have the same coin/credit setting.
1 coin inserted counts as 2 coins	
1 coin inserted counts as 3 coins	
1 coin inserted counts as 4 coins	
1 coin inserted counts as 5 coins	
1 coin inserted counts as 6 coins	
1 coin inserted counts as 7 coins	
1 coin inserted counts as 8 coins	
1 coin inserted counts as 9 coins	

TABLE 3 (BONUS ADDER)


No bonus coin given
2 coins inserted successively award 1 bonus coin
3 coins inserted successively award 1 bonus coin
4 coins inserted successively award 1 bonus coin
5 coins inserted successively award 1 bonus coin
6 coins inserted successively award 1 bonus coin
7 coins inserted successively award 1 bonus coin
8 coins inserted successively award 1 bonus coin
9 coins inserted successively award 1 bonus coin

TABLE 4 (COIN TO CREDIT)

1 coin gives 1 credit
2 coins give 1 credit
3 coins give 1 credit
4 coins give 1 credit
5 coins give 1 credit
6 coins give 1 credit
7 coins give 1 credit
8 coins give 1 credit
9 coins give 1 credit

3-6-2 Game cost setting

The range for setting values, the screen display and other similar items are different depending on the game program. The following figure is one example.

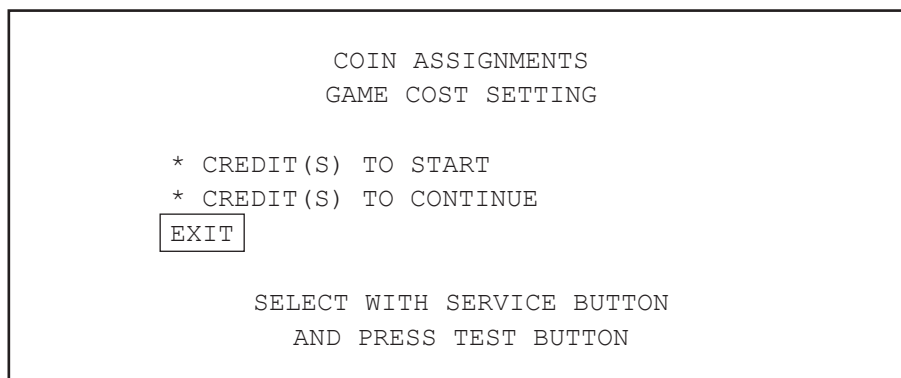

GAME COST SETTING screen

Controls


- Press the SERVICE button to select menu item.
- Press the TEST button to change the selected item's setting.
- Select EXIT and press the TEST button to return to the COIN ASSIGNMENTS screen.

Menu items

* CREDIT(S) TO START	Sets the number of credits required to start the game.
* CREDIT(S) TO CONTINUE	Sets the number of credits required to continue the game.

3-6-3 Emoney setting

Displays/changes the value of electric money.

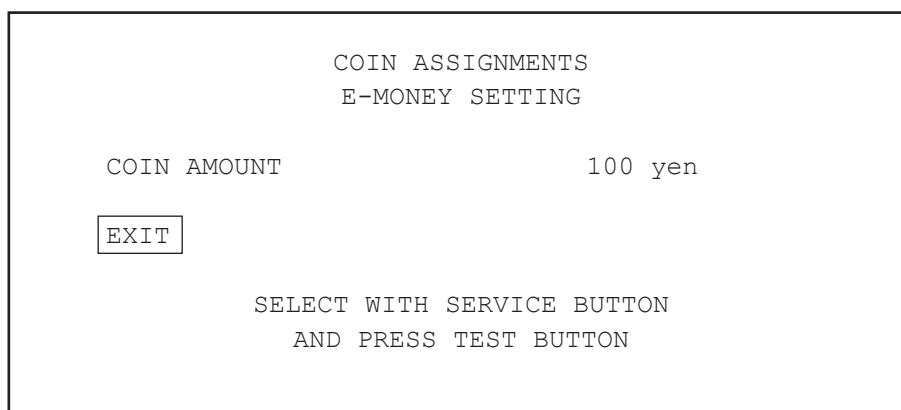

GAME COST SETTING screen

Controls

- Press the SERVICE button to select menu item.
- Press the TEST button to change the selected item's setting.
- Select EXIT and press the TEST button to return to the COIN ASSIGNMENTS screen.

Menu items

COIN AMOUNT	Sets the value of one coin in terms of electronic money. Electronic money used as coins are not affected by the coin chute #* multiplier. (Default setting: 100 yen, Setting values: 100 yen, 120 yen)
-------------	--

3-7 CREDIT CLEAR

CREDIT CLEAR

CREDIT REMAINING NONEMPTY

YES (CLEAR)

CLEAR HISTORY

****/**/** **:*:*
 ****/**/** **:*:*
 ****/**/** **:*:*
 ****/**/** **:*:*
 ****/**/** **:*:*

SELECT WITH SERVICE BUTTON
 AND PRESS TEST BUTTON

CREDIT CLEAR screen (before)

CREDIT CLEAR

CREDIT REMAINING EMPTY

CLEAR HISTORY

****/**/** **:*:*
 ****/**/** **:*:*
 ****/**/** **:*:*
 ****/**/** **:*:*
 ****/**/** **:*:*

PRESS TEST BUTTON TO EXIT

CREDIT CLEAR screen (after)

Controls

- Press the SERVICE button to select menu item.
- Press the TEST button to confirm the selected item or exit.


Menu items

CREDITS REMAINING	Displays presence or absence of credits.	
	NONEMPTY	There are credits.
	EMPTY	There are not any credits.
YES(CLEAR)	Clears credits. Current credits are all cleared.	
NO(CANCEL)	Returns to SYSTEM TEST MODE screen without clearing credits.	
COMPLETE	Returns to SYSTEM TEST MODE screen.	
CLEAR HISTORY	Displays the latest five dates and times when history/credits were cleared.	

3-8

CLOCK SETTING

Displays the current date and time. This can also be changed.
Ensure the date and time is set correctly because it is used for error logs, BOOKKEEPING in GAME TEST MODE and other time data.
Be aware that changing the time setting may make it not possible to play ALL.Net compatible games.
ALL.Net compatible games are time synchronized by ALL.Net authentication when the game program is started, and the time setting is overwritten. Set up a network environment that can connect to an ALL.Net server.

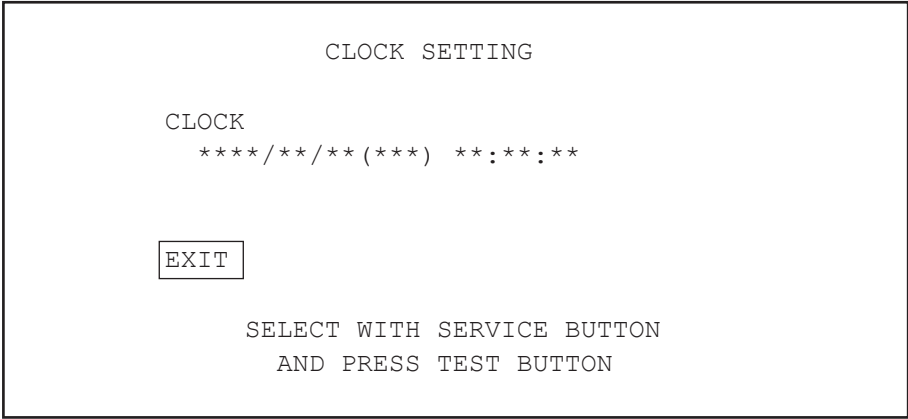

CLOCK SETTING screen

Controls

- Press the SERVICE button to select menu item.
- Select EXIT and press the TEST button to return to the SYSTEM TEST MODE screen.


Menu items

CLOCK	Displays the current date and time. Select the item and press the TEST button to change the date and time.
-------	---

How to set the time


- 1 Press the SERVICE button to move through the selections of Year→Month→Day→Hour→Minutes→Seconds→SET→CANCEL→Year...in that order. Press the TEST button to increase the value of the selected item. Also, press and hold the TEST button to increase the value. To program the time, first select SET and then press the TEST button. Note that the time is only adjusted temporarily and has not been saved. In order to save it, proceed to steps 2 and 3.
Select CANCEL and then press the TEST button to return to the CLOCK SETTING screen.

3

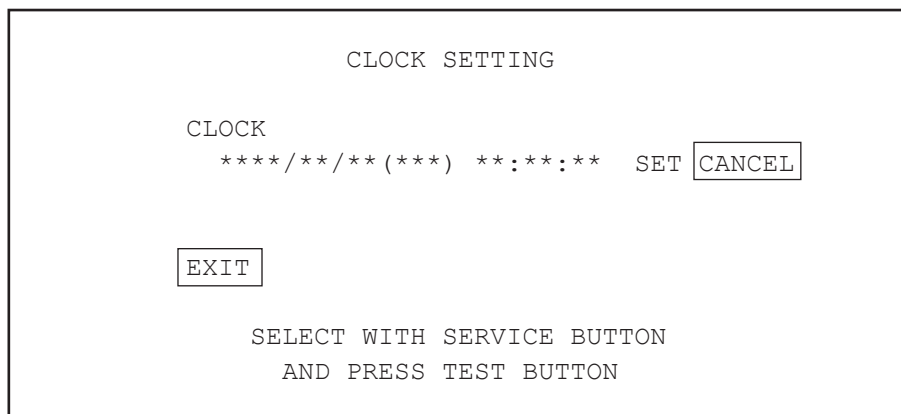

CLOCK SETTING screen (while changing)

- 2 Select SET and press TEST button to display the confirmation prompt message.

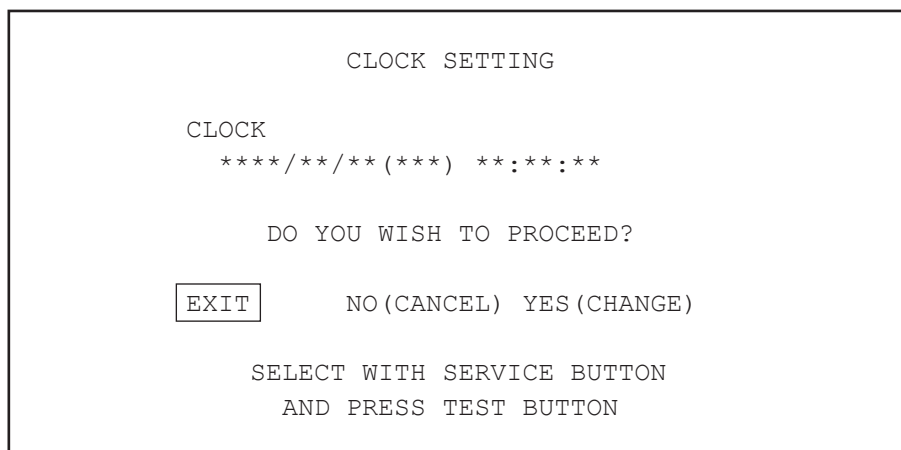


CLOCK SETTING screen (Confirmation prompt message)

- 3 Press the SERVICE button and select NO (CANCEL) or YES (CHANGE).
When YES (CHANGE) is selected and the TEST button is pressed, the changes are saved and the screen returns to the SYSTEM TEST MODE screen.
When NO (CANCEL) is selected and the TEST button is pressed, the screen returns to the SYSTEM TEST MODE screen without saving the changes.

3-9 NETWORK SETTING

Use NETWORK SETTING to determine network settings or to test the network.
There is no need to alter these settings for a game that does not use a network.

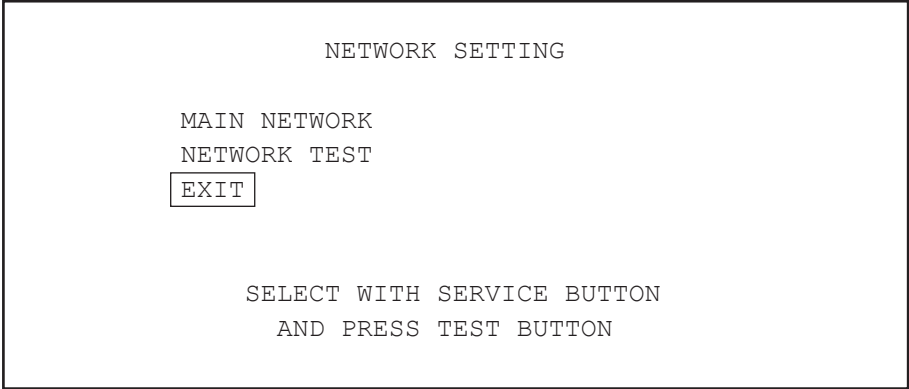

NETWORK SETTING screen (Menu)

Controls

- Press the SERVICE button to select menu item.
- Press the TEST button to execute the selected item.
- Select EXIT and press the TEST button to return to the SYSTEM TEST MODE screen.

Menu items

MAIN NETWORK	Performs a network setting. (See 3-9-1.)
NETWORK TEST	Performs a network test. (See 3-9-2.)

3-9-1 Main network

Performs a network setting.

The screen display will vary depending on the game program. The following figure is one example.

```

                                NETWORK SETTING
                                MAIN NETWORK

MAC ADDRESS          **-*--*--*--*--*--*
DHCP                  ****
IP ADDRESS
  ***.***.***.***
SUBNET MASK
  ***.***.***.***
GATEWAY
  ***.***.***.***
PRIMARY DNS
  ***.***.***.***
SECONDARY DNS
  ***.***.***.***
EXIT
SELECT WITH SERVICE BUTTON
AND PRESS TEST BUTTON
  
```

MAIN NETWORK screen

Controls

- Press the SERVICE button to select menu item.
- Select the Setting values to be changed and press the TEST button to increase the value at the item.
- When saving the value for the changed setting, "SET" and press the TEST Button. If you do not want to save the changes, select "CANCEL" and press the TEST Button.
- Select "EXIT" and press TEST button to return to the NETWORK SETTING screen (Menu).

```

IP ADDRESS
  ***.***.***.*** SET CANCEL
SUBNET MASK
  ***.***.***.***
GATEWAY
  ***.***.***.***
PRIMARY DNS
  ***.***.***.***
SECONDARY DNS
  ***.***.***.***
EXIT
  
```

MAIN NETWORK screen (while changing)


Menu items

MAC ADDRESS	The individual ID number assigned to each device using the Ethernet.	
DHCP	Set automatic acquisition of network settings.	
	ENABLE	Acquire network settings automatically.
	DISABLE	Input network settings manually.
IP ADDRESS	A setting required for the network. See the manual supplied with each game software for the correct setting. After setting the numbers, select SET and press TEST button to save the setting. When DHCP is set to ENABLE, this item cannot be selected.	
SUBNET MASK		
GATEWAY		
PRIMARY DNS		
SECONDARY DNS		

3-9-2 Network test

This section is for performing operation tests for communication connectivity. No operation is possible until the test results are displayed.

The screen display will vary depending on the game program. The following figure is one example.

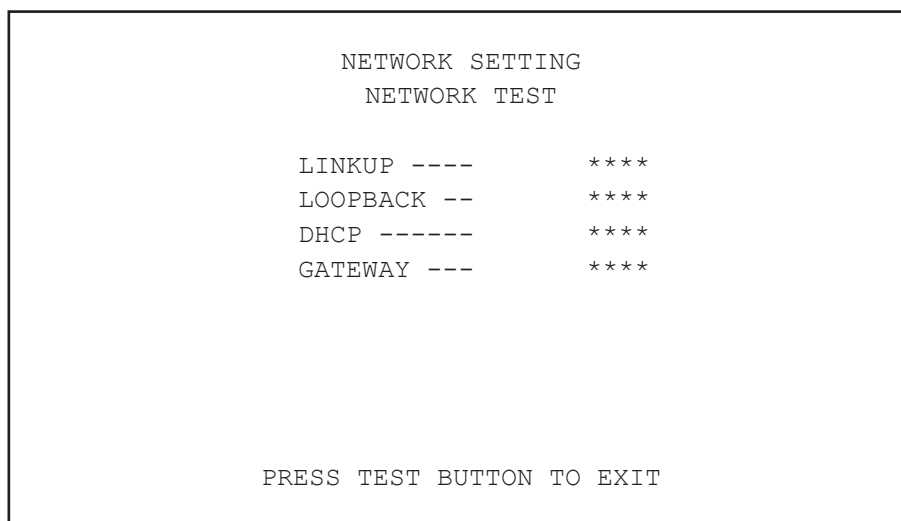

NETWORK TEST screen

Controls

Press the TEST button to return to the NETWORK SETTING (Setting Menu) screen.

Menu items

LINKUP	LAN cable connection status
LOOPBACK	The ALLS HX2 network function operation status
DHCP	Status of communication settings acquisition when DHCP is set to ENABLE
GATEWAY	Status of connection with title router, etc


The status of determining items is as listed in the table below:

CHECK	Indicates that the item is currently being checked.
GOOD	Indicates that the item is functioning normally.
BAD	Indicates that the item is not functioning normally. (Damaged, incorrect settings, etc.)
N/A	Indicates that the item has not been checked. (Prerequisites have not been met, etc.)

3-10

SYSTEM CONFIGURATION

Setting values and screen display will vary depending on the game program.
The following figure is one example.

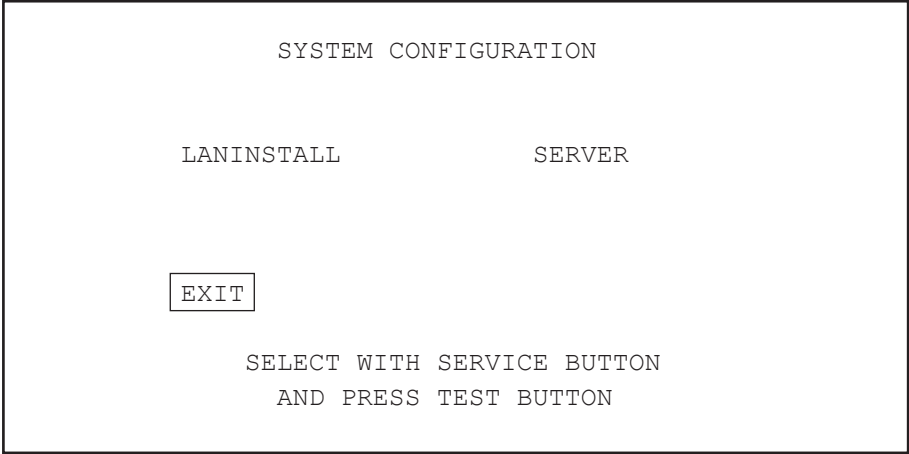

SYSTEM CONFIGURATION screen

Controls

- Press the SERVICE button to select menu item.
- Press the TEST button to change the selected item's setting.
- Select "EXIT" and press the TEST button to save the settings and return to the SYSTEM TEST MODE screen.


Menu items

LANINSTALL	Set whether Server or Client to start the game program.
------------	---

3-11

THIRD PARTY LICENSE

Displays the software license terms that is used. An example outline is shown below. The display will differ depending on the game.

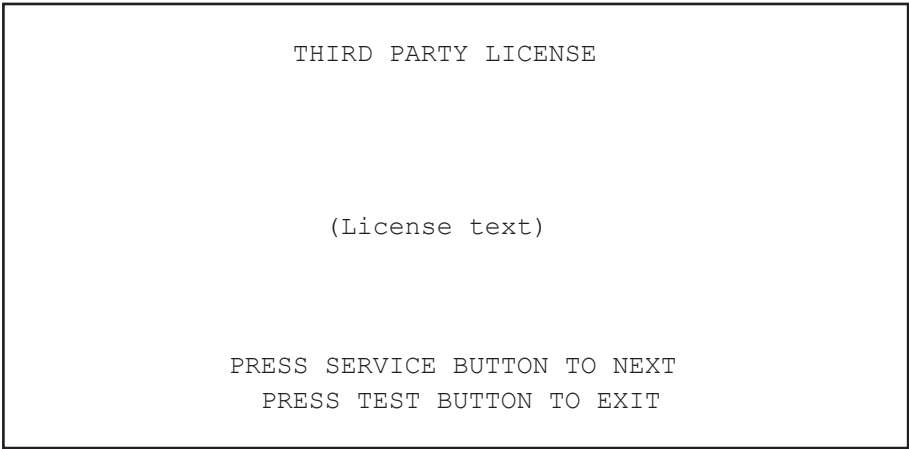


THIRD PARTY LICENSE screen

Controls

- Press the SERVICE button to move to page.
- Press the TEST button to return to the SYSTEM TEST MODE screen.

3-12 TOUCH PANEL CALIBRATION

3

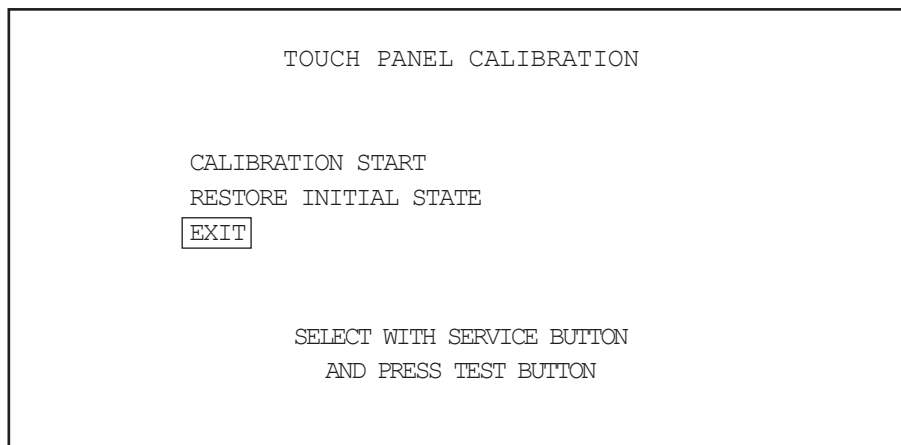

TOUCH PANEL CALIBRATION screen 1

Controls

- Press the SERVICE button to select an item.
- Press the TEST button to confirm the selected item.
- Select "EXIT" and press the TEST button to return to the SYSTEM TEST MODE screen.

Menu items

CALIBRATION START	Proceed to the TOUCH PANEL CALIBRATION screen 2. If the touch panel is not connected, it cannot be selected.
RESTORE INITIAL STATE	Deletes all touch panel adjustment information, and restores default settings. If the touch panel has not been adjusted, this item cannot be selected.



TOUCH PANEL CALIBRATION screen 2

Menu items

YES	Displays the TOUCH PANEL CALIBRATION screen 3.
NO	Returns to the TOUCH PANEL CALIBRATION screen 1 without confirming the touch panel calibration.

To calibrate the screen, tap the crosshair each time that it appears on the screen.

Do not change your screen orientation until you have completed the calibration process.

TOUCH PANEL CALIBRATION screen 3

Controls

- Tap the crosshair that appears on the touch panel.
(Note: The number of times and positions you tap will vary depending on each game title.)
- After tapping the specified number of times and completing the calibration process, the system will be restarted.

4 ERROR MESSAGES

WARNING

- If an error is displayed, have the site maintenance personnel or other qualified individuals resolve it. If someone without specialized or technical knowledge attempts to rectify the problem, electric shock, short circuits or fire may result.
If there is no site maintenance personnel or other qualified individuals available, turn the power off immediately, and contact the office listed in this manual or the point-of-purchase for this product.
- If a problem not described in this manual or other related manuals occurs, or the resolution to a problem described in this manual is not effective, do not make further attempts to resolve the problem by yourself. Immediately turn off the power and contact the office listed in this manual or the point-of-purchase for this product. Any unguided attempts to solve such problems may lead to a serious accident.

IMPORTANT

- Static electricity from your body may damage some electronics devices on the ALLS HX2. Before handling the ALLS HX2, touch a grounded metallic surface so that the static electricity can be discharged.
- Do not repeatedly turn the power on/off in a short period of time. Doing so may result in breakdown or parts damage.
- If an error number or message not listed below appears, cease using the product immediately and contact the office listed in this manual or the point-of-purchase for this product.
- The error display may be different depending on the game program.

The ALLS HX2 is equipped to display various errors on-screen to help solve any problems. If an error is displayed, the game cannot be used. Use the following table of causes and measures to solve the problem.

If the problem cannot be resolved, contact the office listed in this manual or the point-of-purchase for this product.

0001	Display	Error 0001 Keychip Not Found
	Cause	There is no key chip, or the key chip is not connected correctly.
	Measures	Check that the key chip is connected correctly. [See 2-2 (P. 2)]

0002	Display	Error 0002 Keychip Not Available
	Cause	The key chip is not supported.
	Measures	Check the key chip and installation media (such as the DVD) combination.

0004	Display	Error 0004 Game Program Not Acceptable
	Cause	The key chip is not supported.
	Measures	Check that the key chip from a different system is not inserted.

0008	Display	Error 0008 Keychip Access Failed
	Cause	The key chip could not be accessed.
	Measures	Turn the power off and reinsert the key chip, and then restart the ALLS HX2.

0010	Display	Error 0010 Unexpected Game Program Failure
	Cause	The game program crashed due to an unexpected error.
	Measures	Turn the power off and restart the ALLS HX2.

0021	Display	Error 0021 Main board Malfunctioning
	Cause	The main board does not recognize itself.
	Measures	Turn the power off and restart the ALLS HX2.

0022	Display	Error 0022 Game Program Not Found on Storage Device
	Cause	There is no game program on the storage device.
	Measures	Use the installation media (such as the DVD) to reinstall the game program.

0028 0029 0032	Display	Error 0028 (0029) (0032) Main board Malfunctioning
	Cause	Failed to access the main board.
	Measures	Turn the power off and restart the ALLS HX2.

0041	Display	Error 0041 Game Program Not Found on Install Media
	Cause	There is no game program on the installation media.
	Measures	Check that the game program, place on the installation media (such as the DVD), and correspond to each other.

0042	Display	Error 0042 Game Program Not Found on Install Media
	Cause	Some part of the game program is missing.
	Measures	Check how the game program was installed.

0049 0052	Display	Error 0049 (0052) Install Media Access Failed
	Cause	Failed to access the installation media.
	Measures	Check that the installation media (such as the DVD) is not scratched, damaged or dirty. Check that the DVD drive is connected correctly.

0055	Display	Error 0055 Game Program Verify Error
	Cause	The installed game program is not working correctly.
	Measures	Use the installation media (such as the DVD) to reinstall the game program.

0064	Display	Error 0064 Game Program Not Found on Server
	Cause	No game program on the LAN install server.
	Measures	Check that the game program, place on the LAN install server, and the key chip correspond to each other.

0066	Display	Error 0066 Game Program Verify Error
	Cause	The installed game program is not working correctly.
	Measures	Use the installation media (such as the DVD) to reinstall the game program.

0081	Display	Error 0081 Invalid Storage Format
	Cause	The main storage (SSD) format is wrong.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0082	Display	Error 0082 Game Program Access Failed
	Cause	The main storage (SSD) cannot be recognized.
	Measures	Use the installation media (such as the DVD) to reinstall the game program.

0083	Display	Error 0083 Storage Device Not Acceptable
	Cause	The main storage (SSD) does not have enough space.
	Measures	Execute "UNINSTALL" via "STORAGE INFORMATION" in System test mode, and reinstall the game program using installation media (DVD, etc.). [See 3-2 (P. 8).]

0084	Display	Error 0084 Storage Device Malfunctioning
	Cause	The main storage (SSD) may be broken.
	Measures	Turn the power off and restart the ALLS HX2.

0085	Display	Error 0085 Invalid Storage Format
	Cause	The main storage (SSD) format is wrong.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0086	Display	Error 0086 Invalid Storage Format
	Cause	The sub storage format is wrong.
	Measures	Perform formatting in Storage information in SYSTEM TEST MODE.

0087	Display	Error 0087 Storage Device Malfunctioning
	Cause	The sub storage may be malfunctioning.
	Measures	Turn the power off and restart the cabinet.

0088	Display	Error 0088 System Program Verify Error
	Cause	The installed system program is not working correctly.
	Measures	Use the installation media (such as the DVD) to reinstall the game program.

0091	Display	Error 0091 Too High CPU Temperature
	Cause	The CPU temperature is high.
	Measures	Clean the ALLS HX2 and around the ALLS HX2 installation point. Also, check whether the air flow outlets on the ALLS HX2 are blocked. [See Chapter 5 (P. 40).]

0901	Display	Error 0901 Wrong Platform
	Cause	The game program is not supported by the ALLS HX2.
	Measures	Check the game program manual. Check whether the combination of the game program and the ALLS HX2 is correct.

0902	Display	Error 0902 Wrong System Program
	Cause	It was started up with an unsupported system program. The ALLS HX2 system program must be updated.
	Measures	Check how the game program was installed.

0904	Display	Error 0904 Wrong Platform
	Cause	The installed system program is not working correctly.
	Measures	Use the installation media (such as the DVD) to reinstall the game program.

0905	Display	Error 0905 Graphic Function Not Found
	Cause	The game program does not support the graphics function.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0906	Display	Error 0906 Sound Function Not found
	Cause	The ALLS HX2 sound function cannot be recognized.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0907	Display	Error 0907 Not Enough System Memory
	Cause	The game program does not have enough memory.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0909	Display	Error 0909 Not Enough Storage Device
	Cause	The game program does not have enough storage.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0912	Display	Error 0912 Unexpected Game Program Failure
	Cause	The graphics board was unable to continue rendering.
	Measures	Turn the power off and restart the ALLS HX2.

0915	Display	Error 0915 Wrong Storage Device
	Cause	Sub storage is not connected.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0916	Display	Error 0916 Wrong Storage Device
	Cause	Unnecessary Sub storage (HDD) is connected.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0917	Display	Error 0917 USB Flash Drive Remain Error
	Cause	The installation USB flash drive (USB installation media) remains connected.
	Measures	Take off the USB flash drive.

0918	Display	Error 0918 Not Enough System Memory Module
	Cause	The number of memory modules required for the game program is insufficient.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

0919	Display	Error 0919 DVD Drive Remain Error
	Cause	The installation DVD drive (DVD installation media) remains connected.
	Measures	Take off the DVD drive.

0920	Display	Error 0920 Wrong Coin Assignments
	Cause	The game program does not support the current coin assignments.
	Measures	Check the coin assignments in SYSTEM TEST MODE. [See 3-6 (P. 14).]

0949	Display	Error 0949 Keychip Not Found
	Cause	There is no key chip or there is a defect with its connection.
	Measures	Check that the key chip is connected correctly.

6401	Display	Error 6401 I/O board is not connected to main board
	Cause	(1) The I/O board is not connected. (2) Unreliable connection between the ALLS HX2 and the I/O board.
	Measures	(1) Connect the I/O board to the ALLS HX2. Check that the power cable is connected to the I/O board. (2) Reconnect or replace the USB cable that connects the I/O board to the ALLS HX2.

6402	Display	Error 6402 I/O board does not fulfill the game spec
	Cause	The correct I/O board is not connected.
	Measures	Use a I/O board that provides the proper input/output for the game program.

8001	Display	Error 8001 Network address error (DHCP)
	Cause	The network connection settings could not be initialized.
	Measures	Check the network connection and follow the startup procedures to restart the ALLS HX2.

8002	Display	Error 8002 Network setting error (SYSTEM)
	Cause	NETWORK SETTING in SYSTEM TEST MODE is incorrect.
	Measures	Check the network setting. [See 3-9 (P. 24).]

8003	Display	Error 8003 Network address error (Dup.IP)
	Cause	The network connection settings could not be initialized.
	Measures	Check the network connection and follow the startup procedures to restart the ALLS HX2.

8004	Display	Error 8004 Network setting error (Dup.IP)
	Cause	NETWORK SETTING in SYSTEM TEST MODE is incorrect.
	Measures	Check the network setting. [See 3-9 (P. 24).]

8005	Display	Error 8005 Network type error (WAN)
	Cause	The line type of the connected ALL.Net router is incorrect.
	Measures	Check the line type of the connected ALL.Net router.

8006	Display	Error 8006 Network timeout error (DHCP)
	Cause	The network connection settings could not be initialized.
	Measures	Check the network connection and follow the startup procedures to restart the ALLS HX2.

8007	Display	Error 8007 Network timeout error (DNS-WAN)
	Cause	A connection could not be established with ALL.Net.
	Measures	Check the ALLS HX2 network connection, the in-store network connection and the connection between the ALL.Net router and the network cable, and then follow the startup procedures to restart the ALLS HX2. [See 3-9 (P. 24).] If the error persists, check the maintenance information.

8008	Display	Error 8008 Network timeout error (DNS-LAN)
	Cause	A connection could not be established with the ALL.Net router.
	Measures	Check the ALLS HX2 network connection and the in-store network ALL.Net connection and then restart the ALLS HX2. [See 3-9 (P. 24).]

8009	Display	Error 8009 Network Game Disabled
	Cause	The GAME TEST MODE ALL.Net connection is set to OFF.
	Measures	Check the ALL.Net connection setting in GAME TEST MODE.

8103	Display	Error 8103 ALL.Net System error (TIMEOUT)
	Cause	A connection could not be established with ALL.Net.
	Measures	Check the ALLS HX2 network connection, the in-store network connection and the connection between the ALL.Net router and the network cable, and then follow the startup procedures to restart the ALLS HX2. [See 3-9 (P. 24).] If the error persists, check the maintenance information.

8106	Display	Error 8106 ALL.Net System Caution
	Cause	A connection could not be established with ALL.Net.
	Measures	Check the ALLS HX2 network connection, the in-store network connection and the connection between the ALL.Net router and the network cable, and then follow the startup procedures to restart the ALLS HX2. [See 3-9 (P. 24).] If the error persists, check the maintenance information.

8111	Display	Error 8111 ALL.Net System error (REG)
	Cause	ALL.Net registration could not be confirmed.
	Measures	Check to make sure ALL.Net registration (the agreement) has been successfully completed.

8113	Display	Error 8113 ALL.Net System error (MODE)
	Cause	The ALL.Net settings could not be confirmed.
	Measures	Contact the office listed in this manual or the point-of-purchase for this product.

8114	Display	Error 8114 ALL.Net System error (RTC)
	Cause	A connection could not be established with ALL.Net.
	Measures	Check the ALLS HX2 network connection, the in-store network connection and the connection between the ALL.Net router and the network cable, and then follow the startup procedures to restart the ALLS HX2. [See 3-9 (P. 24).] If the error persists, check the maintenance information.

8201	Display	Error 8201 ALL.Net System error (TIMEOUT)
	Cause	A connection could not be established with ALL.Net.
	Measures	Check the ALLS HX2 network connection, the in-store network connection and the connection between the ALL.Net router and the network cable, and then follow the startup procedures to restart the ALLS HX2. [See 3-9 (P. 24).] If the error persists, check the maintenance information.

8202	Display	Error 8202 ALL.Net System error (REG)
	Cause	ALL.Net registration could not be confirmed.
	Measures	Check to make sure ALL.Net registration (the agreement) has been successfully completed.

8301	Display	Error 8301 Network error (GAME-LAN)
	Cause	The connection with the devices that make up this game could not be confirmed.
	Measures	Check the network connection and follow the startup procedures to restart the ALLS HX2.

8302	Display	Error 8302 Maintenance time (GAME)
	Cause	Currently the server is undergoing maintenance.
	Measures	Wait until server maintenance is complete.

8303	Display	Error 8303 Network error (GAME)
	Cause	A connection could not be established with ALL.Net.
	Measures	Check the ALLS HX2 network connection, the in-store network connection and the connection between the ALL.Net router and the network cable, and then follow the startup procedures to restart the ALLS HX2. [See 3-9 (P. 24).] If the error persists, check the maintenance information.

8304	Display	Error 8304 Network failed (GAME)
	Cause	Unrecoverable network failure occurred.
	Measures	Check the ALLS HX2 network connection, the in-store network connection and the connection between the ALL.Net router and the network cable, and then follow the startup procedures to restart the ALLS HX2 [See 3-9 (P. 24).] If the error persists, check the maintenance information.

5 CLEANING THE ALLS HX2

WARNING


- This work should be performed by site maintenance personnel or other qualified professionals. Work performed by non-technical personnel can cause a severe accident such as an electric shock.
- When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock, short circuit or fire.
- Be careful with the direction when connecting connectors. The connector must be connected in the proper direction. If it is connected in the wrong direction or indiscriminately at an incline so that a load is applied, the connector or its terminal pins could break, causing an electric shock, short circuit or fire.
- Be careful not to damage the cables. Damaged cables may cause an electric shock, short circuit or fire.

CAUTION

As it remains hot, do not touch around the exhaust vents right after the power switch is turned off. Perform works on the ALLS HX2 after confirming it is sufficiently cooled down.


IMPORTANT

- Clean the ALLS HX2 and installation area once a year or whenever either "Error 0091" occurs. Dust accumulating in game boards may not function properly.
- Set each cabinet to correct settings after cleaning the product. Be sure to set the ALLS HX2 to correct settings when returning. If the proper settings are not used, the units may not function properly.

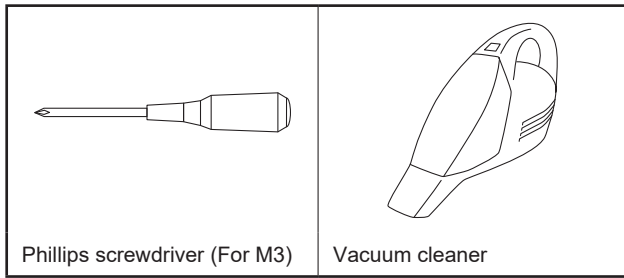
Tools necessary for work

1 Refer to the Owner's Manual included with the game machine, and remove the ALLS HX2 from the cabinet.

2 Remove four screws and take off the metal filter. The screws are on the opposite side of the connector face.

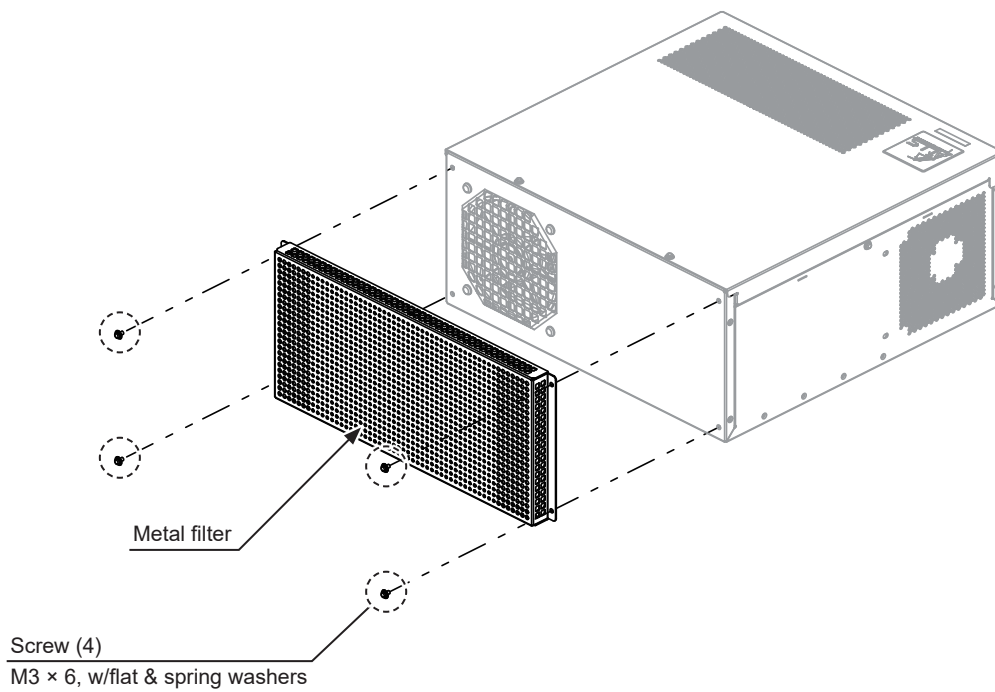

-
- 3 Clean the areas around exhaust and intake vents of the ALLS HX2 and the front and back of the metal filter with a vacuum cleaner.
-

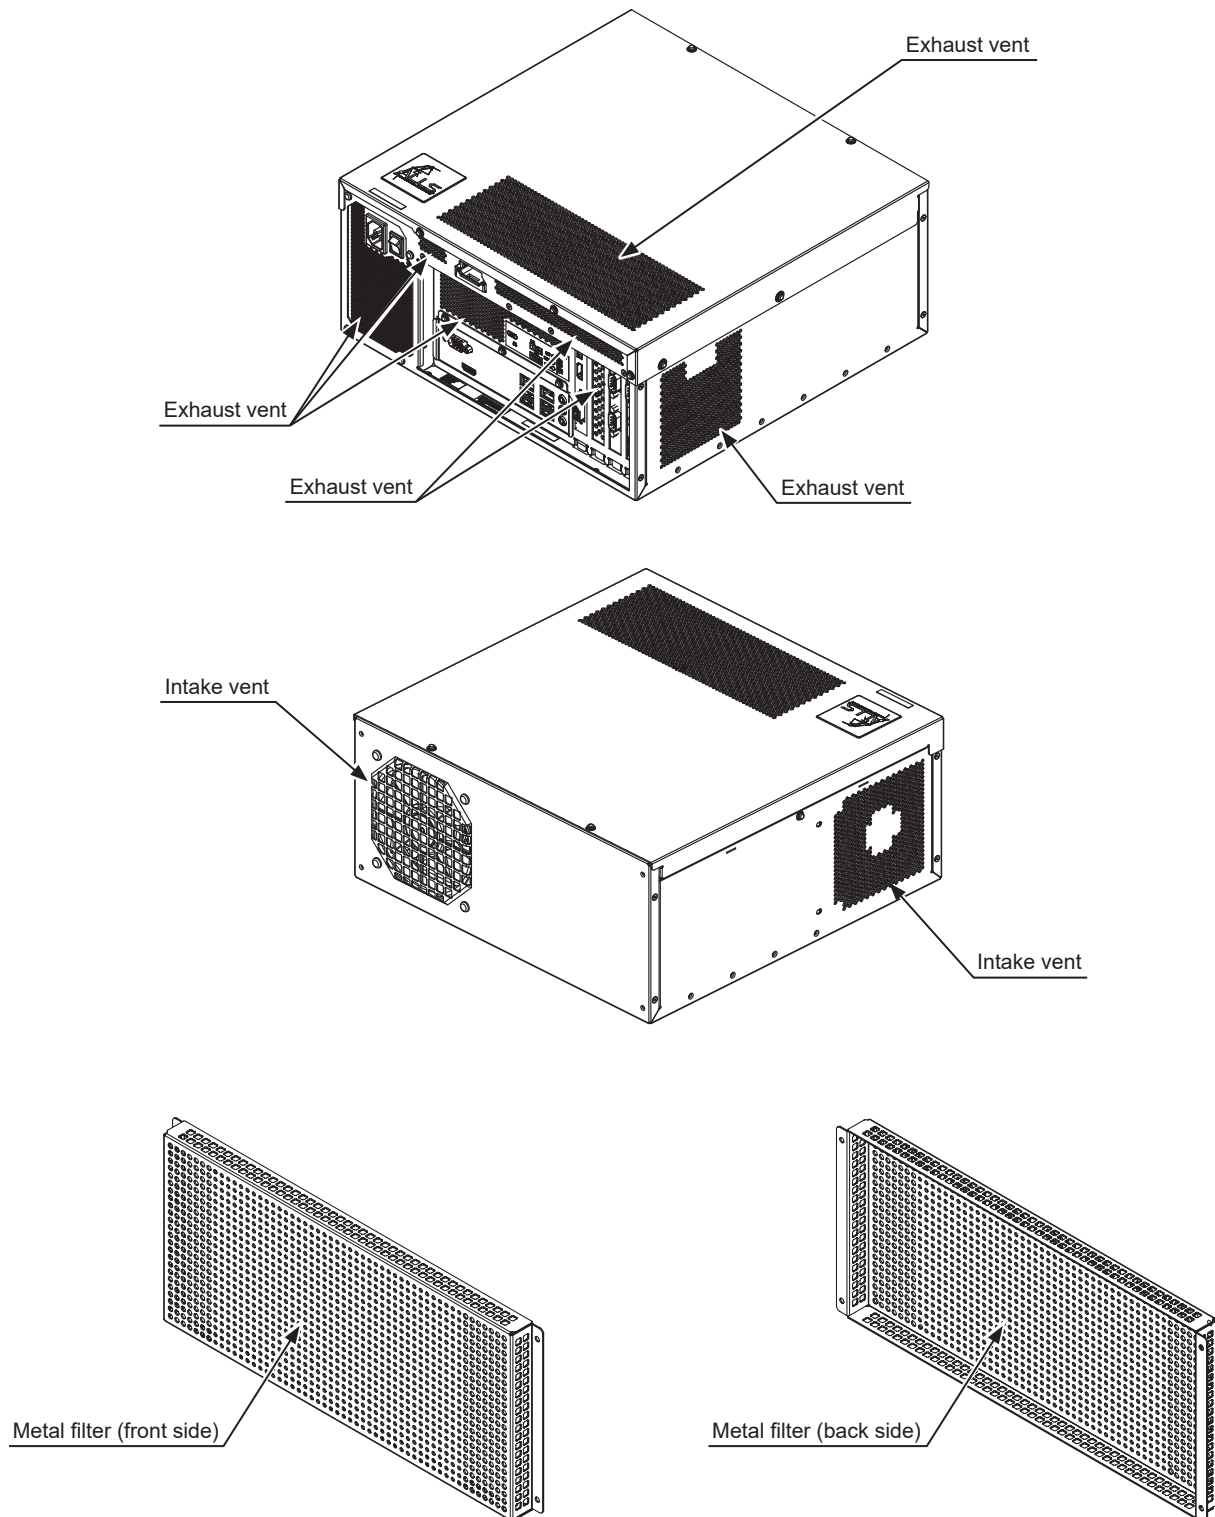

-
- 4 Clean around installment parts of the ALLS HX2 in the cabinet with a vacuum cleaner. Be sure not to damage the cables.
-

- 5 Refer to Steps 2 and work in reverse order to reattach the Metal filter.
-

- 6 Refer to the Owner's Manual included with the game machine and work in reverse order to attach the ALLS HX2 to the original position.
-

6 REPLACING THE LITHIUM BATTERY

WARNING

- This work should be performed by site maintenance personnel or other qualified professionals. Work performed by non-technical personnel can cause a severe accident such as an electric shock.
- When working with the product, be sure to turn the power off. Working with the power on may cause an electric shock, short circuit or fire.
- Make sure you do not damage the IC board and cables. Such damage can lead to an electric shock, short circuit or fire.
- To prevent overheating, explosion, or fire:
 - Do not recharge, disassemble, heat, incinerate, or short the battery.
 - Do not allow the battery to come into direct contact with metallic objects or other batteries.
 - To preserve the battery, wrap it in tape or other insulating material.
- Even the site maintenance personnel or other qualified professionals must not perform replacement operations for parts not described in this manual. In the event that such work is required, contact the office listed in this manual or the point-of-purchase for the product. Failure to do so may lead to electric shock, short circuit or fire.
- Do not turn on the power with current carrying parts exposed. Doing so could result in electric shock, short circuit or fire.
- In case the power cable is damaged, ask for a replacement through the office listed in this manual or the point-of-purchase for the product. Using the cable as is damaged can cause fire, an electric shock or leakage.

CAUTION

To avoid risk of malfunction and damage:


- Make sure the positive and negative ends are aligned correctly.
- Use only batteries approved for use with this unit.

STOP

IMPORTANT

- The battery in the ALLS HX2 can be used for approximately eight years of standard usage. If the battery appears to require replacement sooner than eight years, it is more likely that an error has occurred with some other part of the board. Request exchange/repair of the ALLS HX2 from the office listed in this manual or the point-of-purchase for the product.
- Replace the lithium battery only if "RTC Bad" displays. Do not replace the lithium battery for any other case.
- Static electricity from your body may damage some electronics devices on the IC board. Before handling the IC board, touch a grounded metallic surface so that the static electricity can be discharged.
- Follow local regulations when disposing of the battery. Improper disposal can damage the environment.

6

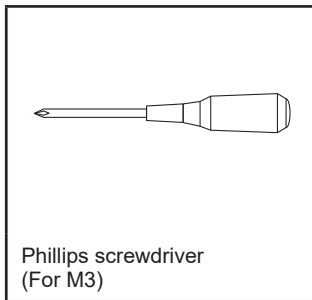Tools necessary for work


Replace the lithium battery on the main board when "RTC Bad" is displayed during startup.

1


Refer to the Owner's Manual included with the cabinet and remove the ALLS HX2 from the cabinet.

2

Remove the Key chip from the ALLS HX2.

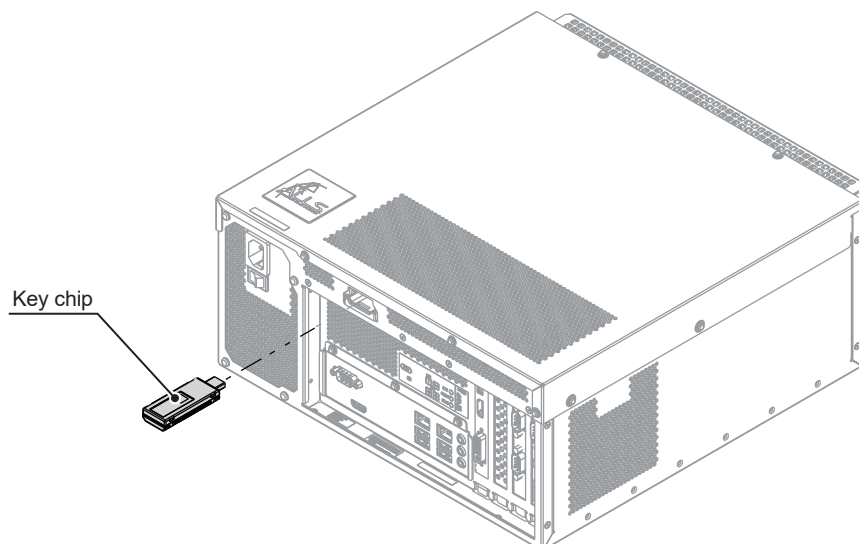


3 Remove eight screws and take off the Lid.

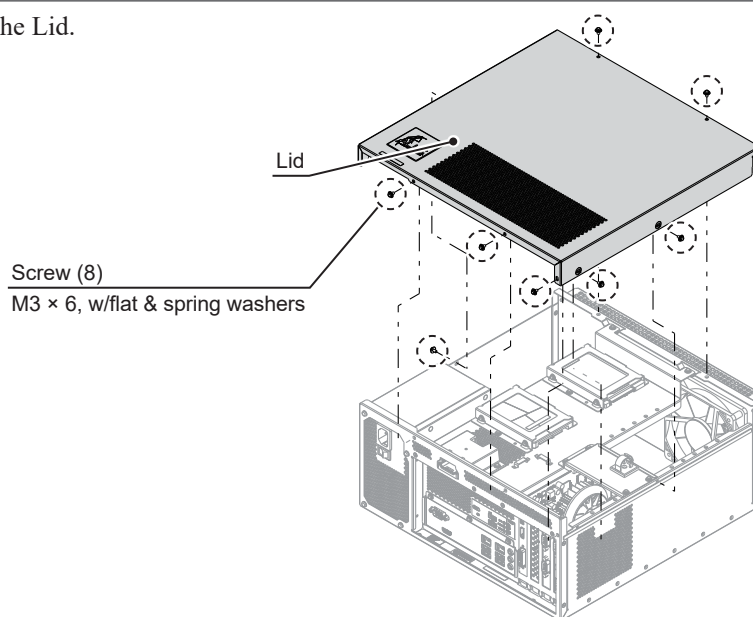


6

4 Undo five cord clamps.

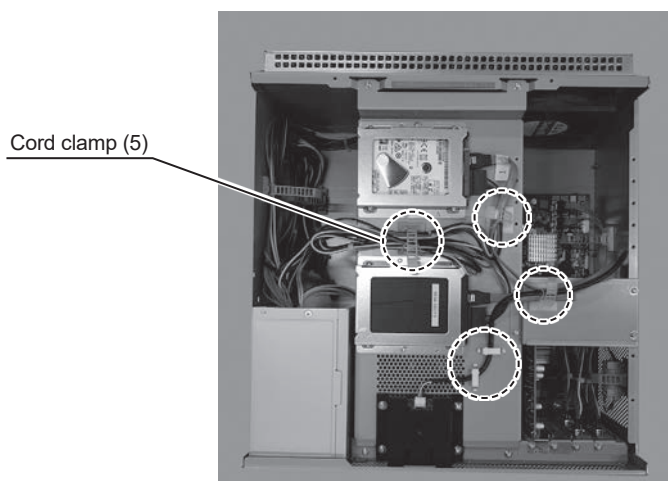


5 Disconnect the five connectors.

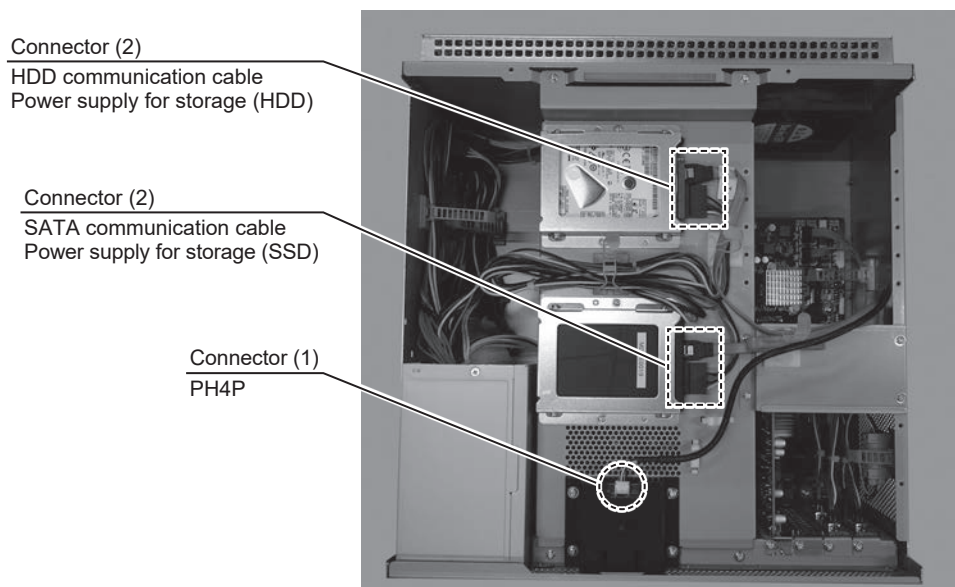

6 Remove six screws and take off the Tray unit.


Screw (6)
M3 × 6, w/flat & spring washers

Tray unit

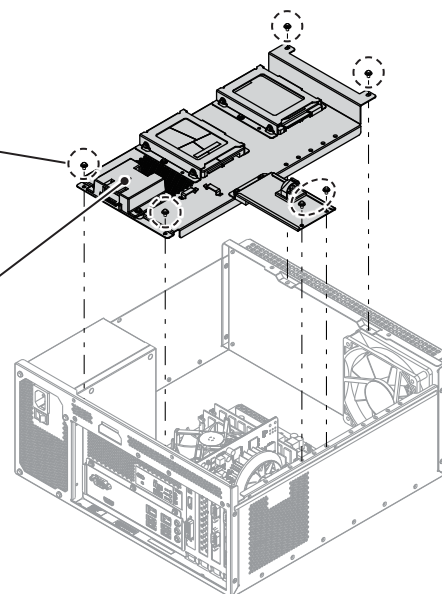


7 Remove one screw.


Screw (1)
M3 × 6, w/flat & spring washers

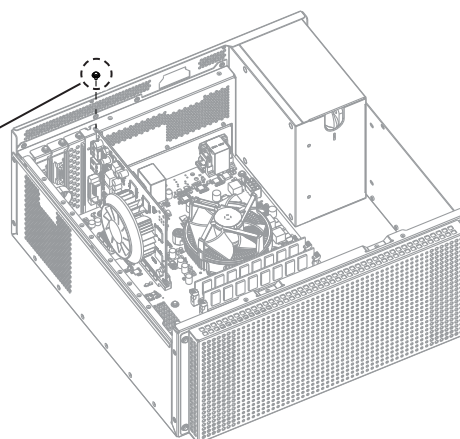

8 Remove the Graphics board while pressing the tab.


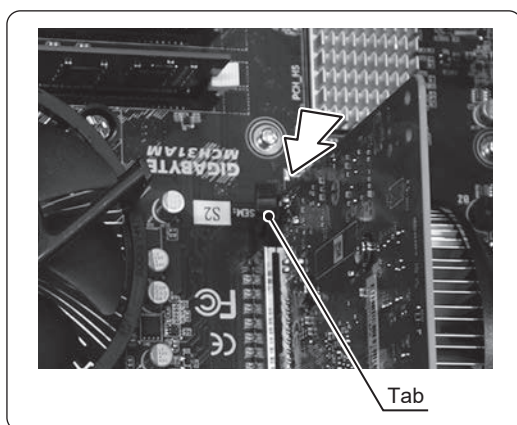


Tab

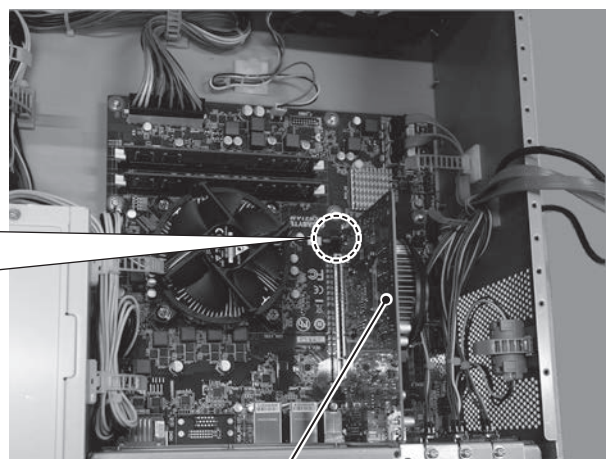

Graphics board

9 Remove the Lithium battery while pressing the tab.

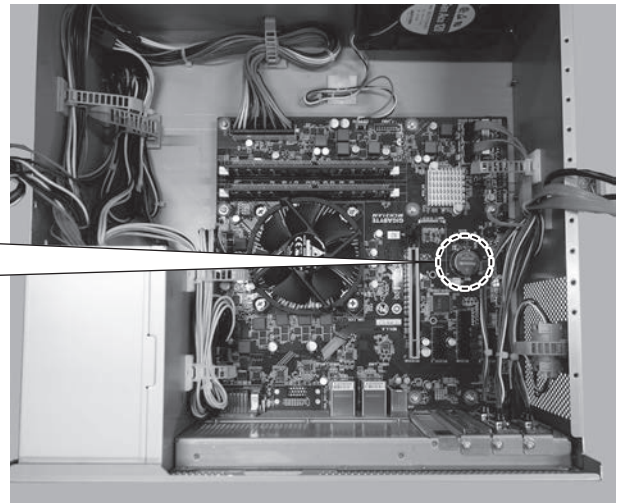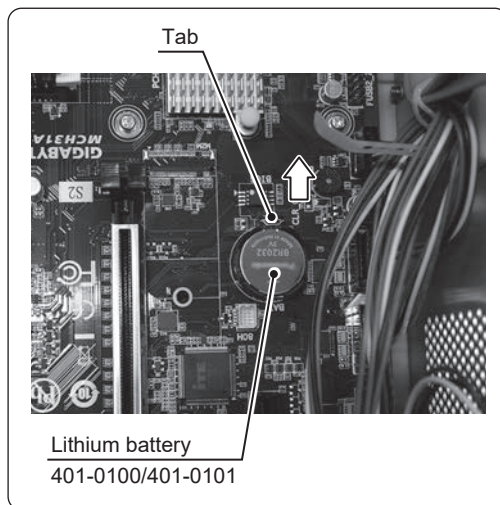

6

10 Refer to Steps 1 to 9 and work in reverse order to attach the replacement lithium battery and reassemble the cabinet.

SEGA AMUSEMENTS OFFICES

Sega Amusements

Europe

42, Barwell Business Park, Leatherhead Road, Chessington, Surrey, KT9 2NY United Kingdom

Telephone: +44 (0) 208 391 8060

Facsimile: +44 (0) 208 391 8096

e-mail: sales@segaarcade.com

<http://www.segaarcade.com/>

U.S.A.

Telephone:

General Parts: +1 224 265 4287

General Tech: +1 224 265 4283

Facsimile: +1 630 860 7775

SEGA Interactive Co., Ltd.

Sumitomo Fudosan Osaki Garden Tower 1-1-1 Nishi-Shinagawa, Shinagawa-ku, Tokyo 141-0033 , Japan

DISTRIBUTOR

Sega Logistics Service Co., Ltd.

6F Kamata Higashi-Nihon Bldg., 1-1-25, Minami Kamata, Ohta-ku, Tokyo, 144-0035 JAPAN

Telephone: +81-(0)3-6428-7605

Facsimile: +81-(0)3-6428-7613

1ST PRINTING
2019.09

