WIDE SLOTS*: Allow toasting of thicker breads, such as bagels, without jamming.

DUAL TOAST SHADE SELECTOR*: Two separate Toast Shade Selector controls which can be set on different settings at the same time.

IMPORTANT TIPS

- To reduce the risk of fire FREQUENTLY REMOVE CRUMBS FROM TOASTER.
- Avoid torn slices of bread or broken pastries; they may lodge in toaster wells.
- To free broken toast or pastries lodged in wells, disconnect toaster cord from outlet and allow toaster to cool. Turn toaster upside down and shake. Never use a fork or sharp-edged instrument as it may damage heating element. Never stick any metal object in toaster wells.
- While many types of products can be toasted, DO NOT toast buttered breads or foil-wrapped foods as they may damage the toaster or result in the risk of fire.

TO OPERATE TOASTER

1. Plug cord into 110-120 volt A.C. electric outlet.
2. Adjust Toast Shade Selector to desired setting.
3. Place bread slices or toaster pastries in slots.
   IMPORTANT: No matter how many slices of bread or pastries are being toasted, one of the wells being used must always be the one marked "ONE SLICE".
4. Press down Bread Lifter Knob to activate toasting cycle. At the end of cycle, food will pop up automatically.
5. To stop cycle before automatic pop-up, simply lift Bread Lifter Knob up.
6. Do not be alarmed if the Bread Lifter does not "latch" when you attempt to toast in rapid succession. This is a normal reaction. Wait for a few seconds, allowing the thermostat to set, then lower the Bread Lifter again.

* Features on selected models only

CLEANING YOUR TOASTER

Always unplug Toaster before cleaning.

1. Check and clean Crumb Tray frequently
   - Place Toaster on side to swing tray open.
   - Brush crumbs from Tray, wipe with damp cloth; dry.
   - Rub stubborn spots with plastic scouring pad dampened in sudsy water; dry.
   - Snap tray securely in place.
2. To clean Toaster exterior:
   - **Do not immerse Toaster in water.**
   - Wipe surfaces with a cloth dampened in sudsy water, or use a household cleaner recommended for chrome, painted or plastic surfaces; dry with soft dry cloth.

NEVER USE STRONG OR ABRASIVE CLEANERS THAT WILL SCRATCH THE SURFACES OF TOASTER.

ONE YEAR LIMITED WARRANTY

Hamilton Beach/Proctor-Silex, Inc. warrants this appliance to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. There are no warranties with respect to any glass parts or glass containers which may be supplied with this appliance. This warranty does not cover damage from abuse, neglect, use for commercial purposes, or any other use not found in the printed directions. HAMILTON BEACH/PROCTOR-SILEX, INC. DISCLAIMS ALL RESPONSIBILITY FOR CONSEQUENTIAL, INCIDENTAL, OR COMMERCIAL LOSSES CAUSED BY USE OF THIS APPLIANCE. Some states do not allow this exclusion or limitation of incidental or consequential losses, so the foregoing disclaimer may not apply to you. If you have a claim under this warranty, DO NOT RETURN THE APPLIANCE TO THE STORE! Please call our CUSTOMER ASSISTANCE HOT LINE in Washington, N.C. between 8:00 a.m. and 6:00 p.m., Eastern Time, Monday through Friday. (For faster service, please have model number ready for operator to assist you.)

1-800-851-8900

This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state.

HAMILTON BEACH◆PROCTOR-SILEX, INC.
Washington, North Carolina 27889

840019200 10/93

Printed in U.S.A.

USE & CARE

2 & 4 Slice Toasters

with Wide Slots & Pastry/Defrost

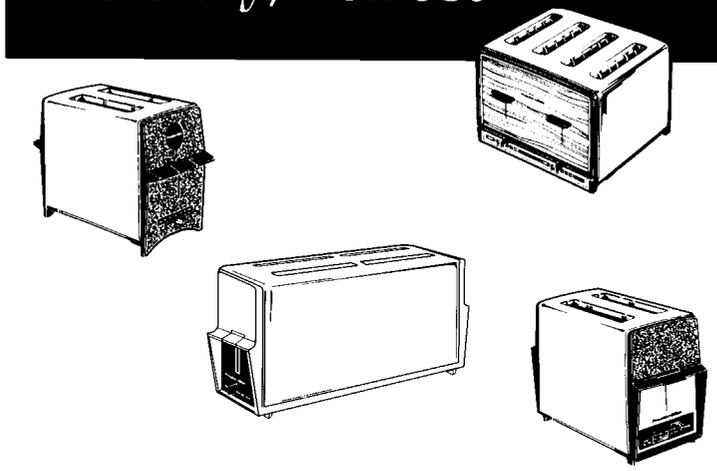

Customer Service Number

1-800-851-8900

8:00A.M. - 6:00P.M. Eastern Time
Monday through Friday

KEEP THIS NUMBER FOR FUTURE REFERENCE!

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug, or toaster in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. To disconnect, make sure bread lifter is in the up position, then remove plug from wall outlet.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
8. The use of accessory attachments not recommended by Hamilton Beach/Proctor-Silex, Inc. may cause injuries.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces, including stove.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Failure to clean Crumb Tray may result in a fire hazard.
13. Oversized foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electrical shock.
14. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, etc., when in operation.
15. Do not attempt to dislodge food when toaster is plugged in.
16. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
17. Do not leave appliance unattended and do not use it for other than intended use.

SAVE THESE INSTRUCTIONS

ALWAYS ATTEND THE TOASTER DURING OPERATION.

- The Toaster has a short cord to reduce the hazards of becoming entangled or tripping over a longer cord. An extension cord may be used if the rating is 13 amperes or greater. Care must be taken to arrange the extension cord so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
- Operating the Toaster and another appliance at the same time from the same electrical circuit could cause an electrical overload condition which would blow the fuse or trip the circuit breaker.
- This product is intended for household use only.

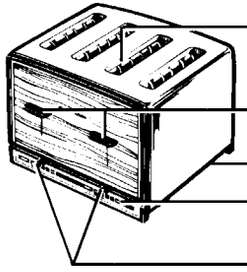

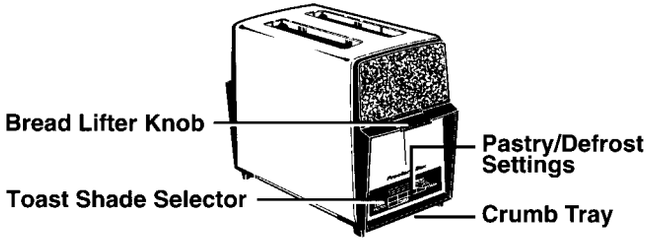

WARNING: To reduce the risk of fire, do not operate while unattended. Unplug after using.

* Feature on selected models only.

W A R N I N G

- Do not operate while unattended. Contents could jam, causing fire.
- For pastry items, always use the LIGHT or PASTRY/DEFROST setting because frostings and fillings can ignite.
- Food items with frosting or runny fillings could drip into the toaster well and cause possible damage or result in the risk of fire. If frosting or filling does drip into toaster well, follow instructions in "Cleaning Your Toaster" before using the toaster again to prevent risk of fire.
- Children should be closely supervised.
- Immediately unplug toaster if fire or smoke is observed.
- Please read and save this Use & Care booklet.

TOAST SHADE SELECTOR : The range of toast color from LIGHT to DARK is adjusted by moving control from left (LIGHT) to right (DARK). When toasting bread, start at the middle of the color range, then move lighter or darker as desired.

If the toast shade selector is numbered, **toaster pastries should always be toasted on the number 1 setting**. If not numbered, all toaster pastries should be toasted on the lightest setting possible.

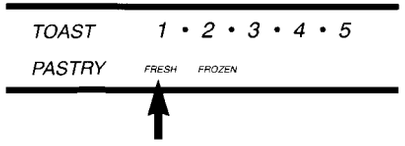

The number 2 setting should be used to toast frozen pastries or to defrost bread. If the shade selector is not numbered use the second setting.

The DEFROST setting is designed to defrost bread. DO NOT defrost other foods, such as meats, as damage to the toaster, shock, and/or risk of fire may result.

* Feature on selected models only.