

1			2		3		4	
版本号			修订日期		修订记录			
V1.0.0.0			2025-11-22		初始版本			
1			2		3		4	

版权所有，保留一切权利。
本公司致力于产品的不断改善和功能升级，内容如有改动，恕不另行通知。

在此文件中，仅以版本号前两位(发行版)，划分版本之间的区别。

Title: TC387_BTBLite_CoreBoard

Subtitle: Revision

Size: A4

Date: 2025/12/27

Time: 17:28:09






Sheet: 1 of: 5

Author: 猫肆管

Revision: V1.0.0.0



VAREF1/2:3.3V
VAGND1/2:GND
VDDM:3.3V
VDD/VDDSB:1.25V
VDD:1.25V
VEXT:5V/3.3V
VDDP3:3.3V
VFLEX:3.3V
VSS:GND
VSSM:GND
VDDOSC:1.25V
VEXTOSC:3.3V

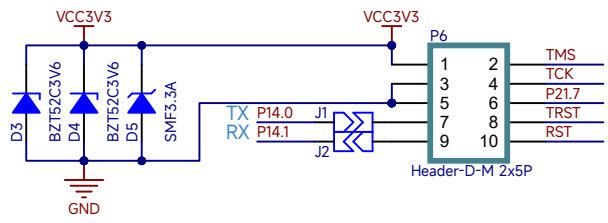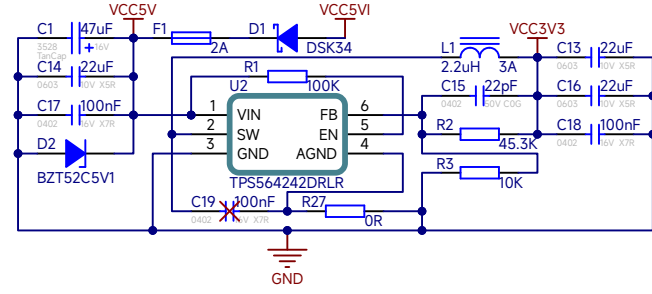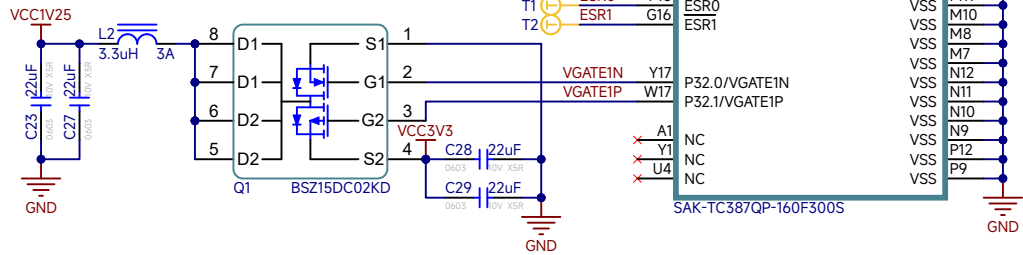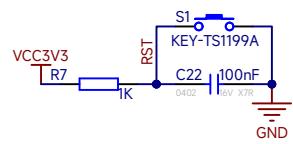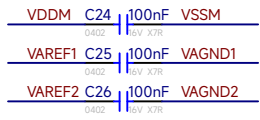

HWCFG [1] P14.5	HWCFG [2] P14.2	HWCFG [3] P14.3	HWCFG [4] P10.5	HWCFG [5] P10.6	HWCFG [6] P14.4
0 - EVR33OFF 1 - EVR33ON	0 - EVRCOFF 1 - EVRCON	0 - Boot from pins HWCFG [5:4] 1 - Flash BMI boot	HWCFG [4:5] [0 0]- Generic Bootstrap (P14.0/1) [0 1]- ABM, Generic Bootstrap on fail (P14.0/1) [1 0]- ABM, ASC Bootstrap on fail (P15.2/3) [1 1]- Internal start from Flash		Default Pad state 0 - Pins in tristate 1 - Pins with pull-up
(weak pull-up active on reset)	(weak pull-up active on reset)	(weak pull-up active on reset)	(weak pull-up active on reset)		(weak pull-up active on reset)

默认
HWCFG1=0
HWCFG2=1
HWCFG3=1
HWCFG4=1
HWCFG5=1
HWCFG6=1

- 1.) HWCFG [1:6] has weak internal pull-up active at start-up if the pin is left unconnected.
- 2.) In xQFP80 and xQFP100 packages, HWCFG[2] and HWCFG[6] pins are not available and instead tied as follows:
HWCFG[2] is tied to 1 to ensure EVRC is enabled;
HWCFG[6] is tied to 0 to ensure pins are in tristate.

