Force H3X Energy Storage System
Quick Guide


(FH3X-3.6K/5K/6K/8K-HY-1P-5/10/15/20)


⚠ WARNING

Warning: Read the user manual for product information and safety precautions before installing the product. The personal injury or property damage caused by failure to use the product in accordance with the this document and the user manual is not covered by the product warranty.

01 System Introduction



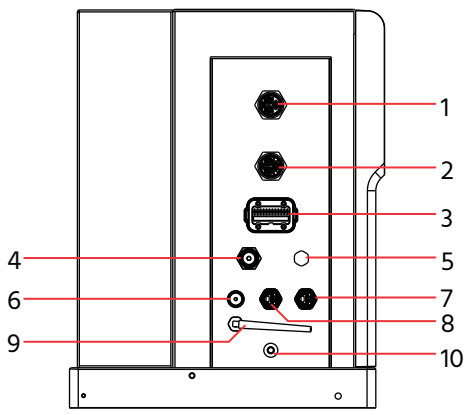

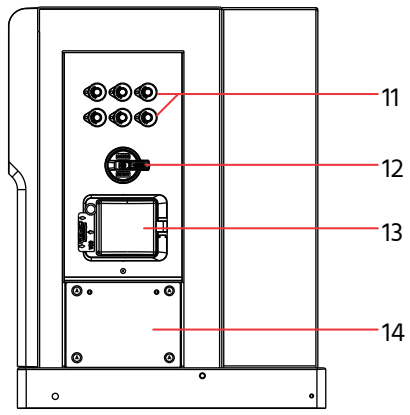


1. AC GRID terminal
2. BACK-UP terminal
3. COM terminal
4. CONTROL
5. Ventilation valve
6. START
7. LAN terminal
8. EMS
9. WIFI
10. Ground point
11. PV terminals
12. PV SWITCH
13. BAT SWITCH
14. FUSE CASE


02 Installation Requirements

- FH3X system must not be immersed in water. The battery base cannot be exposed to rain or other water sources. As a suggestion, the base's height shall be 300 mm above the ground.
- The support surface should have sufficient load-bearing capacity to support a minimum weight of 300 kg. The system must be installed on a fixed and flat support surface.


03 Mounting the Base

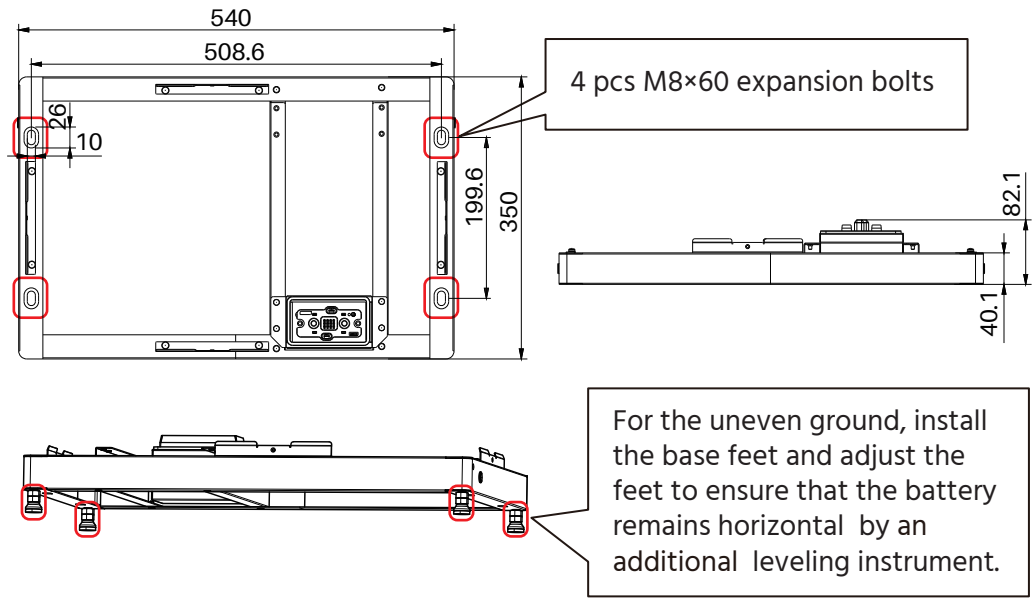


04 Installing the Battery Module onto the Base

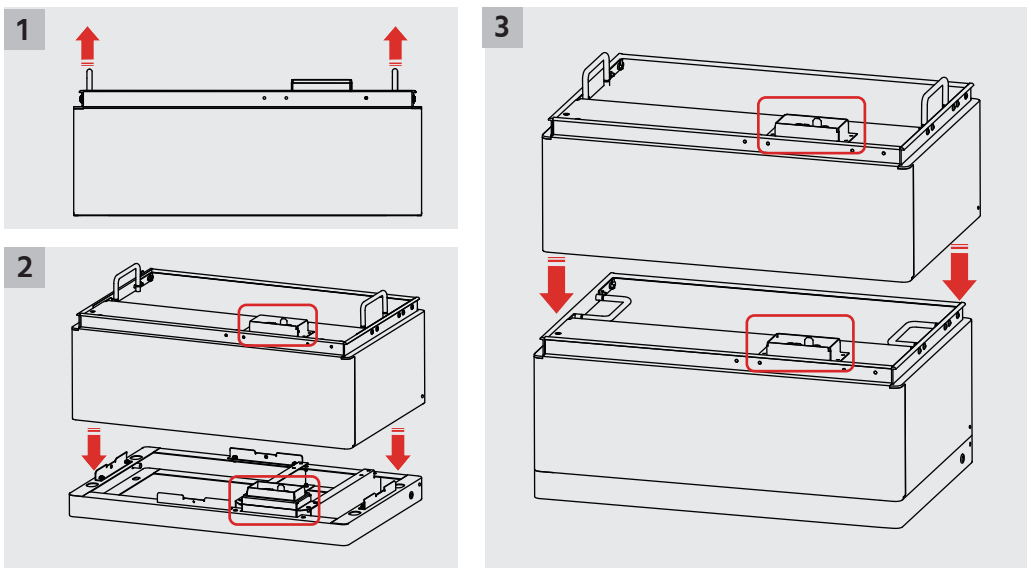


05 Installing the Power Controller onto the Battery Module

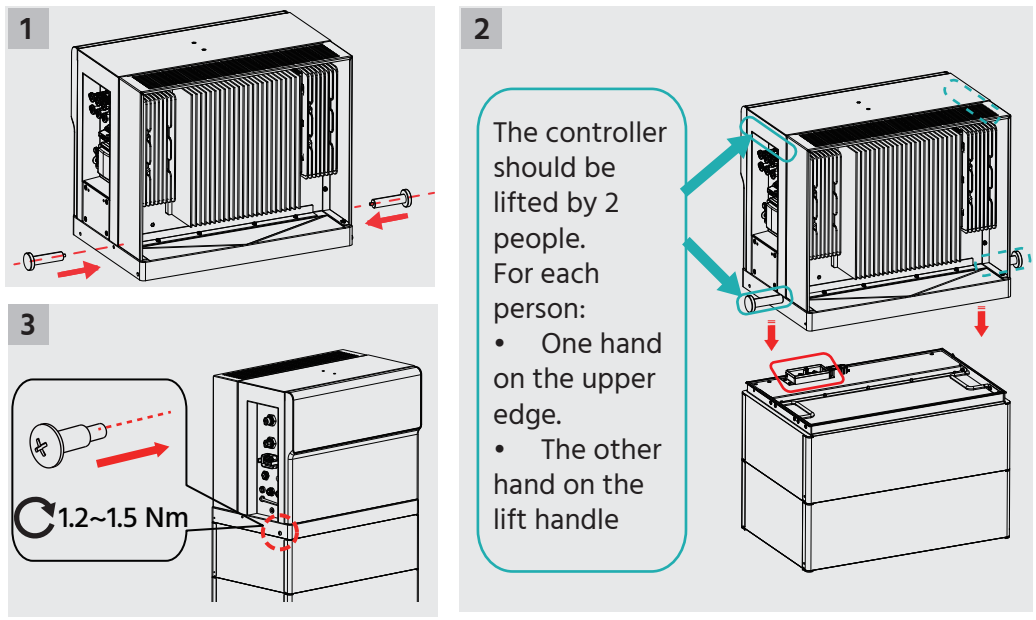

06 Installing the Metal Brackets for the System

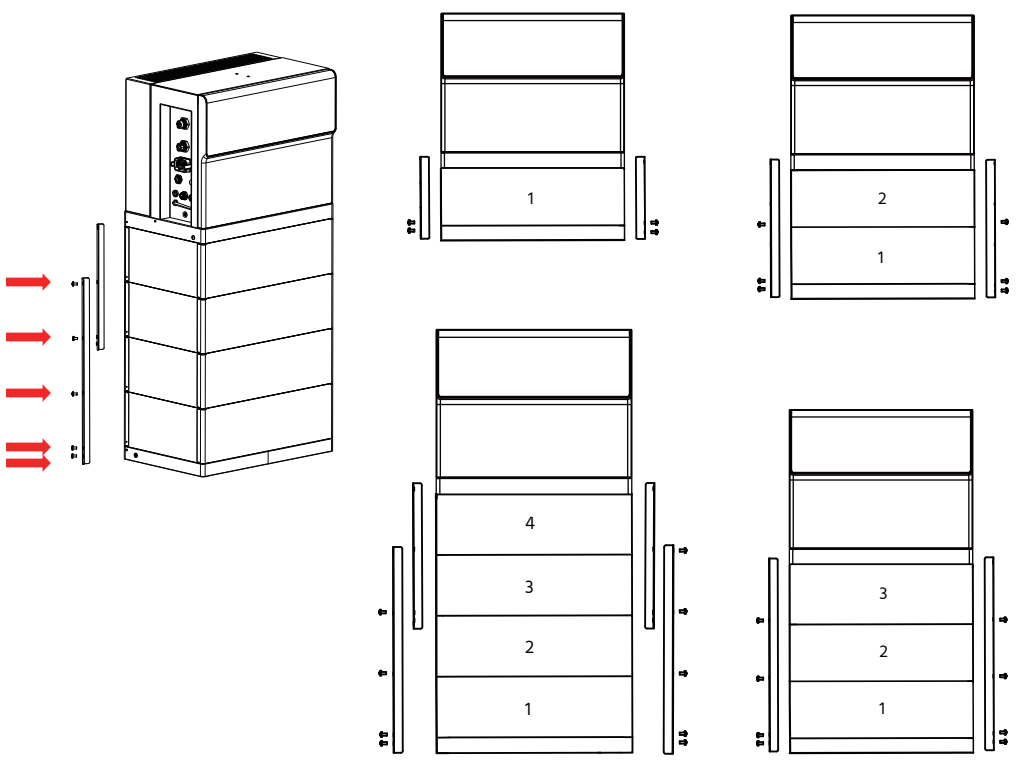


07 Installing the Anti-Toppling Brackets for the System

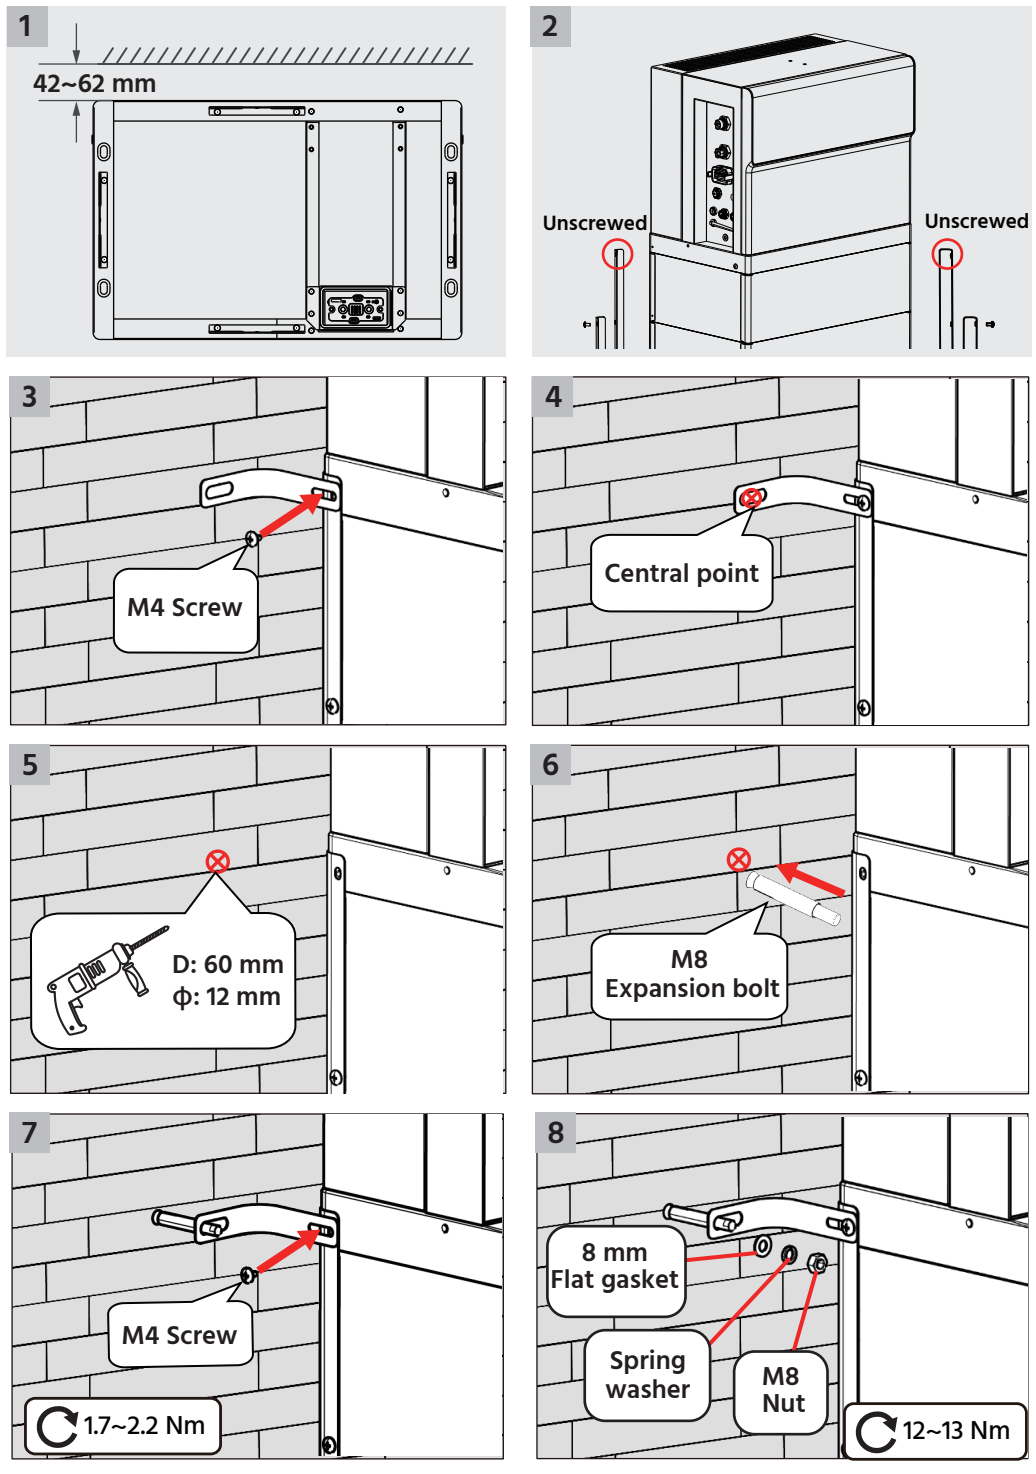


08 Grounding

The system modules has 3 grounding points as follows. Any one of these grounding points can be used for grounding.

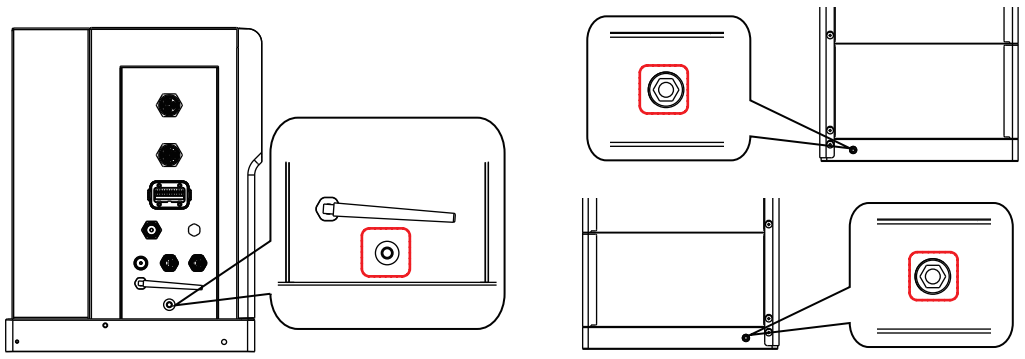


09 PV Connector Assembly and Connection


1

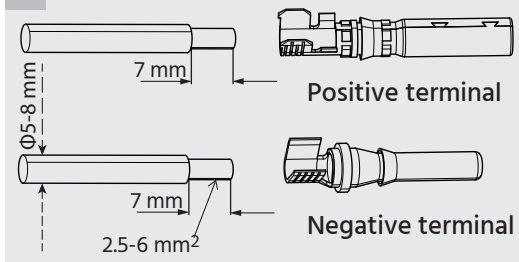


2 Crimping plier to cable ends

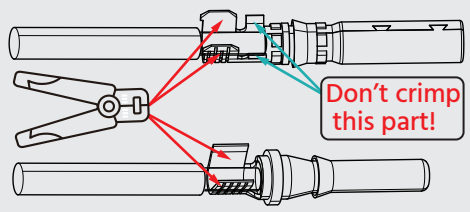


3

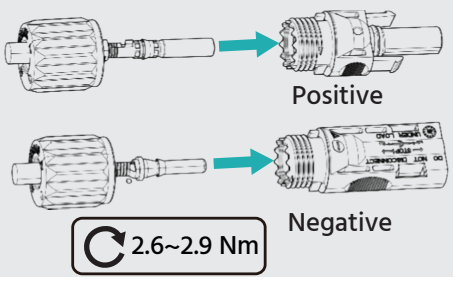


4 Check open-circuit voltage is less than power controller input limit 1000V.

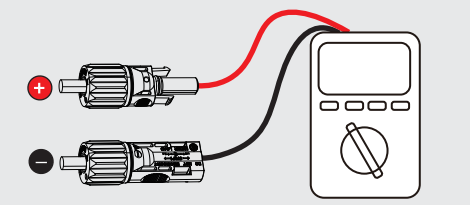

5

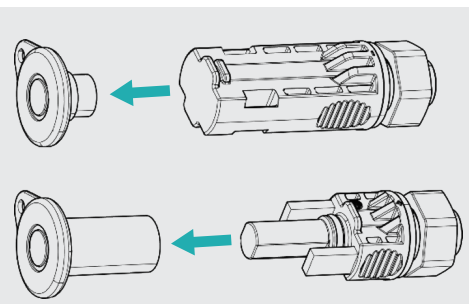


6

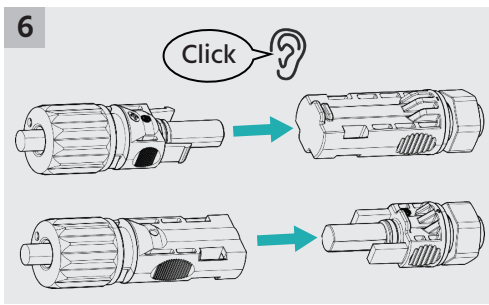


10 AC Connector Assembly and Connection


1 Insert the following tool into the hole of the cable gland and remove the terminal plug.

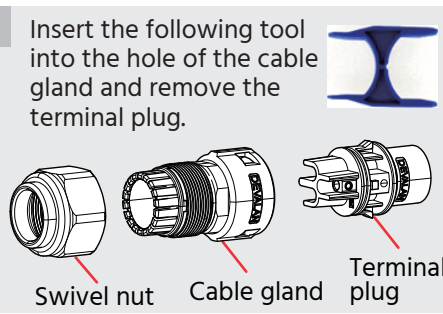


2 Loose the screws in the terminal plug with the L-shaped screwdriver.

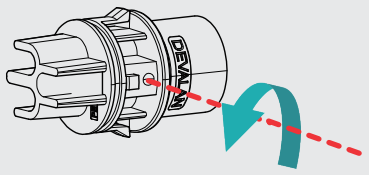


3 Plug the wires to the terminal plug according to the labels on the plug a nd tighten the screws in the terminal plug with the L-shaped screwdriver.

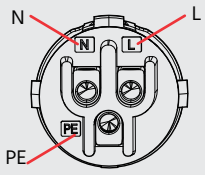


4

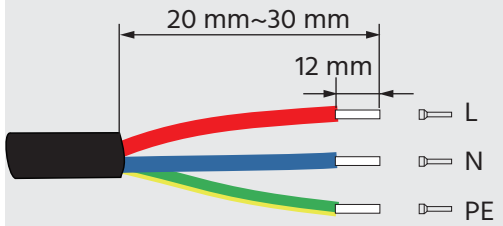


5

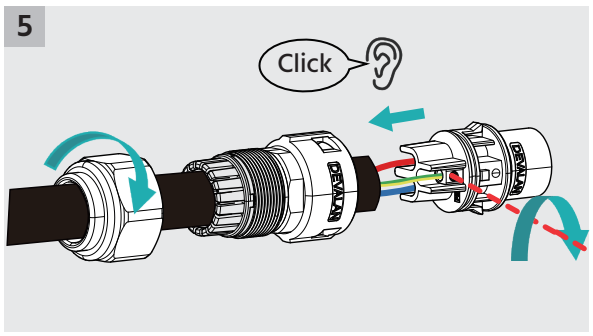

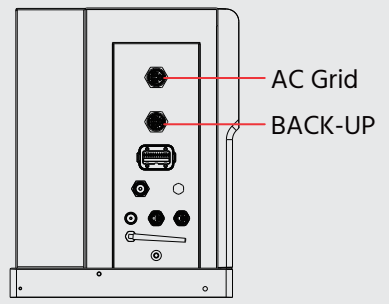


6

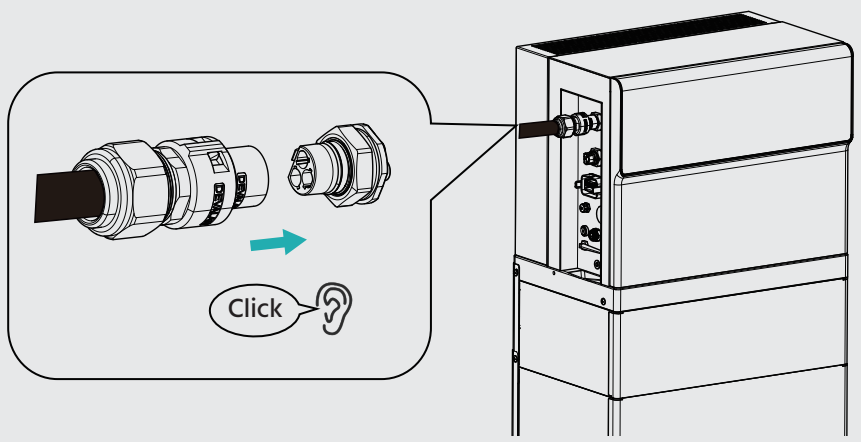



11 Communication Connector Assembly and Connection

1

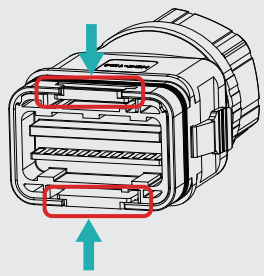


2

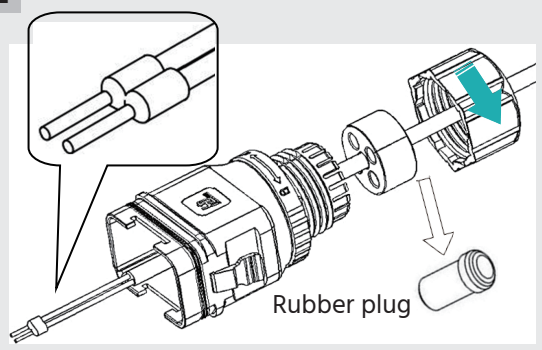


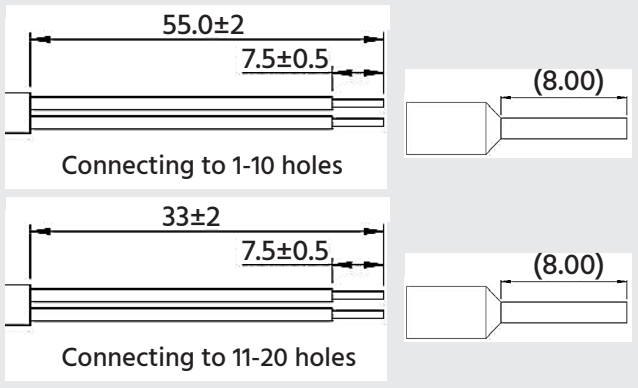


3

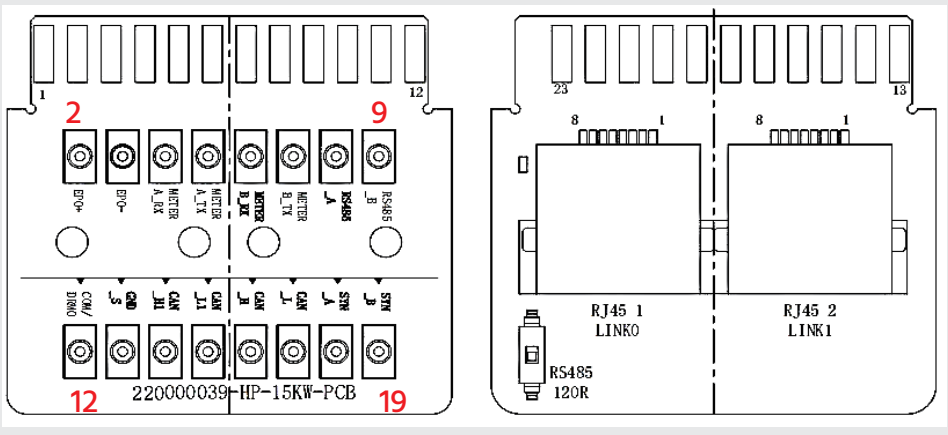

Pin	Definition	Description
Pin 2	EPO+	Emergency stop button signal, to be short-circuited via external switch, for manual quick stop in case of emergency
Pin 3	EPO-	
Pin 4	METERA_RX (CT+)	For communication connection to meter
Pin 5	METERA_TX (CT-)	
Pin 6	SHARE_I_R	For parallel connection
Pin 7	SHARE_I_S	
Pin 8	SHARE_I_T	
Pin 9	GNDS	
Pin 14	DRM0	For AS4777 standard (Only DRM0 is available)
Pin 15	GNDS	
RJ45-2	LINK0	For parallel connection
RJ45-2	LINK1	For parallel connection

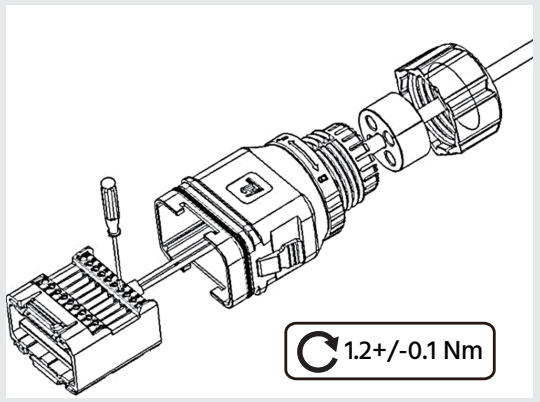

4

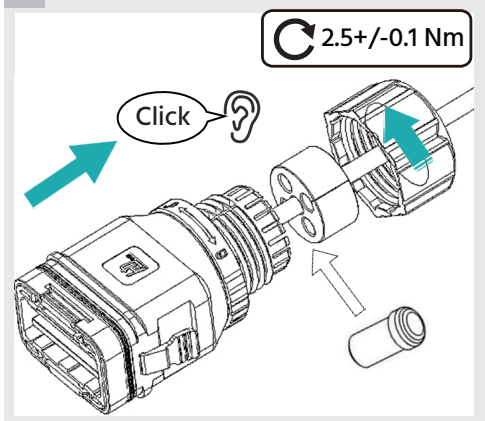

5

