How to Change WiFi BaudRate

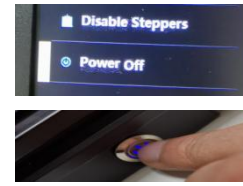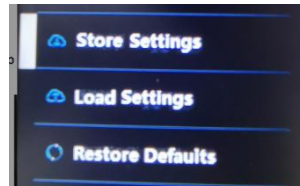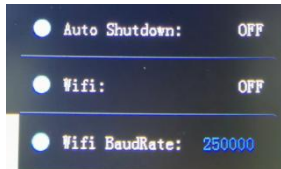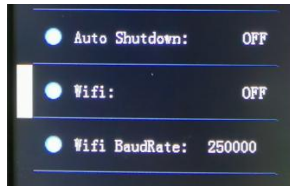you can change WiFi communication BaudRate to improve uploading file speed from WiFi.

Step 1: Change the BaudRate of the WiFi module in the ESP3D WebUI, and restart the ESP3D
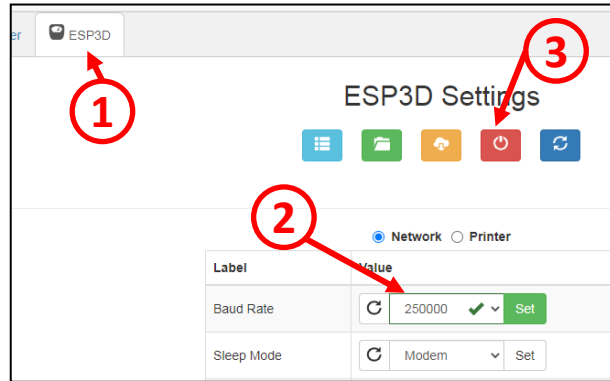
Step 2: Modify the WiFi BaudRate on the LCD Menu(Menu>>Control>>Configre)
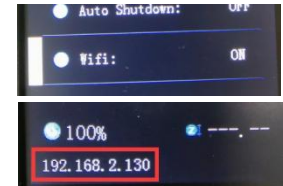
| Turn OFF WiFi | Change WiFi BaudRate | Store settings | Power off and then Power on printer | Turn ON WiFi and wait connected |

NOTE:
1. **921600 baud rate of WiFi module is not available at present, we will try to solve it**
2. **Higher baud rate will reduce the working distance of WiF**