

TELESCOPING ADJUSTABLE SPREADER BEAMS

ASME B30.20 & OSHA • WLL 4,000 TO 20,000 LBS. • SPREADS 4 FT. TO 30 FT.




BENEFITS & FEATURES

- Manufactured to exceed all ASME B30.20 and OSHA regulations
- Painted safety yellow for increased visibility
- **All spreader beams ship with proof load certification paperwork**
- Durable construction ideally suited to jobsite or warehouse use
- Standard with swivel latch hooks — top rigging not included, call for pricing
- Minimum horizontal top rigging angle of 45°
- Ideally suited for adding stability to critical lifts
- Custom designs available — call for engineering

⚠ Prop 65 — see Page 112. Minimum horizontal top rigging angle is 45° on all fixed and adjustable spreaders; Murphy recommends a minimum of 60°.



DIMENSION REFERENCE

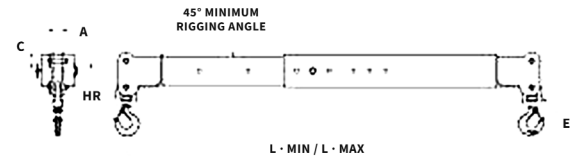

TELESCOPING ADJUSTABLE SPREADER BEAMS

WORKING LOAD LIMIT (LBS.)*	MODEL	OUTSIDE SPREAD (L) IN FEET*					A / C / E (IN.)
		4 – 6	6 – 10	8 – 14	12 – 20	21 – 30	
4,000	Part Number	12805	12822	12813	12829	24455	1.00
	Headroom (in)	5.37	5.12	5.12	5.12	8.87	0.50
	Weight (lbs)	80	120	155	235	585	0.89
10,000	Part Number	12834	12842	12848	12853	24454	1.25
	Headroom (in)	6.53	6.28	6.28	6.28	11.0	0.75
	Weight (lbs)	130	190	250	365	802	1.08
20,000	Part Number	12864	12872	12880	12885	24453	1.66
	Headroom (in)	7.63	7.63	7.63	7.63	13.0	1.00
	Weight (lbs)	185	265	345	510	1160	1.31

OPTIONAL TOP RIGGING — PART NUMBERS

WORKING LOAD LIMIT (LBS.)*	PART NAME	OUTSIDE SPREAD (L) IN FEET*				
		4 – 6	6 – 10	8 – 14	12 – 20	21 – 30
4,000	Adjustable Spreader	12805	12822	12813	12829	24455
	Chain	23354	23355	23356	23357	24456
	Wire Rope	23396	23397	23398	23399	24462
	Round Sling Bridle	23374	23375	23376	23377	24459
10,000	Adjustable Spreader	12834	12842	12848	12853	24454
	Chain	23378	23379	23380	23381	24457
	Wire Rope	23400	23401	23402	23403	24463
	Round Sling Bridle	23382	23383	23384	23385	24460
20,000	Adjustable Spreader	12864	12872	12880	12885	24453
	Chain	23386	23387	23388	23389	24458
	Wire Rope	23404	23405	23406	23407	24464
	Round Sling Bridle	23390	23391	23392	23393	24461

*Minimum horizontal top rigging angle is 45° on all fixed and adjustable spreaders. Murphy recommends a minimum horizontal top rigging angle of 60°. Adjustable on 1" increments. Top rigging is not included with the spreader beam — order separately using the part numbers above. All spreader beams ship with proof load certification paperwork.

CALL FOR CUSTOM DESIGNS & ENGINEERING

866-848-2032 • murphylift.com • Top rigging, custom spreads & capacities available