

ZoneCast

User Manual


Illustrated guide to the dashboard's features

Application version 1.6.0 — September 2026

Table of contents

1. Login
2. Live playback
3. Live announcement on busy speakers
4. Speakers — list and actions
5. Adding/editing a speaker
6. Zones
7. Zone members
8. Media — upload and audio analysis
9. Schedules, holidays and custom dates
10. Overlapping schedule refused
11. Custom dates
12. Users
13. System — admin panel
14. Automatic backup
15. Language, theme, version/changelog and login alerts
16. Event log
17. Backup archive
18. Account security — 2FA

1. Login

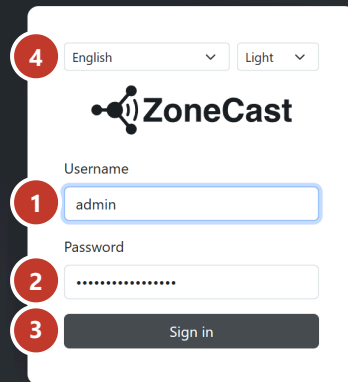

The screenshot shows the ZoneCast login interface on a dark background. The login form is a white card with the following elements:

- 4**: Language and theme pickers at the top right, showing 'English' and 'Light'.
- ZoneCast**: The application logo.
- 1**: Username input field containing 'admin'.
- 2**: Password input field with masked characters.
- 3**: 'Sign in' button.

The login page is reachable at the server's address (e.g. `http://192.168.187.10`).

- 1. Username** field — the username assigned by the administrator.
- 2. Password** field.
- 3. Sign in** button — if the account has 2FA enabled, after submitting you're also asked for the 6-digit authenticator app code (or a recovery code).
- 4. Language** and **theme** (light/dark/automatic) pickers — see section 15.

After 5 failed attempts within 5 minutes with the same username from the same computer (IP address), that username can't sign in from that computer for up to 5 minutes, even with the right password: the page shows "Too many failed attempts. Try again in N seconds." Signing in from another computer still works. The same limit applies, separately, to wrong 2FA or recovery codes.

2. Live playback


The screenshot shows the ZoneCast web interface. On the left is a dark sidebar menu with the ZoneCast logo and several options: Play (1), Media, Speakers, Zones, Schedules, Users, System, Log, and Backups. The main content area is titled 'Play' and includes a header with language ('English'), theme ('Light'), and user information ('Administrator (Administrator)') along with buttons for Password, Security, and Log out. The 'Live playback' section contains an 'Audio file' dropdown menu (2) showing 'Shift start bell.mp3', a 'Destination' dropdown menu (3) showing 'All speakers', and a 'Play now' button (4). The 'Playback history' section (5) features a 'Refresh' button and a table of recent playback events.

Date/time	File	Destination	Source	Status
9/29/2026, 2:43:24 PM	Evacuation - alarm.wav	Zone: Entrance	Manual — Administrator	completed
9/29/2026, 2:10:24 PM	Shift end bell.mp3	All speakers	Scheduled	failed ⓘ
9/29/2026, 1:20:24 PM	Gates closing announcement.mp3	Zone: Yard	Manual — Administrator	stopped
9/28/2026, 6:55:24 PM	Lunch break.mp3	Zone: Offices	Scheduled	completed
9/28/2026, 12:55:24 PM	Shift start bell.mp3	All speakers	Scheduled	completed

This is the landing screen: it lets you start an immediate announcement to one or more speakers.

1. Sidebar menu — switch between dashboard sections.
2. **Audio file** — choose among the files already uploaded in Media.
3. **Destination** — "All speakers", a zone or a single speaker; for a zone or a speaker a **Select** list appears below to pick which one.
4. **Play now** button — starts multicast playback immediately. If some of the chosen speakers are already playing, you're asked what to do first (see section 3).
5. **Playback history** — the latest 30 playbacks, newest first: date/time, file, destination, source (Manual with the user's name, or Scheduled) and outcome: completed, stopped, failed (the ⓘ symbol shows the reason). A playback still running shows a **Stop** button.

3. Live announcement on busy speakers

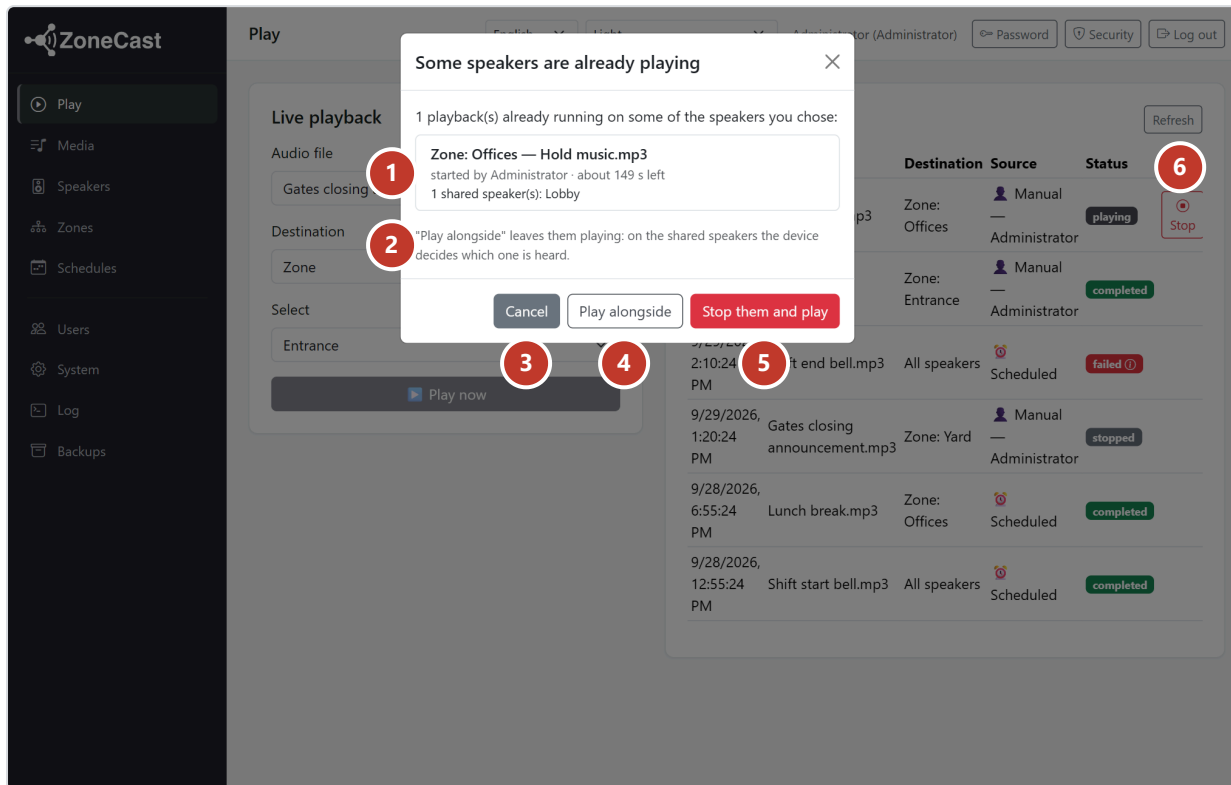

If some of the speakers you chose are already playing (another announcement or a schedule), **Play now** doesn't cut in straight away: a dialog shows what is playing and lets you decide.

1. What is already playing — destination and file, who started it (or which schedule), about how many seconds are left, and the **shared speakers**. A playback on exactly the same destination is marked: it is stopped whichever way you start yours, "Play alongside" included; only Cancel leaves it playing. If every listed playback is on the same destination, "Play alongside" and its reminder are not shown.
2. Reminder of what "Play alongside" does.
3. **Cancel** (default) — nothing is started.
4. **Play alongside** — leaves the other playback running; on the shared speakers the device decides which one is heard.
5. **Stop them and play** — stops the listed playbacks and starts yours.
6. **Stop** — stops a running playback from the history.

The dialog also lists (up to 5) the schedules due on the same speakers while your announcement plays: a bell **waits** for a live announcement to end (up to 60 s past its time) and then plays; if the announcement lasts longer, the dialog says it won't play (it is recorded as failed in the history). The rule applies to every live announcement, but the list only appears in this dialog: if nothing is playing on the chosen speakers, the announcement starts at once with no warning about upcoming bells.

4. Speakers — list and actions

The screenshot displays the ZoneCast web interface for managing speakers. The left sidebar contains navigation links: Play, Media, Speakers (selected), Zones, Schedules, Users, System, Log, and Backups. The main content area is titled 'Speakers' and includes a header with language and theme selectors, user information, and security settings. Below the header is a table of registered speakers. The table columns are Status, Name, IP, Zones, Multicast group, and Model. The first row shows an 'offline' speaker named 'Canteen' with a 'Not in sync' badge. The other rows show 'online' speakers. Each row has a set of action buttons: Ping, Preview, Apply now, Backup, Edit, and Delete. Numbered callouts (1-9) point to specific UI elements: 1. '+ New speaker' button; 2. Status dot; 3. Zone setup badges; 4. Zones column; 5. Multicast group column; 6. Ping button; 7. Preview button; 8. Apply now button; 9. Backup, Edit, and Delete buttons.

Status	Name	IP	Zones	Multicast group	Model	Actions
● offline Not in sync	Canteen	198.18.20.7	Canteen	239.1.2.17:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Car park horn	198.18.20.9	Outdoor area	239.1.2.19:5004	Algo 8186	Ping Preview Manual config. Edit Delete
● online	Loading yard	198.18.20.8	Yard, Outdoor area	239.1.2.18:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Lobby	198.18.20.2	Entrance, Offices	239.1.2.12:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Offices floor 1	198.18.20.3	Offices	239.1.2.13:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Offices floor 2	198.18.20.4	Offices	239.1.2.14:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Reception	198.18.20.1	Entrance	239.1.2.11:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Warehouse north	198.18.20.5	Warehouse, Outdoor area	239.1.2.15:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete
● online	Warehouse south	198.18.20.6	Warehouse	239.1.2.16:5004	Fanvil A233	Ping Preview Apply now Backup Edit Delete

List of all registered speakers with their online/offline status (checked by the server every 5 minutes; the table shows the status read when the page was opened — reload the page or press Ping to update it).

1. **+ New speaker** — opens the creation form (see section 5).
2. **Status** dot — green online, red offline, grey "unknown" (newly added, not checked yet).
3. **Zone setup badges:** **Updating...** while the new zone setup is being sent to the device; **Not in sync** if the device didn't accept it. If it was offline, it is re-sent automatically at the first periodic check (every 5 minutes) where the device answers; if the credentials are wrong, correct them with **Edit** (saving re-sends it at once) or use **Apply now**. Admins also get a login alert.
4. **Zones** — all the zones the speaker belongs to (a speaker can be in several zones).
5. **Multicast group** assigned to that speaker (dedicated address:port).
6. **Ping** — checks the device's reachability right away.
7. **Preview** — shows what would be sent to the device without actually applying it.
8. **Apply now** — writes the multicast configuration to the device (supported brands only, currently Fanvil; otherwise "Manual config." is shown).
9. **Backup / Edit / Delete** — back up the device's configuration, edit its data, delete it: refused if the speaker is the destination of a schedule (the message lists the schedules to change first). Backups remain available in the archive even after deletion.

Operators see only Ping, Preview, Edit and Delete: **Apply now**, **Backup** and "Manual config." are for administrators.

5. Adding/editing a speaker

The screenshot shows the ZoneCast web interface. On the left is a sidebar with navigation links: Play, Media, Speakers (selected), Zones, Schedules, Users, System, Log, and Backups. The main area is titled 'Speakers' and shows a list of speakers with columns for Status, Name, IP address, Zones, Brand, Model, and Location. A modal window titled 'Speaker' is open in the center, allowing the addition or editing of a speaker. The modal contains the following fields, each highlighted with a red circle and a number:

- Name**: Text input field with the value 'Vehicle gate'.
- IP address**: Text input field with the value '198.18.20.30'.
- Zones**: Text input field with the value '—'. Below it, a note says 'Zones are assigned from the Zones tab.'
- Dedicated multicast group**: Text input field with the value '239.1.2.40'.
- Port**: Text input field with the value '5004'.
- Brand**: Dropdown menu with 'Fanvil' selected.
- Model**: Text input field with the value 'A233'.
- Paging volume**: Dropdown menu with 'Not managed by ZoneCast (leave unchanged on device)' selected.
- Location**: Text input field with the value 'East gate'.
- Web admin user**: Text input field with the value 'admin'.
- Web admin password**: Text input field with the placeholder 'leave empty to keep unchar'.

A 'Save' button is located at the bottom right of the modal. The background shows a list of speakers, including 'Fanvil A233' and 'Algo 8186', with buttons for Ping, Preview, Apply now, Backup, Edit, and Delete.

1. **Name** — the label shown everywhere in the dashboard.
2. **IP address** of the device on the LAN.
3. **Zones** — read-only: the zones this speaker is in ("none") if it isn't in any; "—" for a new speaker). Zones are assigned from the Zones tab (see section 7).
4. **Dedicated multicast group** and **Port** — used to reach this single speaker.
5. **Brand** — dropdown with the most common multicast brands (Fanvil, Algo, CyberData, Grandstream, Axis, Tiptel, Akuvox), "(unspecified)", preselected for a new speaker, and **Other**, which lets you type a name freely; **Model** is free text. In this version automatic actions exist for **Fanvil** only: only with that brand do the Paging volume field and, for administrators, Apply now/Backup appear, and is the multicast list updated on the device automatically. Configure other brands by hand following the Preview.
6. **Paging volume** (supported brands only) — "Not managed by ZoneCast" leaves the device's setting unchanged; otherwise choose "Device default" or a level from 1 to 9.
7. **Location** — where the speaker is; it also helps find it in the zone member list.
8. **Web admin user/password** — used by the app to apply configurations; the password is encrypted at rest in the database (leave it empty to keep the saved one).

6. Zones

ZoneCast

Play

Media

Speakers

Zones

Schedules

Users

System

Log

Backups

Zones

English Light Administrator (Administrator) Password Security Log out

1

+ New zone

Name	Description	Multicast group	Members	
Canteen		239.1.3.23:5004	1 Canteen	4 Edit Delete
Entrance	Reception and lobby	239.1.3.20:5004	2 Lobby, Reception	Edit Delete
Offices	Floors 1 and 2	239.1.3.21:5004	3 Lobby, Offices floor 1, Offices floor 2	Edit Delete
Outdoor area	Car park and yard	239.1.3.25:5004	3 Car park horn, Loading yard, Warehouse north	Edit Delete
Warehouse	Main hall	239.1.3.22:5004	2 Warehouse north, Warehouse south	Edit Delete
Yard	Loading area	239.1.3.24:5004	1 Loading yard	Edit Delete

Zones group multiple speakers together (e.g. a floor, a department) so you can reach them together from Playback or from Schedules. The same speaker can be in several zones (e.g. "Lobby" is in both Entrance and Offices).

- + New zone** — name, description, zone multicast group and members (see section 7).
- Multicast group** of the zone (address:port).
- Members** — how many speakers belong to the zone, with the names of the first three underneath (" +N" when there are more).
- Edit / Delete** — changing a zone's members, address or name, or deleting it, updates in the background the affected devices that support it (currently Fanvil only): the Speakers tab shows "Updating..." and then, if the device doesn't accept it, "Not in sync". Speakers of other brands ("Manual config.") must be reconfigured by hand following their Preview.

Click a column header to sort A→Z, click again for Z→A (a ▲ / ▼ appears next to the title), in the Speakers, Zones, Media and Schedules tables.

A zone, speaker or audio file used by a schedule can't be deleted: the message lists the schedules to change first.

7. Zone members

The screenshot shows the 'Zone' configuration form in the ZoneCast interface. The form is titled 'Zone' and has a close button (X) in the top right corner. It contains the following fields and sections:

- Name:** A text input field containing 'Offices' (callout 1).
- Description:** A text input field containing 'Floors 1 and 2' (callout 2).
- Multicast group:** A text input field containing '239.1.3.21' (callout 3).
- Port:** A text input field containing '5004' (callout 4).
- Members:** A section with a 'Members' counter showing '3' (callout 5) and a search box 'Name, IP or location' (callout 6).
- Selected only:** A radio button option (callout 7) with 'Select shown' and 'Clear' buttons.
- Member list:** A table of speakers with columns for a tick box, status dot, name, IP, location, and additional info. The list includes:
 - ☐ ● Canteen 198.18.20.7 · Dining room (callout 8) — also in 1 other zone(s) — Not in sync (callout 9)
 - ☐ ● Car park horn 198.18.20.9 · Staff car park — also in 1 other zone(s)
 - ☐ ● Loading yard 198.18.20.8 · Dock 3 — also in 2 other zone(s)
 - ☒ ● Lobby 198.18.20.2 · Ground floor — also in 1 other zone(s)
 - ☒ ● Offices floor 1 198.18.20.3 · Corridor
 - ☒ ● Offices floor 2 198.18.20.4 · Meeting room
 - ☐ ● Reception 198.18.20.1 · Main entrance — also in 1 other zone(s)
 - ☐ ● Warehouse north 198.18.20.5 · Bay 1 — also in 2 other zone(s)
 - ☐ ● Warehouse south 198.18.20.6 · Bay 6 — also in 1 other zone(s)

A zone's speakers are chosen in the zone form (+ **New zone** or **Edit**), then saved with **Save** at the bottom.

1. **Name** and **Description**.
2. **Multicast group** and **Port** of the zone.
3. Member counter — how many speakers are selected.
4. Search box — filters the list by name, IP or location.
5. **Selected only** — shows only the ticked speakers.
6. **Select shown** — ticks every speaker currently shown (e.g. after a search), except those whose device has already reached its zone limit.
7. **Clear** — unticks all.
8. One row per speaker: tick box, status dot, name, IP and location.
9. How many **other zones** the speaker is already in, and its "Updating..." or "Not in sync" badge if any. A speaker whose device has reached its zone limit (18 zones on a Fanvil) is greyed out and can't be ticked.

8. Media — upload and audio analysis

ZoneCast

Play

Media

Speakers

Zones

Schedules

Users

System

Log

Backups

Media

English Light Administrator (Administrator) Password Security Log out

Upload audio file

Supported formats: MP3, WAV, M4A/AAC, OGG, FLAC, WMA, OPUS, AIFF — max 50 MB, max duration 10.0 minutes.

Scegli file Nessun file selezionato Upload

File	Duration	Size	Uploaded on	Audio analysis	
Shift start bell.mp3	4.0s	0.06 MB	9/26/2026, 2:55:23 PM	B 18% - M 67% - H 15% Amplify +1.2 dB	Download Delete
Shift end bell.mp3	4.0s	0.06 MB	9/26/2026, 2:55:23 PM	B 20% - M 65% - H 15% Amplify +1.2 dB	Download Delete
Lunch break.mp3	6.0s	0.09 MB	9/26/2026, 2:55:23 PM	B 35% - M 50% - H 15%	Download Delete
Evacuation - alarm.wav	30.0s	0.46 MB	9/26/2026, 2:55:23 PM	B 12% - M 73% - H 15% Amplify +1.2 dB	Download Delete
Gates closing announcement.mp3	12.0s	0.18 MB	9/26/2026, 2:55:23 PM	B 42% - M 43% - H 15%	Download Delete
Hold music.mp3	150.0s	2.29 MB	9/26/2026, 2:55:23 PM	B 58% - M 27% - H 15%	Download Delete

Every uploaded file is automatically analyzed and assessed for playback on PA horns (which reproduce low frequencies poorly).

1. Pick a file and press **Upload** — MP3, WAV, M4A/AAC, OGG, FLAC, WMA, OPUS, AIFF (max 50 MB, max 10 minutes), automatically converted for playback.
2. **Audio analysis** badge — share of bass (B), mid (M) and high (H) frequencies, colored green/yellow/red depending on how dominant the bass is: hovering shows a tooltip with the details. If an **"Amplify +N dB"** button also appears, the file has headroom to be brought up to maximum volume without distortion. One click applies the gain at once, without confirmation, to the stored file itself (Download then returns the amplified version), and it can't be undone; the button is then replaced by a grey **Amplified** badge.
3. **Download / Delete** the file. A file used by a schedule can't be deleted: the message lists the schedules to change or delete first.

A yellow or red badge signals that the audio might sound weak or unclear on PA horns: it doesn't prevent playback, it's just a hint.

- Play
- Media
- Speakers
- Zones
- Schedules**
- Users
- System
- Log
- Backups

Schedules
English
Light
Administrator (Administrator)
Password
Security
Log out

Schedules

+ New schedule

Name	File	Destination	Time	Days	Holidays and dates	Active
Morning shift start	Shift start bell.mp3	All speakers	06:00	Mon Tue Wed Thu Fri	Exclude holidays (IT) Skips: Summer closure	☒ + New list
Stocktaking Saturday	Shift start bell.mp3	Zone: Warehouse	08:00	Sat	Ignore (always play) Only: Stocktaking	☒
Lunch break	Lunch break.mp3	Zone: Offices	12:30	Mon Tue Wed Thu Fri	Exclude holidays (IT) Skips: Company holidays	☒
Shift end	Shift end bell.mp3	All speakers	14:00	Mon Tue Wed Thu Fri	Exclude holidays (IT) Skips: Summer closure	☒
Gates closing	Gates closing announcement.mp3	Zone: Yard	19:00	Mon Tue Wed Thu Fri Sat	Ignore (always play)	☒

Custom dates

Closures, exam days, events: lists of days a schedule can skip or be limited to.

+ New list

Name	Dates	Used by
Company holidays Repeat every year	2 date(s) Jun 24 ☾ (Patron saint), Dec 24 – Jan 6 ☾ (Christmas)	1 schedule(s)
Stocktaking Stocktaking Saturdays	2 date(s) Jun 27, 2026 (Summer stocktake), Dec 19, 2026 (Year-end stocktake)	1 schedule(s)
Summer closure August holidays	1 date(s) Aug 10, 2026 – Aug 21, 2026 (Holidays)	2 schedule(s)

Plan automatic playback of a file at recurring times and days. Every schedule has a name, a media file, a destination (all speakers/zone/speaker), a time, the days of the week and an optional date range.

- + New schedule** — opens the schedule form (see section 10).
- Holidays and dates** — the holiday rule with its country (e.g. "Exclude holidays (IT)", "Ignore (always play)") and, underneath, the custom dates used: **"Skips: ..."** or **"Only: ..."**.
- Active** — an inactive schedule is kept but doesn't play.
- + New list** — creates a list of custom dates (see section 11).
- Dates** — number of dates in each list and the first three of them (the rest are shown as "+N"; open **Edit** to see them all); ☾ = every year.
- Used by** — how many schedules use the list.

A **warning triangle** next to a schedule means it already plays on the same speakers at the same time as another one (e.g. schedules that already overlapped before the upgrade to 1.6.0, or after a zone's members or a list of dates changed): hover it to see which. Admins also get a login alert.

A bell due while a live announcement is playing on some of the same speakers waits for it to end and then plays; if the announcement is still going after 60 s, the bell is not played: it shows as a failed playback in the history and, for admins, in the login alerts.

1. **+ New schedule** — opens the schedule form (see section 10).
2. **Holidays and dates** — the holiday rule with its country (e.g. "Exclude holidays (IT)", "Ignore (always play)") and, underneath, the custom dates used: **"Skips: ..."** or **"Only: ..."**.
3. **Active** — an inactive schedule is kept but doesn't play.
4. **+ New list** — creates a list of custom dates (see section 11).
5. **Dates** — number of dates in each list and the first three of them (the rest are shown as "+N"; open **Edit** to see them all);
⌚ = every year.
6. **Used by** — how many schedules use the list.

A bell due while a live announcement is playing on some of the same speakers waits for it to end and then plays; if the announcement is still going after 60 s, the bell is not played: it shows as a failed playback in the history and, for admins, in the login alerts.

10. Overlapping schedule refused

The screenshot shows the ZoneCast Schedules management interface. A modal window is open for editing the 'Lunch break' schedule. The modal contains the following fields:

- Select:** Entrance
- Time:** 12:30
- From (opt.):** gg/mm/aaaa
- To (opt.):** gg/mm/aaaa
- Days of the week:** Mon, Tue, Wed, Thu, Fri, Sat, Sun (with Mon-Fri selected)
- Holiday handling:** Ignore (always play)
- Holiday calendar:** Italia
- Custom dates:** Company holidays (Skip these days), Stocktaking (Not used), Summer closure (Not used)
- Active:** ☒

A red warning box is displayed at the bottom of the modal:

Not saved: it would play on the same speakers at the same time as

- Lunch break** — Zone: Offices, 12:30 (Mon Tue Wed Thu Fri). First time: Wed, Sep 30, 2026, 12:30 PM. 1 shared speaker(s): Lobby

[Open it](#)

Change the time, the days, the dates or the destination, or change the other schedule.

The background shows a list of schedules with columns for Name, Time, Days, and Active. The 'Lunch break' schedule is highlighted.

The lower part of the schedule form: time, optional From/To dates, days of the week, holidays, custom dates and **Active**.

- Holiday handling** and **Holiday calendar** — pick a country (Italy, United States, United Kingdom, France, Germany, Spain, Japan, China — the menu shows each in its own language, e.g. Deutschland, España) and whether to exclude its holidays, ignore them (always play) or play *only* on holidays.
- Custom dates** — one selector per list: **Not used**, **Skip these days** or **Only on these days**.
- A schedule lasts from its start time until its audio file ends. If it would be playing at the same time as another active schedule on at least one shared speaker, **it is not saved**: the box shows the schedule in the way (destination, time, days), **when they would first clash** and the **shared speakers**.
- Open it** — opens the other schedule, to change it instead.

To fix it, change the time, the days, the dates or the destination — or change the other schedule. The check also counts speakers shared through zones and "All speakers". It applies only when **Active** is ticked: a paused schedule is saved anyway and is checked when it is made active again. Overlaps that already exist don't block unrelated edits (e.g. a rename).

"Only on these days" and "Only on holidays" narrow the schedule and never add days: the day must also be one of the selected days of the week and inside the From/To range. With several "Only" lists, one match is enough; a day in a "Skip" list is always skipped.

11. Custom dates

The screenshot shows the 'Custom dates' dialog box in the ZoneCast interface. The dialog has a dark sidebar on the left with navigation links: Play, Media, Speakers, Zones, Schedules (highlighted), Users, System, Log, and Backups. The main content area of the dialog is white and contains the following elements:

- 1** Name: A text input field containing 'Stocktaking'.
- 2** Description: A text input field containing 'Stocktaking Saturdays'.
- 3** Dates: A section with two rows of date inputs. The first row has '27/06/2026' in a date picker, 'gg/mm/aaaa' in a text field, and 'Summer stocktake' in a label field. The second row has '19/12/2026' in a date picker, 'gg/mm/aaaa' in a text field, and 'Year-end stocktake' in a label field. Each row has an 'Every year' checkbox and a red 'X' icon to remove the row.
- 4** Label: A text input field for the label of the date range.
- 5** Every year: A checkbox to toggle the 'Every year' option.
- 6** + Add date: A button to add a new date entry.
- 7** Paste dates: A section with a large text area for pasting dates and an 'Add these dates' button below it.
- Save**: A button at the bottom right of the dialog.

Below the dialog, a portion of the 'Schedules' list is visible, showing a schedule named 'Summer closure' with a description 'August holidays' and a date range 'Aug 10, 2026 – Aug 21, 2026 (Holidays)'.

Named lists of days (closures, exam days, events) that a schedule can skip or be limited to. Open with **+ New list** or **Edit** under the schedules list.

- 1. Name and Description** of the list.
- 2.** First day of the date (or range).
- 3.** Last day — optional, only for a range.
- 4. Label** — e.g. "Christmas".
- 5. Every year** — repeats the date each year; a yearly range may cross New Year: enter the last day in the following year (e.g. Dec 24, 2026 – Jan 6, 2027). The red X removes the row.
- 6. + Add date** — adds an empty row.
- 7. Paste dates** — click it to open the box; one date or range per line (2026-12-24 , 24/12/2026 , or 2026-12-24 2027-01-06 Christmas : the rest of the line becomes the label), then **Add these dates** and finally **Save**. Lines not understood stay in the box and are flagged. Pasted dates arrive with **Every year** unticked: tick it where needed.

A list used by schedules can't be deleted: remove it from them first. Editing a list may make two schedules overlap: this is reported after saving and flagged in the schedules list.

12. Users

ZoneCast

Users

English Light Administrator (Administrator) Password Security Log out

Users

User	Name	Role	
admin default	Administrator	Administrator	Edit
maintenance	Emma Brown	Administrator	Edit Delete
operator1	John Smith	Operator	Edit Delete

+ New user

Only administrators can see and manage this section.

1. **+ New user** — available roles: **Administrator** (full access, including the Users/System/Log/Backups sections) and **Operator** (playback, managing speakers/zones/media/schedules).
2. The **default** admin user created on first startup can't be deleted, so there is always an account to sign in with. Its role can still be changed with **Edit**: keep it as **Administrator** so that at least one administrator always remains.
3. **Edit / Delete** — an administrator can also reset another user's password from here, but can't delete their own account.

Every user can change their own password (**Password** button at the top) and enable 2FA on their own (see section 18).

13. System — admin panel

The screenshot shows the ZoneCast System admin panel. The interface is divided into several sections, each highlighted with a red circle and a number:

- 1. Network**: The top section, labeled "Network", contains fields for "Interface" (eth18), "IP address / subnet (CIDR)" (192.168.187.20/24), and "Gateway" (192.168.187.1). There is an "Apply" button and a warning: "Must be confirmed within a few minutes from the dashboard reachable at the new address, otherwise it reverts on its own."
- 2. Server time**: The "Server time" section shows the "Local time" (2025-09-29 14:56:12 CEST), "Timezone" (Europe/Rome), and "NTP sync status" (Sync). It also includes "Schedules run in" (Europe/Rome), "NTP servers configured on the host" (ntp1.ipv6.it, time.cloudflare.com), and "NTP sync active" (checked). There is a "System timezone" dropdown set to "Europe/Rome" and an "Apply" button. Below this is the "NTP servers" section with "ntp1.ipv6.it, time.cloudflare.com" and an "Apply" button. A note says "One or more, separated by space or comma. Empty => system default servers."
- 3. Host resources**: The "Host resources" section shows a "Disk" usage bar (9.8 / 42.9 GB (15.8%)) and "RAM" usage bar (1.1 / 4.0 GB (27.5%)).
- 4. Information**: The "Information" section shows "Theme and language can be changed from the top bar, for any user" and "Version" (v1.6.0).
- 5. Export full configuration**: The "Export full configuration" section has a description: "Full backup of database, media and encryption key in a single file. Contains sensitive data, handle it with care." It includes a "Backup password (optional)" field and an "Export and download" button.
- 6. Import configuration**: The "Import configuration" section has a description: "Restores a previously exported backup. Replaces the current data (a copy is still saved) and restarts the service." It includes a "Select file" button, a "Nessus file selector" button, a "Backup password (if set during export)" field, and an "Import and restart" button.
- 7. Automatic backup**: The "Automatic backup" section has a description: "Use full configuration, as in Export, on a schedule kept on this server and, if you want, copied to an FTP server or a network share." It includes a "Make backups automatically" checkbox (checked), "How often" (Every day), "Time" (02:30), "Include the audio files" checkbox (checked), "Copies kept on this server" (3), and "Copies kept at the destination" (30). It also has a "Backup password (at least 12 characters)" field and a "Also copy to" dropdown menu. Below this is the "Network share (SMB / Windows)" section with fields for "Server", "Port", "Share", "Folder", "Username", and "Password". It also has a "Test connection" button and a "Back up now" button. At the bottom, there is a "Status" section showing "Last run" (9/29/2025, 2:55:26 PM), "Last successful backup" (9/29/2025, 2:55:26 PM), and "Next run" (9/30/2025, 2:30:00 AM). There is also a "Backups on this server" section showing a backup file "zonecast-#40b0c9e-26389207f12334c2_vchondia" (35 KB).

Visible only to administrators.

- 1. Network** (native install only) — the interface's IP address with subnet, gateway and DNS; changes are applied at once, on trial, and must be confirmed within 2 minutes (with an on-screen countdown) by pressing **Confirm this address**; if the connection drops, reconnect at the new address and confirm from there. Otherwise they revert on their own.
- 2. Server time** — local time, timezone, NTP sync status, the timezone schedules run in (with a warning if it differs from the system's), NTP servers, and **Set time manually** if the server has no NTP access. NTP/timezone changes are only available on a native install (on Docker they are read-only); setting the time manually works on Docker too.
- 3. Host resources** — disk usage (with a color-coded bar warning when space is running low), RAM and CPU.
- 4. Information** — installed version; click it to see the changelog (see section 15).
- 5. Export full configuration** — database, media and encryption key in a single file, optionally password-protected, to transfer the installation to a new machine. It contains sensitive data: handle it with care.
- 6. Import configuration** — choose the exported file, type its password and press **Import and restart**: it replaces the current data (a copy of it is still saved) and restarts the service. This is also how you restore an automatic backup.
- 7. Automatic backup** — see section 14.

14. Automatic backup

Automatic backup

The full configuration, as in Export, on a schedule: kept on this server and, if you want, copied to an FTP server or a network share.

☒ Make backups automatically **1**

How often **2** Time

Every day **3** 02:30 **4**

☒ Include the audio files **5**

Copies kept on this server **6** Copies kept at the destination **7**

3 30

Backup password (at least 12 characters) **8**

A password is saved: leave empty to keep it.
☐ I have stored this password somewhere safe: without it no backup can be restored.

Also copy to **9**

Network share (SMB / Windows) **10**

Server **11** Port

nas.local 445

Share Folder

backup zonecast

Username Password

zonecast

A password is saved: leave empty to keep it.
☒ Encrypt the transfer (SMB 3) **12**

Save **Test connection** **Back up now**

Status **9** **10**

Last run	9/29/2026, 2:55:26 PM completed 11
Last successful backup	9/29/2026, 2:55:26 PM
Next run	9/30/2026, 2:30:00 AM

Backups on this server **12**

zonecast-a4d0dc9e-20260929T125524Z.zcbundle 35 KB

System > Automatic backup (admins only): the full configuration, as in Export, made on a schedule, kept on this server and optionally copied to an FTP server or a network share.

- 1. Make backups automatically** — turns the schedule on.
- 2. How often** (every day / every week, with the day) and **Time**.
- 3. Include the audio files** in the backup.
- 4. Copies kept** on this server (0 to 10) and at the destination (1 to 100, shown only when copying elsewhere); older ones made by this installation are deleted. With 0 the backup is kept only at the destination; with no other destination at least 1 copy is always kept.
- 5. Backup password** (at least 12 characters) and the confirmation "I have stored this password somewhere safe".
- 6. Also copy to** — nowhere else (this server only), FTP server with encryption (**FTPS**), network share (**SMB** / Windows), or FTP without encryption (only after ticking the consent that password and backup travel unencrypted).
- 7. Destination details:** **Server**, **Port**, **Share** (SMB), **Folder**, **Username**, **Password** (leave empty to keep the saved one; if you change the destination type, server, port, share or username, type it again).
- 8. Encrypt the transfer (SMB 3)**. For FTPS with a self-signed certificate there is a **trusted certificate fingerprint** field instead: *Test connection* shows the server's fingerprint and offers **Trust this certificate** — use it only if it matches the one shown on the server. The button only fills in the field: press **Save** to keep it.
- 9. Test connection** — writes and deletes a test file at the destination.
- 10. Back up now** — runs a backup immediately with the saved settings (if you changed anything, press **Save** first); it works even when automatic backups are off, as long as a backup password is saved.
- 11. Status** — last run and its outcome, last successful backup, next run, and the error if the last one failed.
- 12. Backups on this server** — with size, download and delete buttons.

Without the backup password no backup can be restored. To restore, use System > **Import configuration** with the backup file and the password *it was made with*: if you later change the backup password, older backups still need the old one, so keep both. A failed or overdue backup raises a login alert; backups are paused if the settings came from another installation (after an import) until you save them again here.

15. Language, theme, version/changelog and login alerts

Live playback

Audio file: Gates closing announcement.mp3

Destination: Zone

Select: Entrance

Play now


Playback history

Date/time	File	Destination	Source	Status
9/29/2026, 2:56:25 PM	Hold music.mp3	Zone: Offices	Manual — Administrator	stopped
9/29/2026, 2:43:24 PM	Evacuation - alarm.wav	Zone: Entrance	Manual — Administrator	completed
9/29/2026, 2:10:24 PM	Shift end bell.mp3	All speakers	Scheduled	failed
9/29/2026, 1:20:24 PM	Gates closing announcement.mp3	Zone: Yard	Manual — Administrator	stopped
9/28/2026, 6:55:24 PM	Lunch break.mp3	Zone: Offices	Scheduled	completed
9/28/2026, 12:55:24 PM	Shift start bell.mp3	All speakers	Scheduled	completed

Selectors available to **every** user (not just admins), at the top of the dashboard and of the login page. In the dashboard, on narrow screens (under 768 px, e.g. a phone) they move into the side menu opened with ☰, together with the Password, Security and Log out buttons.

- 1. Language** — English, Italian, Chinese, Japanese, German, Spanish, French: translates the interface, including the audio-analysis tooltips and error messages. Two things are not translated: the Changelog text (always in English) and the Event log messages, which the server writes (mostly in Italian).
- 2. Theme** — light, dark (shown here), or **automatic** (default): switches from light to dark following the real local sunrise/sunset time.

Language and theme are saved in the device's browser, not in the user account: they apply to anyone using that browser. On another PC or browser they start from the defaults (English, automatic theme).

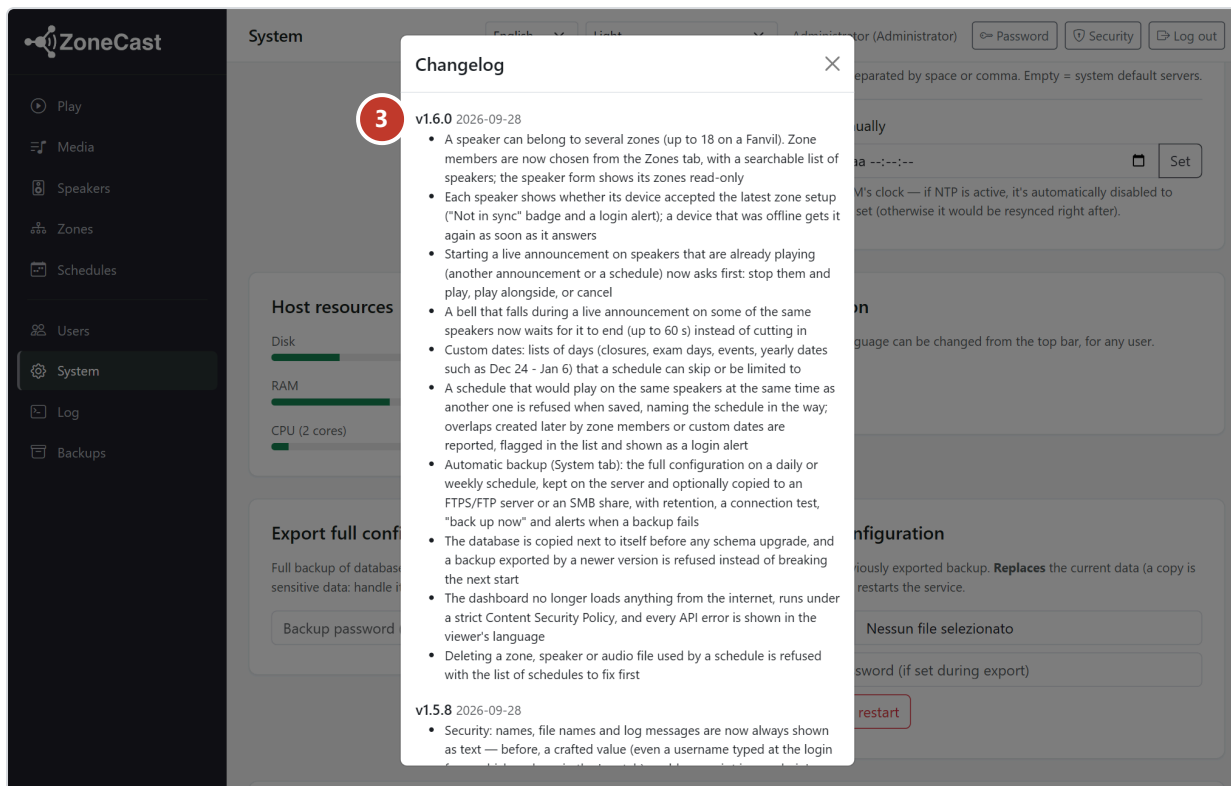

The version number in the System > **Information** card (hidden here behind the window) opens the Changelog when clicked.

3. Changelog — the list of changes per release, newest first: useful for quickly checking what changed after an update.

Login alerts — the first time an administrator opens the dashboard in a browser session (a new tab or window), a summary appears at the top when something needs attention:

- scheduled playbacks that failed in the last 24 hours;
- disk space running low or critically low;
- speakers that didn't accept their latest zone setup (Not in sync);
- schedules that play on the same speakers at the same time;
- automatic backup failed, overdue, or paused because its settings came from another installation.

16. Event log

The screenshot shows the ZoneCast Event log interface. On the left is a dark sidebar with navigation links: Play, Media, Speakers, Zones, Schedules, Users, System, Log (highlighted), and Backups. The main content area is titled 'Log' and includes a language dropdown (English), a theme dropdown (Light), and user information (Administrator (Administrator)). There are buttons for Password, Security, and Log out. Below this is the 'Event log' section with a filter dropdown (All levels), a search message input, and buttons for Refresh, Export CSV, Export JSON, and Clear log. A 'Keep history for' section shows 30 days and a checked 'Never (no automatic deletion)' option with a Save button. The event log table has four columns: Date/time, Level, Source, and Message. It lists various system events such as logins, backups, and zone management actions.

Date/time	Level	Source	Message
9/29/2026, 2:56:06 PM	INFO	zonecast.auth	Login riuscito: utente 'admin' da 127.0.0.1
9/29/2026, 2:55:28 PM	INFO	zonecast.backup	Backup automatico: impostazioni salvate da admin (attivo, smb)
9/29/2026, 2:55:28 PM	INFO	zonecast.auth	Login riuscito: utente 'admin' da 127.0.0.1
9/29/2026, 2:55:26 PM	INFO	zonecast.backup	Backup automatico completato: zonecast-a4d0dc9e-20260929T125524Z.zcbundle (local)
9/29/2026, 2:55:24 PM	INFO	zonecast.backup	Backup automatico avviato a mano da admin
9/29/2026, 2:55:24 PM	INFO	zonecast.backup	Backup automatico: impostazioni salvate da admin (attivo, local)
9/29/2026, 2:55:24 PM	INFO	zonecast.backup	Backup automatico: impostazioni salvate da admin (attivo, smb)
9/29/2026, 2:55:23 PM	INFO	zonecast.calendars	Date personalizzate 'Stocktaking' create (2 voci, utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.calendars	Date personalizzate 'Company holidays' create (2 voci, utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.calendars	Date personalizzate 'Summer closure' create (1 voci, utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Outdoor area': aggiunti [Car park horn, Loading yard, Warehouse north], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Yard': aggiunti [Loading yard], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Canteen': aggiunti [Canteen], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Warehouse': aggiunti [Warehouse north, Warehouse south], rimossi [] (utente admin)
9/29/2026, 2:55:23 PM	INFO	zonecast.zones	Zona 'Offices': aggiunti [Lobby, Offices floor 1, Offices floor 2], rimossi [] (utente admin)

Persistent record of logins, device communication, playback problems, schedule runs, zone and date changes and backups — survives a service restart. Every playback is listed in Playback history (section 2). Admins only.

1. Filter by **level** (Info/Warning/Error).
2. Search the message text.
3. **Export CSV / Export JSON** — downloads every stored event that matches the selected level and search text, not just the 300 most recent shown in the table: to export the whole history, choose all levels and clear the search first. Times in the file are in UTC.
4. **Clear log** — deletes the whole history permanently (not just the filtered rows), after asking for confirmation.
5. **Keep history for N days** (at least 1), or **Never** (no deletion by age; this is the default), then **Save**. Whatever you choose, the log keeps at most about 5000 events: beyond that the oldest are deleted automatically, so export it regularly if you need the complete history.

17. Backup archive


The screenshot shows the ZoneCast web interface. On the left is a dark sidebar with the ZoneCast logo and a menu with items: Play, Media, Speakers, Zones, Schedules, Users, System, Log, and Backups (which is highlighted). The main content area is titled 'Backups' and includes a header with language ('English'), theme ('Light'), and user ('Administrator (Administrator)') settings, along with buttons for Password, Security, and Log out. Below this is a section titled 'Backup archive' containing a table. A red circle with the number '1' points to the 'Date' column of the first row. The table has columns: Date, Speakers, IP, Format, Size, and Created by. The first row contains: 3/28/2026, 2:55:24 PM; Lobby; 198.18.20.2; txt; 47.1 KB; Administrator. To the right of the table, a red circle with the number '2' points to a set of buttons: 'Download' and 'Discard'.

Date	Speakers	IP	Format	Size	Created by
3/28/2026, 2:55:24 PM	Lobby	198.18.20.2	txt	47.1 KB	Administrator

All device configuration backups (made with the **Backup** button in Speakers), including ones whose speakers have since been deleted from the app. Configuration backups of ZoneCast itself are in System > Automatic backup (section 14). Admins only.

1. Each row shows the date, the speaker's name/IP *at the time of the backup* (not its current one — so it stays identifiable even if the device was removed or reassigned), format, size and who created it. If the speaker has since been deleted, a grey **archived** badge appears next to its name.
2. **Download** or **Discard** a backup: after a confirmation it is deleted permanently.

18. Account security — 2FA

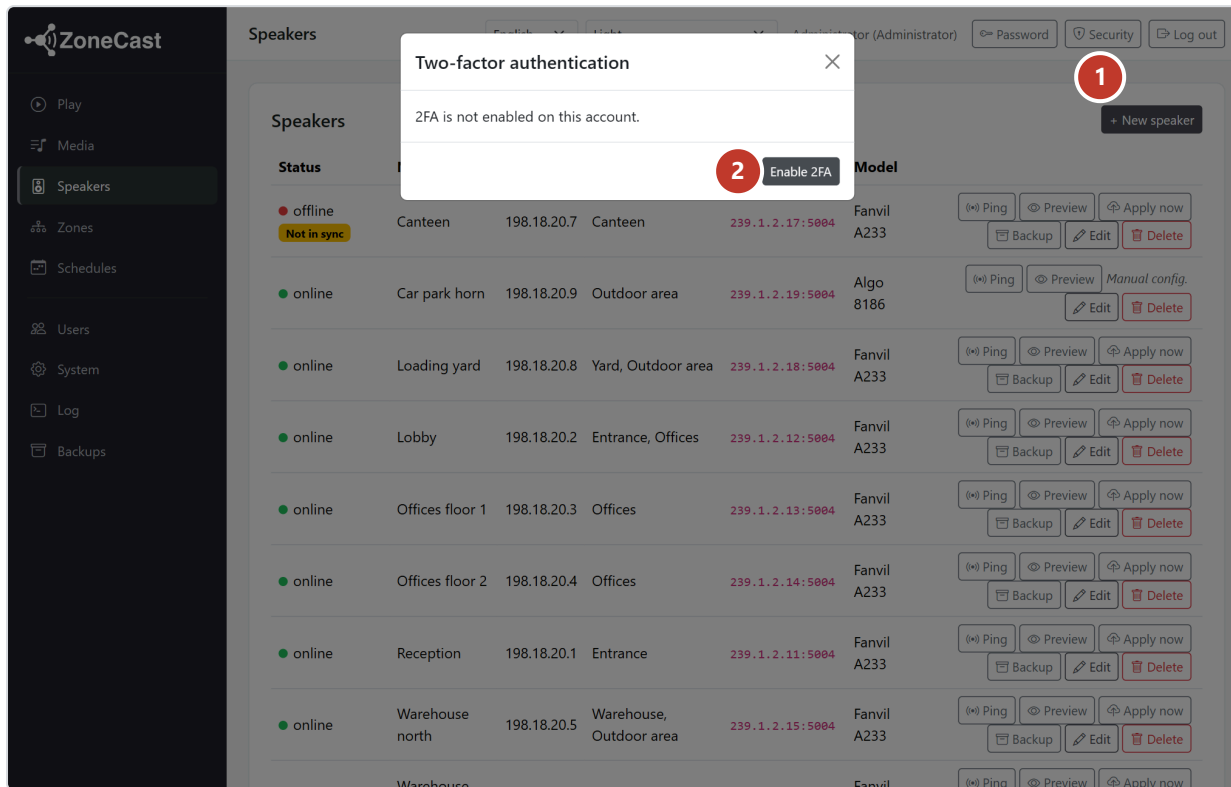

Accessible to any user, regardless of role — 2FA is optional, not enforced by the administrator.

1. **Security** button at the top (in the ≡ side menu on phones) — opens the two-factor authentication window.
2. **Enable 2FA** — shows a QR code to scan with an authenticator app (Google Authenticator, Authy, etc.); after confirming with the first 6-digit code, 10 single-use recovery codes are generated, shown only once. When 2FA is on, the same window shows **Disable 2FA** and **Regenerate recovery codes**; both ask for your password.

Keep the recovery codes somewhere safe: they're the only way in if you lose the phone with the authenticator app.