

10-Pin MSOP and 8-Pin MSOP Evaluation Board User's Guide

Note the following details of the code protection feature on Microchip devices:

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the
 intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not
 mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION. INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC® MCUs and dsPIC® DSCs, KEELOQ® code hopping devices, Serial EEPROMs, microepripherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.

QUALITY MANAGEMENT SYSTEM CERTIFIED BY DNV = ISO/TS 16949=

Trademarks

The Microchip name and logo, the Microchip logo, AnyRate, AVR, AVR logo, AVR Freaks, BeaconThings, BitCloud, CryptoMemory, CryptoRF, dsPIC, FlashFlex, flexPWR, Heldo, JukeBlox, KEELOQ, KEELOQ logo, Kleer, LANCheck, LINK MD, maXStylus, maXTouch, MediaLB, megaAVR, MOST, MOST logo, MPLAB, OptoLyzer, PIC, picoPower, PICSTART, PIC32 logo, Prochip Designer, QTouch, RightTouch, SAM-BA, SpyNIC, SST, SST Logo, SuperFlash, tinyAVR, UNI/O, and XMEGA are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

ClockWorks, The Embedded Control Solutions Company, EtherSynch, Hyper Speed Control, HyperLight Load, IntelliMOS, mTouch, Precision Edge, and Quiet-Wire are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Adjacent Key Suppression, AKS, Analog-for-the-Digital Age, Any Capacitor, Anyln, AnyOut, BodyCom, chipKIT, chipKIT logo, CodeGuard, CryptoAuthentication, CryptoCompanion, CryptoController, dsPICDEM, dsPICDEM.net, Dynamic Average Matching, DAM, ECAN, EtherGREEN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, JitterBlocker, KleerNet, KleerNet logo, Mindi, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, PureSilicon, QMatrix, RightTouch logo, REAL ICE, Ripple Blocker, SAM-ICE, Serial Quad I/O, SMART-I.S., SQI, SuperSwitcher, SuperSwitcher II, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

 $\ensuremath{\mathsf{SQTP}}$ is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2017, Microchip Technology Incorporated, All Rights Reserved. ISBN: 978-1-5224-1638-8



10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD USER'S GUIDE

Table of Contents

Preface		7
	Introduction	
	Document Layout	7
	Conventions Used in This Guide	
	Recommended Reading	
	The Microchip Web Site	
	Customer Support	
	Revision History	
Chapter	1. Product Overview	
•	1.1 Introduction	11
	1.2 What is the 10-Pin MSOP and 8-Pin MSOP Evaluation Board?	
	1.3 10-Pin MSOP and 8-Pin MSOP Evaluation Board Features	12
	1.4 What the 10-Pin MSOP and 8-Pin MSOP Evaluation Board	
	Kit Contains	12
Chapter 2	2. Installation and Operation	
	2.1 Introduction	13
	2.2 Getting Started	14
	2.3 Hardware Description	16
	2.4 10-Pin MSOP and 8-Pin MSOP Evaluation Board Description	19
	2.4.1 Power and Ground	19
	2.4.2 PCB Pads	
	2.4.3 Passive Components - RUx, RDx, RSx, C1 and C2	
	2.4.4 Multiplexing Resistor R1	
	2.4.5 Device Footprints	21
	Interface (Header J1)	22
	2.4.7 Board Interconnect Header (Header J2)	
	2.5 Evaluating the MCP48FEBXX Digital-to-Analog Converters	
	2.6 Evaluating the 45X1 Digital Potentiometers	
	2.6.1 Evaluating the PIC12F1572 Device (XLP PIC Microcontroller)	
	2.7 Creating a System with a PIC12F1572 Microcontroller	20

Appendix A. Schematic and Layouts 31 A.1 Introduction 31 A.2 Schematics and PCB Layout 31 A.3 Board – Schematic 32 A.4 Board – Top Silk Layer 33 A.5 Board – Top Copper and Silk Layer 34 A.6 Board – Top Copper 35 A.7 Board – Bottom Copper Layer 36 A.8 Board – Bottom Copper and Silk Layer 37 A.9 Board – Bottom Silk Layer 38 Worldwide Sales and Service 41

Object of Declaration: 10-Pin MSOP and 8-Pin MSOP Evaluation Board User's Guide

EU Declaration of Conformity

This declaration of conformity is issued by the manufacturer.

The development/evaluation tool is designed to be used for research and development in a laboratory environment. This development/evaluation tool is not a Finished Appliance, nor is it intended for incorporation into Finished Appliances that are made commercially available as single functional units to end users under EU EMC Directive 2004/108/EC and as supported by the European Commission's Guide for the EMC Directive 2004/108/EC (8th February 2010).

This development/evaluation tool complies with EU RoHS2 Directive 2011/65/EU.

This development/evaluation tool, when incorporating wireless and radio-telecom functionality, is in compliance with the essential requirement and other relevant provisions of the R&TTE Directive 1999/5/EC and the FCC rules as stated in the declaration of conformity provided in the module datasheet and the module product page available at www.microchip.com.

For information regarding the exclusive, limited warranties applicable to Microchip products, please see Microchip's standard terms and conditions of sale, which are printed on our sales documentation and available at www.microchip.com.

Signed for and on behalf of Microchip Technology Inc. at Chandler, Arizona, USA.

Rodger Richey

Director of Development Tools

10-Pin MSOP and 8-Pin MSOP Evaluation Board User's Guide
NOTES:



10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD USER'S GUIDE

Preface

NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our web site (www.microchip.com) to obtain the latest documentation available.

Documents are identified with a "DS" number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is "DSXXXXXXXXA", where "XXXXXXXX" is the document number and "A" is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB[®] IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

INTRODUCTION

This chapter contains general information that will be useful to know before using the 10-Pin MSOP and 8-Pin MSOP Evaluation Board. Items discussed in this chapter include:

- Document Layout
- · Conventions Used in This Guide
- · Recommended Reading
- The Microchip Web Site
- Customer Support
- · Revision History

DOCUMENT LAYOUT

This document describes how to use the 10-Pin MSOP and 8-Pin MSOP Evaluation Board. The document is organized as follows:

- Chapter 1. "Product Overview" Important information about the 10-Pin MSOP and 8-Pin MSOP Evaluation Board.
- Chapter 2. "Installation and Operation" Includes instructions on how to get started with this evaluation board.
- Appendix A. "Schematic and Layouts" Shows the schematic and layout diagrams for 10-Pin MSOP and 8-Pin MSOP Evaluation Board.

CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

DOCUMENTATION CONVENTIONS

Description	Represents	Examples	
Arial font:			
Italic characters	Referenced books	MPLAB [®] IDE User's Guide	
	Emphasized text	is the only compiler	
Initial caps	A window	the Output window	
	A dialog	the Settings dialog	
	A menu selection	select Enable Programmer	
Quotes	A field name in a window or dialog	"Save project before build"	
Underlined, Italic text with right angle bracket	A menu path	File>Save	
Bold characters	A dialog button	Click OK	
	A tab	Click the Power tab	
N'Rnnnn A number in verilog format, where N is the total number of digits, R is the radix and n is a digit.		4'b0010, 2'hF1	
Text in angle brackets < > A key on the keyboard		Press <enter>, <f1></f1></enter>	
Courier New font:			
Plain Courier New	Sample source code	#define START	
	Filenames	autoexec.bat	
	File paths	c:\mcc18\h	
	Keywords	_asm, _endasm, static	
	Command-line options	-0pa+, -0pa-	
	Bit values	0, 1	
	Constants	0xff, 'A'	
Italic Courier New	A variable argument	file.o, where file can be any valid filename	
Square brackets []	Optional arguments	mcc18 [options] file [options]	
Curly brackets and pipe character: { }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}	
Ellipses	Replaces repeated text	<pre>var_name [, var_name]</pre>	
	Represents code supplied by user	void main (void) { }	

RECOMMENDED READING

This user's guide describes how to use 10-Pin MSOP and 8-Pin MSOP Evaluation Board. The following Microchip documents are available and recommended as supplemental reference resources:

- MCP48FEB22-E/UN Data Sheet "8-/10-/12-Bit Single/Dual Voltage Output Nonvolatile Digital-to-Analog Converters with SPI Interface" (DS20005429)
- MCP41x1 Data Sheet "7/8-Bit Single/Dual SPI Digital POT with Non-Volatile Memory" (DS22059)
- PIC12F1572 Data Sheet "8-Pin MCU with High-Precision 16-Bit PWMs" (DS40001723)

THE MICROCHIP WEB SITE

Microchip provides online support via our web site at www.microchip.com. This web site is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the web site contains the following information:

- Product Support Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- General Technical Support Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- Business of Microchip Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listings of Microchip sales offices, distributors and factory representatives.

CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- · Local Sales Office
- Field Application Engineer (FAE)
- Technical Support

Customers should contact their distributor, representative or field application engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the web site at:

http://www.microchip.com/support.

REVISION HISTORY

Revision A (April 2017)

Original Release of this Document.

rielace	P	ref	ia	C	e
---------	---	-----	----	---	---

NOTES:



10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD USER'S GUIDE

Chapter 1. Product Overview

1.1 INTRODUCTION

This chapter provides an overview of the 10-Pin MSOP and 8-Pin MSOP Evaluation Board and covers the following topics:

- What is the 10-Pin MSOP and 8-Pin MSOP Evaluation Board?
- 10-Pin MSOP and 8-Pin MSOP Evaluation Board Features
- What the 10-Pin MSOP and 8-Pin MSOP Evaluation Board Kit Contains

1.2 WHAT IS THE 10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD?

The 10-Pin MSOP and 8-Pin MSOP Evaluation Board (Figure 1-1) is a bond-out board that allows the system designer to quickly evaluate the operation of Microchip Technology's devices in any of the following packages:

- MSOP (8- and 10-pin)
- DIP (10-pin)

Note: The 10-Pin MSOP and 8-Pin MSOP Evaluation Board can be used as an MSOP to DIP converter.

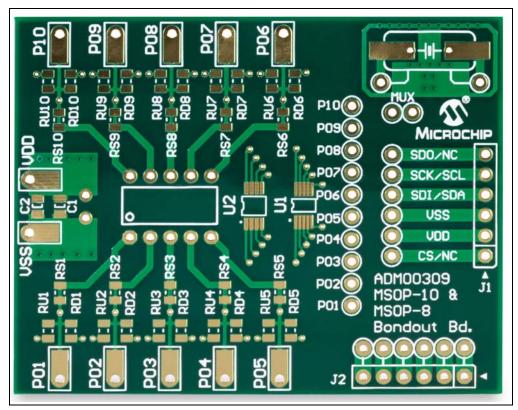


FIGURE 1-1: 10-Pin MSOP and 8-Pin MSOP Evaluation Board Overview.

1.3 10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD FEATURES

The MSOP-10 and MSOP-8 Evaluation Board has the following features:

- · Connection terminals may be either through-hole or surface-mount
- The three types of supported footprints are:
 - MSOP-10
 - MSOP-8
 - DIP-10
- Footprints for optional passive components (SMT [0805] footprint) for:
 - Power supply filtering
 - Device bypass capacitor
 - Filtering
 - Pull-up resistor
 - Pull-down resistor
 - Loading resistor
 - In-line resistor
 - Crystal oscillator capacitors
- Silk-screen area to write specifics of implemented circuit (on back of PCB), such as MCP48FEB22-E/UN.
- PICkitTM Serial Analyzer and/or PICkit Programming (ICSPTM) Header
- · Crystal/ceramic resonator circuit footprints, SMT and THT
- Second 1 x 6 in-line connector header for interfacing to boards with PICkit Serial Analyzer header.

Some of the Microchip family of devices that can be evaluated in the PCB include:

- Digital Potentiometers (Digi-pots)
- DAC (Digital to Analog Converters)
- PIC® microcontrollers
- Op-amps
- Real-time clock/calendar (RTCC) chips
- Temperature sensors
- · Switching regulators

1.4 WHAT THE 10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD KIT CONTAINS?

The 10-Pin MSOP and 8-Pin MSOP Evaluation Board includes the following items:

- 10 blank Printed Circuit Boards (PCB) (ADM00309)
- Important Information Sheet



10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD USER'S GUIDE

Chapter 2. Installation and Operation

2.1 INTRODUCTION

This blank printed circuit board allows 8- and 10-pin devices in the following package types to be installed: MSOP-10, MSOP-8 and DIP-10.

This board is generic so that any of the listed devices may be installed. Refer to the device data sheet, however, for suitability of device evaluation.

As well as the device, other desired passive components (resistors and capacitors) and connection posts may be installed. This allows the board to evaluate a minimum configuration for the device. It also allows the device to easily be jumpered into an existing system.

The board also has two 6-pin headers (1 x 6) whose signals can easily be jumpered to any of the device's pins. This allows one header to be connected for one purpose (programming) and the other for communication to another board. An example would be installing a PIC12F1572 (MSOP-8) in one PCB, where J1 is connected as the ICSP (In-circuit Serial Programming) interface, and J2 in connected to be the communication interface to the second board (PICkit Serial Analyzer interface pinout). The second board has the MCP48FEB22-E/UN device (MSOP-10) where J1 is connected for the PICkit Serial interface. This allows the PIC12F1572 board to be programmed to control the MCP48FEB22-E/UN board.

2.2 GETTING STARTED

The pins of the 8-pin device are tied together with the upper pins of the 10-pin device (1-4 and 7-10); see Table 2-1.

TABLE 2-1: MSOP FOOTPRINTS PIN CORRESPONDENCE

MSOP—10	MSOP—8	Comments
1	1	
2	2	
3	3	
4	4	
5	_	
6	_	
7	5	
8	6	
9	7	
10	8	

The pads' indexes correspond to the MSOP-10 pin indexes. For example, pad P05 is connected to the pin 5 of the MSOP-10 package.

The footprints for the pull-up (RUx), pull-down (RDx) and series (RSx) devices are labeled in relation to the MSOP-10 package. For example, pin 1 is connected to RU1, RD1 and RS1.

This circuit allows each pin to individually have any of the following: a pull-up resistor, a pull-down resistor (or a loading/filtering capacitor) and a series resistor.

Power supply filtering capacitors are connected between the V_{DD} and V_{SS} pads (C1 and C2). The circuit has two 6-pin headers that can be used for PICkit Serial communication as well as PIC ICSP, or to connect two evaluation board together. The signals of the headers need to be jumpered to the appropriate device pins.

Figure 2-1 shows the evaluation board circuit, and an example of connecting signals from the J1 header to the device pins with jumper wire.

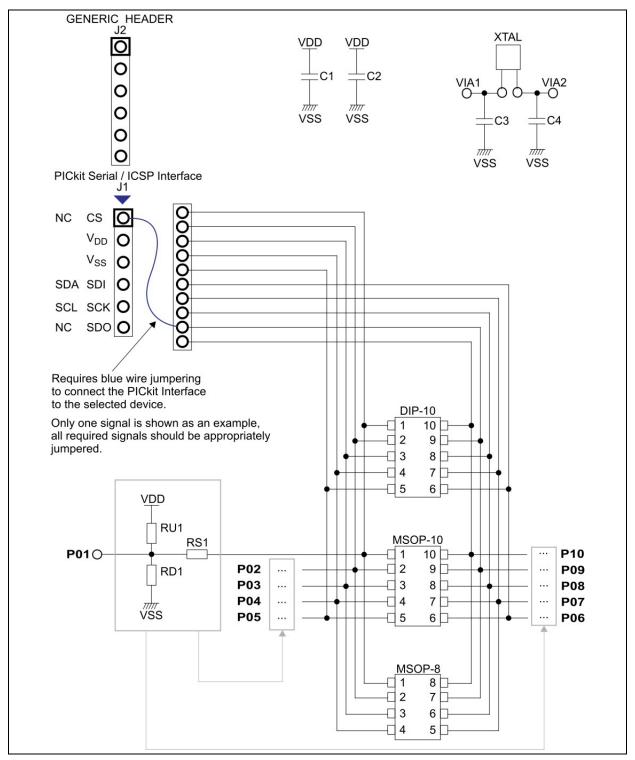


FIGURE 2-1: 10-Pin MSOP and 8-Pin MSOP Evaluation Board Circuit.

2.3 HARDWARE DESCRIPTION

Figure 2-2 and Figure 2-3 show the top side and bottom side of the component layout of the 10-Pin MSOP and 8-Pin MSOP Evaluation Board.

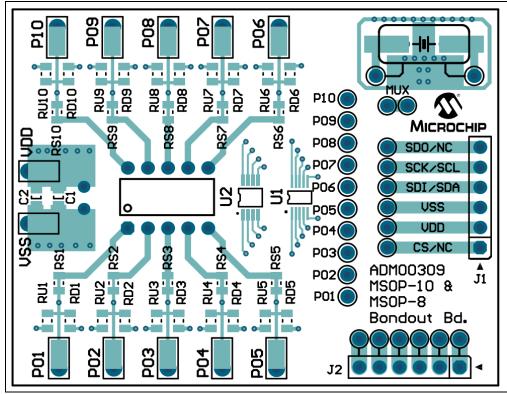


FIGURE 2-2: 10-Pin MSOP and 8-Pin MSOP Evaluation Board - Top View.

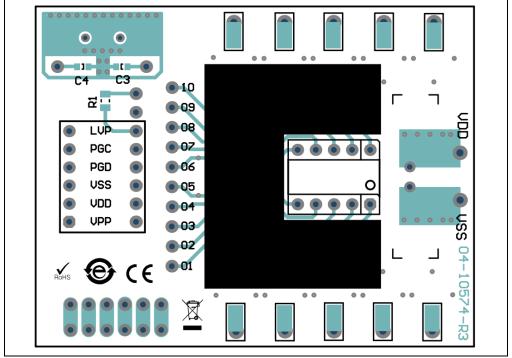


FIGURE 2-3: 10-Pin MSOP and 8-Pin MSOP Evaluation Board - Bottom View.

The 10-Pin MSOP and 8-Pin MSOP Evaluation Board is a four-layer board (62 mm x 48 mm). There are ten connection points/pads that can use either through-hole or surface-mount connector posts.

The pad labeled V_{DD} is connected to the PCB power plane, while the pad labeled V_{SS} is connected to the PCB ground plane. All the passive components that are connected to V_{DD} or V_{SS} are connected to either the power plane or ground plane. The 10 remaining PCB pads correspond to the device pins (e.g., pad 1 connects to pin1).

Each pad has three passive components associated with them: a pull-up resistor, a pull-down resistor and an in line series resistor. The pull-up resistor is always RUx and the pull-down resistor is RDx. The "X" is a numeric value that corresponds to a particular pad (1 to 8). As an example, Pad 5's pull-up resistor is RU5. Capacitor C1 and C2 are the power supply filtering capacitors. For whichever pin is the device's V_{DD} , the RDx component footprint can be used for the device's bypass capacitor. Table 2-1 describes the components.

Two 6-pin header interfaces are available (J1 and J2). Header J1 will typically be used for the PICkit Serial or the PIC In-Circuit Serial Programming (ICSP) interface. Header J2 allows a custom interface for connecting to other boards (see Figure 2-17).

For additional information, refer to Section 2.4.6 "PICkit Serial or In-Circuit Serial Programming (ICSP) Interface (Header J1)". Figure 2-4 shows an example of a Connection between two boards, one acting as a controller for the second one, which contains the device to be evaluated. Not all connections are illustrated.

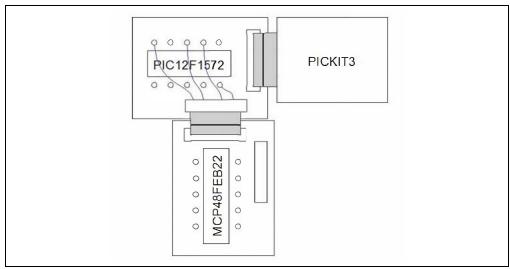


FIGURE 2-4: Example of Two PCB System.

The optional components of the 10-Pin MSOP and 8-Pin MSOP Evaluation Board are displayed in Table 2-2.

TABLE 2-2: OPTIONAL COMPONENTS

Component	Comment
C1, C2	Power supply bypass capacitors
C3, C4	Crystal capacitors
RU1, RU3, RU3, RU4, RU5, RU6, RU7, RU8, RU9, RU10	Pull-up resistors
RD1, RD2, RD2, RD3, RD4, RD5, RD6, RD7, RD8, RD9, RD10	Pull-down resistors
RS1, RS2, RS3, RS4, RS5, RS6, RS7, RS8, RS9, RS10	Series resistors. When using a PIC MCU, placing a resistor in the RSx and a capacitor in the RDx locations creates a low-pass filter which can be used to generate a variable output voltage if connected to a PWM-capable pin.
R1	Used in case of devices that have multiplexed SDI/SDO pins, for example the MCP45x1
Y1	Used to generate a clock signal
J1	PICkit Serial/ICSP header
J2	Generic 6-pin header, used to connect two evaluation boards together

- Note 1: Whichever pin is the device's V_{DD} pin, that corresponding RDx footprint can be used for the device's bypass capacitor. Example: If pin 8 is the device's V_{DD} pin, then install the bypass capacitor in the RD8 footprint.
 - **2:** All passive components use the surface mount [0805] footprint.

2.4 10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD DESCRIPTION

This section describes the working principles and limitations that should be taken into account when using the 10-Pin MSOP and 8-Pin MSOP Evaluation Board.

2.4.1 Power and Ground

The 10-Pin MSOP and 8-Pin MSOP Evaluation Board has a V_{DD} pad and a V_{SS} pad. These pads can have connection posts installed that allows easy connection to the power (V_{DD}) and ground (V_{SS}) planes. The layout allows either through-hole or surface-mount connectors.

The power and ground planes are connected to the appropriate passive components on the PCB (such as power plane to RUx and ground plane to RDx components).

2.4.2 PCB Pads

For each package pin (pins 1 to 10), there is a PCB pad (pads 1 to 10). The device has power pins (V_{DD}) and ground pins (V_{SS}). To ease connections on the PCB, vias to the power and ground plane have been installed close to each PCB pad. This allows any pad to be connected to the power or ground plane, so when power is connected to the V_{DD} and V_{SS} pads, it is also connected to the appropriate device pin (see Figure 2-5).

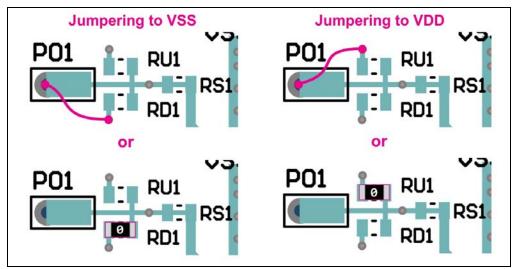


FIGURE 2-5: Connecting the PCB Pad to Either the VDD or VSS Pins.

The series components (RSx) can be used in conjunction with the RDx components to create passive filters. For example, when using a PIC microcontroller, one could generate an analog signal by low pass-filtering the PWM signal coming from a digital output pin. In order to use the RSx footprint, the PCB trace passing through the middle of the footprint should be cut using a sharp tool.

See Figure 2-6 to observe how to create an RC output filter by cutting the trace between the two Pads for component RS6 and then installing the desired resistor at that location. The capacitor is then installed at component RD6.

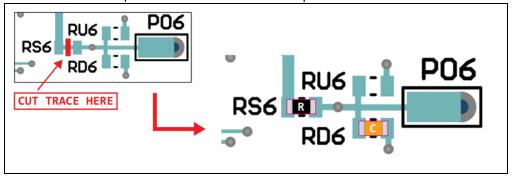


FIGURE 2-6: Creating an RC output filter

2.4.3 Passive Components - RUx, RDx, RSx, C1 and C2

The footprints for these components allow maximum flexibility in the use of this PCB to evaluate a wide range of devices. The purpose of these components may vary depending on the device under evaluation and how it is to be used in the desired circuit. Refer to the device data sheet for the recommended components that should be used when evaluating that device.

- Component RUx allows a pull-up resistor to be installed for the device pin.
- Component RDx allows a pull-down resistor or a a capacitive load/filter to be installed for the device pin.
- Component RSx allows a series component to be fitted.
- Component C1 and C2 allows power supply filtering capacitors to be installed.

2.4.4 Multiplexing Resistor R1

Due to the number of pins available in a specific package, some digital potentiometers multiplex together the SDI and SDO signals. It is therefore necessary to connect the two signal lines coming from the host to a single pin on the device. The digital potentiometer needs a way to overdrive the host controller's SDO signal.

Figure 2-7 shows an example connection, from the MCP45x1 data sheet. The R1 value would need to be determined based on the V_{IH} , V_{OH} and V_{OL} levels of the two devices.

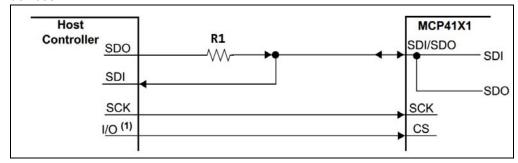


FIGURE 2-7: Multiplexed SDI/SDO Connection Example.

2.4.5 Device Footprints

This section describes the characteristics of the component footprints so that you are better able to determine if the desired component(s) are compatible with the board.

2.4.5.1 MSOP-10

The 10-pin MSOP footprint has been laid out for packages that have a typical pitch of 0.50 BSC, a maximum lead width of 0.41 mm, and a maximum molded package width of 3 BSC. Ten-lead (or less) MSOP packages that meet these characteristics should be able to be used with this board.

2.4.5.2 MSOP-8

The 8-pin MSOP footprint has been laid out for packages that have a typical pitch of 0.65 mm (BSC), a maximum lead width of 0.4mm, and a maximum molded package width of 3 mm BSC. Eight-lead MSOP packages that meet these characteristics should be able to be used with this board.

2.4.5.3 DIP-10

The 10-pin DIP footprint has been laid out for packages that have a typical pitch of 100 mil (BSC), a maximum lead width of 22 mil and a molded package width of 600 mil.

2.4.5.4 PASSIVE COMPONENTS

All passive components (R1, RUx, RDx, RSx and Cx) use a surface mount [0805] footprint. Any component that has a compatible footprint can be used with this board.

2.4.5.5 HEADERS (1 X 6)

The headers have a typical pitch of 100 mil (BSC). The headers are designed to be compatible with the PICkit Serial Analyzer and PICkit 3 Programmer.

2.4.6 PICkit Serial or In-Circuit Serial Programming (ICSP) Interface (Header J1)

Figure 2-8 shows the interface connection of the J1 Header. The V_{DD} and V_{SS} signals are connected to the appropriate power or ground plane. The other four signals are open and can be easily jumpered to any of the 10 P1 through P10 connection points.

The top layer silk screen indicates the common PICkit Serial signal names, while the bottom layer silk screen indicates the ICSP signal names.

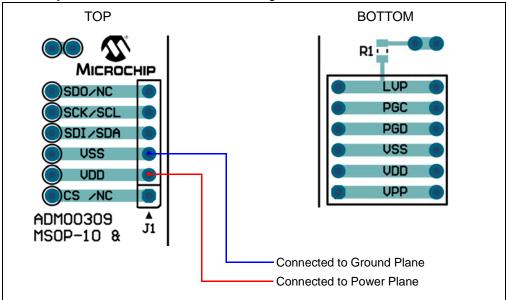


FIGURE 2-8: PICkit Serial / ICSP Interface Connections.

2.4.6.1 PICKIT SERIAL INTERFACE

Table 2-3 shows the pin number assignment for the different signals for each of the supported interface protocols (SPI, I²C, and others).

TABLE 2-3: PICKIT SERIAL HEADER SIGNALS

Pin	PICkit Serial Header Signal					
Number	SPI	I ² C	USART	Microwire	LIN	
1	CS	_	TX	CS	TX	
2	V_{DD}	V_{DD}	V_{DD}	V_{DD}	_	
3	V_{SS}	V_{SS}	V _{SS}	V _{SS}	V_{SS}	
4	SDI	SDA	_	SDI	CS/WAKE	
5	SCK	SCL	_	SCK	FAULT/TXE	
6	SDO	_	RX	SDO	RX	

2.4.6.2 ICSP INTERFACE

The ICSP interface allows a PIC MCU device to be programmed with programmers that support this interface, such as the PICkit 3 programmer (Part Number: PG164130). Table 2-4 shows the pin number assignment for the ICSP signals.

TABLE 2-4: ICSP HEADER SIGNALS

Pin Number	ICSP Signal	Comments
1	VPP	High Voltage Signal
2	VDD	_
3	VSS	_
4	PCD	ICSP™ Data
5	PCC	ICSP™ Clock
6	_	

2.4.7 Board interconnect header (Header J2)

Figure 2-9 shows the interface connection of J2 Header. This header allows two ADM00309 boards to be inter-connected, which permits a microcontroller from one of the boards to be used as a controller for the device on the second board. The six connector signals are routed out to six holes, which should be wired to the appropriate pins.

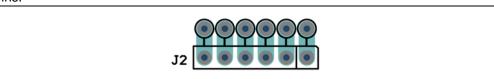


FIGURE 2-9: J2 Header Connections.

2.5 EVALUATING THE MCP48FEBXX DIGITAL-TO-ANALOG CONVERTERS

The MCP48FEBXX are single and dual-channel, 8-bit, 10-bit, and 12-bit, buffered voltage output Digital-to-Analog Converters (DAC) with nonvolatile memory and an SPI serial interface.

The DAC reference voltage can be selected as the VREF pin, the device V_{DD} or the internal band gap voltage. When V_{DD} is selected, V_{DD} is connected internally to the DAC reference circuit. When the V_{REF} pin is used, the output buffer's gain to can be selected to be 1x or 2x. When the gain is 2x, the V_{REF} pin voltage should be limited to a maximum of $V_{DD/2}$.

Figure 2-10 shows the pinouts of the MCP48FEBXX family.

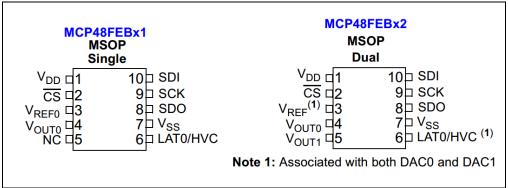


FIGURE 2-10: MCP48FEBXX Family Pinout.

Figure 2-11 represents PICkit Serial/ICSP Header and Example Connections for MCP48FEBXX.

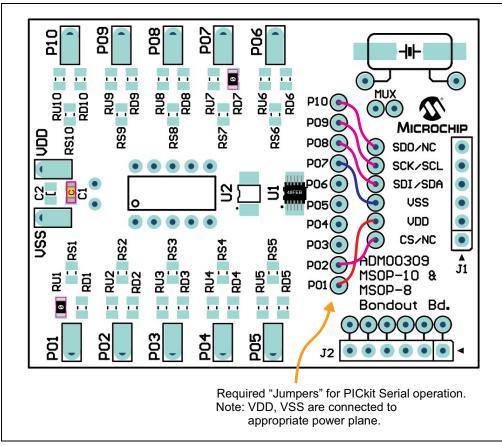


FIGURE 2-11: MCP48FEBXX PICkit Serial Header Example Connections.

Table 2-5 shows other DACs that are compatible with this evaluation board.

TABLE 2-5: SUPPORTED DIGITAL-TO ANALOG CONVERTERS

Device	MSOP-8	MSOP-10	Comments
MCP4801	Y	_	
MCP4802	Y	_	
MCP48FEB01	_	Y	
MCP48FEB02	_	Y	
MCP48FVB01	_	Y	
MCP48FVB02	_	Υ	
MCP4901	Υ	_	
TC1320	Υ	_	
MCP4811	Y	_	
MCP4812	Υ		
MCP48FEB11	_	Υ	
MCP48FEB12	_	Υ	
MCP48FVB11	_	Υ	
MCP48FVB12	_	Υ	
MCP4911	Υ	_	
TC1321	Υ		
MCP4728	_	Υ	
MCP4821	Υ	_	
MCP4822	Υ	_	
MCP48FEB21	_	Υ	
MCP48FEB22	_	Υ	
MCP48FVB21	_	Υ	
MCP48FVB22	_	Υ	
MCP4921	Υ	_	

2.6 EVALUATING THE 45X1 DIGITAL POTENTIOMETERS

The MCP45x1 is a family of digital potentiometers that offers 7- and 8-bit resistor networks as well as volatile and non-volatile memories options, in a MSOP 8-pin package. The MCP45X1 8-pin package is shown in Figure 2-12. The family works with an I²C serial interface with speeds of 100 kHz, 400 kHz and 3.4 MHz. The PICkit Serial Analyzer can be used to communicate with the devices. The proper connections are being shown in Figure 2-13. Other Digital Potentiometers that are supported by this evaluation board are shown in Table 2-6.

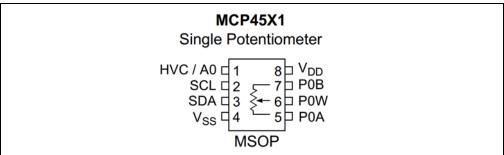


FIGURE 2-12: MCP45x1 Family Pinout.

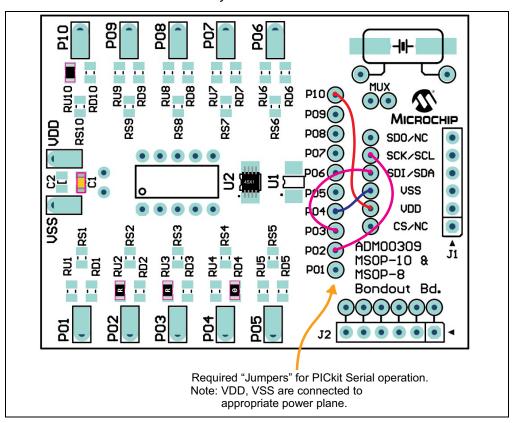


FIGURE 2-13: MCP45x1 PICkit Serial Header Example Connections.

TABLE 2-6: SUPPORTED DIGITAL POTENTIOMETER FAMILIES

Device	MSOP-8	MSOP-10	Comments
MCP413x	Y	_	
MCP41x2	Y	_	
MCP42x2	_	Y	
MCP45x1	Y	_	
MCP45x2	Y	_	
MCP46x2	_	Y	

2.6.1 Evaluating the PIC12F1572 Device (XLP PIC Microcontroller)

The PIC12F1572 is a nanowatt XLP PIC Microcontroller that is offered in an 8-lead MSOP package. This device can be installed on the top side of the PCB. Figure 2-14 shows the PIC12F1572's pin out, while Figure 2-15 shows an example connection for the ICSP interface and the connection of the crystal circuit to the secondary oscillator.

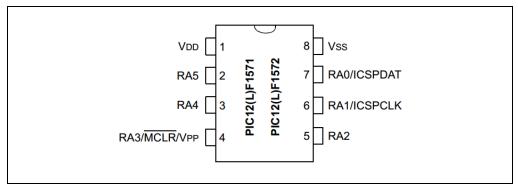


FIGURE 2-14: PIC12F1572 Pinout.

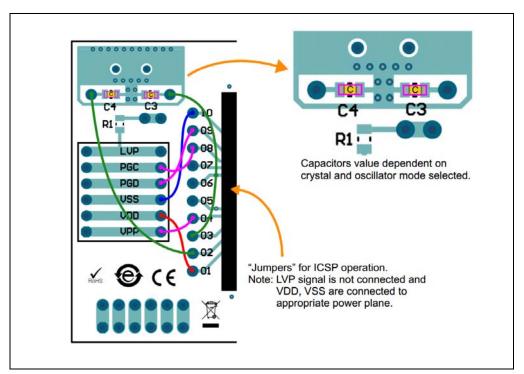


FIGURE 2-15: PIC12F1572 ICP Header Example Connections Bottom View.

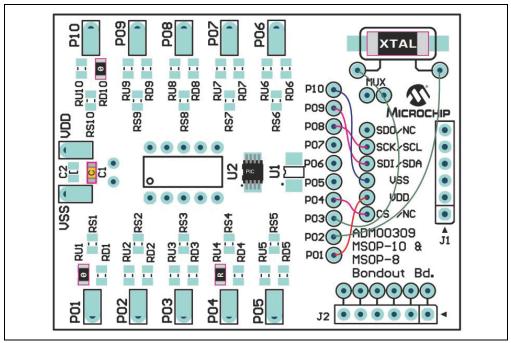


FIGURE 2-16: PIC12F1572 ICP Header Example Connections Top View.

Other nanowatt XLP PIC Microcontrollers that are supported by this evaluation board are shown in Table 2-7.

TABLE 2-7: SUPPORTED MSOP-8 PIC MICROCONTROLLERS

Device	Family/Core	Comments
PIC12F508	Baseline 8-bit	
PIC12F509	Baseline 8-bit	
PIC12F510	Baseline 8-bit	
PIC12F609	Mid-Range 8-bit	
PIC12F615	Mid-Range 8-bit	
PIC12F1501	Enhanced Mid-Range	
PIC12F1571	Enhanced Mid-Range	
PIC12F1572	Enhanced Mid-Range	
PIC12F617	Mid-Range 8-bit	
PIC12F519	Baseline 8-bit	
PIC12LF1552	Mid-Range 8-bit	

2.7 CREATING A SYSTEM WITH A PIC12F1572 MICROCONTROLLER AND A MCP48FEB22 DAC

The following image illustrates how to connect two ADM00309 boards in order to obtain a functional system. One board hosts a PIC12Fxxxx, which is programmed using a PicKIT3 connected to J1, and controls a second board, which has a MCP48FEB22-E/UN device installed. The J2 connector of the PIC board is used as a serial communication port, being connected to J1 of the DAC board.

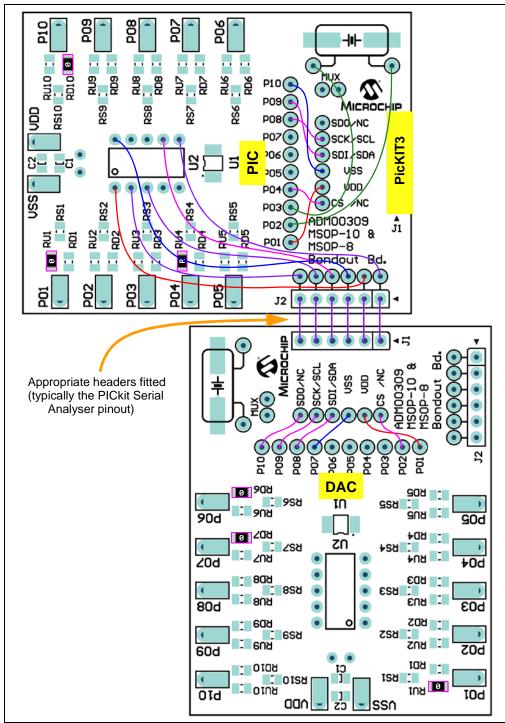


FIGURE 2-17: Creating a Two-Board Evaluation System.

Installation	and O	peration
--------------	-------	----------

		ind Operation
NOTES:		





10-PIN MSOP AND 8-PIN MSOP EVALUATION BOARD USER'S GUIDE

Appendix A. Schematic and Layouts

A.1 INTRODUCTION

This appendix contains the following schematics and layouts for the 10-Pin MSOP and 8-Pin MSOP Evaluation Board:

- Board Schematic
- Board Top Silk Layer
- Board Top Copper and Silk Layer
- Board Top Copper
- Board Bottom Copper Layer
- Board Bottom Copper and Silk Layer

A.2 SCHEMATICS AND PCB LAYOUT

Section A.3 "Board – Schematic" shows the schematic of the 10-Pin MSOP and 8-Pin MSOP Evaluation Board.

Section A.4 "Board – Top Silk Layer" shows the layout for the top layer of the 10-Pin MSOP and 8-Pin MSOP Evaluation Board. The layer order is shown in Figure A-1.



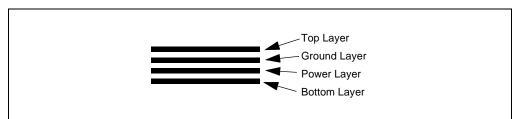


FIGURE A-1: Layer Order.


A.3 BOARD - SCHEMATIC

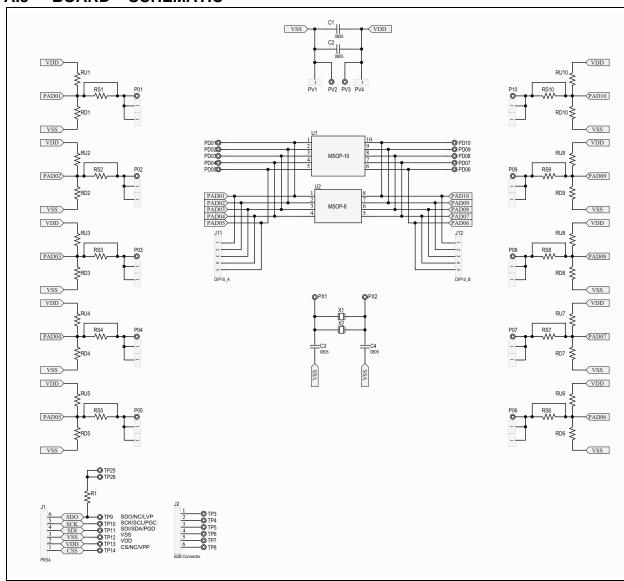


A.4 BOARD – TOP SILK LAYER

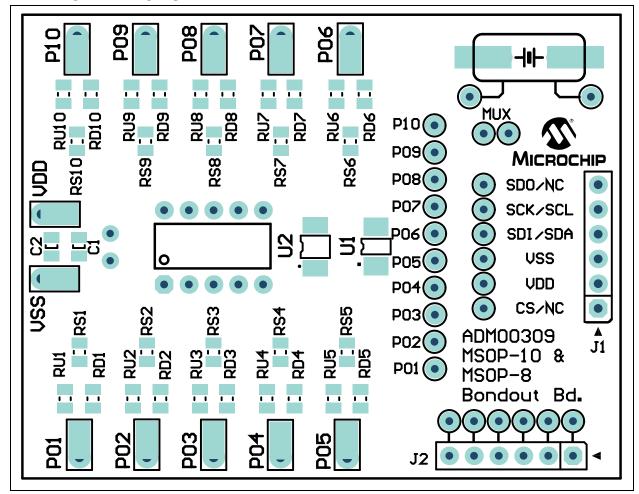


A.5 BOARD - TOP COPPER AND SILK LAYER

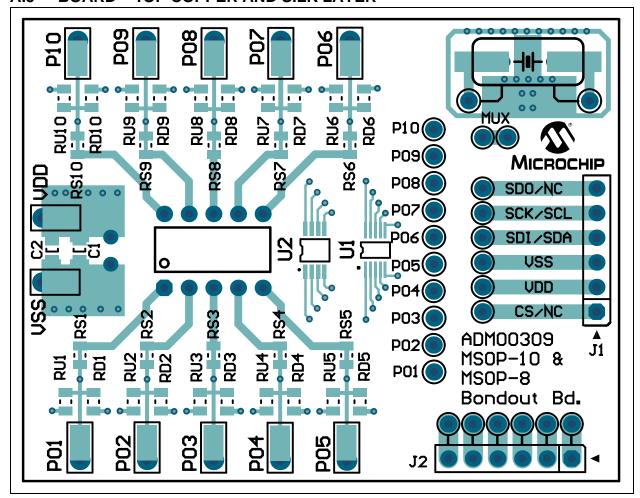


A.6 BOARD – TOP COPPER

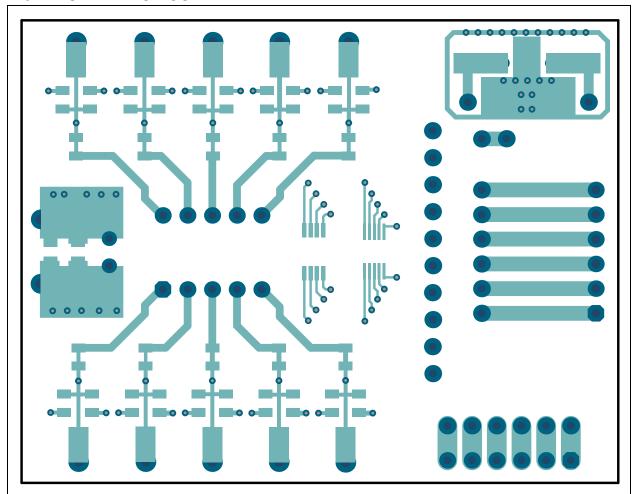


A.7 BOARD - BOTTOM COPPER LAYER

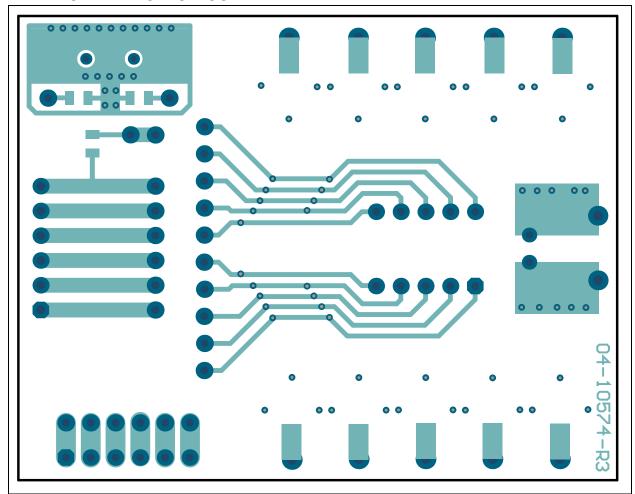

A.8 BOARD - BOTTOM COPPER AND SILK LAYER

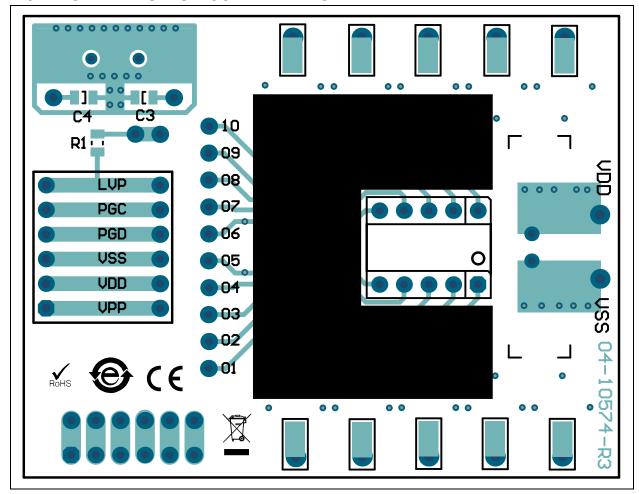

A.9 BOARD – BOTTOM SILK LAYER

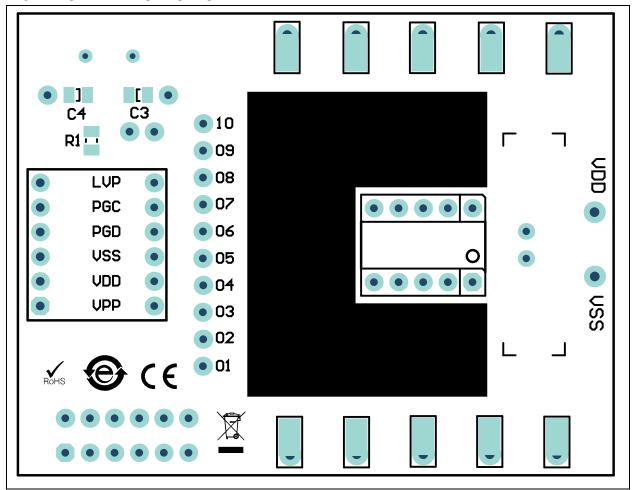



Worldwide Sales and Service

AMERICAS

Corporate Office 2355 West Chandler Blvd.

Chandler, AZ 85224-6199 Tel: 480-792-7200 Fax: 480-792-7277 Technical Support:

http://www.microchip.com/

support

Web Address: www.microchip.com

Atlanta Duluth, GA

Tel: 678-957-9614 Fax: 678-957-1455

Austin, TX Tel: 512-257-3370

Boston

Westborough, MA Tel: 774-760-0087 Fax: 774-760-0088

Chicago

Itasca, IL Tel: 630-285-0071 Fax: 630-285-0075

Dallas

Addison, TX Tel: 972-818-7423 Fax: 972-818-2924

Detroit Novi, MI

Tel: 248-848-4000

Houston, TX Tel: 281-894-5983

Indianapolis

Noblesville, IN Tel: 317-773-8323 Fax: 317-773-5453 Tel: 317-536-2380

Los Angeles

Mission Viejo, CA Tel: 949-462-9523 Fax: 949-462-9608 Tel: 951-273-7800

Raleigh, NC

Tel: 919-844-7510

New York, NY Tel: 631-435-6000

San Jose, CA Tel: 408-735-9110 Tel: 408-436-4270

Canada - Toronto Tel: 905-695-1980 Fax: 905-695-2078

ASIA/PACIFIC

Asia Pacific Office

Suites 3707-14, 37th Floor Tower 6, The Gateway Harbour City, Kowloon

Hong Kong

Tel: 852-2943-5100 Fax: 852-2401-3431

Australia - Sydney Tel: 61-2-9868-6733

Fax: 61-2-9868-6755

China - Beijing Tel: 86-10-8569-7000 Fax: 86-10-8528-2104

China - Chengdu Tel: 86-28-8665-5511 Fax: 86-28-8665-7889

China - Chongqing Tel: 86-23-8980-9588 Fax: 86-23-8980-9500

China - Dongguan Tel: 86-769-8702-9880

China - Guangzhou

Tel: 86-20-8755-8029 **China - Hangzhou** Tel: 86-571-8792-8115

Fax: 86-571-8792-8116

China - Hong Kong SAR
Tel: 852-2943-5100

Fax: 852-2401-3431

China - Nanjing

Tal: 86-25-8473-2460

Tel: 86-25-8473-2460 Fax: 86-25-8473-2470

China - Qingdao Tel: 86-532-8502-7355 Fax: 86-532-8502-7205

China - Shanghai Tel: 86-21-3326-8000

Fax: 86-21-3326-8021
China - Shenyang

Tel: 86-24-2334-2829 Fax: 86-24-2334-2393

China - Shenzhen Tel: 86-755-8864-2200 Fax: 86-755-8203-1760

China - Wuhan Tel: 86-27-5980-5300 Fax: 86-27-5980-5118

China - Xian Tel: 86-29-8833-7252 Fax: 86-29-8833-7256

ASIA/PACIFIC

China - Xiamen

Tel: 86-592-2388138 Fax: 86-592-2388130

China - Zhuhai Tel: 86-756-3210040

Fax: 86-756-3210049 India - Bangalore Tel: 91-80-3090-4444 Fax: 91-80-3090-4123

India - New Delhi Tel: 91-11-4160-8631 Fax: 91-11-4160-8632

India - Pune Tel: 91-20-3019-1500

Japan - Osaka Tel: 81-6-6152-7160 Fax: 81-6-6152-9310

Japan - Tokyo Tel: 81-3-6880- 3770 Fax: 81-3-6880-3771

Korea - Daegu Tel: 82-53-744-4301 Fax: 82-53-744-4302

Korea - Seoul Tel: 82-2-554-7200 Fax: 82-2-558-5932 or 82-2-558-5934

Malaysia - Kuala Lumpur Tel: 60-3-6201-9857 Fax: 60-3-6201-9859

Malaysia - Penang Tel: 60-4-227-8870 Fax: 60-4-227-4068

Philippines - Manila Tel: 63-2-634-9065 Fax: 63-2-634-9069

Singapore

Tel: 65-6334-8870 Fax: 65-6334-8850

Taiwan - Hsin Chu Tel: 886-3-5778-366 Fax: 886-3-5770-955

Taiwan - Kaohsiung Tel: 886-7-213-7830

Taiwan - Taipei Tel: 886-2-2508-8600 Fax: 886-2-2508-0102

Thailand - Bangkok Tel: 66-2-694-1351 Fax: 66-2-694-1350

EUROPE

Austria - Wels

Tel: 43-7242-2244-39 Fax: 43-7242-2244-393

Denmark - Copenhagen Tel: 45-4450-2828

Fax: 45-4485-2829

Finland - Espoo Tel: 358-9-4520-820

France - Paris

Tel: 33-1-69-53-63-20 Fax: 33-1-69-30-90-79

France - Saint Cloud Tel: 33-1-30-60-70-00

Germany - Garching Tel: 49-8931-9700 **Germany - Haan** Tel: 49-2129-3766400

Germany - Heilbronn Tel: 49-7131-67-3636

Germany - Karlsruhe Tel: 49-721-625370

Germany - Munich Tel: 49-89-627-144-0 Fax: 49-89-627-144-44

Germany - Rosenheim Tel: 49-8031-354-560

Israel - Ra'anana

Tel: 972-9-744-7705

Italy - Milan Tel: 39-0331-742611 Fax: 39-0331-466781

Italy - Padova Tel: 39-049-7625286

Netherlands - Drunen Tel: 31-416-690399 Fax: 31-416-690340

Norway - Trondheim Tel: 47-7289-7561

Poland - Warsaw Tel: 48-22-3325737

Romania - Bucharest

Spain - Madrid Tel: 34-91-708-08-90

Fax: 34-91-708-08-91

Sweden - Gothenberg
Tel: 46-31-704-60-40

Sweden - Stockholm Tel: 46-8-5090-4654

UK - Wokingham Tel: 44-118-921-5800 Fax: 44-118-921-5820