



Chapter 4 ESP32_HC_SR04

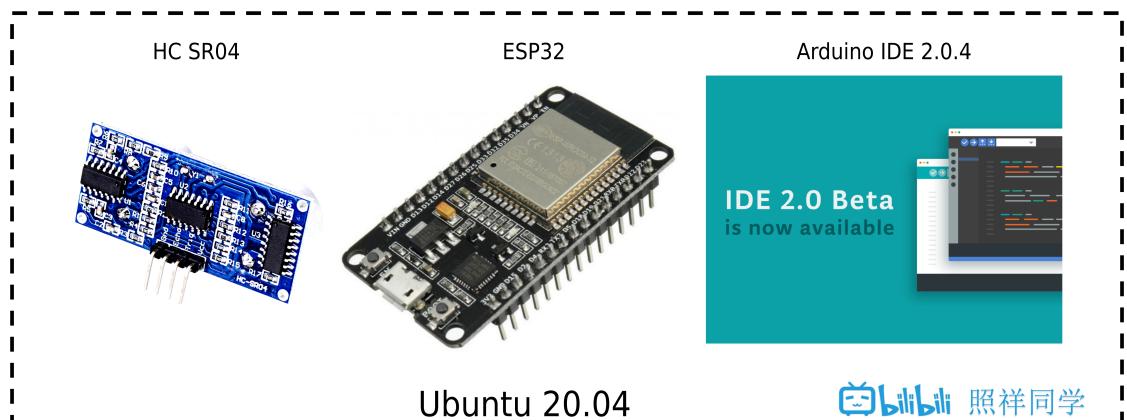

Videos from Bilibili 照祥同学: [第四节：使用ESP32获取超声波传感器的测量值](#)

First : Connect HC_SR04 Sensor with ESP32

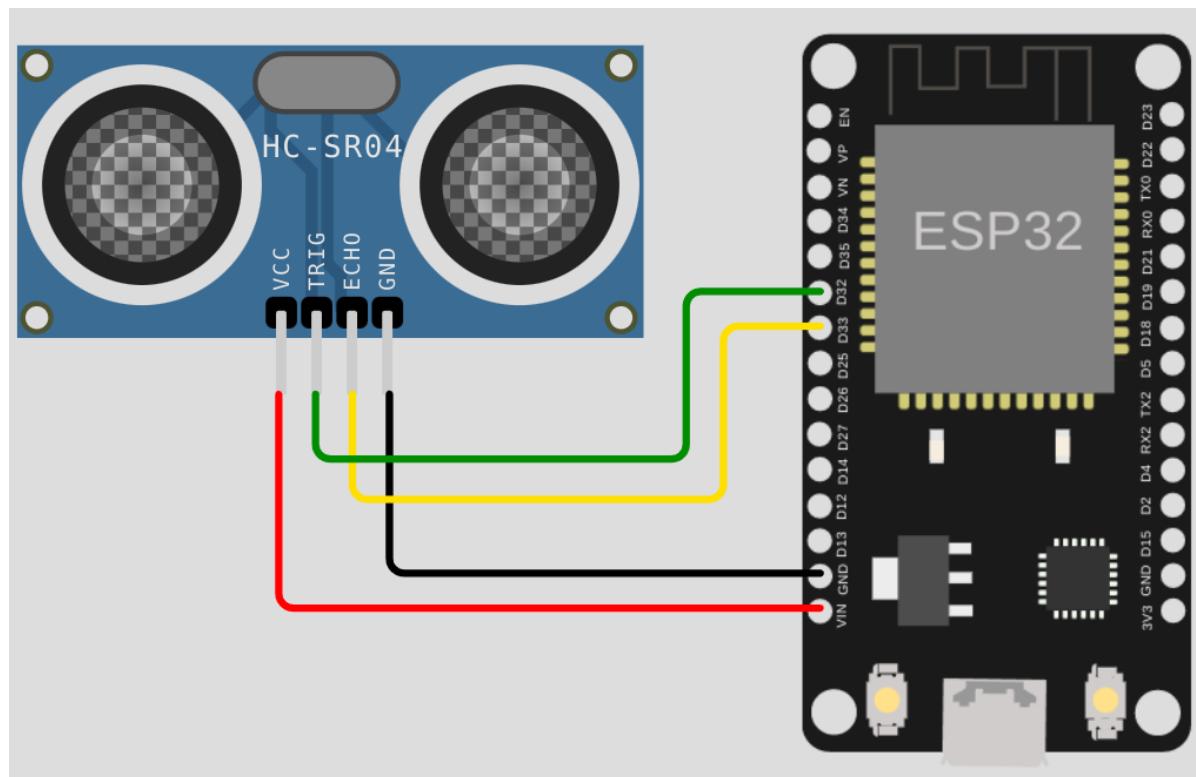

接线说明:

超声波传感器正极 + (红色)	<----->	ESP32_Vin (5.0V)
超声波传感器负极 - (黑色)	<----->	ESP32_Gnd (0V)
声波发生引脚 TRIG (绿色)	<----->	ESP32_GPIO32 (Output)
声波接收引脚 ECHO (黄色)	<----->	ESP32_GPIO33 (Input)

update by zhaoxiangli 2023.04.16