




- 1、如果使用USB调试、烧录时,需要插上跳冒;
- 2、如果是使用底板<杜邦线>跳Uart,不能插入跳冒。

| нод | | Jiangsu Hop | Jiangsu HopeRun Software Co., Ltd | | | | | | |
|--|----|-------------|-----------------------------------|---|----|-------|--|--|--|
| Title HiHope Hi3861_NodeMCU_CH430G Board | | | | | | | | | |
| Size | A3 | *** | | | | VER A | | | |
| Date | | 2020/05/15 | Sheet | 1 | of | 2 | | | |

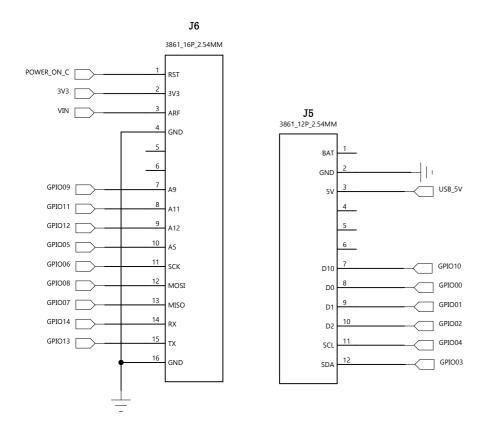

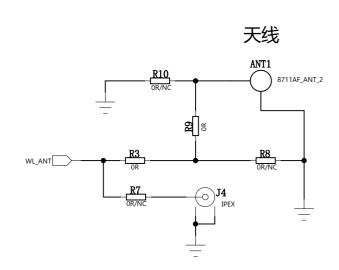

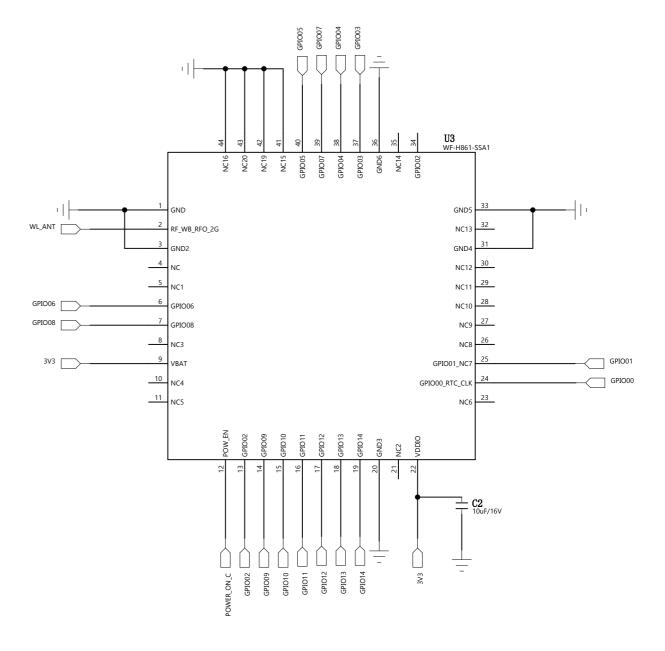

| НОР | - | 1 | | C. | | | | | | |
|-------|--------------------------------------|-------------|-----------------------------------|----|----|-------|--|--|--|--|
| i | · · | Jiangsu Hop | Jiangsu HopeRun Software Co., Ltd | | | | | | | |
| Title | e HiHope Hi3861_NodeMCU_CH430G Board | | | | | | | | | |
| Size | A3 | *** | | | | VER A | | | | |
| Date | | 2020/05/15 | Sheet | 2 | of | 2 | | | | |