HEDS-9922 PRGEVB

Troubleshooting guide

Broadcom Proprietary and Confidential. Copyright © 2020 Broadcom. All Rights Reserved. The term “Broadcom” refers to Broadcom Inc. and/or its subsidiaries.

Setup verification

Launch the installed software and connect the HEDS-9922 kit.

Check on the status message on the bottom left corner.

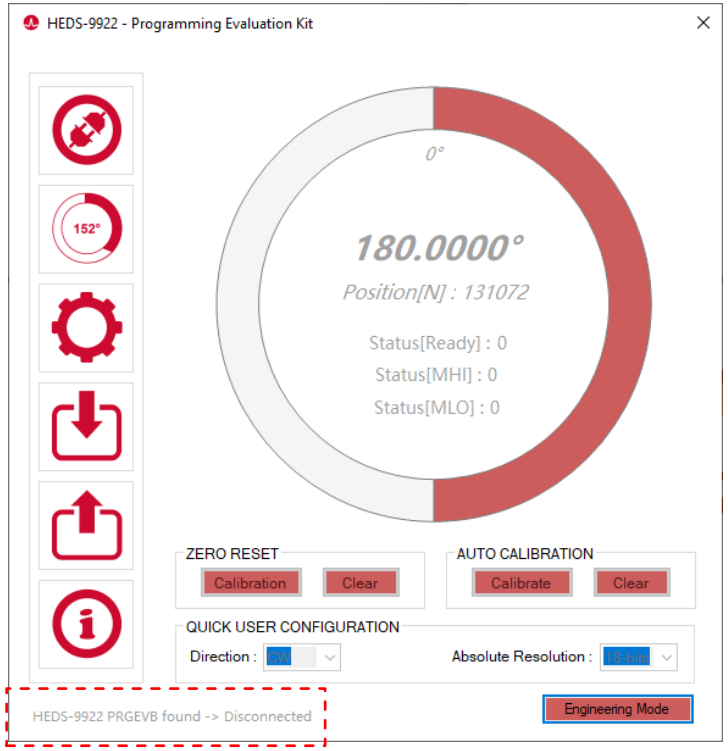

The status should displayed as “found”

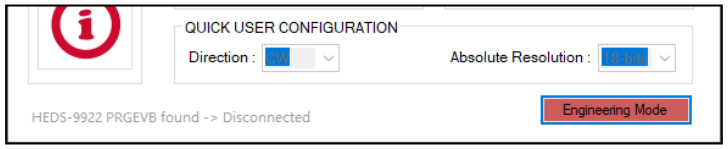

If the status displayed as “not found”, check the hardware status under device manager.

Under Ports (COM & LPT),
STMicroelectronics STLink Virtual COM Port

Under Universal Serial Bus devices,
ST-Link Debug

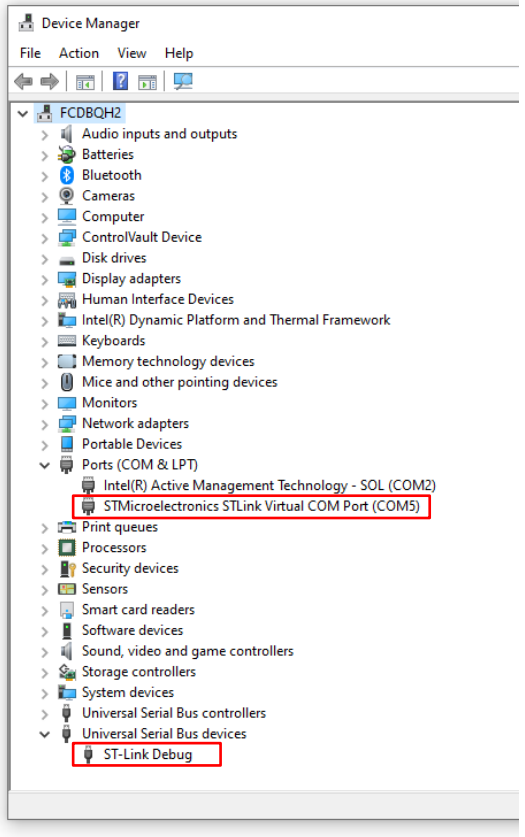

 Broadcom Proprietary and Confidential. Copyright © 2020 Broadcom. All Rights Reserved. The term “Broadcom” refers to Broadcom Inc. and/or its subsidiaries.

Setup verification

If the USB driver is not recognize, please download it from link below

https://www.st.com/content/st_com/en/products/development-tools/software-development-tools/stm32-software-development-tools/stm32-utilities/stsw-link009.html

Click on the Get Software button,

Once downloaded, run the installation files and follow the on-screen

(select accroding to system 32-bit or 64-bit)

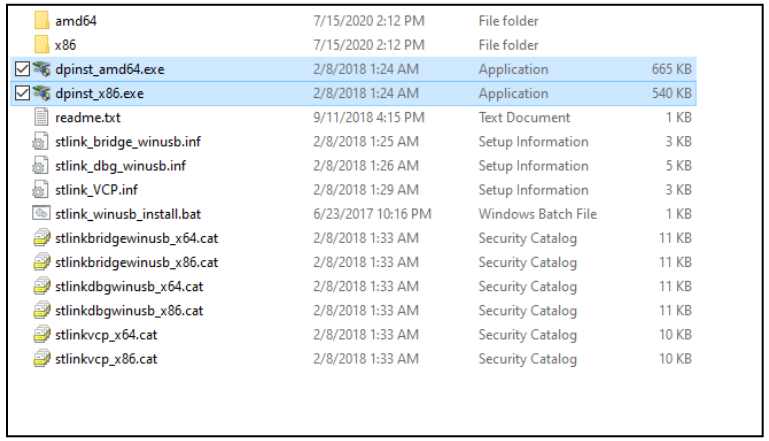

amd64	7/15/2020 2:12 PM	File folder	
x86	7/15/2020 2:12 PM	File folder	
dpinst_amd64.exe	2/8/2018 1:24 AM	Application	665 KB
dpinst_x86.exe	2/8/2018 1:24 AM	Application	540 KB
readme.txt	9/11/2018 4:15 PM	Text Document	1 KB
stlink_bridge_winusb.inf	2/8/2018 1:25 AM	Setup Information	3 KB
stlink_dbg_winusb.inf	2/8/2018 1:26 AM	Setup Information	5 KB
stlink_VCP.inf	2/8/2018 1:29 AM	Setup Information	3 KB
stlink_winusb_install.bat	6/23/2017 10:16 PM	Windows Batch File	1 KB
stlinkbridgewinusb_x64.cat	2/8/2018 1:33 AM	Security Catalog	11 KB
stlinkbridgewinusb_x86.cat	2/8/2018 1:33 AM	Security Catalog	11 KB
stlinkdbgwinusb_x64.cat	2/8/2018 1:33 AM	Security Catalog	11 KB
stlinkdbgwinusb_x86.cat	2/8/2018 1:33 AM	Security Catalog	11 KB
stlinkvcp_x64.cat	2/8/2018 1:33 AM	Security Catalog	10 KB
stlinkvcp_x86.cat	2/8/2018 1:33 AM	Security Catalog	10 KB

 Broadcom Proprietary and Confidential. Copyright © 2020 Broadcom. All Rights Reserved. The term “Broadcom” refers to Broadcom Inc. and/or its subsidiaries.

Operation

When the setup is verified, connect the HEDS-9922 kit to AEAT-9922 eval board.
Launch the software and click on the connection button.

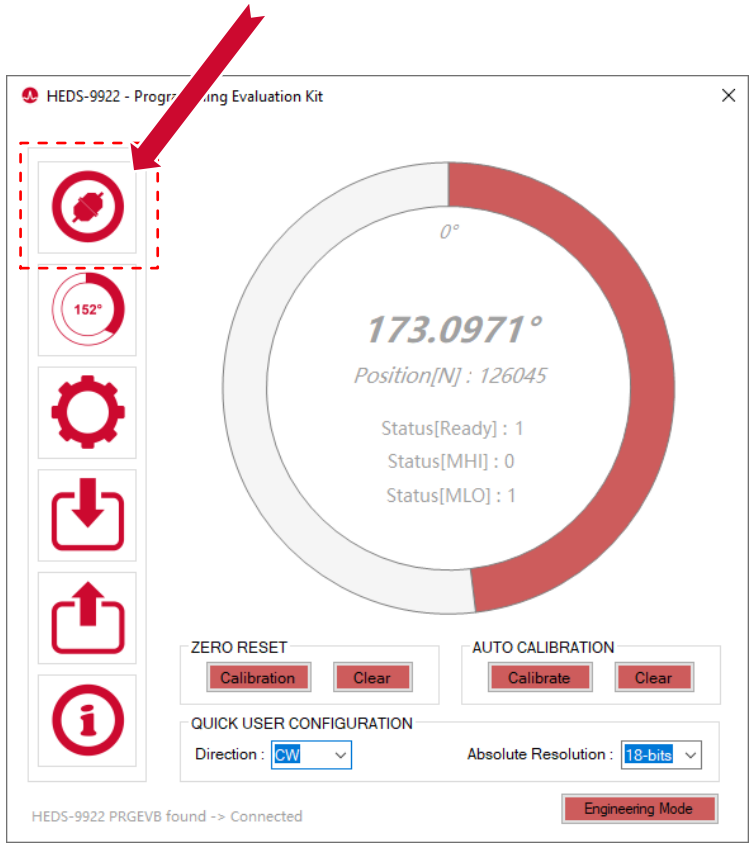

The status will be displayed as
HEDS-9922 PRGEVB found -> Connected

The software interface will be active.

Note:

- LD1 permanent (USB debugger)
- LD2 blinking (communication)
- LD3 permanent on (supply power to sensor)

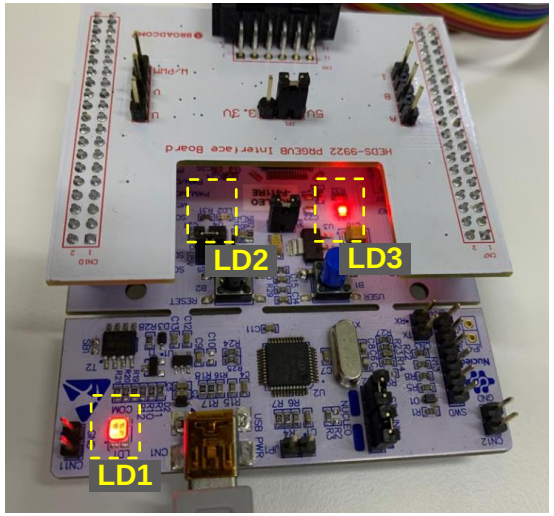

 Broadcom Proprietary and Confidential. Copyright © 2020 Broadcom. All Rights Reserved. The term “Broadcom” refers to Broadcom Inc. and/or its subsidiaries.

Hardware connection

Overall setup connection

PC USB > Programming board > Eval board

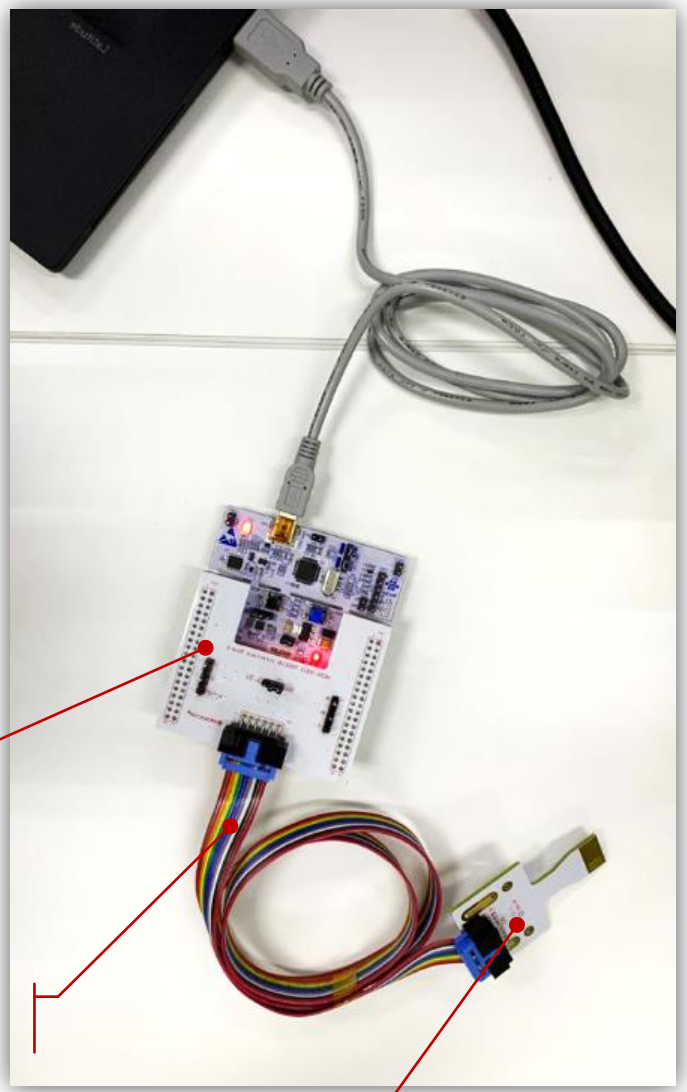

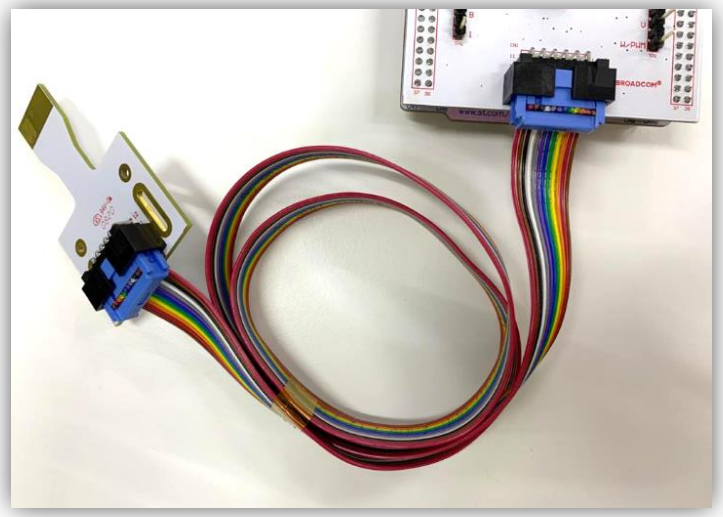

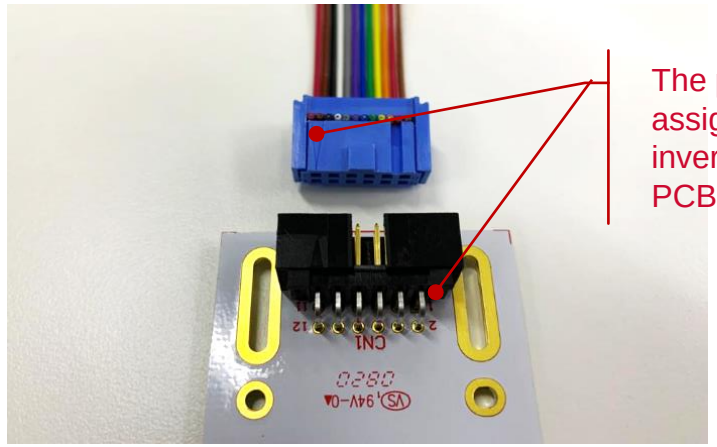

 Broadcom Proprietary and Confidential. Copyright © 2020 Broadcom. All Rights Reserved. The term “Broadcom” refers to Broadcom Inc. and/or its subsidiaries.