

Contents of Quick Guide

Quick Guide	3–2
General	3–2
Memory	3–2
Menu	3–2
Menu Functions (accessible by menu or shortcut)	3_3

Copyright © Nokia Mobile Phones

Quick Guide

General

Make a call
Area code, phone number

End a callAnswer a call

Clear the displayPress and hold C

Last number redial

Single key dialling
Press and hold location number (1–9)

– Mute/unmutePress and hold **MENU**

Hold/unlock/swap
Move the pointer, press OK

Lock/unlock keybadMENU *

Speed diallling
Location number

Adjust earpiece
Use the side buttons:

upper increases, lower decreases

Emergency services
Emegency number

Memory

Store a number Area code,(in first avail. loc.) number, **MEMORY**

Search for a number ∧ or v

Search for a name
ABC ∧ or v

Menu

Enter menuScroll functions∧ or v


Select displayed functionSELECT

- Scroll options \wedge or v select option, **OK**

Shortcut (see list below)
MENU Function number

Return to title screen

Exit menuC

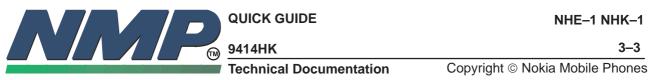

Menu Functions (accessible by menu or shortcut)

Shortcut	Function	Description
M 1	Recent calls	Shows last dialled, receive and missed calls.
M 2	Messages	Read, write, listen and send messages.
M 3	Call divert	Diverts calls to another number.
M 4	Phone settings	Set lights, ringing volume, tones, any key answer, DTMF, autom. redial, language, autom. answer, power off, battery save.
M 5	Security	Sets PIN code, security level, call barring.
M 6	Own number	Displays the SIM card phone number.
M 7	Network selection	Select the network manually.
M 8	Call timers	Shows or clears call timers.
M 9	Memory	Select, erase, copy memory.
M 10	Accessories	Control accessories.
M 11	In-call options	Mute, drop, swap, hold calls, send DTMF.
M 12	Silent service	Sets all tones on or off.
M 13	Fax & data	Sends and receives data.

Copyright © Nokia Mobile Phones

This page intentionally left blank.