



BBOXX Home

Troubleshooting the Electronics

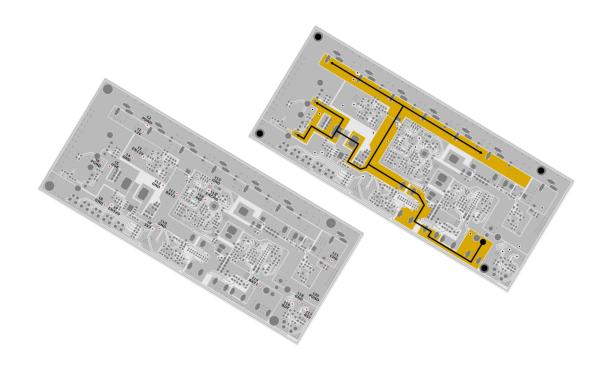




Battery Rail 1

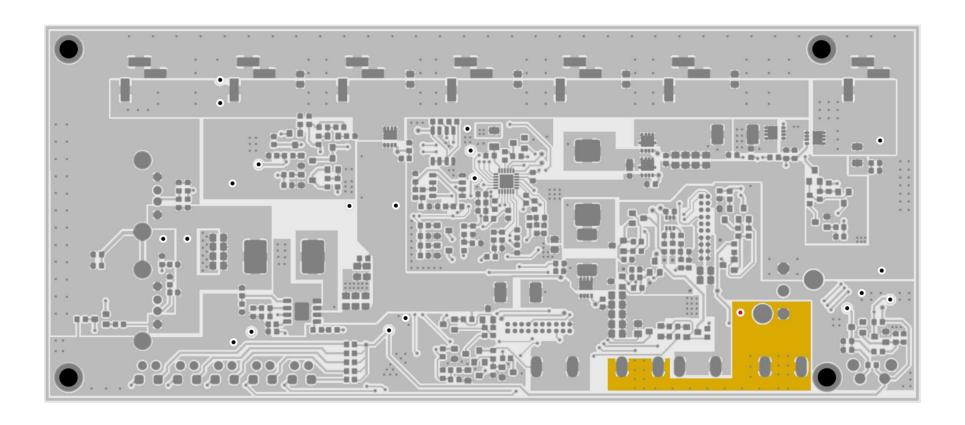




Battery Rail 2

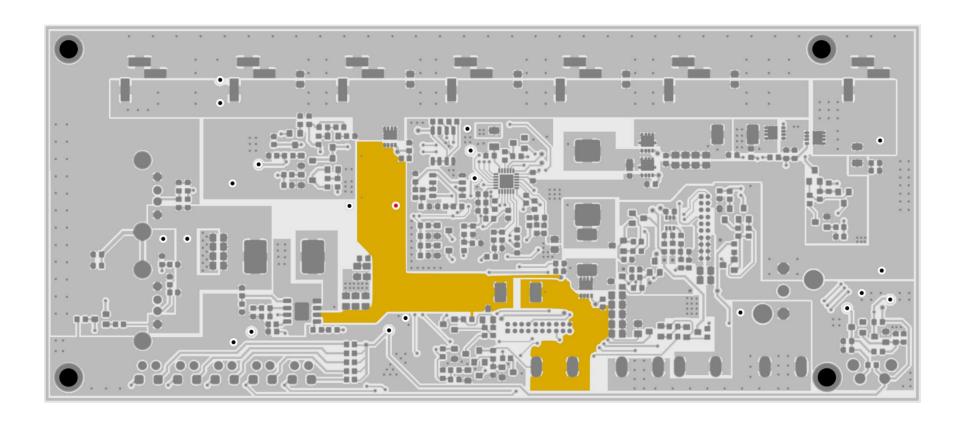

14 Jul 2016 **3** of 14




12V Output Rail

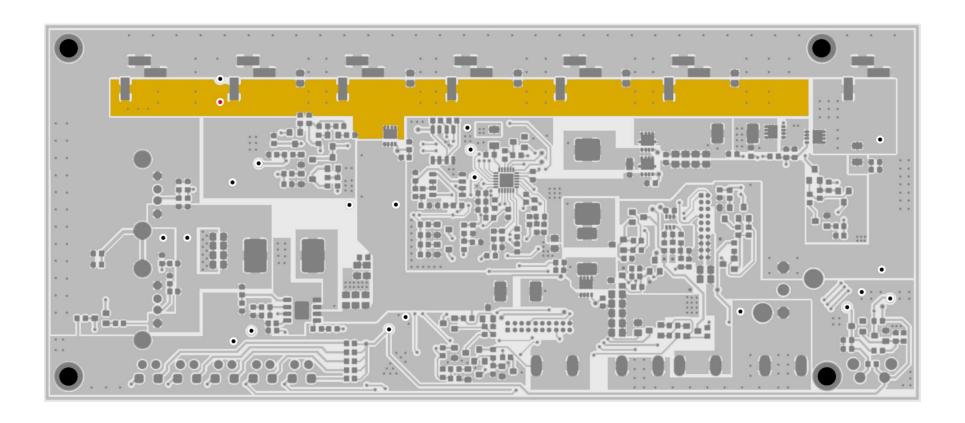

14 Jul 2016 **4** of 14




5V USB Rail

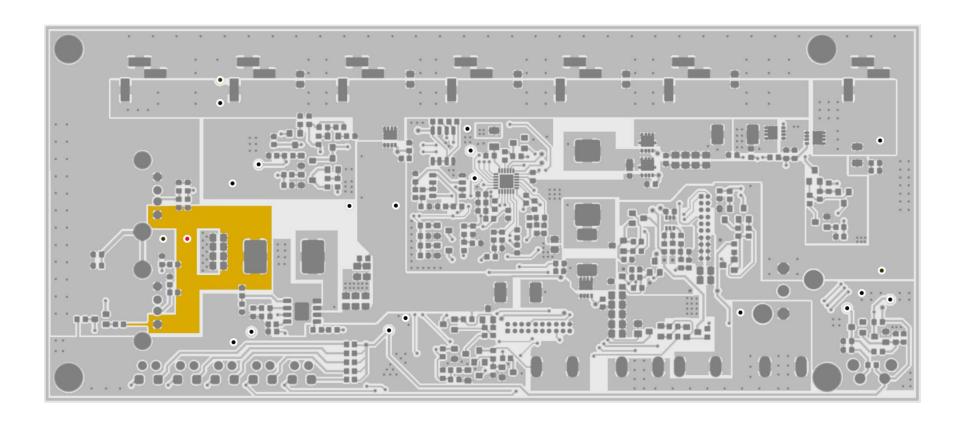

14 Jul 2016 **5** of 14




Power Ground Rail

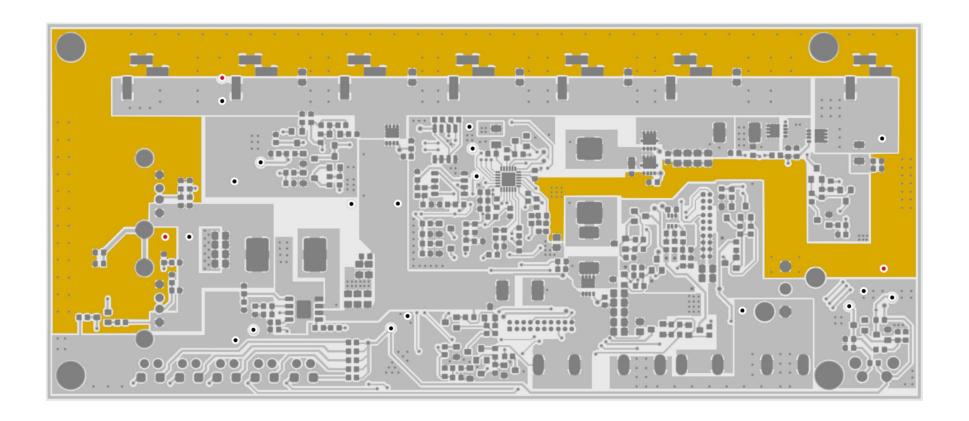

14 Jul 2016 **6** of 14




3V3 Rail

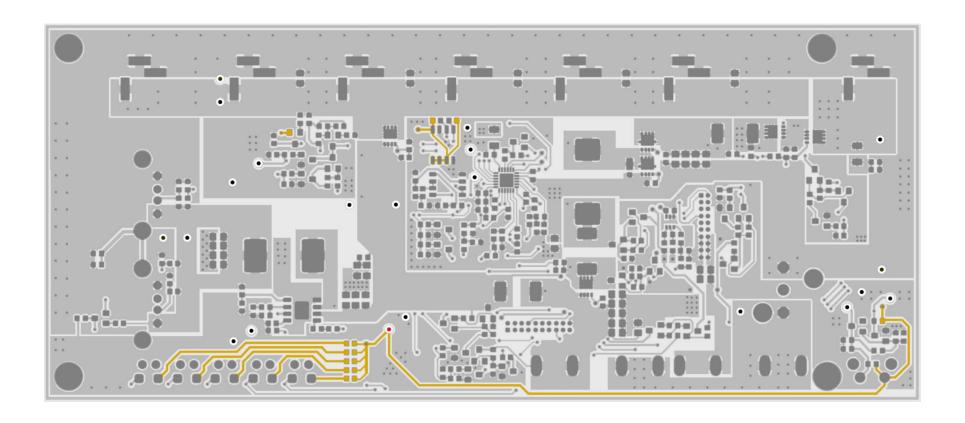

14 Jul 2016 **7** of 14




Signal Ground Rail

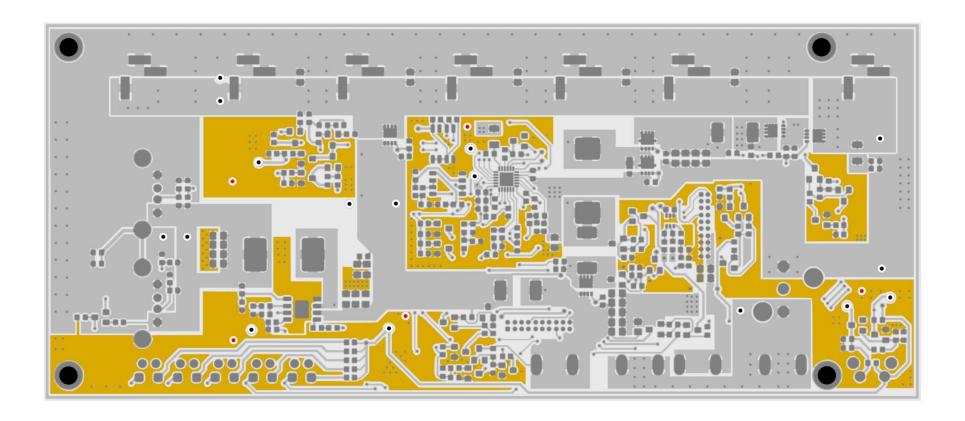

14 Jul 2016 **8** of 14




Charge Current Path

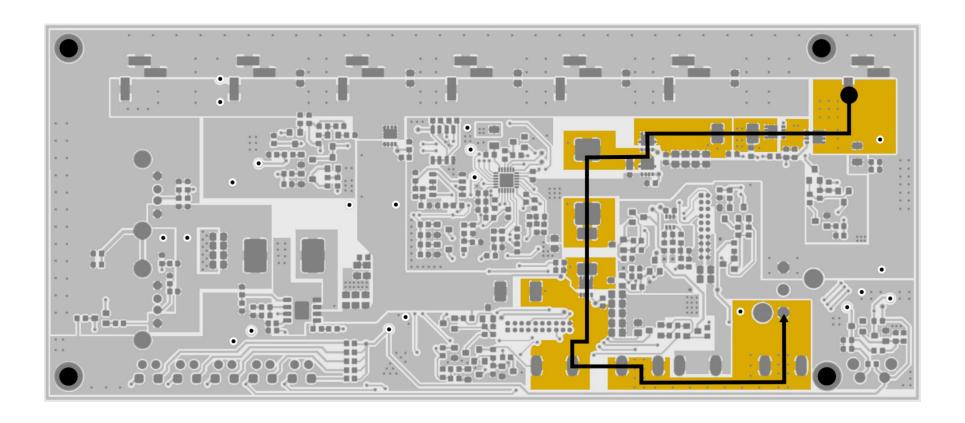

14 Jul 2016 **9** of 14




Discharge Current Path

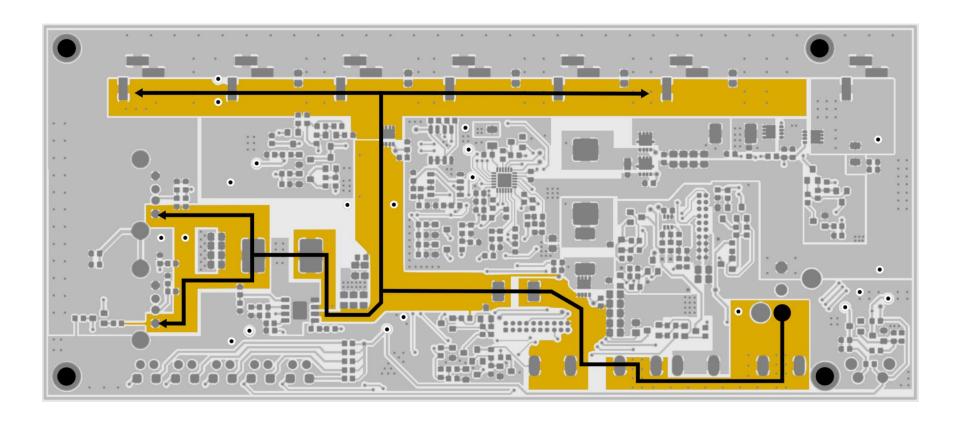

14 Jul 2016 **10** of 14




Enable Pins

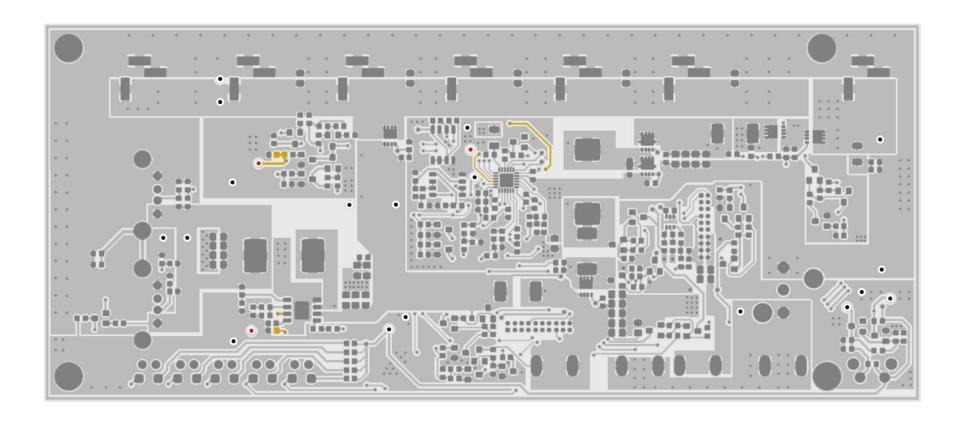

14 Jul 2016 **11** of 14




Test Points 1

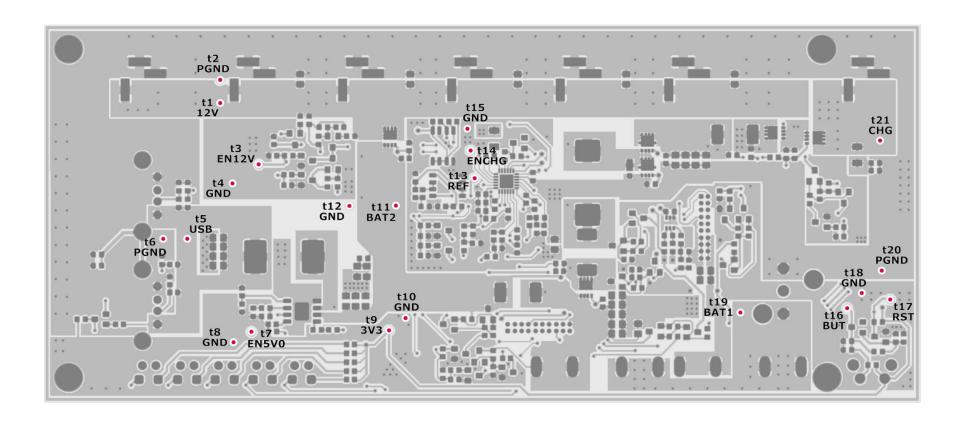

14 Jul 2016 **12** of 14



Test Points 2

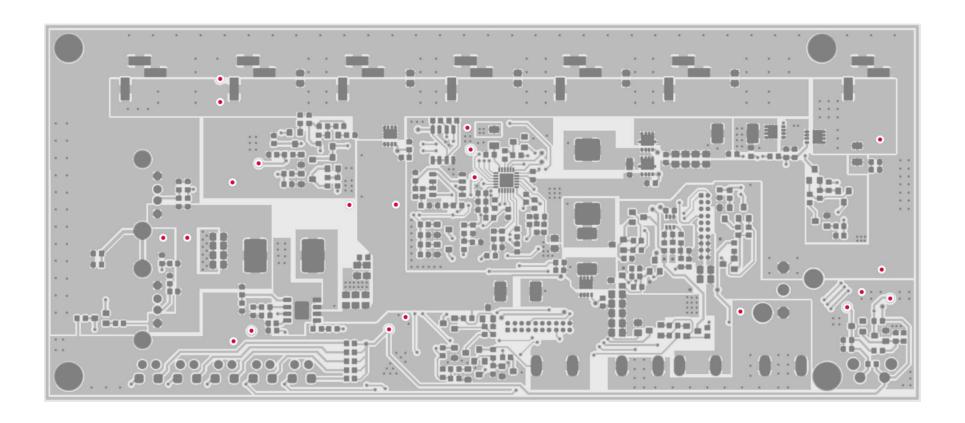

14 Jul 2016 **13** of 14



Additional Support

If any of the below are true please contact BBOXX Product Support directly for help.

- I did not find this document helpful
- One or more of the steps in this document are confusing to follow
- There are errors in this document

Contact us at

products@bboxx.co.uk

14 Jul 2016 **14** of 14