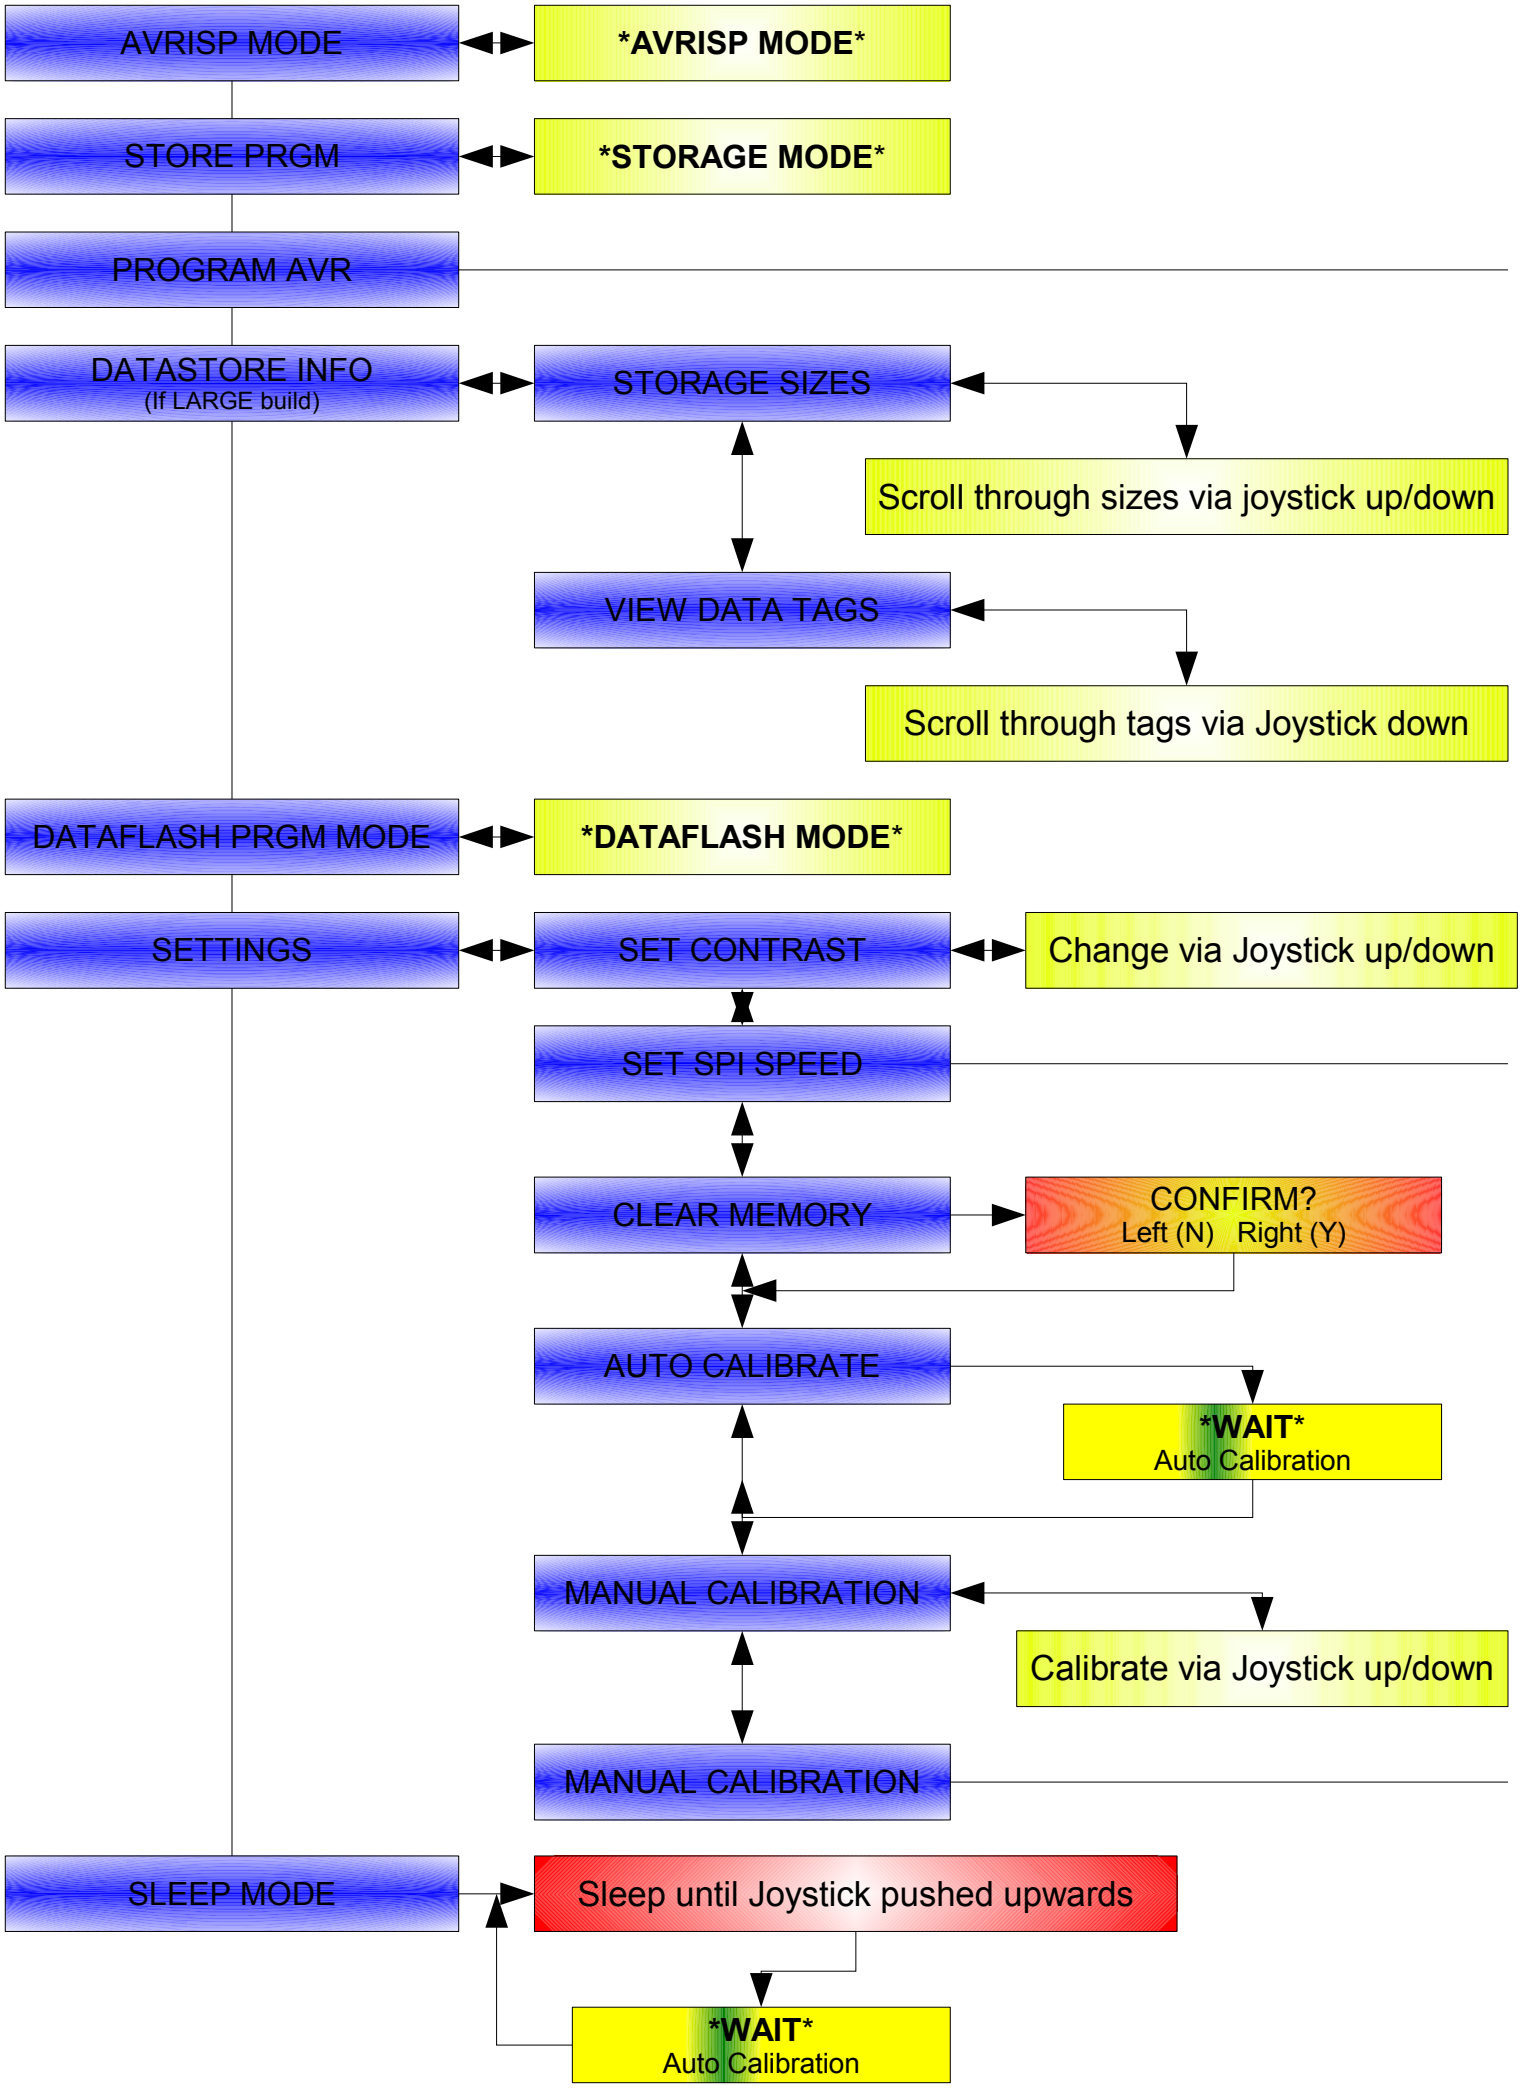
AVRISP MODE
AVRISP MODE
STORE PRGM
STORAGE MODE
PROGRAM AVR
DATASTORE INFO
(If LARGE build)
STORAGE SIZES
Scroll through sizes via joystick up/down
VIEW DATA TAGS
Scroll through tags via Joystick down
DATAFLASH PRGM MODE
DATAFLASH MODE
SETTINGS
SET CONTRAST
Change via Joystick up/down
SET SPI SPEED
CLEAR MEMORY
CONFIRM?
Left (N) Right (Y)
AUTO CALIBRATE
WAIT
Auto Calibration
MANUAL CALIBRATION
Calibrate via Joystick up/down
MANUAL CALIBRATION
SLEEP MODE
Sleep until Joystick pushed upwards
WAIT
Auto Calibration

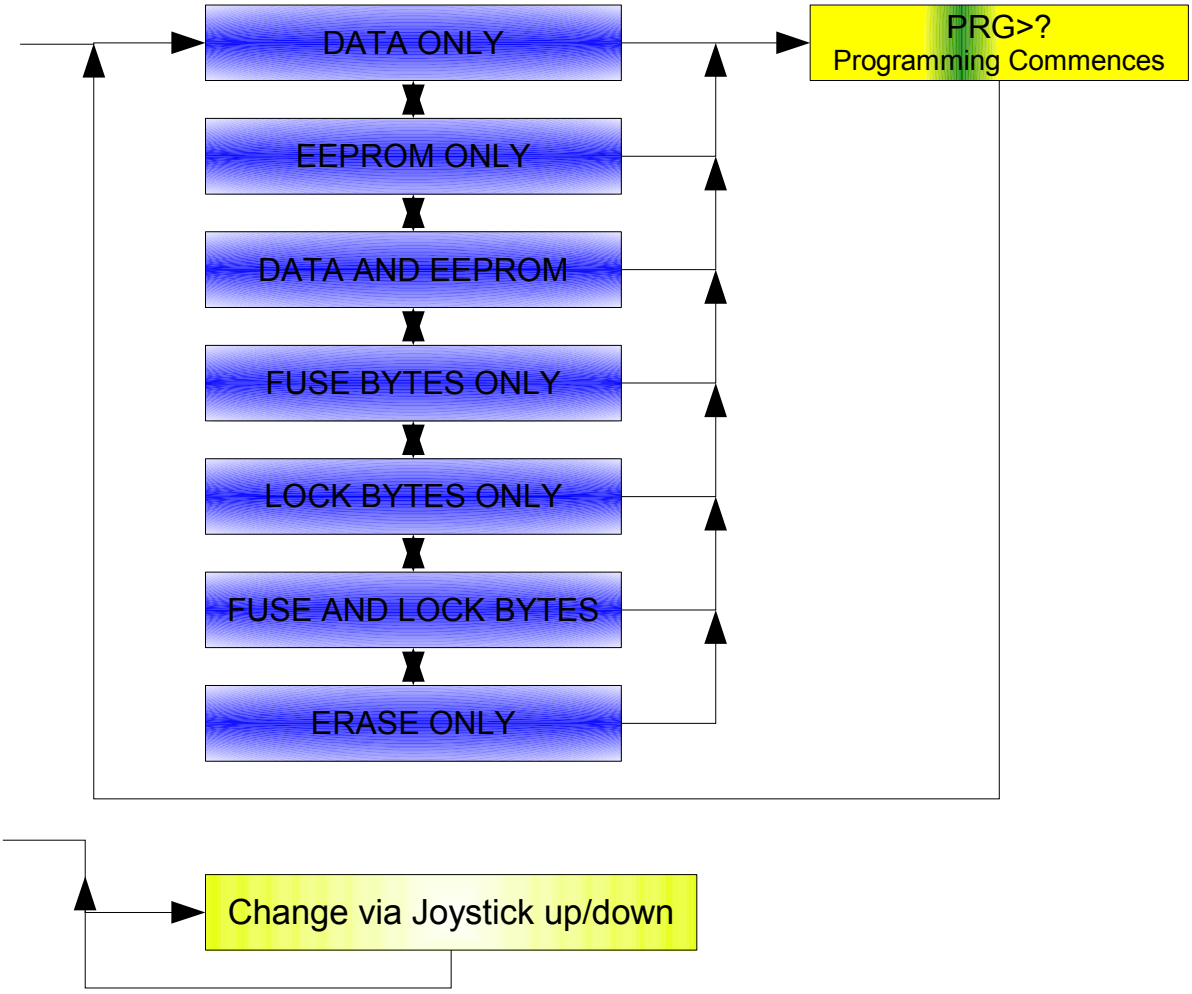
DATA ONLY
EEPROM ONLY
DATA AND EEPROM
FUSE BYTES ONLY
LOCK BYTES ONLY
FUSE AND LOCK BYTES
ERASE ONLY
PRG>?
Programming Commences
Change via Joystick up/down

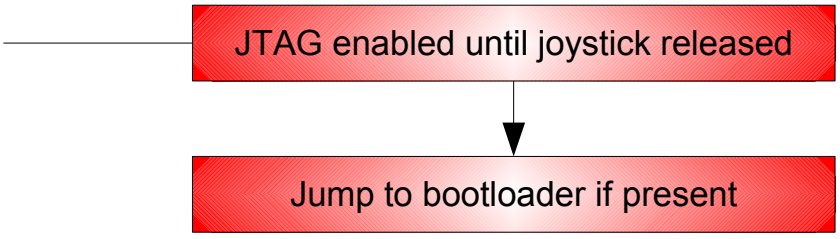
JTAG enabled until joystick released
Jump to bootloader if present