


PLUTO Runtime Software State Machine

Book-ready overview of boot validation, idle supervision, operating modes, and safety recovery

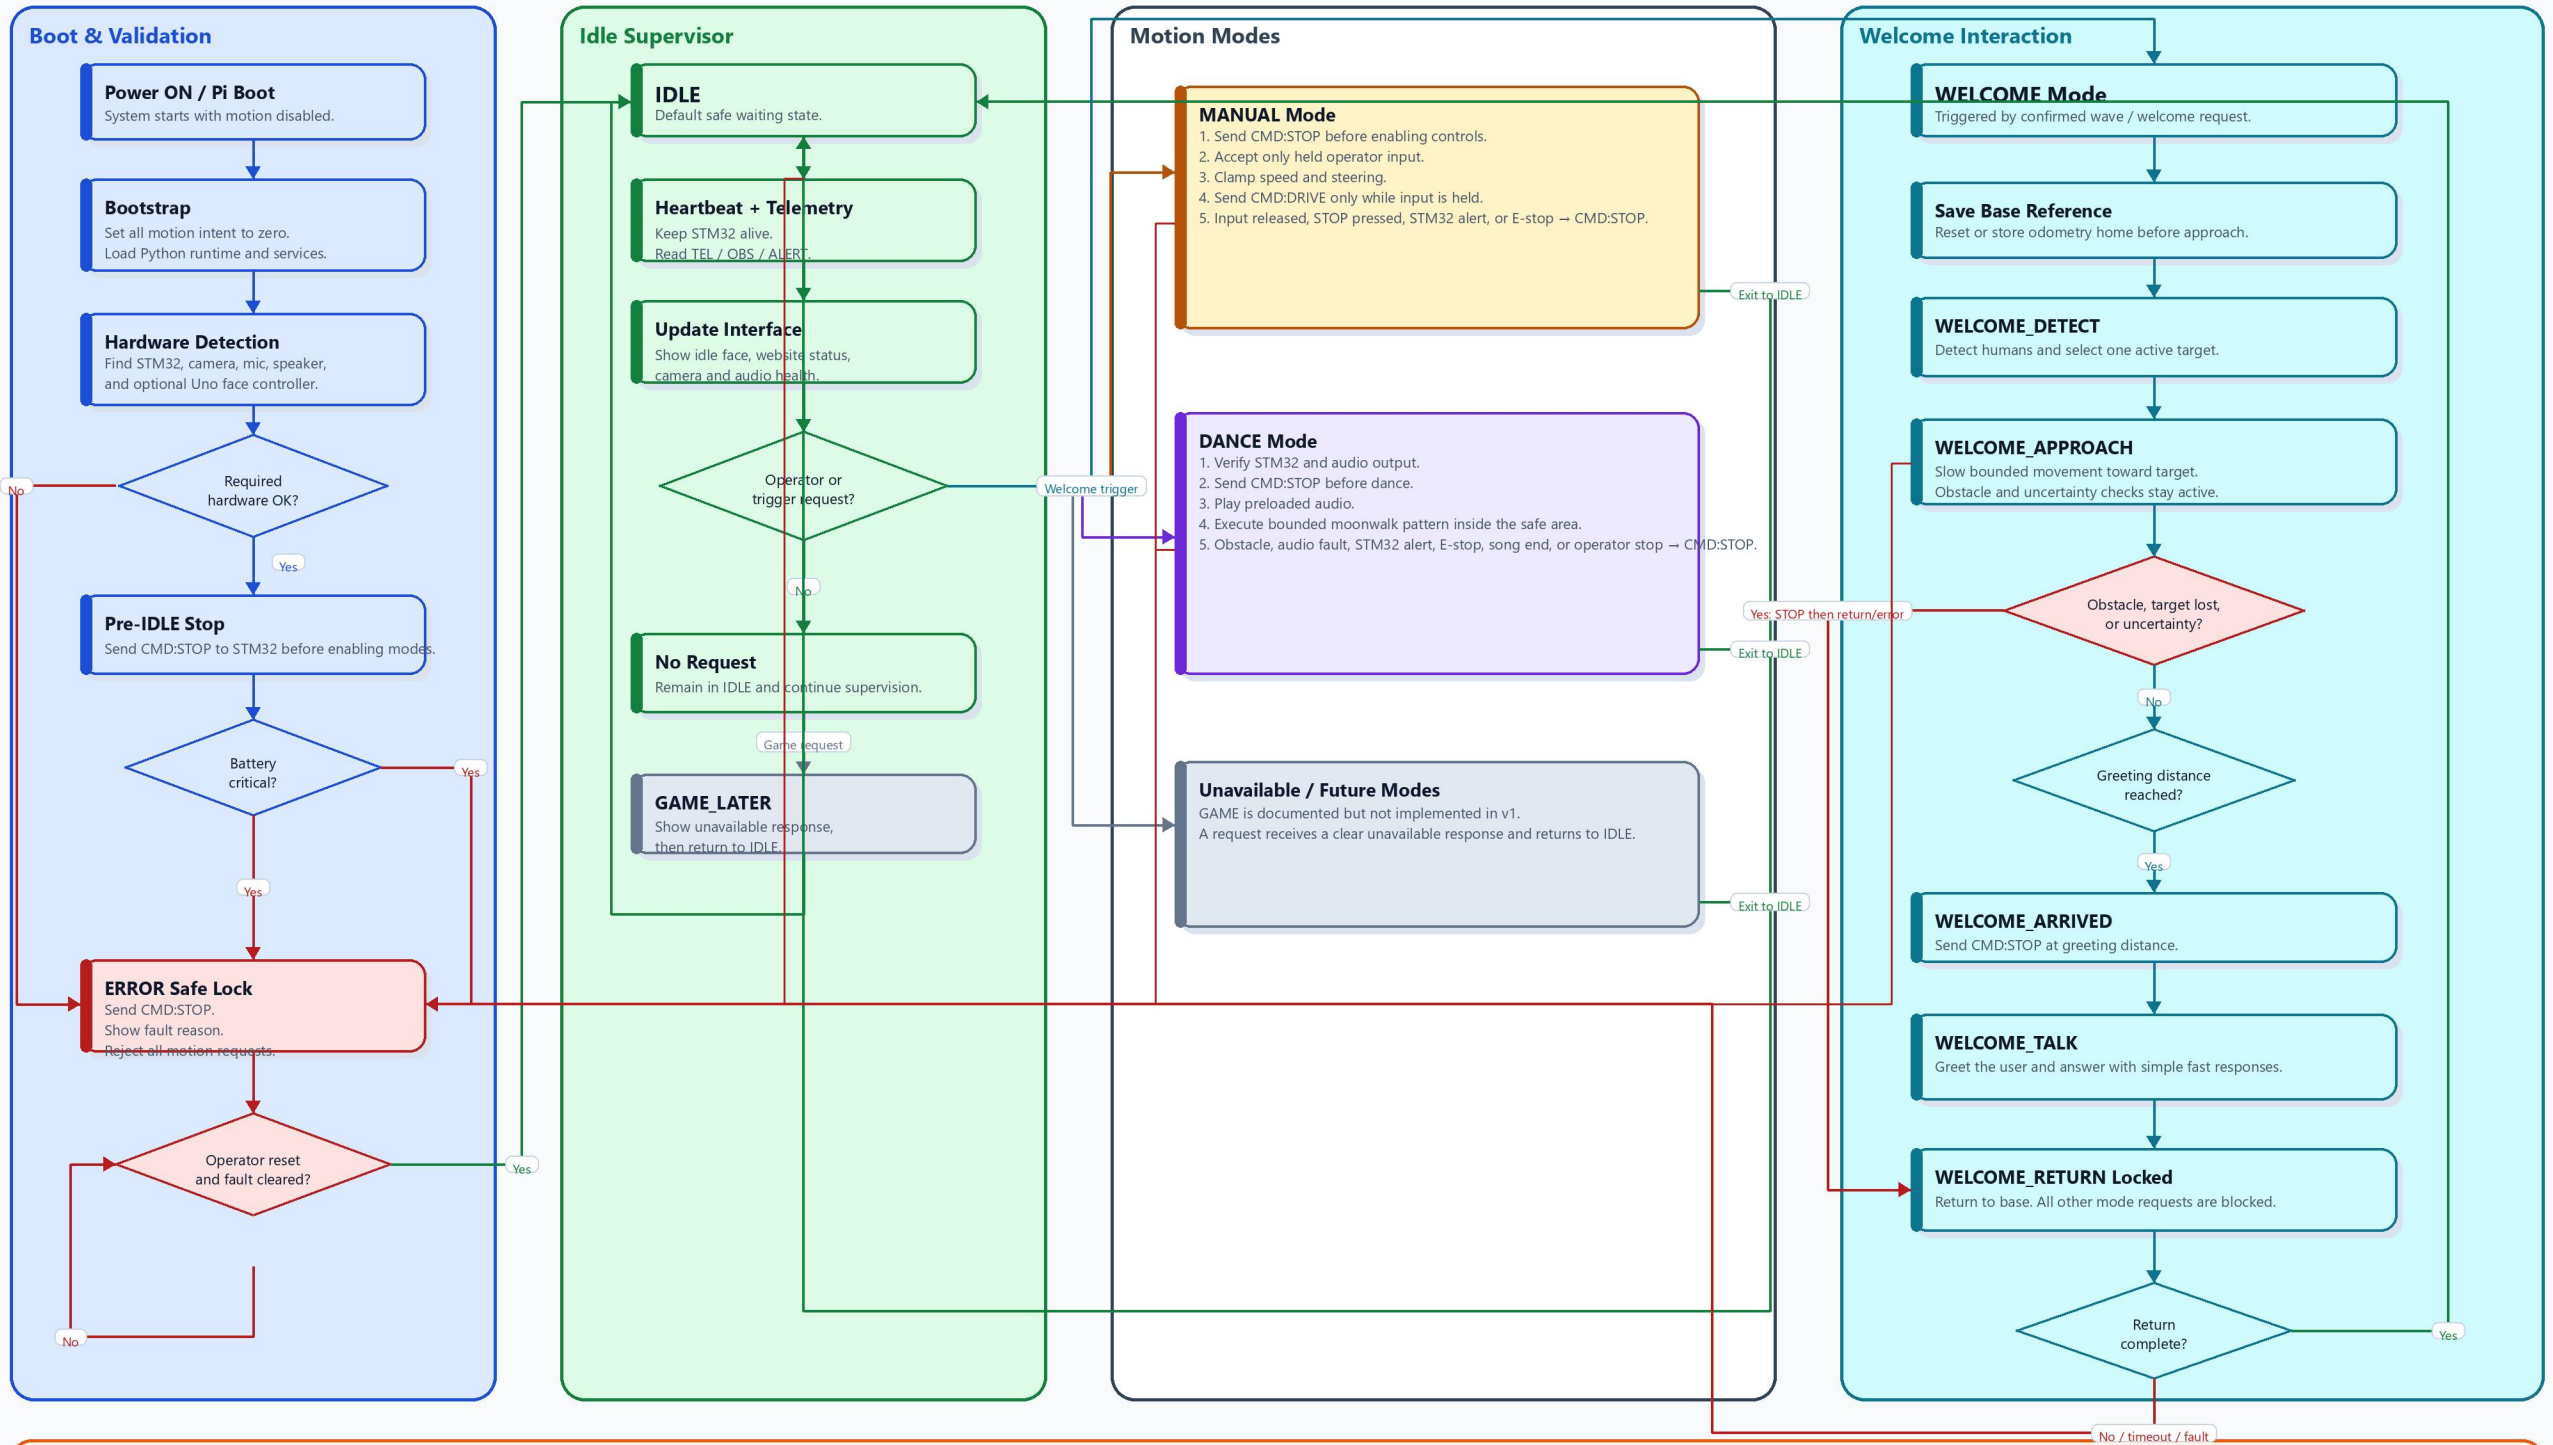

Global safety rule

Any critical fault from any state forces CMD:STOP, enters ERROR, rejects motion requests, and requires operator reset before returning to IDLE.

Legend: Boot / validation Idle supervisor Manual motion Dance motion Welcome interaction Error / safe stop