










1. Connect the machine to the electricity supply.

2.Plug one end of USB cable into Computer

3. Plug another end into machine

The firmware is optimized by my company, and then loaded on mainboard, please do not upgrade the firmware by yourself.

After the USB cable plugged, the USB driver will auto-install on Win7 system, as picture below

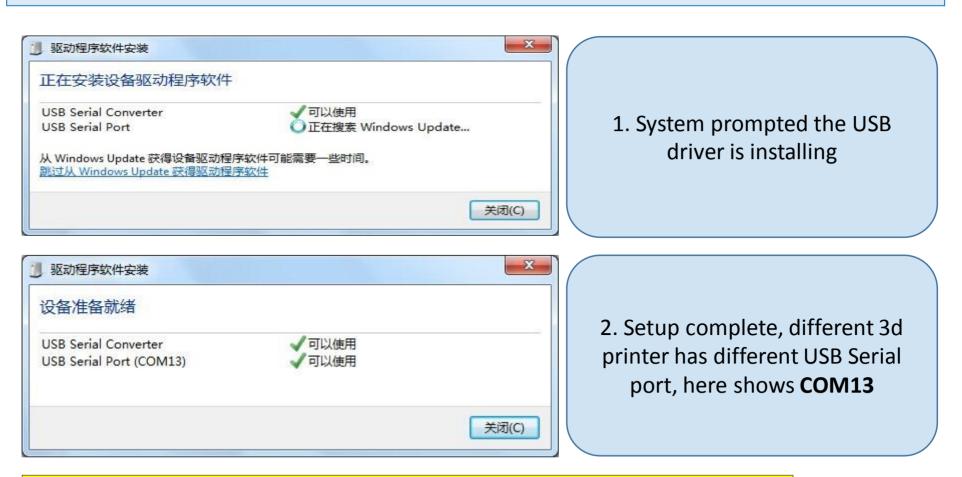

Note: If can not auto-install ,please download the USB drive from the website : www.ftdichip.com/Drivers/VCP.htm

