

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

Introduction

This manual explains how to use SMARTDAC+ STANDARD Hardware Configurator. For details on the functions related to SMARTDAC+ series options. And this manual explains how to use SMARTDAC+ STANDARD IP Address Configurator. To ensure correct use, please read this manual thoroughly before beginning operation.

➤ Downloading the Latest Software and Manuals

Download the latest version of the IP Address Configurator from the following URL:
www.smartdacplus.com/software/en/

Download the latest manuals of the Hardware configurator, and the related manuals from the following URL: **www.smartdacplus.com/manual/en/**

❖ IP Address Configurator Features

SMARTDAC+ STANDARD IP Address Configurator is a PC software application for configuring the communication parameters of the GM10 Data Acquisition Module (hereafter referred to as the GM).

IP address setting

You can edit a GM's hostname, IP address, DNS server, domain name, domain suffix, and so on as well as register the hostname to a DNS server.

GM searching

GM searching

Device call-up

You can send commands to GMs shown in the list. You can check the response by looking at the LED blinking on the GMs.

• Installation and Version Updating

Download the latest installer from YOKOGAWA's website (**www.smartdacplus.com/software/en/**) to install and update the software: From the Help menu, you can view the software version information and access the link to the website.

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

Procedure


1. Double-click the downloaded file to extract the files.
 2. In the extracted folder, right-click Install.exe, and click Run as administrator.
 3. The installation wizard starts. Continue to follow the instructions on the screen to install the software.
 4. When the installation is complete, click Finish.
- SMARTDAC+STANDARD > IP Address Configurator will be registered under All Programs in the Windows Start menu.

- **Starting and Closing IP Address Configurator**

Starting the Software

On the Start menu, click All Programs, SMARTDAC+ STANDARD, and IP Address Configurator.

The start window appears.

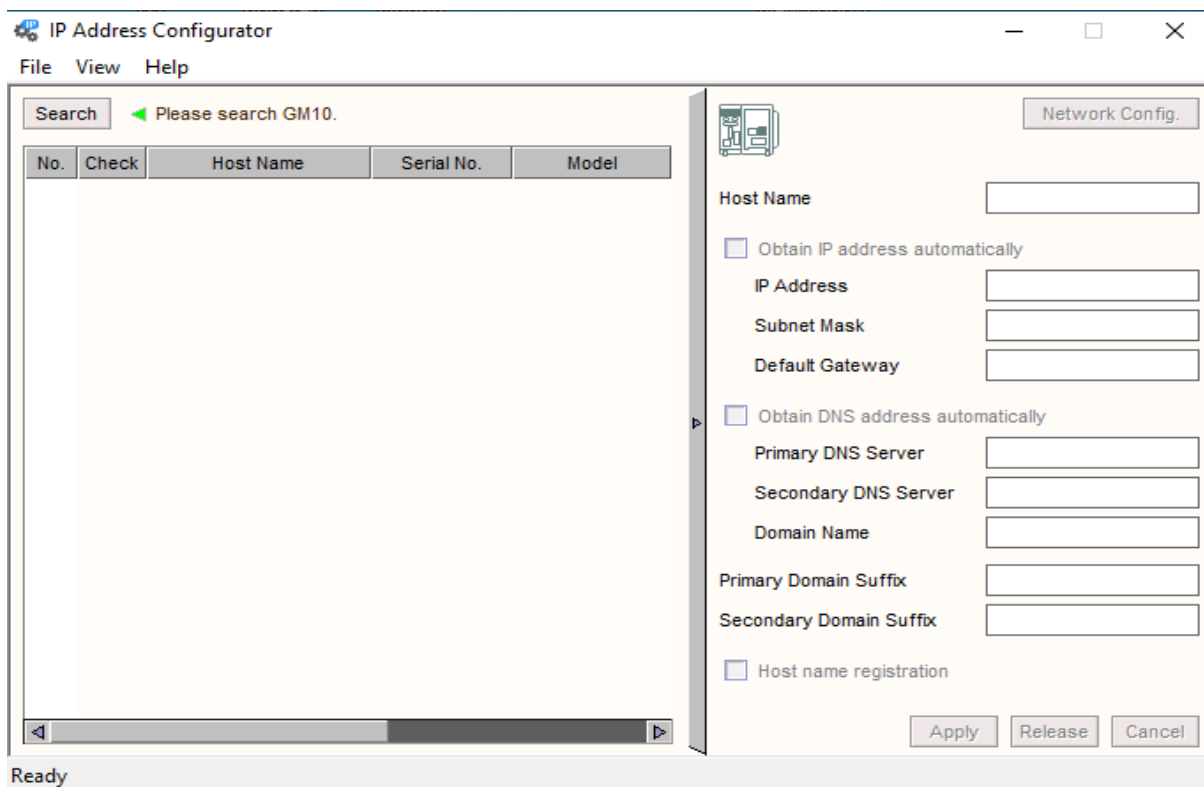


Closing the Software

On the File menu, click Exit Application. Or click the close button **X** in the upper right of the window.

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

- Names of the Parts of the Screen and How to Use Them

Start Window

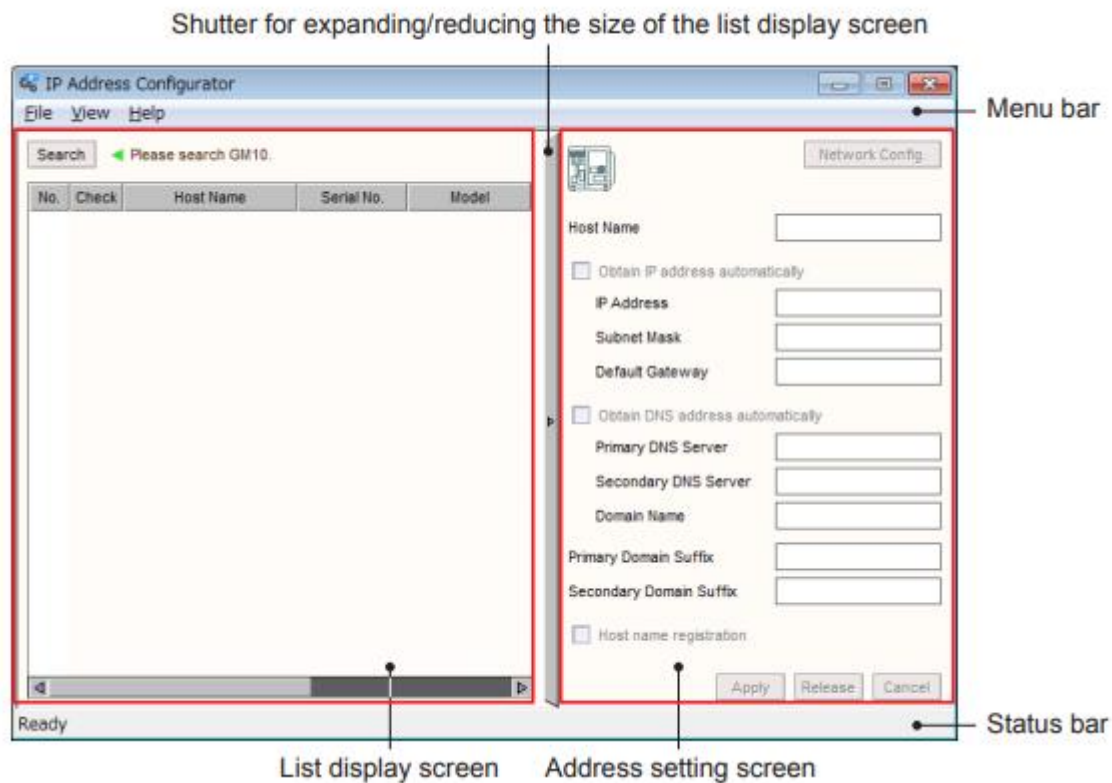

Clicking the shutter for expanding/reducing the size of the list display screen (the bar in the center of the window) hides the Address setting screen and shows the List display screen in the entire window. Clicking it again returns the Address setting screen.


Menu Commands

Menu		Description
File	Exit	Closes the software.
View	Status Bar	Shows or hides the status bar.
Help	User's Manual	Displays the user's manual (this manual).
	About	Displays the version of the software in use.
	Update	A link to the website for downloading the latest version of the software.

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

- **List Display Screen**

Click Search to search for GMs in the same network segment and display the list of search results. Click a No. cell to select the GM you want to configure.

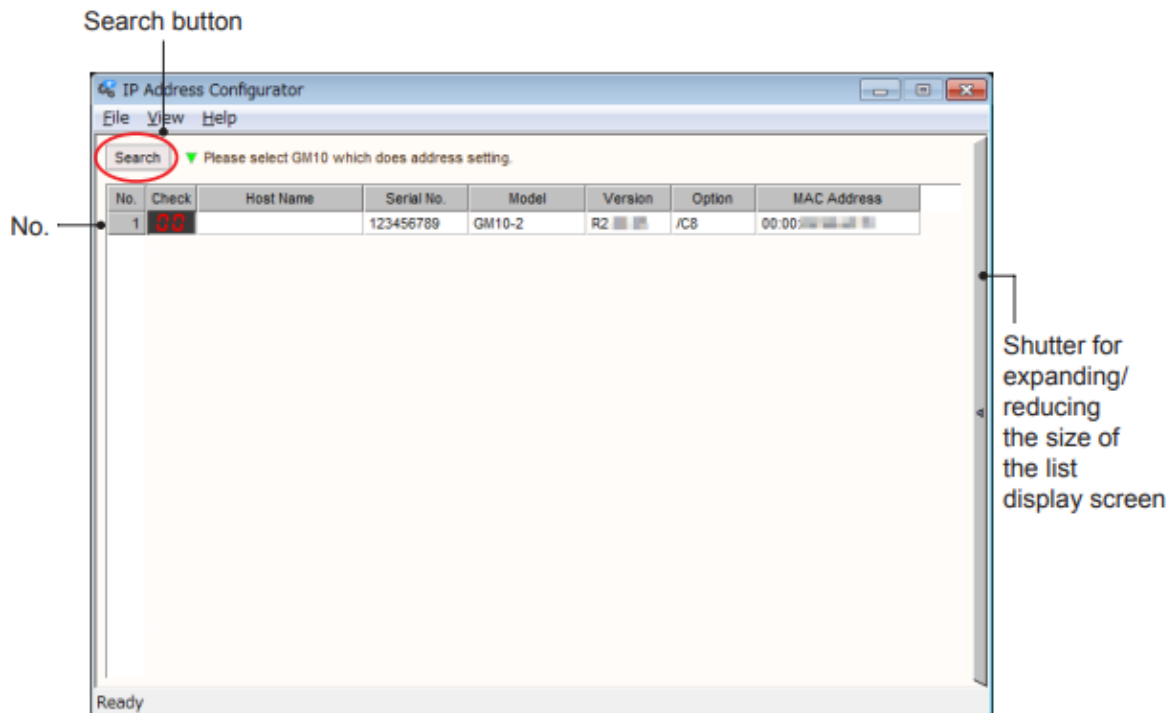

GM Information Displayed in the List

Item	Description
No.	1 to 255 numbers are assigned in retrieved order
Check	If this button is clicked, the 7-segment LED on the main unit of the corresponding GM10 displays --CALL--.
Host Name	The host name is displayed if it is already registered.
Serial No.	The instrument number marked on the name plate of the main module.
Model	GM10-1 or GM10-2 is displayed
Version	GM10 firmware version.
Option	GM10 option code. See the table below for the description.
MAC Address	The MAC address marked on the name plate of the main module.

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

• Address Setting Screen

If the check box is selected, the items that can and cannot be set change. Dimmed setting items cannot be changed.

Network Config.
When you select a GM in the list, this button becomes available.

Click **Network Config.** to allow the settings of the GM selected in the list to be edited.

Host Name [Text Box]

☐ Obtain IP address automatically

IP Address [Text Box: 10.1.32.85]

Subnet Mask [Text Box: 255.255.252.0]

Default Gateway [Text Box: 10.1.32.1]

☐ Obtain DNS address automatically

Primary DNS Server [Text Box: 0.0.0.0]

Secondary DNS Server [Text Box: 0.0.0.0]

Domain Name [Text Box]

Primary Domain Suffix [Text Box]

Secondary Domain Suffix [Text Box]

☐ Host name registration

Apply
Applies the edited settings to the GM. GMs are searched for again.

Release
Releases the GM you selected and the IP address obtained from the DHCP server. GMs are searched for again.

Cancel
Does not apply the changes, and returns to the condition before editing.

• Changing the IP Address

Before carrying out the procedure below, turn ON the power to the relevant GMs and connect the GMs to the network using Ethernet cables. When connecting the GMs to the network, make the connection after changing the factory default IP address.

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

- **Connecting the GM to a PC Locally (One-to-One) and Changing the Address**


Locally connect the GM to a PC in which the Address Configurator is installed (one-to-one connection), and change the IP address. The procedure to change the address is the same as that shown below.

When making a local (one-to-one) connection with the PC, do not set the PC to obtain the IP address automatically. Enter the IP address manually to an address other than the one that is to be assigned to the GM.

setup Example of the PC and GM

IP address of the PC	10.1.32.100
Subnet mask of the PC	255.255.255.0
IP address of the GM	10.1.32.85
Subnet mask of the GM	255.255.255.0

- **Changing the Address of the GM Connected to the Network Procedure**

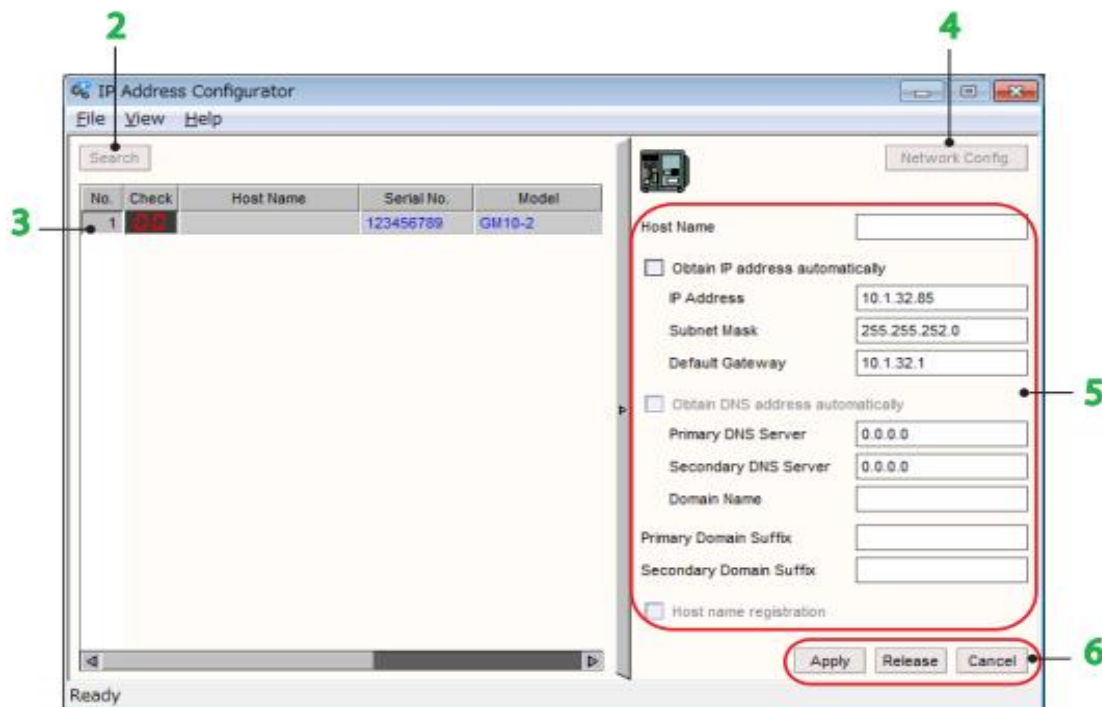

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

1. Start the IP Address Configurator.
The Address Setting screen is displayed.
2. Click the Search button in the List display screen.
The GMs residing in the same segment are displayed.
3. Click the No. of the GM whose address you want to change.
The information of the selected GM is shown in blue characters.
4. Click Network Config. in the Address setting screen.
This enables changes to the settings.
5. Enter settings for each item.
6. Click Apply to change the settings of the GM, cancel to exit without saving changes, or Release to clear the IP address from the DHCP server.

❖ Hardware Configurator Features

Web-based Offline Application

You can use a Web browser (Microsoft Edge, Google Chrome) on your PC to create and edit setup data.

You only need this software and a browser; you do not have to configure communication parameters.

Creating and Editing Setup Data

You can create new setup data by specifying the model and options.

You can also edit existing setup data.

Loading Changed Settings into Setup Data

You can load the settings from a separate file and apply them to the current setup data.

Saving and Loading Setup Data


You can save the data that you create to your PC and load configuration files that have been saved on your PC.

Sending and Receiving Setup Data

You can send setup data to and receive data from a main unit via communication.


Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR


- **Communication Receive Setting**

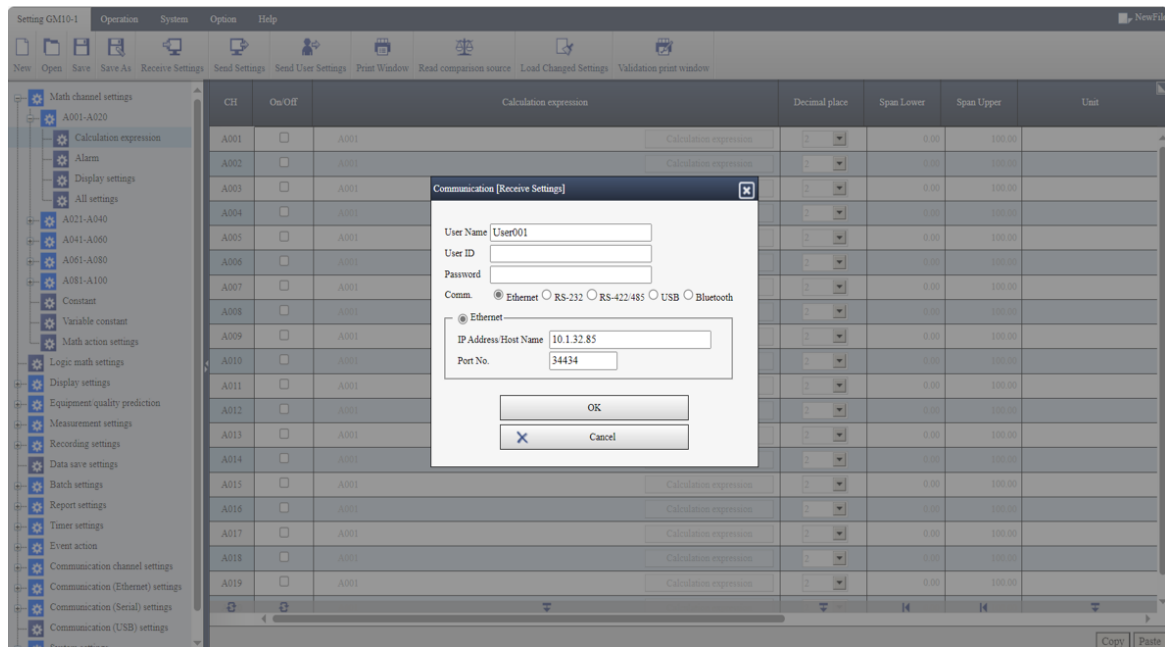

- **Window and Menu Configuration**

Hardware Configurator's menu consists of the tab, menu, and file name display area, as shown below.

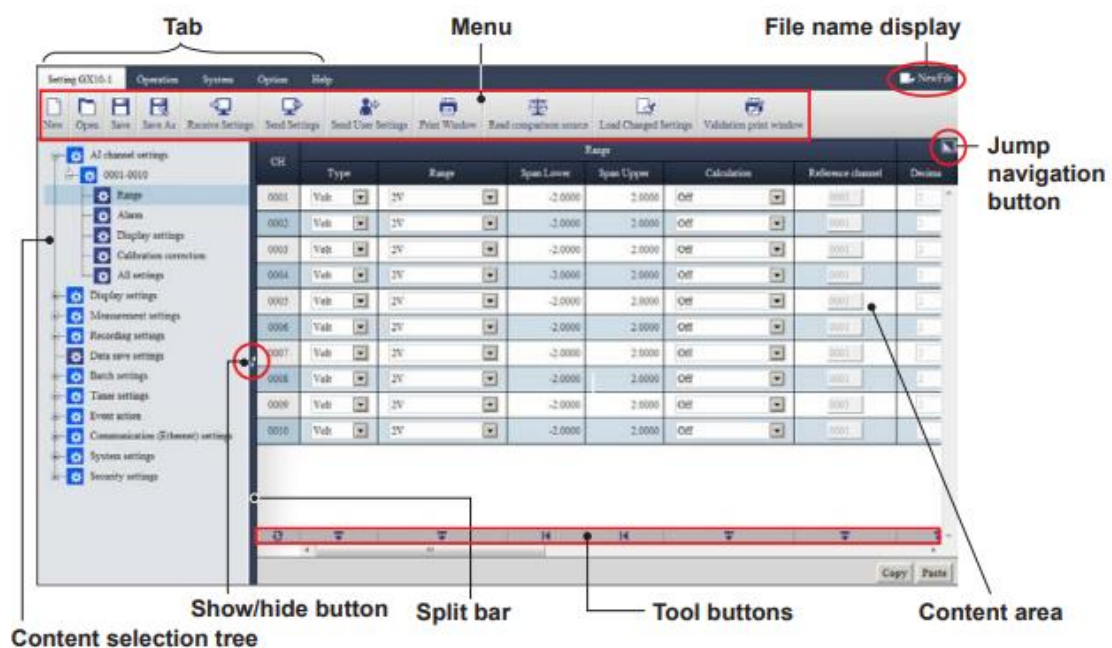

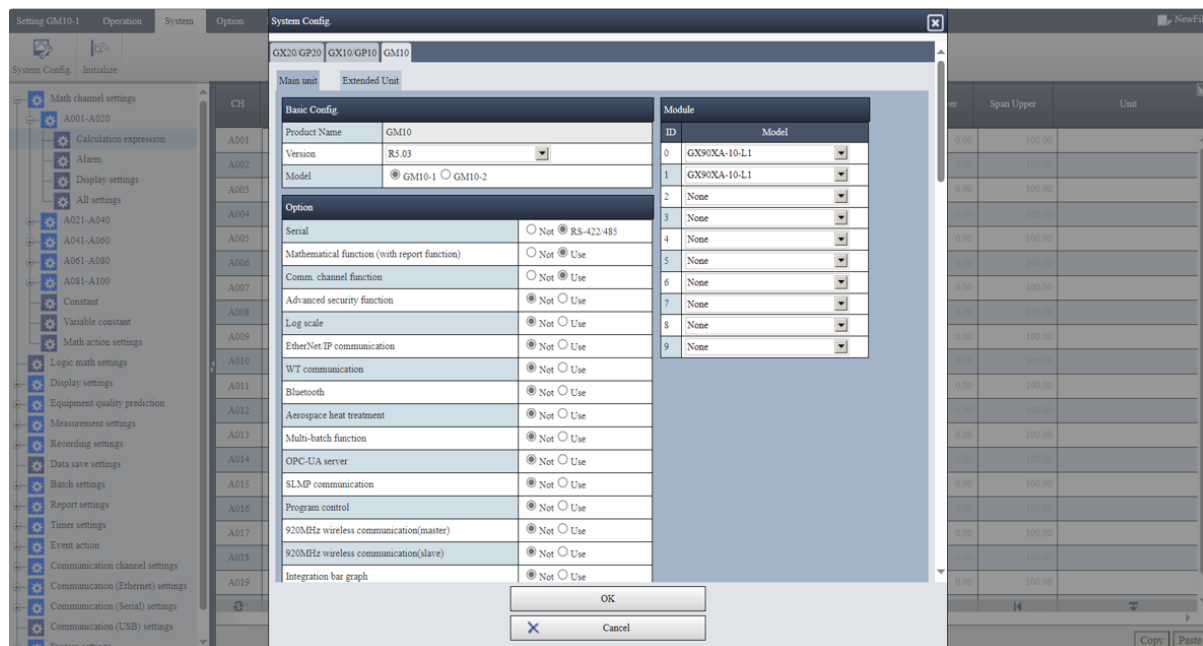Document Name: YOKOGAWA GM10 MANUAL**Document No: ESP-24-25-008****Revision: 00****Date:17-06-2024****Prepared By: PJP****Checked By: NVC****Approved By: NMR**

- Menu Operation and Basic Workflow Procedure**

- 1 Start Hardware Configurator.
- 2 Click a tab (Setting, Operation, System, or Option).
- 3 Select a menu item (New, Open, Start Recording, Stop Recording, etc.).
- 4 Perform operations in the displayed dialog box.
- 5 To edit settings, select a title in the content selection tree. Edit the displayed settings.
- 6 Process the configuration file that you created or edited by selecting appropriate commands (Save, Send Settings, etc.) from the tab and menu.
- 7 Close Hardware Configurator.

- Creating New Setup Data**


This section explains how to use SMARTDAC+ STANDARD Hardware Configurator to create a new data file for configuring various GX/GP functions. Before editing channel or display settings, first create a file in accordance with system configuration of the main unit.

ENGINEERING SPECIFICATIONS

Document Name: YOKOGAWA GM10 MANUAL		
Document No: ESP-24-25-008	Revision: 00	Date:17-06-2024
Prepared By: PJP	Checked By: NVC	Approved By: NMR

Procedure

1. Start Hardware Configurator
The setup window appears.

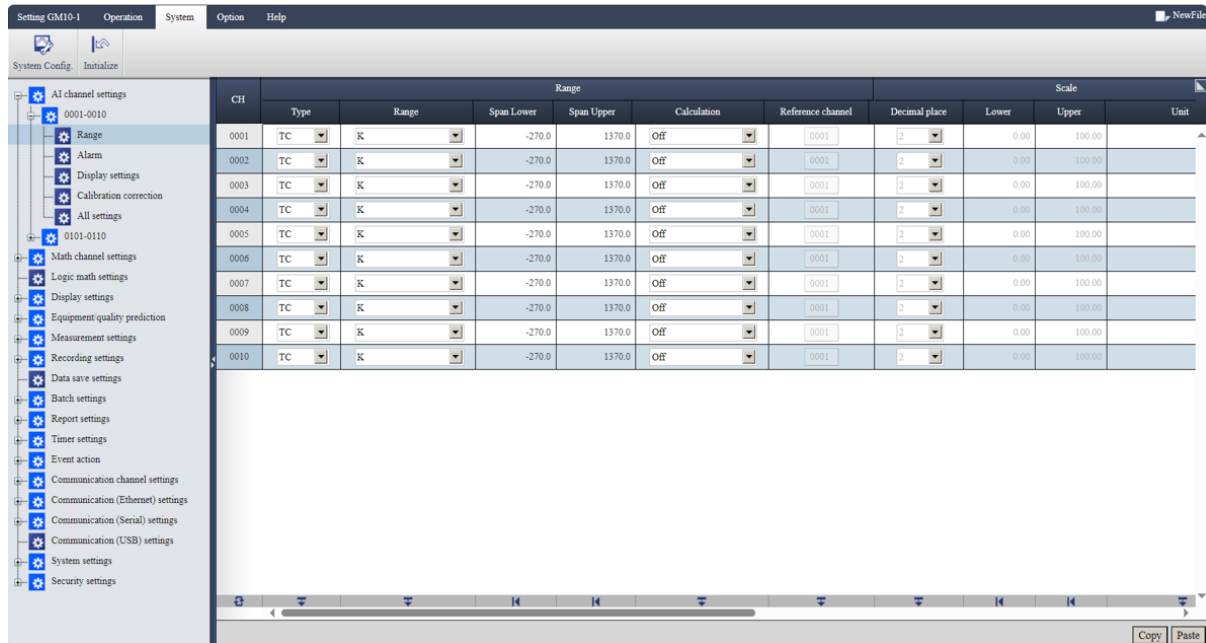

2. Set a type of temp sensor.
3. Set the range of temp sensor.
4. Set the lower and upper spam.
5. Set calculation mode off.

• Digital Screen

