Corne - how to use it

Normal typing

- Letters, Tab, Bksp, Ctrl, Shift work like a laptop.
- Left thumbs: Opt, Cmd, LOWER. Right thumbs: RAISE, Space, Enter.
- Cmd / Opt / Ctrl / Shift work on every layer, so Cmd + arrows etc. work.
- Shift + ; ' , . / = : " < > ? (same as a laptop).

Hold LOWER (left thumb, innermost)

- Esc = LOWER + Tab key.
- F1-F10 on the top row. F11 / F12 = the ; and / keys (right under F10).
- Arrows in a row on the right hand: Left / Up / Down / Right = H J K L keys.
- PgUp / PgDn / Home / End right below them (N M , . keys). Del = LOWER + ' key.
- Left hand: volume, mute, screen brightness, prev / play / next.

Hold RAISE (right thumb, innermost)

- Top row: numbers 1-0.
- Middle row: ! @ # $ % ^ & * ( ) (each symbol right under its number).
- Bottom row: - = [ ] \ and _ + { } |
- ` = RAISE + Tab key. ~ = RAISE + ' key. Del = RAISE + Bksp key.

Hold LOWER + RAISE together

- Bluetooth: BT 0-3 = pick device slot (Ctrl A S D keys). BT clr (F key) forgets that slot.
- Screens off = H key, screens on = J key. (If a screen stays black after J, switch that half off and on.)
- Boot (Z key on left half, / key on right half) = flashing mode for that half.

Key-by-key pictures of every layer are on the next page.

Corne - what every key does

Same physical keys on every layer. Hold a thumb key, then press the key shown. Orange = the key you hold. Grey = does nothing. Small grey symbol = with Shift.

BASE - normal typing

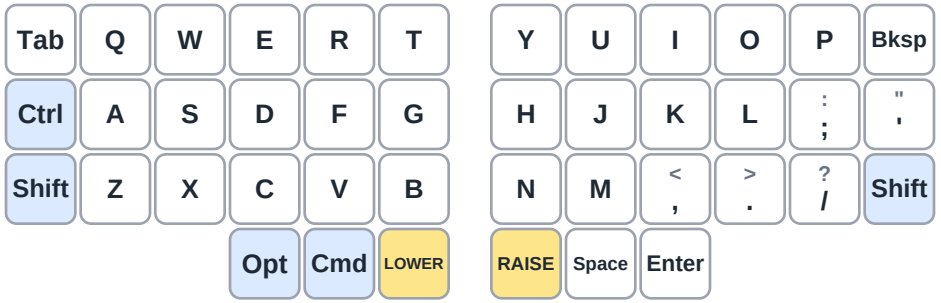

LOWER - hold LOWER (left thumb, innermost)

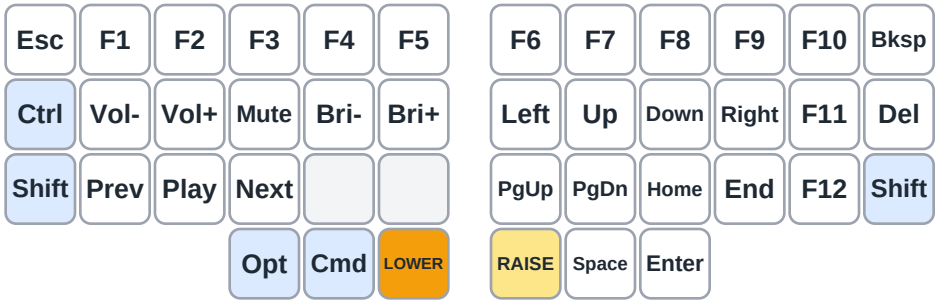

RAISE - hold RAISE (right thumb, innermost)

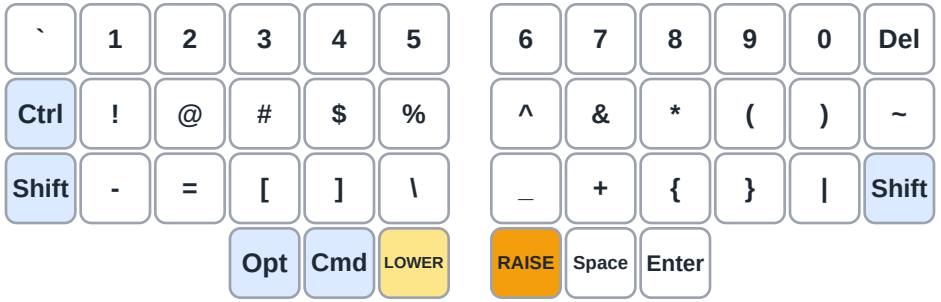
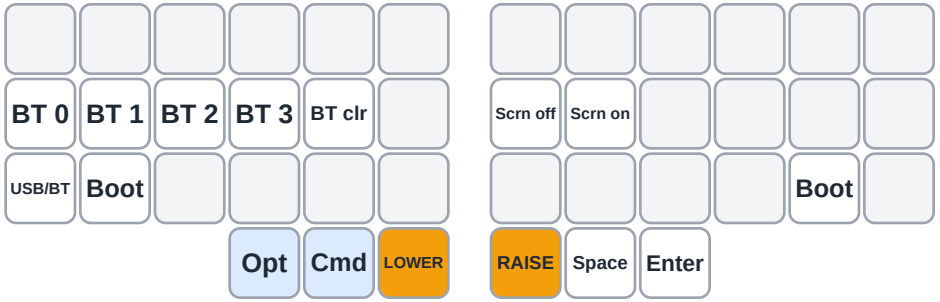
ADJUST - hold LOWER + RAISE together