# NUPHY AIR75 V2

Quick Guide · nuphy-qmk community firmware

🟩 hold Fn 🟨 hold Fn + M (or Fn + Shift)

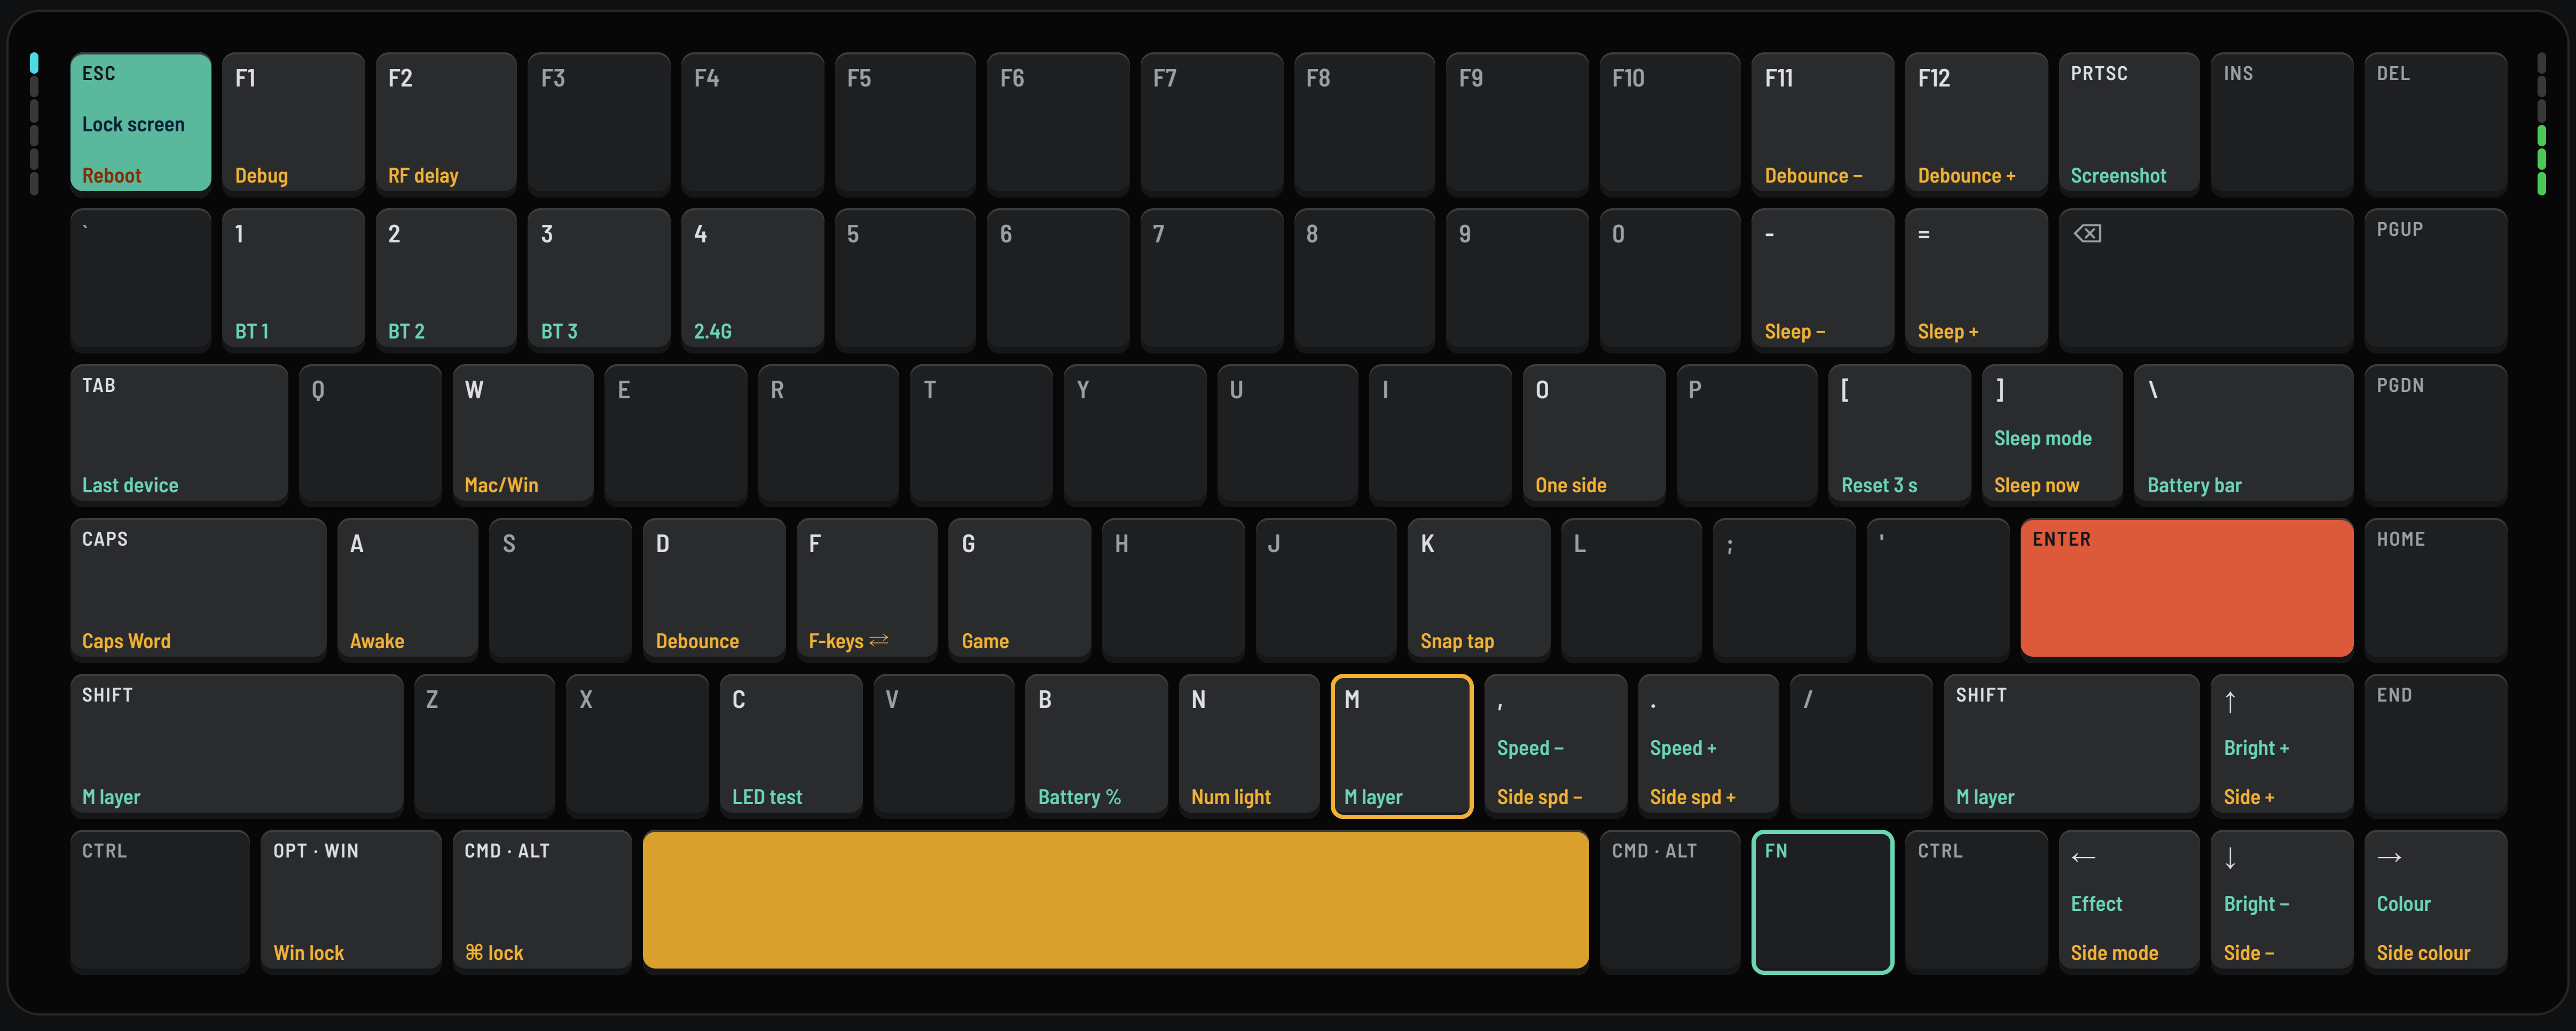

← Left light: Caps, key locks, connection

Right light: battery →

## GETTING STARTED

Three steps to typing on every device you own.

### 1 TURN IT ON

The mode switch on the back edge has three positions: **Off**, **Wired** (USB cable) and **Wireless** (Bluetooth or 2.4G dongle).

### 2 PAIR A DEVICE

| | |
|---|---|
| Fn + 1 … 3 | Bluetooth 1, 2, 3 |
| Fn + 4 | 2.4G dongle |

Tap to switch between devices; Fn + Tab jumps back to the previous one. Hold 3 s to pair a new one. For the dongle, hold Fn + 4 first, then plug it in.

### 3 PICK MAC OR WINDOWS

Set the OS switch to Mac or Win. Each device remembers its own choice, so your Mac on BT 1 stays Mac and your PC on the dongle stays Windows. On the cable it detects the OS by itself.

| | |
|---|---|
| Fn + M + W | Flip it without the switch |

## READING THE LIGHTS

Lights stay off unless something changes how your keys behave. Each one sits on the side of the key it belongs to: Caps on the left. While one is on, the rest of that strip dims so it stands out over any light effect.

### LEFT · HOW YOUR KEYS BEHAVE

**Caps Lock** on. Breathing: **Caps Word** is on.

**Win / ⌘ key locked**

**Game mode** on

**Connecting**: the whole strip breathes in the connection's colour, blue Bluetooth, green 2.4G, yellow wired. Keys you press now are sent once it connects.

**Fast blink**: pairing. **Solid for 2 s**: connected. Its key ( 1 … 4 ) lights up too.

### RIGHT · POWER

**Battery**, one LED per 20%: green over 80%, yellow, orange, red at 20% or less. Shown at power-on, when you plug in, and with Fn + \ . The top LED breathes while charging.

**Charge soon**: the bottom LED pulses red below 20%.

**You changed a setting**: white, lit LEDs show your choice, dim ones the other options. Shown for 2 s.

## EVERYDAY SHORTCUTS

Hold **Fn** and every key with a function lights up mint. Hold **Fn**+**M** and the M-layer keys light up mustard.

### TOP ROW

| | MAC | WINDOWS |
|---|---|---|
| Plain | Media keys | F1–F12 |
| With Fn | F1–F12 | Media keys |
| PrtSc | Area ⌘⇧4 | Print Screen |
| Fn PrtSc | Full ⌘⇧3 | Snipping Tool |

Prefer it the other way round? Fn + M + F swaps F1–F12 and media keys, remembered per device.

### BACKLIGHT

| | |
|---|---|
| Fn + ↑ ↓ | Brightness |
| Fn + ← | Next effect |
| Fn + → | Colour |
| Fn + , . | Speed |

Add M for the side lights: same keys, plus Fn + M + O for one side only.

### TYPING

| | |
|---|---|
| Shift ×2 | **Caps Word**<br>The next word in capitals, then back to normal. |
| Fn + Esc | Lock the computer |

## SLEEP & BATTERY

The keyboard sleeps when you stop typing. Any key wakes it.

### FN + ] SLEEP MODE

**Full saving** (default). Lights off after 2 min, chip off 4 min later. The first key after a long break may take a second.

**Lights only.** Lights off after 6 min; wakes faster.

**Never.** For the cable or a full battery.

### BATTERY

| | |
|---|---|
| Fn + B | Battery level on the number row<br>1 to 0 light up; 0 means 100%. |
| Fn + \ | Keep the battery gauge on |
| Fn + M + - = | Lights-off time, 1–100 min |
| Fn + M + ] | Sleep now, e.g. before packing it |
| Fn + M + A | Keep the computer awake<br>No idle sleep or screen lock, per device. The keyboard doesn't sleep on it either. |

On battery the backlight runs at half brightness and fades out after 30 s without typing; any key brings it back. Below 20% it switches off. No sleep while charging, on the cable, or in game mode.

## GAMING

Faster scanning, no surprise menus, and snap tap for shooters.

| | |
|---|---|
| Fn + M + G | **Game mode**<br>Fastest key scanning, sleep off. Hold to reset its settings. |
| Fn + M + Win | **Lock the Win / ⌘ key**<br>So it can't open menus mid-game. |
| Fn + M + K | **Snap tap**<br>You strafe with A and D. Normally, holding A and pressing D makes the game see both and your character stops. With snap tap the newest key wins, so you change direction instantly. Some competitive games ban it. |

| SNAP TAP MODE HOLD A, PRESS D | GAME SEES | LET GO OF D |
|---|---|---|
| 0 · Off | A and D | A |
| 1 · Cancel | D | nothing |
| **2 · Last key wins** | D | A again |
| 3 · Neutral | nothing | A again |

Mode 2 is what most players want.

## ADVANCED

Most people never need these.

### MAINTENANCE

| | |
|---|---|
| Fn + [ | Hold 3 s: factory reset<br>Clears all pairings and settings. |
| Fn + M + Esc | Restart<br>Hold 3 s, until the keys flash white: bootloader for flashing. |
| Fn + M + F2 | Wireless wake delay<br>Hold 3 s on the cable: radio firmware update mode. |
| Fn + M + F1 | Debug messages (QMK console, cable) |
| Fn + C | LED test |

### KEY FEEL

| | |
|---|---|
| Fn + M + D | Debounce type<br>Change it only if a key types twice. |
| Fn + M + F11 F12 | Debounce time, 1–100 ms |
| Fn + M + Caps | Hold to turn Caps Word on or off |

### REMAP WITH VIA

Open usevia.app with the cable connected and load **nuphy-air75-v2-via_custom_v4.json** from the repository. NuPhy's own file doesn't match this firmware.

---

Community firmware, not made or supported by NuPhy.

github.com/ablasik/nuphy-qmk