NUPHY AIR75 V2

Quick Guide · nuphy-qmk community firmware

🟩 hold Fn 🟨 hold Fn + M (or Fn + Shift)

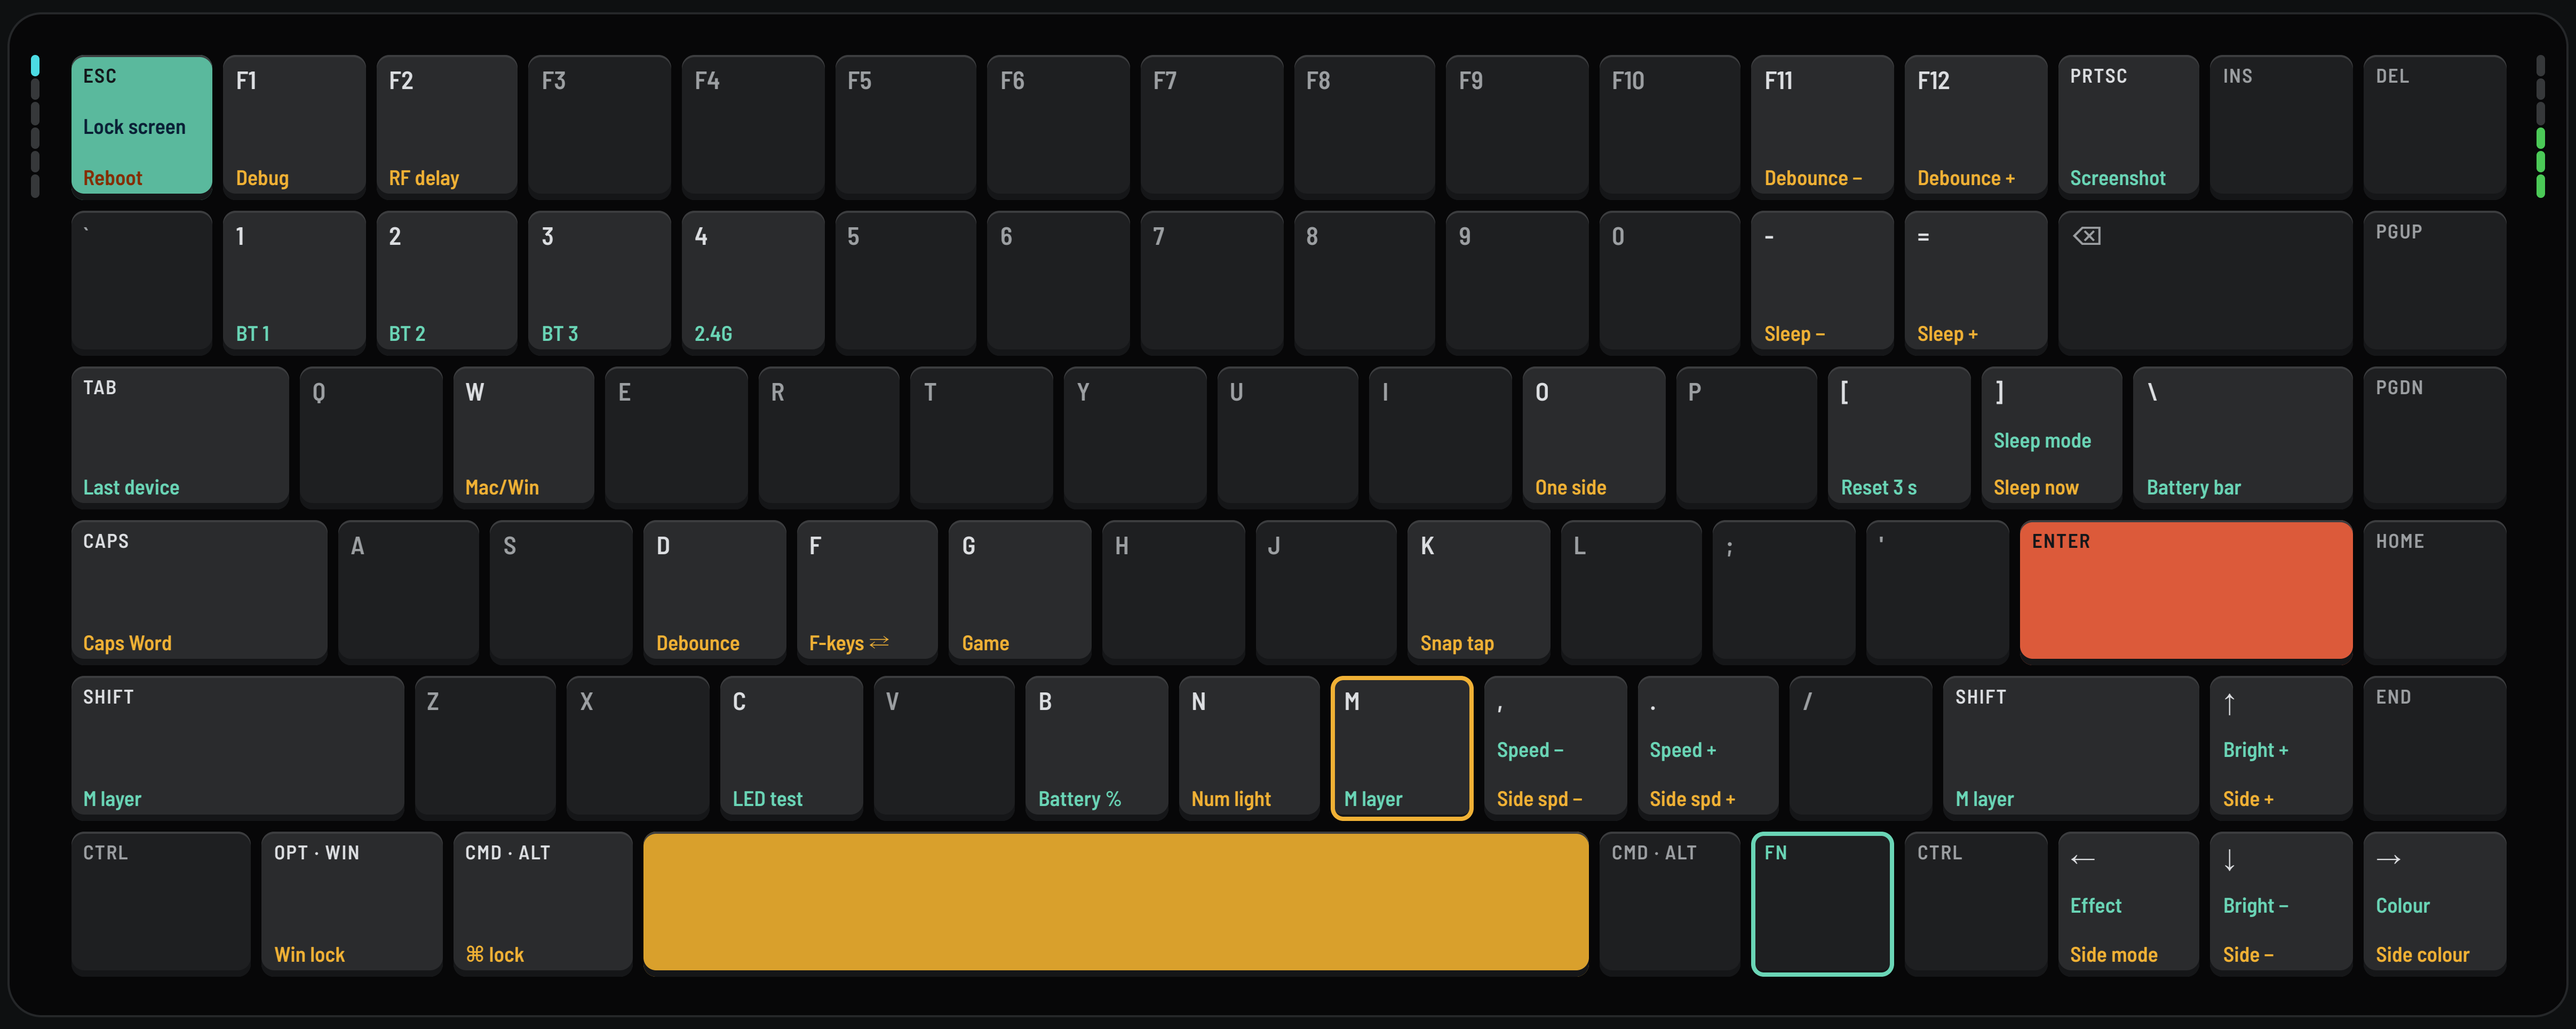
ESC
Lock screen
Reboot
F1
Debug
F2
RF delay
F3
F4
F5
F6
F7
F8
F9
F10
F11
Debounce –
F12
Debounce +
PRTSC
Screenshot
INS
DEL
`
1
BT 1
2
BT 2
3
BT 3
4
2.4G
5
6
7
8
9
0
-
Sleep –
=
Sleep +
⌫
PGUP
TAB
Last device
Q
W
Mac/Win
E
R
T
Y
U
I
O
One side
P
[
Reset 3 s
]
Sleep mode
Sleep now
\
Battery bar
PGDN
CAPS
Caps Word
A
S
D
Debounce
F
F-keys ⇄
G
Game
H
J
K
Snap tap
L
;
'
ENTER
HOME
SHIFT
M layer
Z
X
C
LED test
V
B
Battery %
N
Num light
M
M layer
,
Speed –
Side spd –
.
Speed +
Side spd +
/
SHIFT
M layer
↑
Bright +
Side +
END
CTRL
OPT · WIN
Win lock
CMD · ALT
⌘ lock
CMD · ALT
FN
CTRL
←
Effect
Side mode
↓
Bright –
Side –
→
Colour
Side colour

← Left light: Caps, key locks, connection

Right light: battery →

GETTING STARTED

Three steps to typing on every device you own.

① TURN IT ON

The mode switch on the back edge has three positions: **Off**, **Wired** (USB cable) and **Wireless** (Bluetooth or 2.4G dongle).

② PAIR A DEVICE

Fn + 1 ... 3	Bluetooth 1, 2, 3
Fn + 4	2.4G dongle

Tap to switch between devices; Fn + Tab jumps back to the previous one. Hold 3 s to pair a new one. For the dongle, hold Fn + 4 first, then plug it in.

③ PICK MAC OR WINDOWS

Set the OS switch to Mac or Win. Each device remembers its own choice, so your Mac on BT 1 stays Mac and your PC on the dongle stays Windows. On the cable it detects the OS by itself.

Fn + M + W	Flip it without the switch

READING THE LIGHTS

Lights stay off unless something changes how your keys behave. Each one sits on the side of the key it belongs to: Caps on the left. While one is on, the rest of that strip dims so it stands out over any light effect.

LEFT · HOW YOUR KEYS BEHAVE

Caps Lock on. Breathing: **Caps Word** is on.

Win / ⌘ key locked

Game mode on

Connecting: the whole strip breathes in the connection's colour, blue Bluetooth, green 2.4G, yellow wired. Keys you press now are sent once it connects.

Fast blink: pairing. **Solid for 2 s**: connected. Its key (1 ... 4) lights up too.

RIGHT · POWER

Battery, one LED per 20%: green over 80%, yellow, orange, red at 20% or less. Shown at power-on, when you plug in, and with Fn + \. The top LED breathes while charging.

Charge soon: the bottom LED pulses red below 20%.

You changed a setting: white, lit LEDs show your choice, dim ones the other options. Shown for 2 s.

EVERYDAY SHORTCUTS

Hold **Fn** and every key with a function lights up mint. Hold **Fn**+**M** and the M-layer keys light up mustard.

TOP ROW

	MAC	WINDOWS
Plain	Media keys	F1–F12
With Fn	F1–F12	Media keys
PrtSc	Area ⌘⇧4	Print Screen
Fn PrtSc	Full ⌘⇧3	Snipping Tool

Prefer it the other way round? Fn + M + F swaps F1–F12 and media keys, remembered per device.

BACKLIGHT

Fn + ↑ ↓	Brightness
Fn + ←	Next effect
Fn + →	Colour
Fn + , .	Speed

Add M for the side lights: same keys, plus Fn + M + 0 for one side only.

TYPING

Shift ×2	**Caps Word** The next word in capitals, then back to normal.
Fn + Esc	Lock the computer

SLEEP & BATTERY

The keyboard sleeps when you stop typing. Any key wakes it.

FN +] SLEEP MODE

Full saving (default). Lights off after 2 min, chip off 4 min later. The first key after a long break may take a second.

Lights only. Lights off after 6 min; wakes faster.

Never. For the cable or a full battery.

BATTERY

Fn + B	Battery level on the number row 1 to 0 light up; 0 means 100%.
Fn + \	Keep the battery gauge on
Fn + M + - =	Lights-off time, 1–100 min
Fn + M +]	Sleep now, e.g. before packing it

On battery the backlight runs at half brightness and fades out after 30 s without typing; any key brings it back. Below 20% it switches off. No sleep while charging, on the cable, or in game mode.

GAMING

Faster scanning, no surprise menus, and snap tap for shooters.

Fn + M + G	**Game mode** Fastest key scanning, sleep off. Hold to reset its settings.
Fn + M + Win	**Lock the Win / ⌘ key** So it can't open menus mid-game.
Fn + M + K	**Snap tap** You strafe with A and D. Normally, holding A and pressing D makes the game see both and your character stops. With snap tap the newest key wins, so you change direction instantly. Some competitive games ban it.

SNAP TAP MODE HOLD A, PRESS D	GAME SEES	LET GO OF D
0 · Off	A and D	A
1 · Cancel	D	nothing
2 · Last key wins	D	A again
3 · Neutral	nothing	A again

Mode 2 is what most players want.

ADVANCED

Most people never need these.

MAINTENANCE

Fn + [	Hold 3 s: factory reset Clears all pairings and settings.
Fn + M + Esc	Restart Keep holding Esc to enter the bootloader for flashing.
Fn + M + F2	Wireless wake delay Hold 3 s on the cable: radio firmware update mode.
Fn + M + F1	Debug messages (QMK console, cable)
Fn + C	LED test

KEY FEEL

Fn + M + D	Debounce type Change it only if a key types twice.
Fn + M + F11 F12	Debounce time, 1–100 ms
Fn + M + Caps	Hold to turn Caps Word on or off

REMAP WITH VIA

Open usevia.app with the cable connected and load **nuphy-air75-v2-via_custom_v4.json** from the repository. NuPhy's own file doesn't match this firmware.

Community firmware, not made or supported by NuPhy.

github.com/ablasik/nuphy-qmk