


Reality Engine APEX v10 — iPhone RCP Field Guide

1. Select the project in Field Mode.
2. Place four RCP targets around the scan area; do not put them on one straight line.
3. RCP-001 may be the project origin (0,0,0).
4. Enter the true XYZ coordinate of each target CENTER in metres.
5. Print the supplied RCP target at 100% on A4 (210 x 297 mm).
6. Do NOT use Fit to Page. Matte lamination and rigid mounting are recommended.
7. The exact crosshair center is the control point; the paper edge is not.
8. Open the iPhone scanning app from the system using an HTTPS Universal Link.
9. Allow Camera and LiDAR permissions.
10. Point at RCP-001 until the app shows FOUND, then RCP-002, RCP-003, RCP-004.
11. After 4/4 points are recognized, scan the entire space normally.
12. Finish the scan. The app returns the point cloud and control-point observations.
13. APEX calculates scale + rotation + translation and checks the independent RCP-004.
14. If the check fails, the system asks for re-capture; it never silently publishes bad alignment.
15. Human approval creates the next Digital Twin revision.

Target geometry

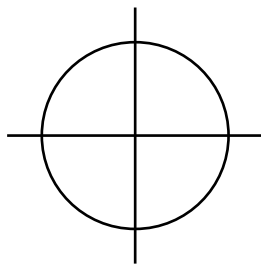

RCP CENTER