

Installing Driver


Next, we will introduce the driver installation of REV4 development board. The driver installation may have slight differences in different computer systems. So in the following let's move on to the driver installation in the WIN 7 system.

The Arduino folder contains both the Arduino program itself and the drivers that allow the Arduino to be connected to your computer by a USB cable. Before we launch the Arduino software, you are going to install the USB drivers.


Plug one end of your USB cable into the Arduino and the other into a USB socket on your computer.

When you connect REV4 board to your computer at the first time, right click the icon of your "Computer" —>for "Properties"—> click the "Device manager", under "Other Devices", you should see an icon for "Unknown device" with a little yellow warning triangle next to it.


This is your Arduino.

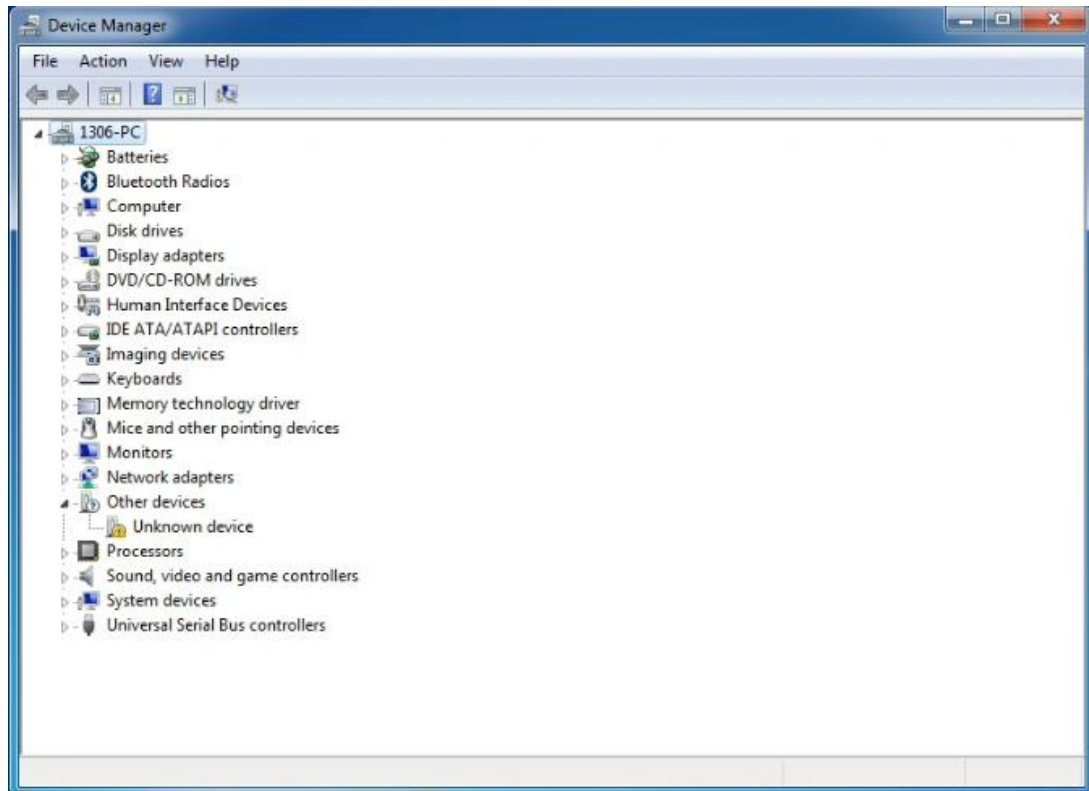


Then right-click on the device and select the top menu option (Update Driver Software...) shown as the figure below.

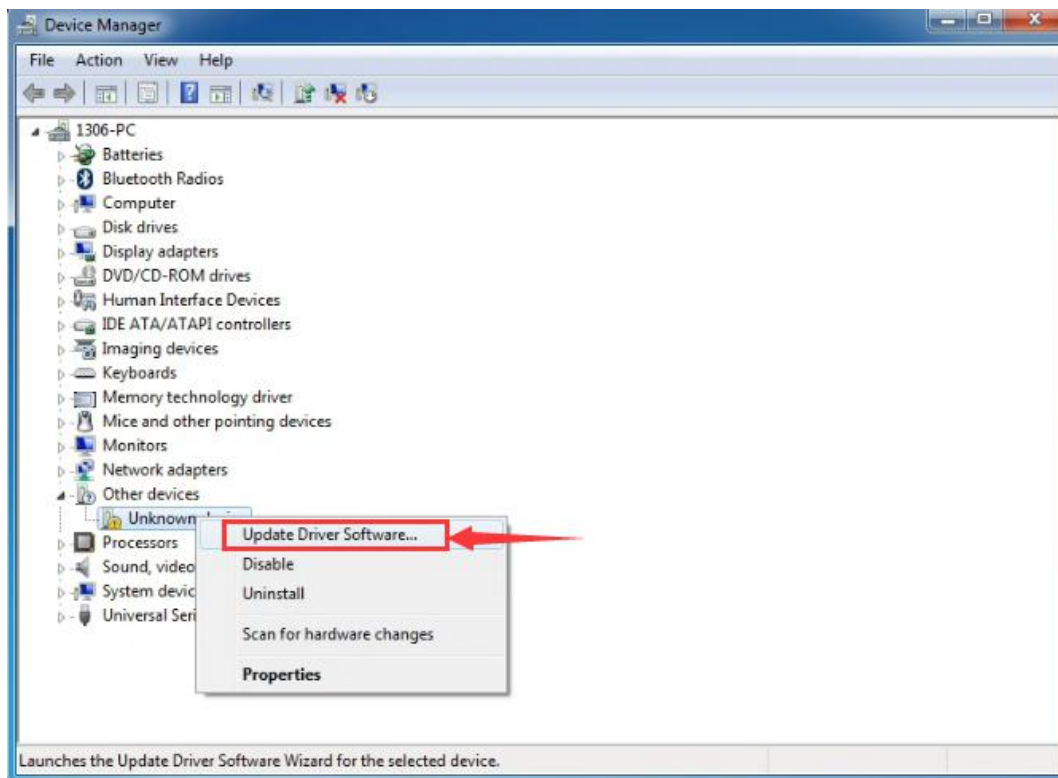


It will then be prompted to either “Search Automatically for updated driver software” or “Browse my computer for driver software”. Shown as below. In this page, select “Browse my computer for driver software”.

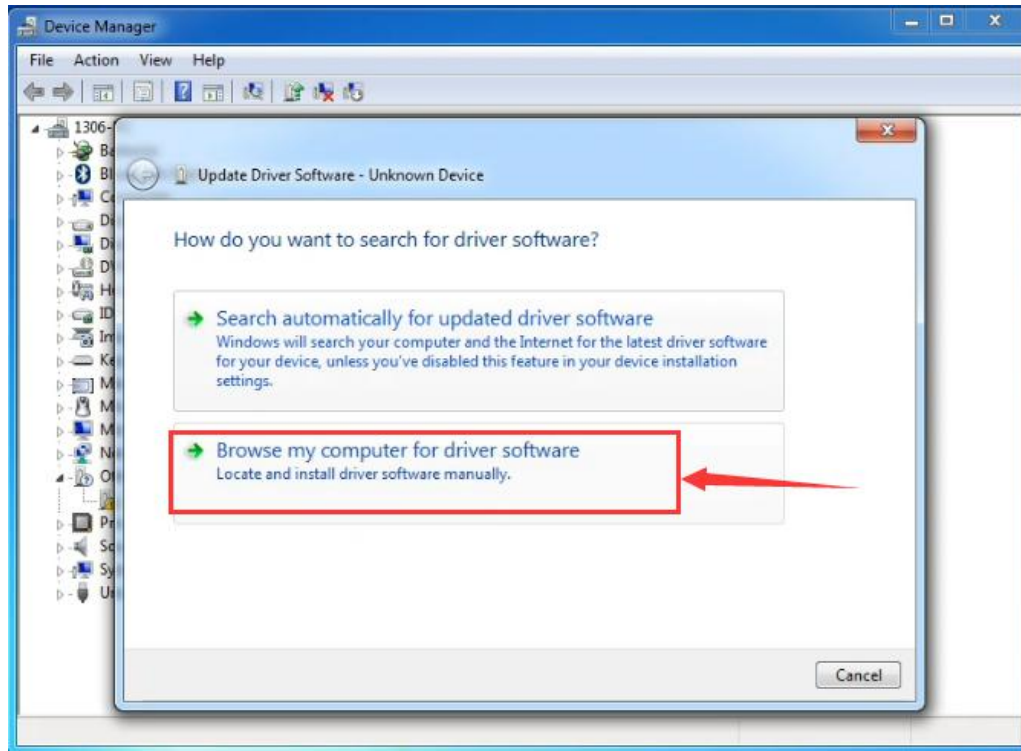


After that, select the option to browse and navigate to the “drivers” folder of Arduino installation.

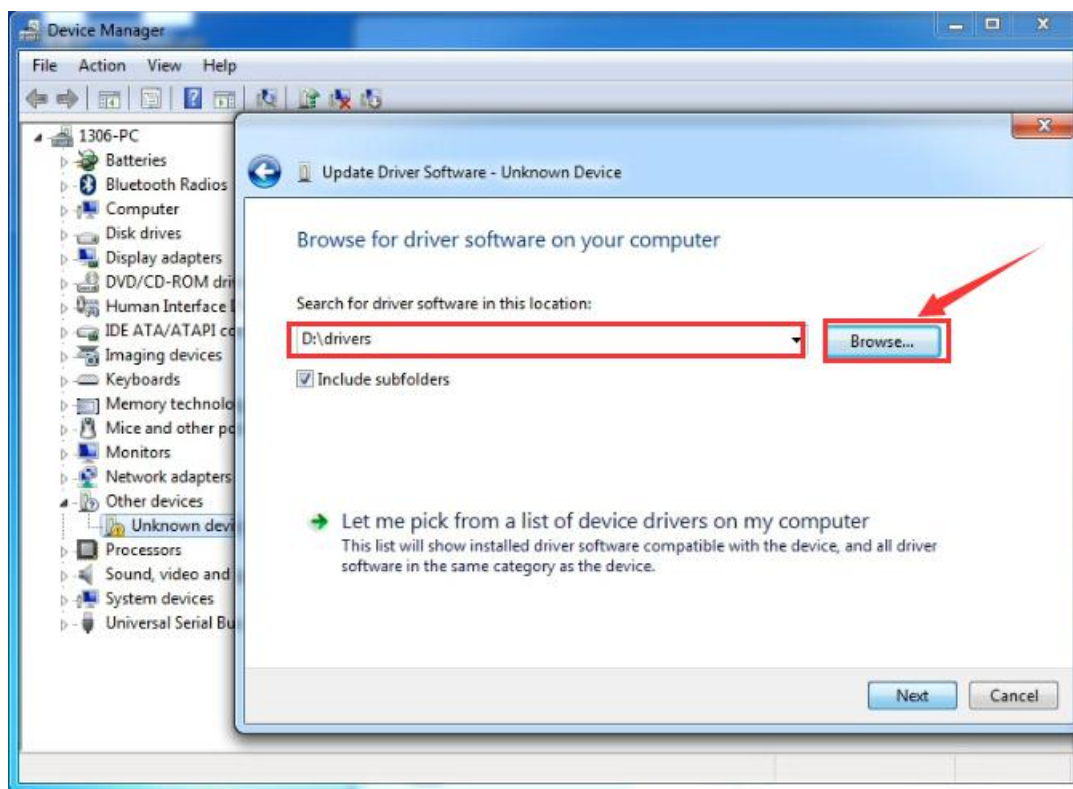

Click “Next” and you may get a security warning, if so, allow the software to be installed. Shown as below.

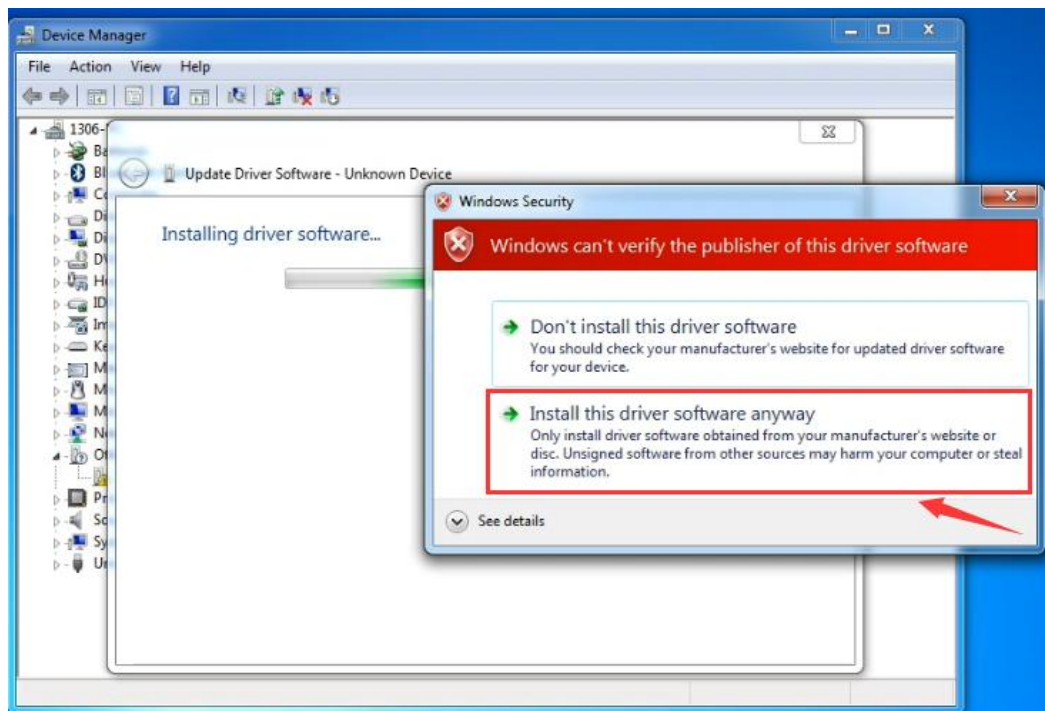

Once the software has been installed, you will get a confirmation message. Installation completed, click “Close”.

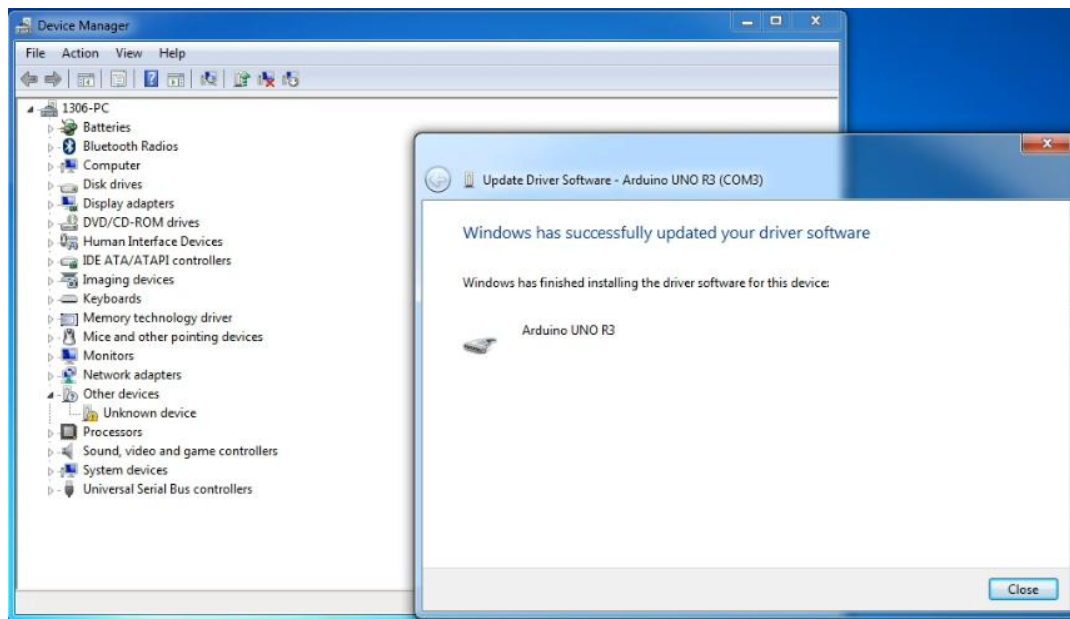

Up to now, the driver is installed well. Then you can right click “Computer” —>“Properties”—>“Device manager”, you should see the device as the figure shown below.

