TEXAS INSTRUMENTS

Electronic Digital Thermostat

Owner's Manual

For important installation information, see the inside front cover of this manual.



Important Information

1. TURN OFF ALL ELECTRIC POWER FOR THE HEATER AND AIR CONDITIONER AT THE FUSE OR CIRCUIT BREAKER LOCATION BEFORE BEGINNING INSTALLATION.

2. This product is for use *only* in homes having central forced air heating *and* air conditioning. It can replace single stage thermostats that operate on a 4 or 5 wire system.

3. This product is NOT FOR USE WITH HEAT PUMPS, HOT WATER HEAT, ELECTRIC BASEBOARD, OR ELECTRIC CEILING HEAT.

4. This product is only for the replacement of a normal low voltage (24v.) thermostat. Most all home thermostats operate on a 24 volt system. DO NOT USE WITH A HIGH VOLTAGE OR A MILLIVOLT SYSTEM. The operating voltage of your thermostat should be clearly marked on a label or on the thermostat case. Remove the front cover to check. (See p. 11.) If not, you can check the system transformer usually located near your furnace. (If you are in doubt about your system voltage—check with your serviceman.)

Copyright © 1979, Texas Instruments Incorporated

Contents

Introduction 2
Features and Functions 2

An Overview of Your Thermostat . . . 3
Digital Display 3
System Switch 3
Fan Switch 4
Mode Switch 5
Number Keys 8
Time and Temperature Keys 8
"Clock" Key 9
"Actual" Key 9

Installation 10
Removing the Old Thermostat 11
Installing the Electronic Digital Thermostat 12

Setting Your Thermostat 17
Setting the Clock 17
Setting the Modes 18
Constant Mode 18
Night Mode 19
Day/Night Mode 22

Checking and Changing Thermostat Settings 27
Checking the Settings 27
Changing the Settings 28

Additional Information 28

Service and Warranty Information . . 30
In Case of Difficulty 30
Battery Replacement 32
Out-of-Warranty Service 32
Exchange Centers 33
If You Need Service Information 33
One-Year Limited Warranty . . . . . Back

Introduction

With the purchase of your Texas Instruments Electronic Digital Thermostat you are contributing to the solution of two of the major problems facing you as an individual and all of us as a nation: inflation and energy shortages. Government and industry studies show that you can substantially reduce the dollars you pay for heating and air conditioning by setting back your thermostat, especially during the day when the house is unoccupied and at night. These studies recommend the installation of an automatic "set-back" thermostat for this purpose. Automatic "set-back" thermostats have proven so effective in reducing energy consumption and cost that they are included in the government's list of products that qualify for energy tax credits.


Texas Instruments has applied its advanced engineering technology to "set-back" thermostats to help you save on your energy bills. And it's so easy and convenient! You can install your new thermostat yourself following the simple directions in this manual. Once it's installed, you can easily set your thermostat to automatically change the temperature of your home at the times you have selected. It continues to regulate the temperature day after day until you change the time and/or temperature settings.

Features and Functions

- Three operating modes: CONSTANT, NIGHT, DAY/NIGHT
- Up to four different time/temperature settings per day
- Digital time and temperature readouts at the touch of a button
- Battery (not included) provides automatic back-up in case of power loss
- Easy do-it-yourself installation
- Simple to set
- Decorative door protects controls

An Overview of Your Thermostat

Let's take a closer look at the features of the unit and how it can automatically help you save on your energy bills. We'll take a brief tour of the face of the thermostat and discuss the functions of the various switches and keys.

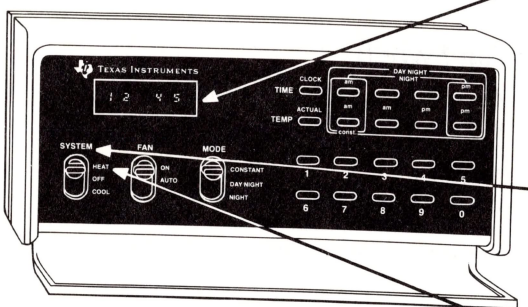


Digital Display

The digital display is located in the upper left corner of the thermostat. According to the key pressed, this area will display either the present time or present temperature or will display the set time or temperature. This will be explained in more detail later.

System Switch

The system switch controls your heating and air conditioning system just as on your previous thermostat. It has three positions: "Heat," "Off," and "Cool."

HEAT: When you move the switch to the "Heat" position, only the furnace can operate.

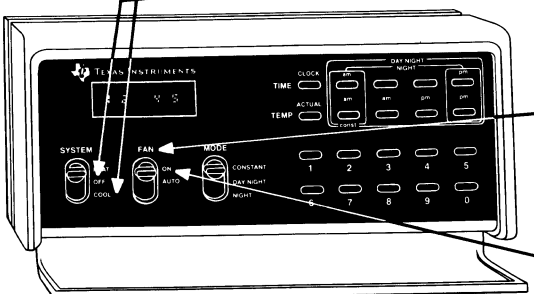


COOL: When it is in the "Cool" position, only the air conditioner can operate.

OFF: When you move the switch to "Off," both systems are off. When this switch is in the "Off" position, neither the furnace nor the air conditioner will operate, regardless of the temperature setting of the thermostat.

Fan Switch

This switch controls your central system fan and works just the same as the fan switch on your previous thermostat. It has two positions: "On" and "Auto."

ON: With the FAN switch in this position, your system fan will run continuously whether your furnace or air conditioner is on or off. Many people prefer to run the fan continuously and have a steady movement of air throughout the home. When cooling your home, setting the fan to "On" allows you to adjust to a slightly

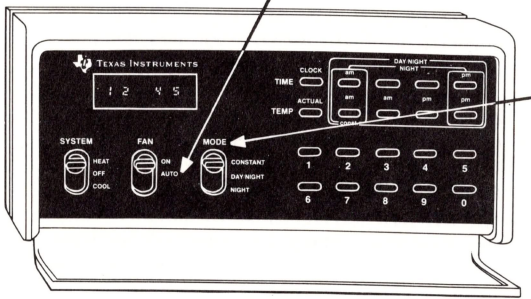


warmer temperature setting without feeling uncomfortable.

AUTO: The AUTO position is used when you want the fan to run only when the furnace or air conditioner is actually in operation. This fan position is normally used in the winter.

Mode Switch


This switch allows you to select energy saving schedules that correspond to your lifestyle. Your Electronic Digital Thermostat offers you three modes, each of which can be set independently of the other two. (We'll explain how to set your thermostat in the next section.) The three modes available are: "CONSTANT," "DAY/NIGHT," and "NIGHT." When and how you can use each mode is discussed below.

You can move the switch from one mode to another without affecting the times or temperatures you have programmed in any other mode. The thermostat remembers your instructions for each mode until you intentionally change it.

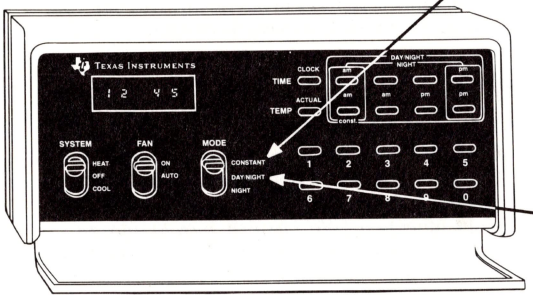


CONSTANT: This mode, much like your previous thermostat, allows you to select and maintain a temperature for your home that is independent of time. The CONSTANT mode can be used anytime you want to maintain a constant temperature in your home. For example, you might choose this mode when you are entertaining and do not want the thermostat to automatically change the temperature at your normal bedtime. You may also want to use this mode when you're away from home on vacation or any other time you want the thermostat to maintain a constant temperature.

DAY/NIGHT: You receive the maximum benefit from your thermostat by using the DAY/NIGHT mode. This setting is normally used when no one in the family is home during part or all of the day. In this mode, the thermostat automatically sets itself to the temperature settings you select for (1) rising time, (2) after you leave for work, (3) coming home time, and (4) bedtime. Thus you save energy by having your thermostat set at a lower temperature (or higher in the summer)

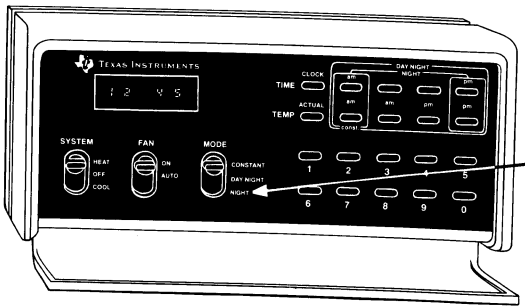

while you are away during the day and when you are asleep. Your home temperature is comfortable when you awake and when you arrive home in the evening. You can set two different AM times and temperatures and two separate PM times and temperatures. This mode is also useful if a person staying at home during the day normally prefers a temperature setting that is different from the one preferred by the other family members.

NIGHT: You can realize significant savings even if you only change the temperature for one time period of the day. For example, you can use this mode position to automatically change the temperature at your normal bedtime and return the temperature to a comfortable setting before you awake. This is also a useful mode for weekends when the family is home most of the day.

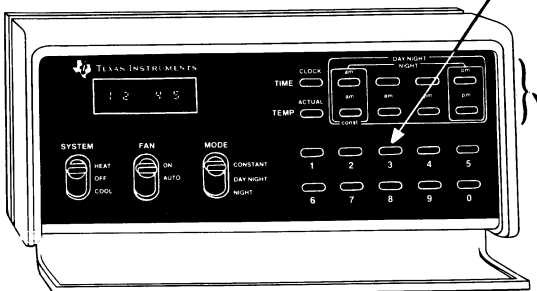


Number Keys

The keys labeled 0-9 are used to key in the time or temperature. For example, to key in 10:25, press [1], then [0], then [2], then [5]. To set the temperature at 72°, press the [7] key, then the [2] key (the exact procedure will be explained in detail later.)

Time and Temperature Keys

The keys in the top right corner of the thermostat are used in combination with the number keys to set times and temperatures. The top row of keys is for the TIME; the lower row of keys is for TEMP (temperature). The temperature is always set in Farenheit degrees. In the next section we'll talk about these keys in more detail.

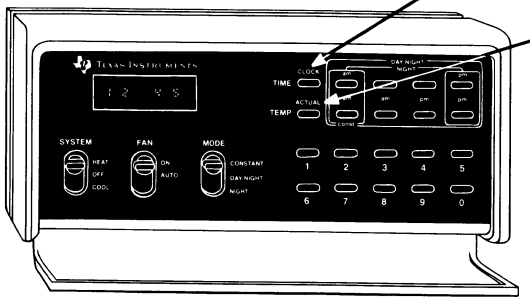

"Clock" Key

Once the clock has been set you can press this key to see the current time.

"Actual" Key

When you press this key, the display shows you the current temperature of your home. Some difference is to be expected between the temperature you have set and the actual temperature reading due to the on/off cycle of your heating and cooling system. The difference you observe will be less than one degree in most cases.

Installation

Important

1. This product is for use *only* in homes having central forced air heating and air conditioning. It can replace single stage thermostats that operate on a 4 or 5 wire system.

2. This product is NOT FOR USE WITH HEAT PUMPS, HOT WATER HEAT, ELECTRIC BASEBOARD, OR ELECTRIC CEILING HEAT.

3. This product is only for the replacement of a normal low voltage (24v.) thermostat. Do not use with a high voltage or a millivolt system.


4.  TURN OFF THE ELECTRIC POWER FOR THE HEATER AND AIR CONDITIONER AT THE FUSE OR CIRCUIT BREAKER LOCATION BEFORE BEGINNING INSTALLATION.

Your Texas Instruments Electronic Digital Thermostat is simple to install. The only tools you'll need are a screwdriver and an electric hand drill.

Removing the Old Thermostat

First remove the old thermostat from the wall following these steps:

1. Remove the front cover of the old thermostat.

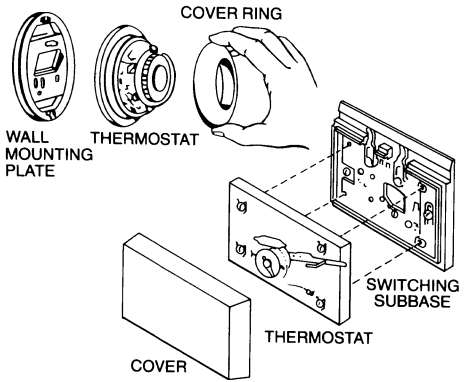

2. If your old thermostat has a switching subbase or wiring wall mounting plate, remove the thermostat section by unscrewing the indicated screws. If the wiring is directly to the thermostat, go on to the next step.

3. Determine the type of your old thermostat by comparing the wire terminal markings it is currently using to Table I below.

THERMOSTAT TYPE	PRESENT THERMOSTAT TERMINAL MARKINGS				
A	R5	Y6	G	4	—
B	R	Y	G	W	—
C	RH	Y	G	W	RC
D	RC	Y	G	W	4
E	M	H	V	C	F

Table I

If your wiring does not correspond to one of these thermostat types, call your serviceman for installation assistance.

4. Loosen the wires connected to each terminal on the old thermostat. To avoid confusion and possible miswiring, remove each wire, one at a time, and label it using the self-adhesive WIRE IDENTIFICATION LABELS packed with your new Texas Instruments thermostat. Label each wire to correspond with the *new* terminal identification. TABLE II shows the relationship between the old terminal and new terminal markings.


WIRE IDENTIFICATION LABELS										62100-5000
TYPE A	OLD	R5	OLD	Y6	OLD	G	OLD	4	OLD	
	NEW	RH	NEW	Y	NEW	G	NEW	W	NEW	
TYPE B	OLD	R	OLD	Y	OLD	G	OLD	W	OLD	
	NEW	RH	NEW	Y	NEW	G	NEW	W	NEW	
TYPE C	OLD	RH	OLD	Y	OLD	G	OLD	W	OLD	RC
	NEW	RH	NEW	Y	NEW	G	NEW	W	NEW	RC
TYPE D	OLD	4	OLD	Y	OLD	G	OLD	W	OLD	RC
	NEW	RH	NEW	Y	NEW	G	NEW	W	NEW	RC
TYPE E	OLD	M	OLD	C	OLD	F	OLD	H	OLD	V
	NEW	RH	NEW	Y	NEW	G	NEW	W	NEW	RC

Table II

5. Remove the old wall plate. Save your old thermostat in case you move and want to take your Electronic Digital Thermostat with you.


Installing the Electronic Digital Thermostat

1. Remove the front of the thermostat from the wall plate by inserting a coin into the space (at the bottom center) between the front case and the wall plate. Twist the coin to unlatch the case. Swing the bottom of the case out; then lift it up.

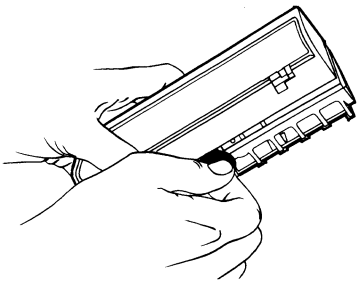


2. Attach the wall plate to the wall using the screws and plastic expansion plugs provided. Follow these simple steps:


- Place the wall plate at the desired position on the wall so that the labeled wires (from the wall) will feed through the large hole in the wall plate. Mark the wall to indicate where the screw holes need to be. Check that the wall plate is level for best appearance.
- Drill holes for the plastic expansion plugs
  - 3/16" hole for mounting in plaster, sheetrock, drywall, celotex, gypsum board.
  - 7/32" hole for mounting in masonry, brick, concrete, tile hardboards, plywood, masonite.

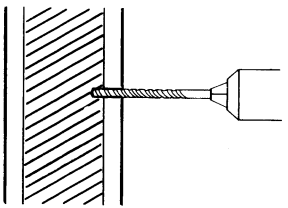


- Insert the plastic expansion plugs into the holes.

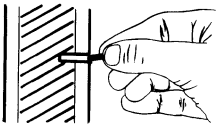

- Feed the labeled wires (from the wall) through the wall plate.

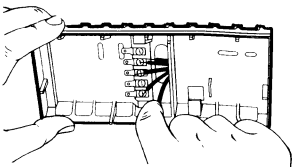


- Screw the wall plate to the wall using the screws provided.

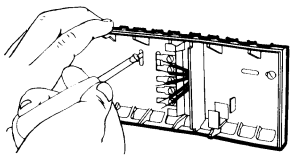


3. Next, connect the labeled wires to the wall plate. Be sure to match the "new" terminal identification on each wire label to the corresponding terminal on the wall plate.

Loosen each screw, one at a time. Wrap the wire with the label corresponding to that terminal around the screw. Tighten the screw. If you have only four wires coming from the wall, just connect those four wires. For future reference, leave the labels on the wires after reconnecting them. Make sure that bare wires from one terminal are not touching another terminal or wire. Press the wires back against the wall plate so they won't interfere with thermostat operation. *Again, check that no bare wires are touching each other.*

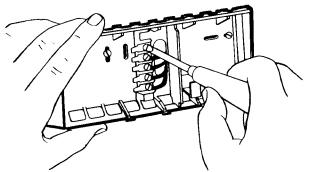

CAUTION: THIS STEP IS NECESSARY FOR PROPER OPERATION


4. A small switch is located inside the front case (near the lower center) to indicate whether you have a gas/oil furnace or an electric heating system. If you have a gas/oil system, slide the switch to the right (labeled "G"). If you have an electric system, slide the switch to the left (labeled "E").

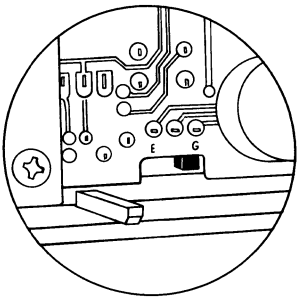

5. Now, wire your new thermostat to the terminals. Hold the front case of the thermostat in one hand. With the other hand, push the five color-coded wires onto the respective terminals on the wall plate, using the "quick connects."


Terminal	Wire Color
G	green
Y	yellow
RC	red
W	white
RH	red

(Either of the two red wires can be connected to the RH terminal. It makes no difference which red wire is connected to RC and which one is connected to RH.)

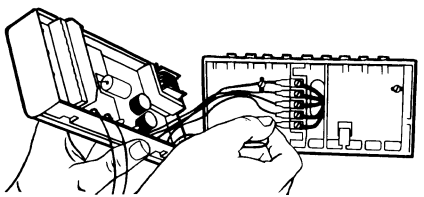


If your present system only has four wires, note that one of the red wires from your new thermostat is connected to an unused terminal.

6. Place a 9-volt alkaline battery (not included) in the slot provided in the wall plate. Connect the battery terminal — from the front case — to the battery. (The battery provides backup power for the clock and the thermostat memory in case of a power failure. The display does not operate during a "brown out" or power failure to reduce any possible battery drain.)

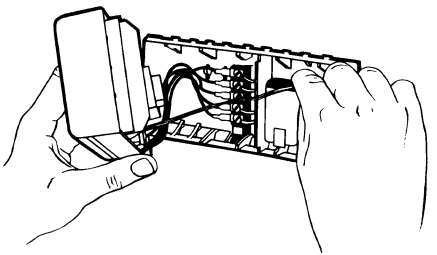

7. Carefully replace the front case of the thermostat making certain all wires are inside the case. The case hooks at the top, so align the upper edge first. Then swing the front case downward. Snap it to the wall plate at the bottom edge.

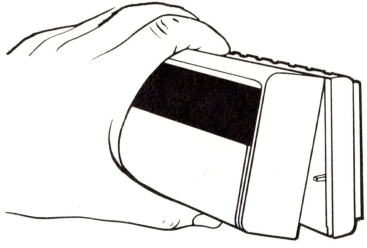


8. Turn on the electric power at the fuse box or circuit breaker before continuing.

When the thermostat is first connected, the clock will start at 12:00 AM and the temperature will be set at 72°F. If nothing more is done, when the system switch is in the Heat or Cool position, the thermostat will maintain the room temperature at 72°F.

Setting Your Thermostat

Setting the times and temperatures is quite easy.

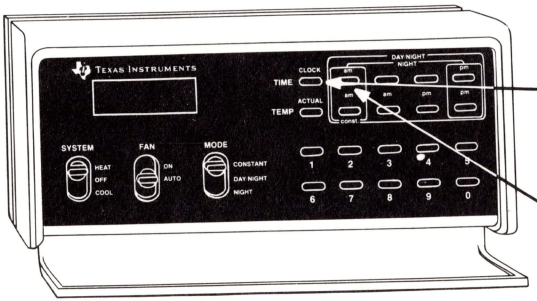

The first step is to set the clock.

Setting the Clock


When setting the clock, the SYSTEM, FAN, and MODE switches can be in any position.

Procedure	Display
1. Press the CLOCK key	12 00*
2. Enter present time using number keys. (Example: for 10:25 press [1] [0] [2] [5])	10 25
3. Press the [AM] or [PM] key (with the green labels). Remember that noon is 12:00 PM and midnight is 12:00 AM.	10 25

(If you do not press AM or PM after about 10 seconds, the clock will retain the previous AM or

**Typical time display*

PM setting. After pressing [AM] or [PM] the display goes blank. The clock is now running at the correct time.)

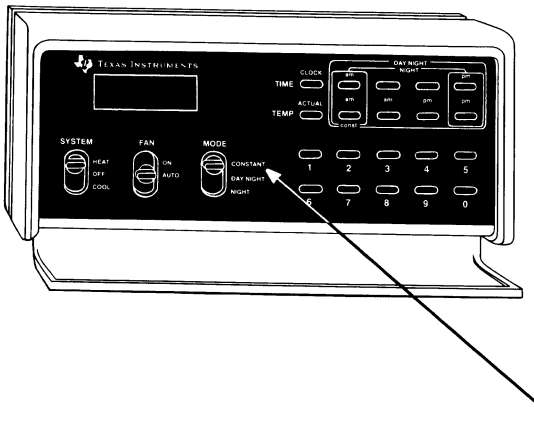


Setting the Modes

It's easy to set the modes to coordinate with your lifestyle and schedules. You may want to set all three modes at one time or just set the mode that adds convenience to your normal schedule. The MODE switch can be moved from one mode to another without disturbing the information stored in the thermostat. It remembers exactly the times and temperature you've selected until you change the settings.

(For the following examples, we'll assume you are setting your thermostat for the heating cycle. The procedure is exactly the same for cooling.)

Constant Mode

Procedure	Display
1. Set MODE switch to CONSTANT.	blank

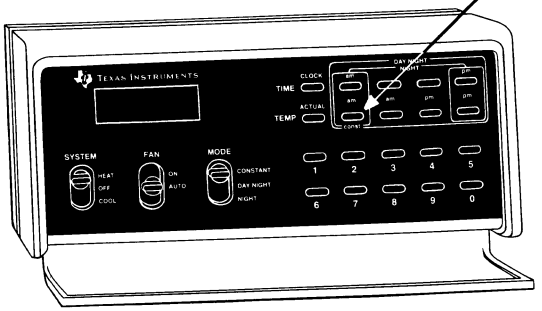


Procedure	Display
2. Press const. key on the TEMP row.	72 (or last temperature you set for this mode)
3. Enter desired temperature using number keys (example: 70°F, press [7] [0])	70

After about 10 seconds, the display blanks. Now, whenever you position the MODE switch to CONSTANT, the thermostat will control the home temperature at your desired temperature setting (70° in this case).

Night Mode


The time it takes for the temperature to return to the desired comfort point varies according to the individual home and heating or cooling system. Therefore, the time setting should be prior to your wake up or return home times. You'll want to experiment to see how much time you need to

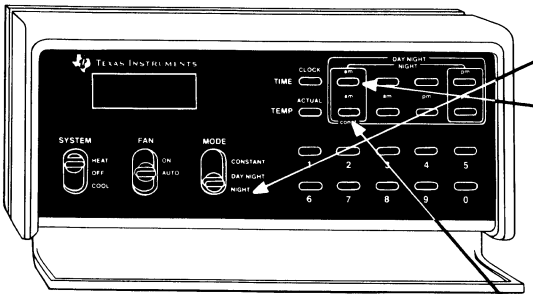


allow for your home to reach the desired temperatures.

(Notice that the TIME and TEMP keys for the NIGHT mode are the four keys inside the yellow outlines.)

Procedure	Display
1. Set MODE switch to NIGHT.	blank
2. Press the first [AM] key on the TIME row.	0 00 (or the last set time)
3. Enter your awakening time (or some time earlier) using the number keys (example: 6:15, press [6] [1] [5])	6 15
4. Press the first [AM] key on the TEMP row.	00 (or the last set temperature)

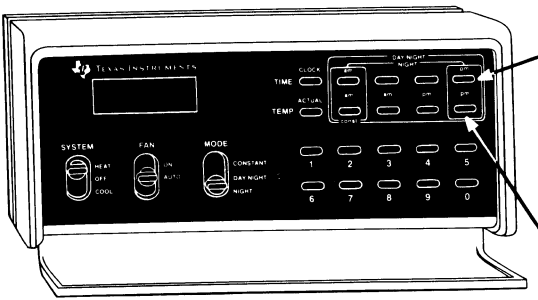

Procedure	Display
5. Enter the desired daytime temperature using the number keys (example: 68°F, press [6] [8])	68
6. Press the last [PM] key on the TIME row	0 00 (or last set time)
7. Enter your normal bedtime using the number keys (example: 11:15, press [1] [1] [1] [5])	11 15
8. Press the last [PM] key on the TEMP row.	00 (or last set temperature)

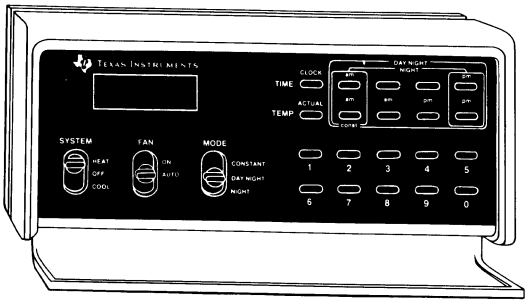


Procedure	Display
9. Enter the desired sleeping temperature using the number keys (example: 60°F, press [6] [0])	60

The NIGHT mode is now set. After 10 seconds, the display goes blank. The thermostat will change the temperature to the settings you selected at the times you've indicated. It will continue to make these adjustments automatically until you intentionally change the times and/or temperatures.

(Note: The [AM] and [PM] keys in the middle are not used in the NIGHT mode.)

Day/Night Mode


With this mode, you can set two AM and two PM times and temperatures. From left to right, the TIME and TEMPERATURE keys are in order according to the time of day. In other words, you must enter the *earliest* morning (AM) time and

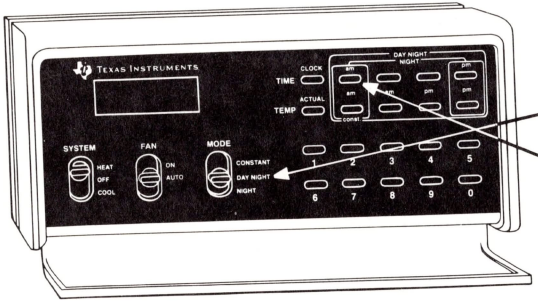


temperature using the first set of keys on the left. The latest evening (PM) time and temperature are entered using the last keys on the right. The procedure is just like the one for NIGHT mode except you have two additional time and temperature settings.

(For this mode, use all eight keys in the orange outline.)


Procedure	**Display**
1. Set MODE switch to DAY/NIGHT.	blank
2. Press first [AM] key on TIME Row.	0 00 (or last set time)
3. Enter your awakening time (or a few minutes before awakening time) using the number keys (example: 5:45, press [5] [4] [5])	5 45

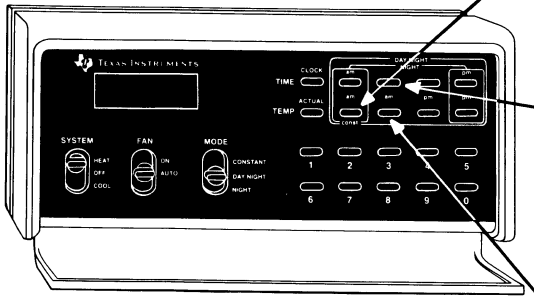

Procedure	Display
4. Press first [AM] key on TEMP row.	00 (or last set temperature
5. Enter desired awakening temperature using number keys (example: 70°F, press [7] [0])	70
6. Press the second [AM] key on the TIME row.	0 00 (or last set time)
7. Enter the time you leave for work using the number keys (example: 8:45, press [8] [4] [5])	8 45
8. Press the second [AM] key on the TEMP row.	00 (or last set temperature)

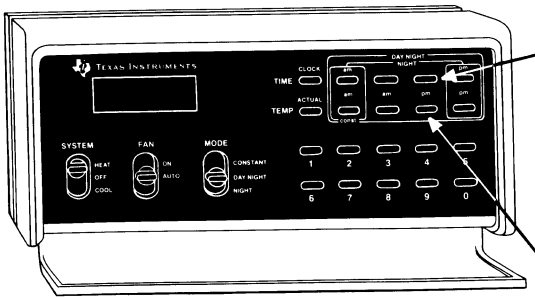

Procedure	Display
9. Enter the desired daytime (or "away") temperature using the number keys (example: 60°F, press [6] [0])	60
10. Press the first [PM] key on the TIME row.	0 00 (or last set time)
11. Enter the time you arrive home (or a few minutes earlier) using the number keys (example: 4:25, press [4] [2] [5])	4 25
12. Press the first [PM] key on the TEMP row.	00 (or last set temperatures)

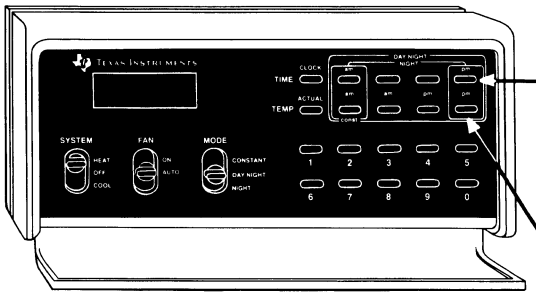

Procedure	Display
13. Enter the temperature you want for your arriving home time using the number keys (example: 71°F, press [7] [1])	71
14. Press the last [PM] key on the TIME row.	0 00 (or last set time)
15. Enter your normal bedtime using the number keys (example: 10:15, press [1] [0] [1] [5])	10 15
16. Press last [PM] key on TEMP row.	00 (or last set temperature)
17. Enter your desired sleeping temperature using number keys (example: 62°F, press [6] [2])	62

Your DAY/NIGHT mode is now set. After about 10 seconds the display will go blank. The thermostat will remember these times and temperatures until you intentionally change the numbers.

The time and temperature settings can be performed in any order you wish. This is particularly convenient when you desire to change settings for new hours, new seasons, etc. The next section describes how you can check and/or change your thermostat settings.

Checking and Changing Thermostat Settings

Checking the Settings

You can easily check the times or temperatures you have set into the thermostat. Simply place the MODE switch in the mode you want to check. Then press the AM or PM keys for the times or temperatures you want to check. For example, if you want to check the PM settings in the NIGHT mode:

1. Set MODE switch to NIGHT.
2. Press the last PM key on the TIME row. The display shows the set PM time for the NIGHT mode.
3. Press the last PM key on the TEMP row. The display area shows the set temperature for the PM time of the NIGHT mode.
4. After 10 seconds, the display goes blank.

Changing the Settings

Changing the settings on the thermostat is simple. You can change one time or one temperature or all the settings whenever you desire. Just place the MODE switch in the desired mode, press the desired TIME or TEMP buttons, and enter the new times or temperatures using the number keys. For example, assume you have previously set the second morning time (leaving home time) for 8:00 AM. Now, you don't leave the house until 8:45.

1. Set the MODE switch to DAY/NIGHT.
2. Press the second [AM] button on the TIME row.
3. When you see 8 00 in the display, press the number keys to set the new time ([8] [4] [5]). The display now shows 8 45.
4. After about 10 seconds, the display goes blank. The new time (8:45) is entered into the thermostat.

Additional Information

1. The temperature range for this thermostat is 50°F to 99°F. The entry of invalid temperatures erases both the previous time and temperature entries for that time setting. If you do not enter a valid temperature for a time setting, the thermostat maintains the temperature at the last valid setting. For instance, you set the first AM temperature at 68°F and then attempt to set the second AM temperature at 40°F. The thermostat will not accept the 40°F entry. It erases any previously entered time or temperature for the second AM time. Instead it maintains the home at the 68° (entered for the first AM setting) until it comes to the next valid setting.

2. If, for any reason, no valid temperatures (50°F-99°F) are entered in *any* of the NIGHT or DAY/NIGHT settings, the thermostat automatically maintains the temperature entered for the CONSTANT mode. If no temperature (or an invalid temperature) is entered in the CONSTANT

mode, the thermostat controls the temperature at 72°F.

3. Your thermostat has been designed to protect your furnace or air conditioner against possible damage. The thermostat prevents system operation during potentially dangerous power fluctuations and brown outs. Also, the thermostat will ignore short gusts of hot or cold air that could make your furnace or air conditioner turn on and off for short periods, causing needless wear and tear on the equipment and wasting energy. One result of this is that if you make a change in the temperature setting, there could be a pause of up to three minutes before your furnace or air conditioner turns on or off.

4. If your lifestyle is such that you work at night and are at home during the day, you can still put the digital thermostat to full use. Just remember that the DAY/NIGHT position has two AM times and two PM times, and that the set keys always go from the *earliest* AM time on the far left to the latest PM time on the far right. (AM changes to PM at noon — 12:00 PM — and PM changes to AM at midnight — 12:00 AM).

This simple example should help.

Midnight 12:00 AM		Noon 12:00 PM	Midnight 12:00 AM
1:00 AM 62°F Go to bed	9:00 AM 70°F Get up	3:00 PM 60°F Leave for work	11:30 PM 72°F Get home

Service and Warranty Information

In Case of Difficulty

Your Texas Instruments Electronic Digital Thermostat has been carefully engineered for reliability and safety. It should be relatively trouble free. If you do have problems, some of the following suggestions may help.

If ...	Then ...
1. Heat or air conditioning will not come on.	1. Wait for the time delay. Check fuses or circuit breakers. Check the wiring to make sure you have all wires connected to the correct terminals.
2. Heat or air conditioning stays on continuously.	2. Check wiring as above.
3. Heat comes on instead of air conditioning or vice versa.	3. Check wiring as above.
4. Display is not functioning.	4. Check for power failure or "brown out". Check fuses or circuit breakers.

If . . .	Then . . .
5. The clock shows incorrect time or settings are erased following power failure.	5. Replace 9-volt alkaline battery.
6. Temperature not changing at the set times.	6. Reset clock, being sure to enter AM or PM. Check MODE switch position. Check settings.
7. If fan comes on immediately with gas or oil heat.	7. Check "G/E" switch to be sure it is in the "G" position.
8. If fan does not come on with electric heat.	8. Check "G/E" switch to be sure it is in the "E" position.

If none of the above procedures corrects the difficulty, return the thermostat to your dealer or postage PREPAID to the applicable SERVICE FACILITY listed in this manual.

For your protection, the thermostat should be sent insured; Texas Instruments cannot assume any responsibility for loss of or damage to uninsured shipments. Please include information on the difficulty experienced, as well as return address information including name, address, city, state, and zip code. The shipment should be carefully packaged (in the original container if possible) and adequately protected against shock and rough handling.

NOTE: The P.O. box number listed for the Lubbock Service Facility is for United States parcel post shipments only. If you desire to use another carrier, the street address is:

Texas Instruments Incorporated
2305 University Avenue
Lubbock, Texas 79415

Battery Replacement

The 9-volt alkaline battery should be changed once a year. The only function of the battery is to take over in case of power failure. It maintains the correct time to keep the thermostat memories intact so you do not have to re-enter the time and temperature settings.

Out-of-Warranty Service

Because our service facility serves the entire United States, it is not feasible to hold units while providing repair estimates. For simplicity of operation, we have established flat-rate charges for all out-of-warranty repairs. To obtain the correct charges for a particular model, write or call Consumer Relations at the address on the next page.

Exchange Centers

If your thermostat requires service, instead of returning the unit to your dealer or to a service facility for repair, you may select to exchange the thermostat for a factory-reconditioned thermostat of the SAME MODEL (or equivalent model specified by TI) at one of the exchange centers which have been established across the United States. No charge will be made for the exchange with proof-of-purchase during the first 90 days. The exchanged unit will be in warranty for the remainder of the original warranty period or for 6 months, whichever is longer. A HANDLING FEE WILL BE CHARGED FOR EXCHANGE AFTER 90 DAYS FROM THE DATE OF PURCHASE. Out-of-warranty exchanges will be charged at the rates in effect at the time of the exchange. Write or call the Consumer Relations Department for further details and the location of the nearest exchange center.

If You Need Service Information

If you need service information for your thermostat write Consumer Relations at

Texas Instruments Incorporated
P.O. Box 53
Lubbock, Texas 79408

Or, call Consumer Relations at 800-858-1802 (toll-free within all contiguous United States except Texas) or 800-692-1353 (toll-free within Texas). If outside the contiguous United States, call 806-747-3841. (We regret that we cannot accept collect calls at this number.)

One-Year Limited Warranty

THIS TEXAS INSTRUMENTS CONSUMER WARRANTY EXTENDS TO THE ORIGINAL CONSUMER PURCHASER OF THE PRODUCT.

WARRANTY DURATION: This Texas Instruments consumer product is warranted to the original consumer purchaser for a period of one year from the original purchase date.

WARRANTY COVERAGE: This Texas Instruments consumer product is warranted against defective materials or workmanship. **THIS WARRANTY DOES NOT COVER THE BATTERY AND IS VOID IF THE PRODUCT HAS BEEN DAMAGED BY ACCIDENT, UNREASONABLE USE, NEGLECT, IMPROPER SERVICE OR OTHER CAUSES NOT ARISING OUT OF DEFECTS IN MATERIAL OR WORKMANSHIP.**

WARRANTY DISCLAIMERS: ANY IMPLIED WARRANTIES ARISING OUT OF THIS SALE, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE ABOVE ONE YEAR PERIOD. TEXAS INSTRUMENTS SHALL NOT BE LIABLE FOR LOSS OF USE OF THE PRODUCT OR OTHER INCIDENTAL OR CONSEQUENTIAL COSTS, EXPENSES, OR DAMAGES INCURRED BY THE CONSUMER OR ANY OTHER USER.

Some states do not allow the exclusion or limitation of implied warranties or consequential damages, so the above limitations or exclusions may not apply to you.

LEGAL REMEDIES: This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

WARRANTY PERFORMANCE: During the above one year warranty period, your TI Electronic Digital Thermostat will either be repaired or replaced with a reconditioned comparable model (at TI's option) when the Electronic Digital Thermostat is returned postage prepaid to a Texas Instruments Service Facility listed below.

The repaired or replacement thermostat will continue the warranty of the original unit or six months, whichever is longer. Other than the postage requirement, no charge will be made for such repair or replacement of in-warranty thermostats.

TI strongly recommends that you insure the product for value, prior to mailing.

TEXAS INSTRUMENTS CONSUMER SERVICE FACILITIES

U.S. Residents:

Texas Instruments Service Facility
P.O. Box 2500
Lubbock, Texas 79408

Canadian Residents Only:

Geophysical Services Incorporated
41 Shelley Road
Richmond Hill, Ontario, Canada L4C5G4

Consumers in California and Oregon may contact the following Texas Instruments offices for additional assistance or information.

Texas Instruments Consumer Service
831 South Douglas Street
El Segundo, California 90245
(213)973-1803

Texas Instruments Consumer Service
10700 Southwest Beaverton Highway
Park Plaza West
Beaverton, Oregon 97005
(503)643-6758

TEXAS INSTRUMENTS
INCORPORATED
DALLAS, TEXAS

Printed in U.S.A.

62100-2000