# Page 2 LPC3154 Powering and Unused parts

## Page 3

LPC3154 Digital I/O

### Page 4


JTAG Interface

#### Page 5

LPC17XX with Expansion connector

## Page 6

LPC17XX

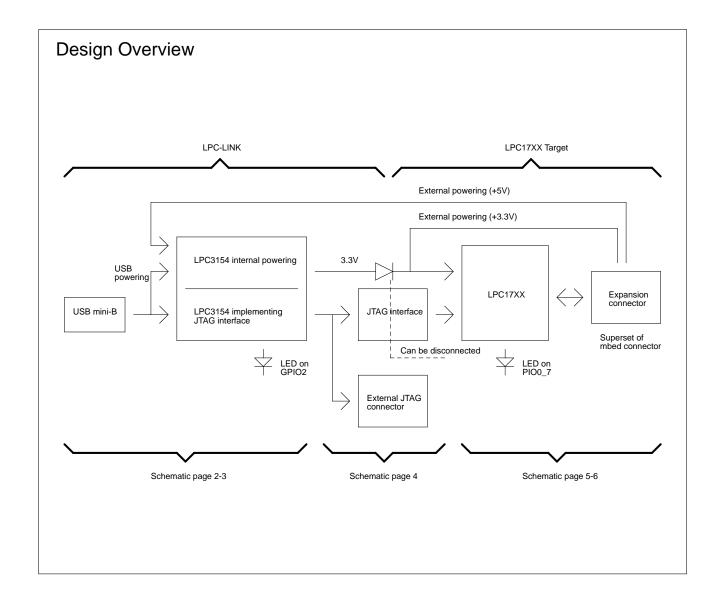

UL = UnLoaded = normally not mounted component.

Default jumper settings are indicated in the schematic. However, always check jumper positions on actual boards since there is no guarantee that all jumpers are in default place.

## **NXP Semiconductors**

TITLE: LPCXpresso LPC17xx rev B

Document Number: REV:

Date: 2010-04-07 6:26:42 PM Sheet: 1/7

