

**STEP 1** – place the IV pole clamp on the larger portion of the IV pole, approximately 1" **below** the chrome adjustment and assure the clamp is seated against the IV pole as shown.

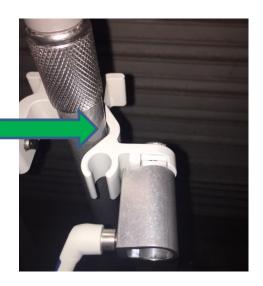



**STEP 2** – tighten the bolt clamp so it is positioned in the **MIDDLE** of the pole and **NOT** on the edge.

**CAUTION** – do <u>NOT</u> position and then tighten the bolt clamp to the side of the IV pole as this will bend the bolt and make the clamp inoperable.

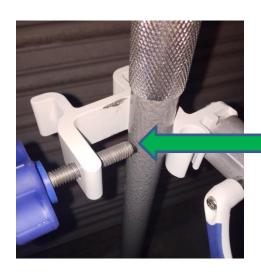

**Questions?** 

Acentus LLC 866-684-2507 office • Support@Acentus365.com www.Acentus365.com