Adafruit Feather ESP32-S2

https://www.adafruit.com/product/5000

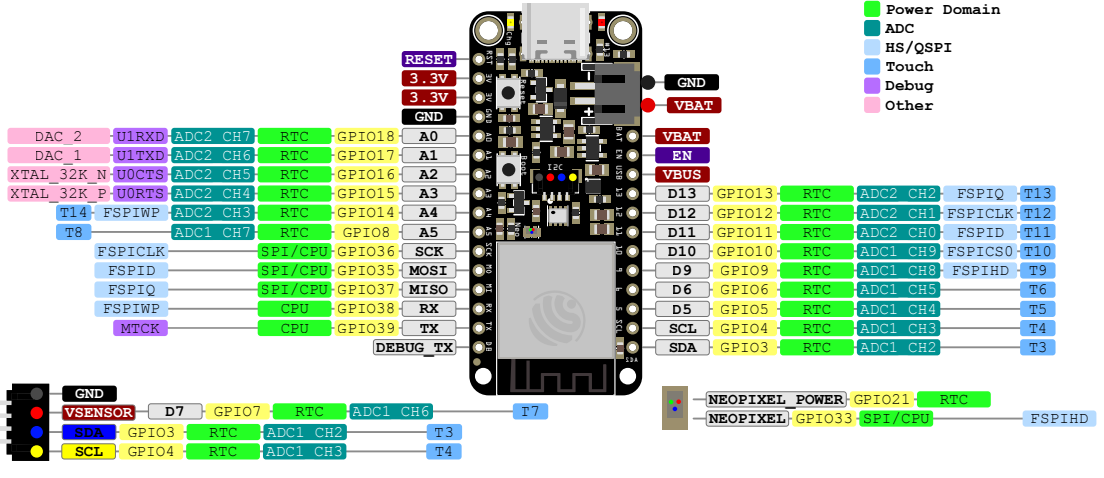

VSENSOR is off by default. To enable, set pin 7 to output and drive LOW.