

The pilot can also enable/disable all Vspeed Reference Bugs as a group.

Enabling/disabling all Vspeed Reference Bugs as a group:

- 1) Press the Tmr/Ref Softkey.
- 2) Press the MENU Key.
- **3)** To activate all Vspeed bugs, press the **ENT** Key with 'All References On' highlighted.
- **4)** To remove all Vspeed bugs, turn the **FMS** Knob to highlight 'All References Off' and press the **ENT** Key.
- 5) To remove the References Window, press the **CLR** Key or the **Tmr/Ref** Softkey.

Restoring all Vspeeds defaults:

- 1) Press the **Tmr/Ref** Softkey.
- **2)** Press the **MENU** Key.
- **3)** Turn the large **FMS** Knob to highlight 'Restore Defaults' and press the **ENT** Key.

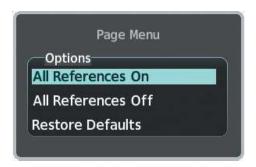


Figure 2-5 Page Menu for the References Window

GENERIC TIMER

The generic timer can be accessed via softkeys on the PFD and allows for quick access for timing functions (either counting up or down) for the pilot.

- 1) Press the **Tmr/Ref** Softkey.
- **2)** Turn the large **FMS** Knob to select the Timer field (HH:MM:SS).
- 3) Use the **FMS** Knob to enter the desired time.
- **4)** Press the **ENT** Key. The Up/Dn field is now highlighted.
- **5)** Turn the small **FMS** Knob to display the Up/Dn Window.
- **6)** Turn the small **FMS** Knob to select 'Up' or 'Dn'.
- **7)** Press the **ENT** Key. 'Start?' is now highlighted.
- **8)** Press the **ENT** Key to start the timer. The field changes to 'Stop?'. If the timer is counting down, it will start counting up after reaching zero.
- 9) To stop the timer, press the **ENT** Key with 'Stop?' highlighted. The field changes to 'Reset?'.
- **10)** To reset the timer, press the **ENT** Key with 'Reset?' highlighted. The field changes back to 'Start?' and the digits are reset.
- **11)** To remove the window, press the **CLR** Key or the **Tmr/Ref** Softkey.