


Frequently Asked Questions

How to use the Deleum Tool String Editor?


1. Select the desired tool from the tool library on the left.




- a. You may search for a specific tool using the search bar.
- b. Alternatively, search by category by using the filter.
- 2. Click and drag the tool towards the "drop zone".

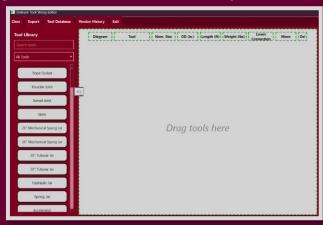


3. Select the nominal size.

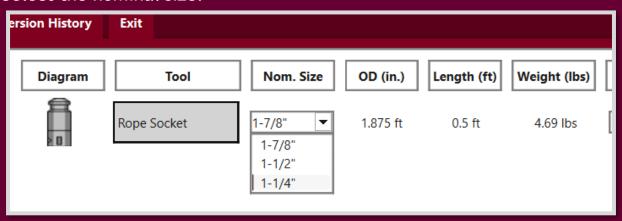


- a. The OD, length, and weight will appear automatically.
- 4. Select the connection type (if more than one type of connection is available).

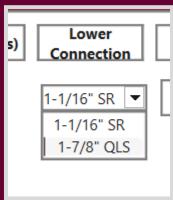

5. Add more tools to complete the tool string configuration.

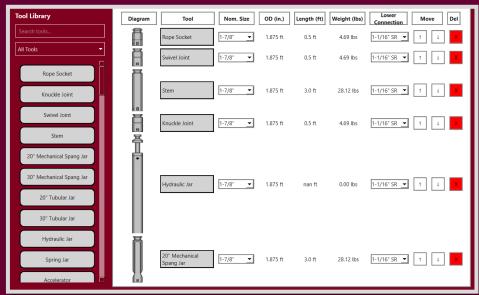

6. Rearrange tool positions/delete tools as desired.

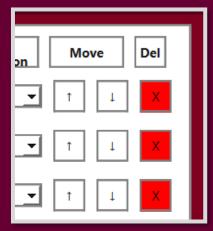

- a. Click "Clear all" to delete all tools at once.
- 7. Enter the job details: Client, Location, Well No., Well Type, and Operation Details.






- a. These details will appear in the generated tool string schematic diagram.
- b. These details will also be used as the filename when exporting.
- 8. Take note of the maximum OD, total length, and total weight.




9. Export to Excel and PDF.




Or



- a. View generated files in folder named after job details.
- 10. Save current tool configuration for future edits.

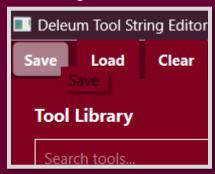


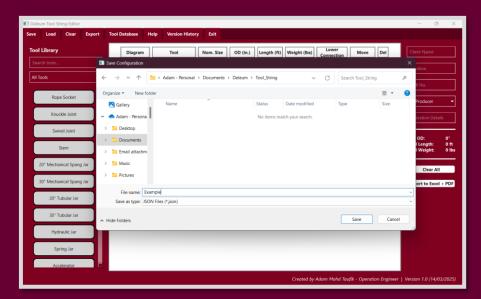

a. Work is saved in a ".json" format file.

11. Load from previously saved tool configurations when needed.



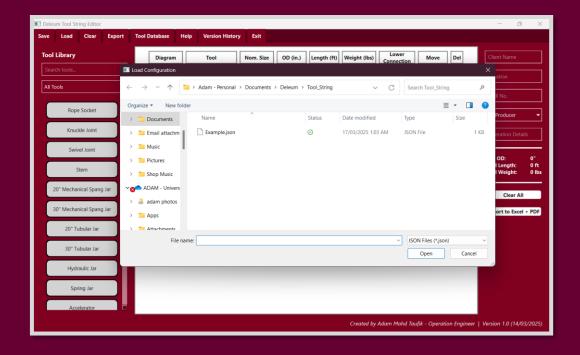

For any further inquiries or suggestions, send an email to Adam. Mohd Taufik@deleum.com