

PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

TABLE OF CONTENT

SL NO:	DESCRIPTION
1	PRODUCT DESCRIPTION
2	DISTRIBUTION BOX CONTENTS
3	PATCH-FREE BOX INSTALLATION DETAILS
4	PATCH-FREE FIBER OPTIC DISTRIBUTION BOX OPENING AND LOCKING
5	SPLICE TRAY PLATE OPEN AND LOCKING
6	PATCH-FREE FIBER OPTIC DISTRIBUTION BOX INSIDE ACCESSORY DETAILS
7	SPLICE TRAY ARRANGEMENT
8	ISP TRAY AND COVER
9	GPON TRAY
10	LABEL IDENTIFICATION REFERENCE
11	SPLITTER TRAY
12	SPLITTER TECHNICAL COMPLIANCE AND DETAILS
13	CABLE MANAGEMENT INSIDE THE FIBER TRAY
14	SCHEMATIC DRAWINGS OF CABLE ENTRY AND FIBER MANAGEMENT

PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

PATCH-FREE FIBER OPTIC DISTRIBUTION BOX

1. PRODUCT DESCRIPTION:

Datacom Patch free Fiber optic Distribution box can provide a very high density of configurations from 96 fibers (3 splitters 2x32) up to 256 fibers (8 splitters 2x32) with each splice tray capacity of 8 or 12 Fiber. Configuration can be increase up to 352 fibers by using 12 splice per each tray. The material is Steel-Electrogalvanized Cold-rolled (SECC) with RAL 7035 mat finish (Grey Color), safe lock design and easy wall/Rack mount installation optionally.



APPLICATION:

Datacom Patch free Fiber optic Distribution boxes are applicable to fiber Splicing and distribution in FTTX network.

PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL



2. DISTRIBUTION BOX CONTENTS:

Materials	Qty	U/M	Reference
PLC Bare Splitter 2x32	8*	No	
Document Holder	1	No	
Splice trays for Splitter Service	8	No	
Splice trays for GPON Service	32	No	
Splice tray Cover for ISP Service	2	No	
**Transparent Cover	40	No	
Splice trays for ISP line	2	No	
***Non Transparent Cover	2	No	

*For 256 Splicing (Splitter Quantity may vary as per the number of splicing)

**Only for GPON splice trays

***Only for ISP splice trays

PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

Materials	Qty	U/M	Reference
Triangle Delta Switch Lock Key	1	No	
Splice Protector	288	No	
Fiber Sleeve	3	Mtr	
Cable Gland	24	No	
Cable tie	40	No	
Stainless Steel thread Expansion Bolt	4	No	
Insulation Tape	1	No	


PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

3. PATCH-FREE FIBER OPTIC DISTRIBUTION BOX INSTALLATION DETAILS:

- WALL-MOUNTING



- RACK-MOUNTING:

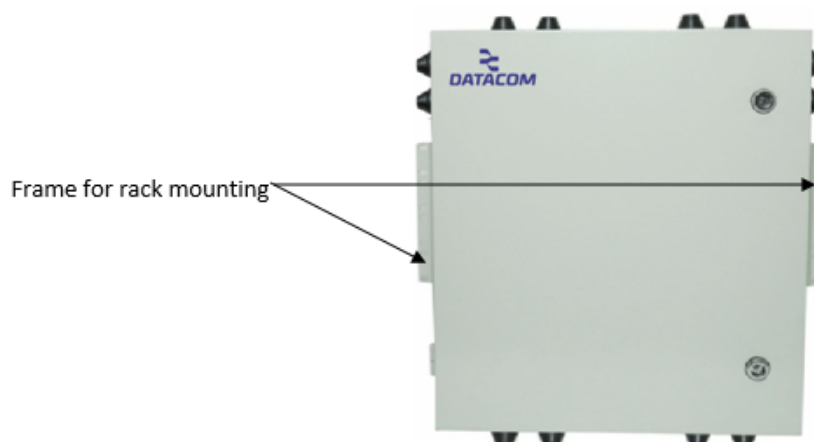

PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

4. PATCH-FREE FIBER OPTIC DISTRIBUTION BOX OPENING AND LOCKING:





5. SPLICE TRAY PLATE OPEN AND LOCKING:



PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

6. PATCH-FREE FIBER OPTIC DISTRIBUTION BOX INSIDE ACCESSORY DETAILS:

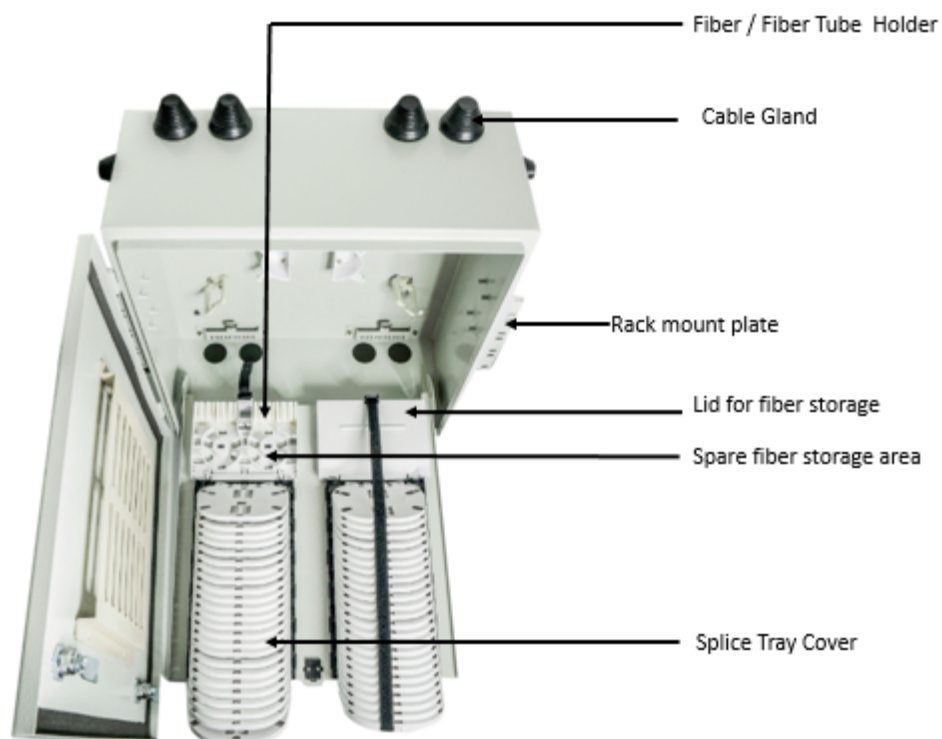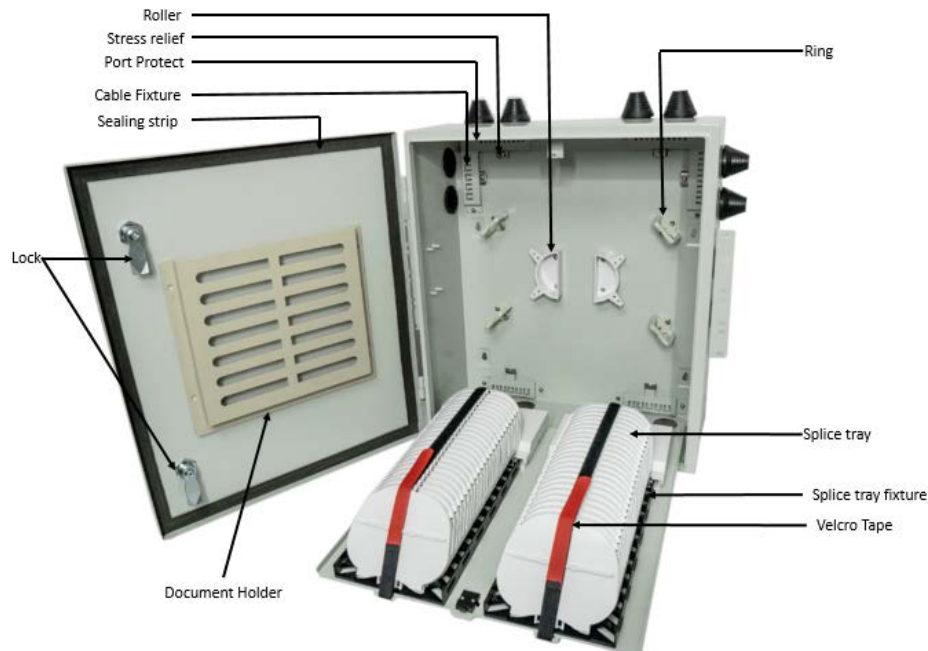


PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

7. SPLICE TRAY ARRANGEMENT:

All splice trays are tightened using Velcro Tape as shown below




8. ISP TRAY AND COVER:

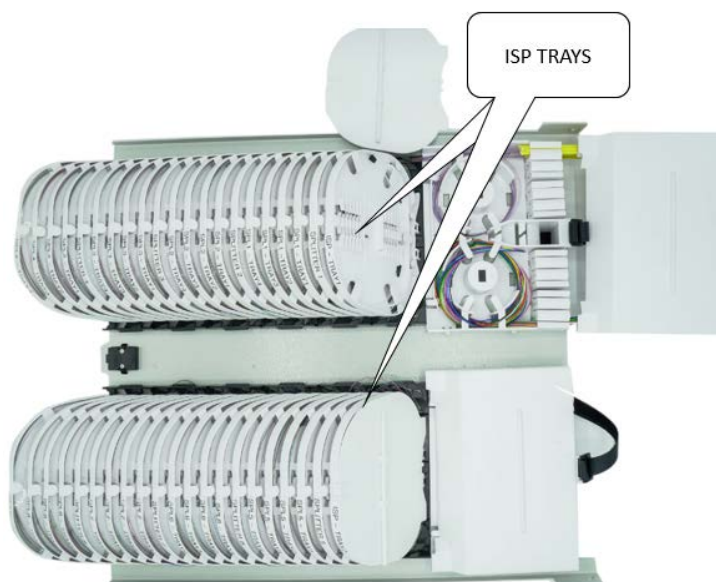

PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

9. GPON TRAY:

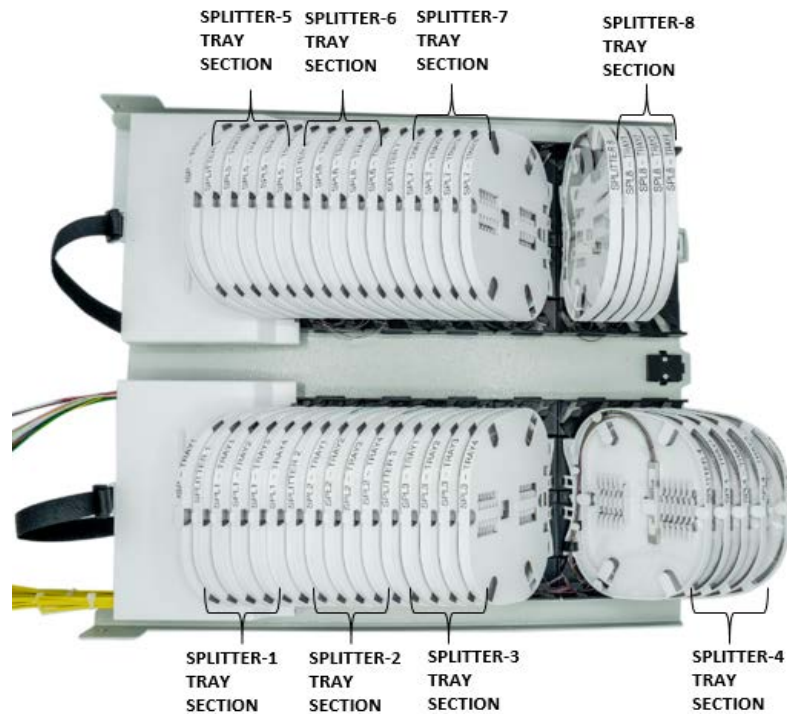


10. LABEL IDENTIFICATION REFERENCE:



PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

11. SPLITTER TRAY:

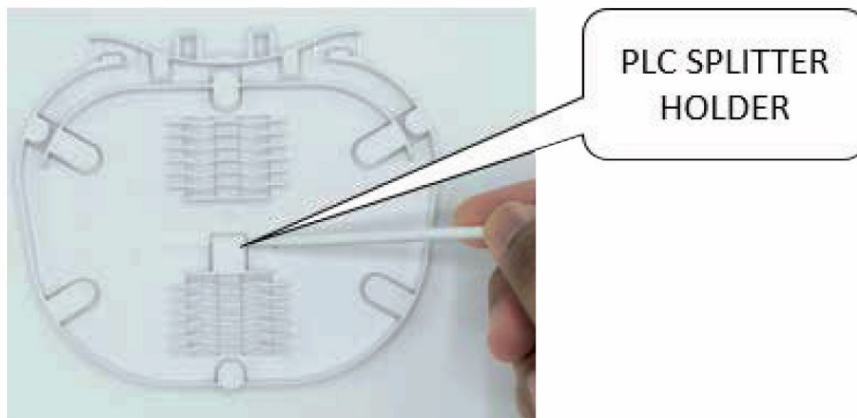

12. SPLITTER TECHNICAL COMPLIANCE AND DETAILS:

Bare fiber PLC splitters are as shown in the below Picture.




COMPLIANCE:

Telcordia GR-1221 and GR-1209 standards.

PATCH FREE FIBER OPTIC DISTRIBUTION BOX USER MANUAL

13. CABLE MANAGEMENT INSIDE THE FIBER TRAY:

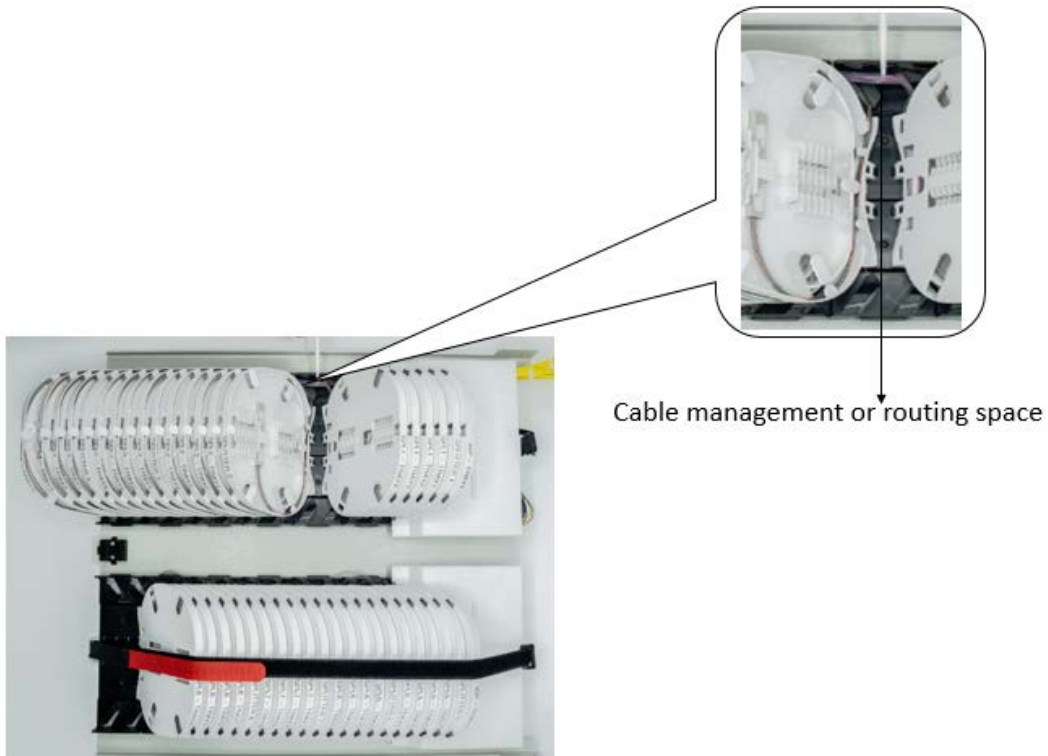

14. SCHEMATIC DRAWINGS OF CABLE ENTRY AND FIBER MANAGEMENT:

