


# Battery Charging and Precautions

## 1. Overview

In this lesson, we will provide a detailed introduction to the charging function of the Adeept Robotic Arm Control Board to ensure safe and convenient operation of the robot.

## 2. Introduction to Charging

The Adeept Robotic Arm Control Board integrates a charging control chip and related circuits to ensure charging safety and efficiency.

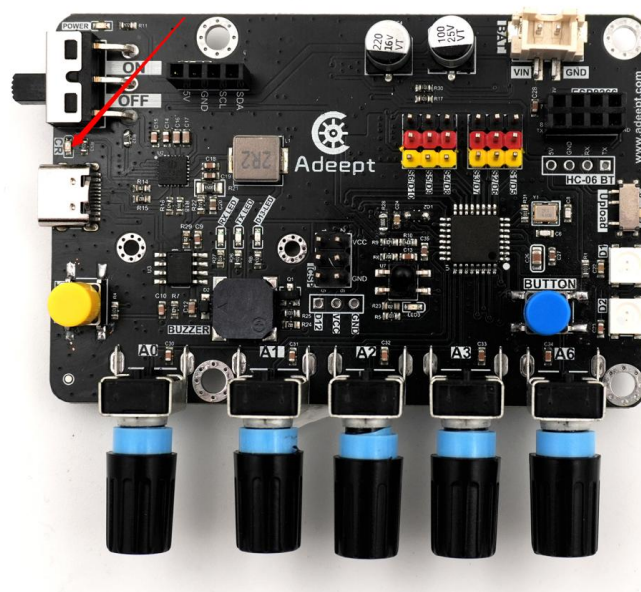

A red LED marked CR is mounted on the control board to indicate the charging status.

| CR LED Status | Description                                     |
|---------------|-------------------------------------------------|
| off           | No power supply or the battery is fully charged |
| on            | Indicates charging in progress                  |

|       |                                                                      |
|-------|----------------------------------------------------------------------|
| blink | The battery is not connected or the battery status is being detected |
|-------|----------------------------------------------------------------------|

### 3. Instruction Manual

1. Use Type-C cable to correctly connect the Adeept Robotic Arm Control Board and 5V charger.
2. Since the charging function is built into the Adeept Robotic Arm Control Board , using a larger power charging circuit will cause the charging chip to heat up and affect other circuit components on the Adeept Robotic Arm Control Board . Therefore, we control the charging power within a smaller range to avoid possible damage to other components and avoid scalding users with the exposed charging chip. At this time, there will only be slight heat on the Adeept Robotic Arm Control Board, which is normal. But the charging time will be relatively long.

### 4. Matters Needing Attention

1. Please use a 5V charger to charge the battery. to ensure safe and efficient charging.
2. Avoid use in humid and dusty environments to prevent damage to the charging interface.
3. Avoid excessive heating when charging, and do not charge in high temperature environments to avoid affecting battery life or causing safety issues.
4. During the charging process, the board will heat up slightly, which is normal. If the board temperature is too high, please unplug the power supply in time and stop charging.