

ZEBRA SHADE

INSTALLATION GUIDE



Lift Control:

**Continuous
Cord Loop**



CONTENTS

• INCLUDED IN YOUR PACKAGE	1
• SUGGESTED TOOLS (NOT INCLUDED)	2
• MOUNTING OPTIONS	3
• MOUNTING BRACKETS	4
• INSTALLING THE SHADE	4
• OPERATING THE SAFE WAND	5-6
• INSTALLING THE TENSION DEVICE	7-9
• ADJUSTING COUNTER BALANCE	10
• OPERATING THE TENSION DEVICE	11-12
• WARNING & EMERGENCY / FIRST AID	13

Thank you for Choosing our Zebra Shade for your Residential or Commercial Property.

We are confident that you will find our Zebra Shade to be of superior quality and value, compared to other shades available.

In this guide, you will find useful information about installation, child safety, cleaning, and warranty when using your shade.

READ ALL INSTALLATION INSTRUCTIONS BEFORE INSTALLING

Contacting Us:

Contact your Dealer regarding any question or concerns about your product.

PLEASE KEEP FOR FUTURE REFERENCE / TROUBLESHOOTING

CARE AND CLEANING

The soft, delicate feel of the fabric belies the durability of the material. It is made from a sturdy, knitted polyester fabric which can be feather dusted or vacuumed on a low setting. Spots or stains can be lightly rubbed clean with a damp sponge and mild soap. To avoid discoloration of the material, we recommend against the use of chemical cleaners. The sheer fabric may also be ultrasonically cleaned.

INCLUDED IN YOUR PACKAGE

Continuous Cord Loop - Zebra Shade




WAND
(Optional)




CORD TENSIONER

Cord Tension
(Optional)

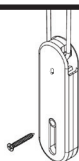

WALL BRACKET for outside mount

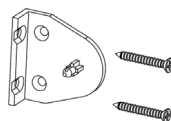


Brackets

Quantity: 2

The wider the shade the more brackets
provided - see chart below

- A shade 39" or less come with 2 brackets
- A shade 78 3/4" or less come with 3 brackets
- A shade greater than 78 3/4" come with 4 brackets

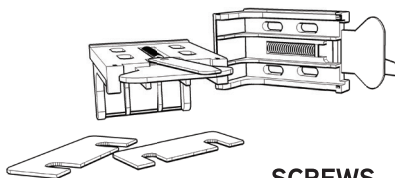


SCREWS

Quantity: 4 per packet



OPTIONAL PARTS: (supplied upon request)


Wall anchors (Not Provided).

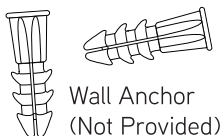

Wall Anchor
(Not Provided)


If mounting into drywall, you will need wall anchors to ensure a secure installation.

Spacer Blocks (Not Provided)

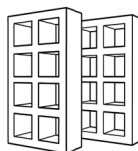


Use for shades that need more space between the wall.

SUGGESTED TOOLS (NOT INCLUDED)

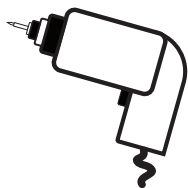

DRILL


*1/16" drill bit,
and 1/4"
hex driver*



LEVEL




PENCIL




SCREWDRIVER

*Flat blade, Phillips, or
1/4" hex driver*

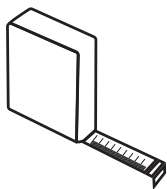

TAPE MEASURE

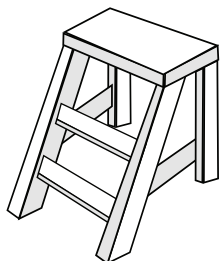

LADDER



THINGS TO CONSIDER BEFORE YOU BEGIN YOUR INSTALLATION

Your new shade is custom made to your specifications from the finest fabrics available. The installation should be easy and your shade will look elegant.

MOUNTING OPTIONS:



Inside mount (IB):

The shade is mounted inside to the top of the window frame.

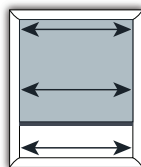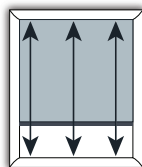

Outside mount (OB):

The shade is mounted either on or outside the window frame.

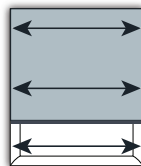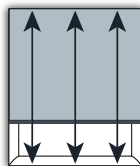

Mounting NOTES:

Mounting screws provided are suitable for most mounting surfaces. See below for additional suggestions.

- For wallboard or plaster: Use hollow wall anchors for added support. (not included)
- For concrete, stone, brick or tile: Use an appropriate drill and appropriate anchors before fastening the screws. (not included)
- For metal surfaces: Pre-drill holes and use appropriate anchors before fastening the screws. (not included)

TROUBLE SHOOTING TIPS


Dry-Fit Bracket into Headrail Cassette: Prior to installing your shade, dry-fit the Bracket into the Headrail Cassette to verify how the bracket will snap into place.

1


MOUNTING BRACKETS

Installing Brackets:

Inside mount: Mount brackets a minimum of 1" - 2" away from the edges of the product depending on the overall width of the shade.

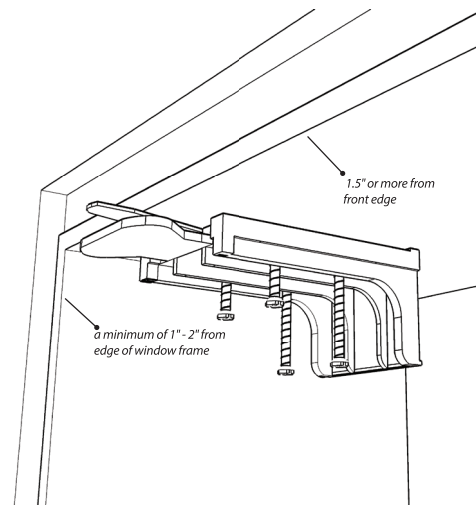

Outside Mount: Outside edge of the brackets should be positioned at a minimum of 2" from the outside of the headrail cassette, note the sticker on the headrail cassette. Use wall anchors for a secure hold. Mark the position of the bracket as illustrated.

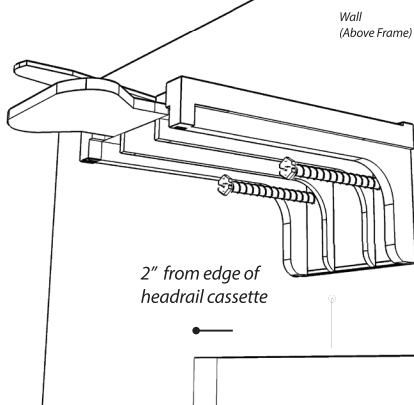


2

INSTALLING THE SHADE


Install each bracket with the provided screws per bracket.

Slide headrail cassette into the brackets, be aware that the release tab should be above the top of the headrail cassette so it can be accessed to release the shade.

slide the shade into the brackets and it will "SNAP" into place

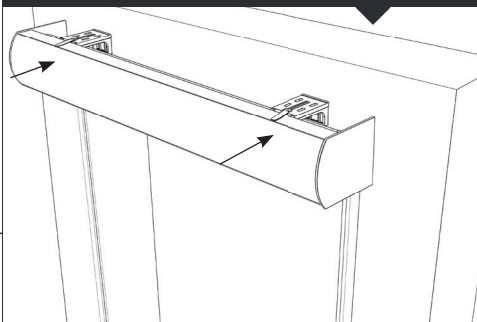

the shade should sandwich between top and bottom of bracket

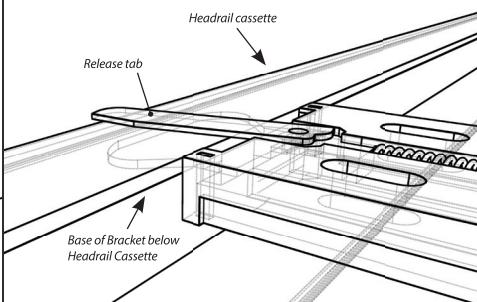

the top of the shade should look like the referenced image below




OPERATING THE SAFE WAND

The wand will be attached to the headrail and in the up position out of the box.


Once blind is installed, lower safety wand so that buttons are facing towards you.



Slide wand cuff in an upward motion.

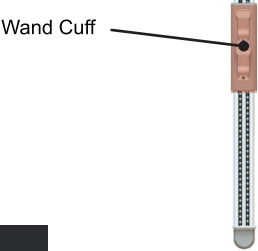

Continue to slide wand cuff up to top of wand.

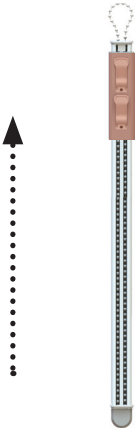

OPERATING THE SAFE WAND

BLINDS DOWN

Once the wand cuff is in the upward position, blinds can be rolled down.

Press the down button and hold the button in.


Down Button



Once the button is held down, proceed to pull the wand downwards slowly.



Continue to slide the wand cuff down to the bottom of the safety wand.




BLINDS UP

Once the wand cuff is in the upward position, blinds can be rolled up.

Press and hold the top button.


Up Button




Continue to hold the top button and proceed to pull the wand cuff down slowly.




Continue to slide wand cuff down to bottom of the safety wand.




SAFETY TENSION INSTALLATION & OPERATION

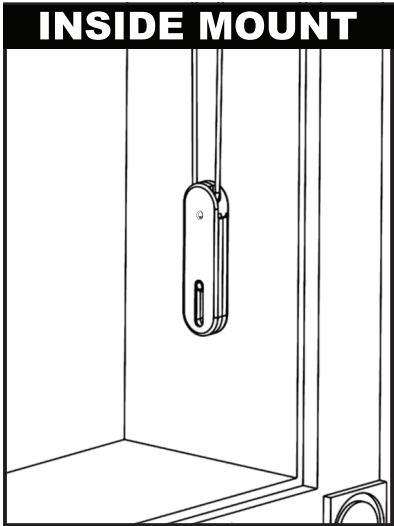

PLACE DEVICE **INSIDE** WINDOW FRAME.

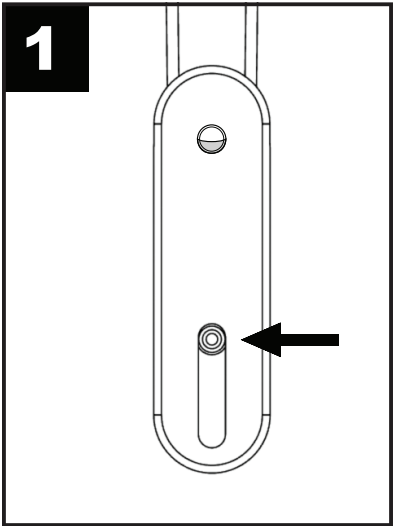


THIS IS THE HOLE FOR MOUNTING THE SCREW.

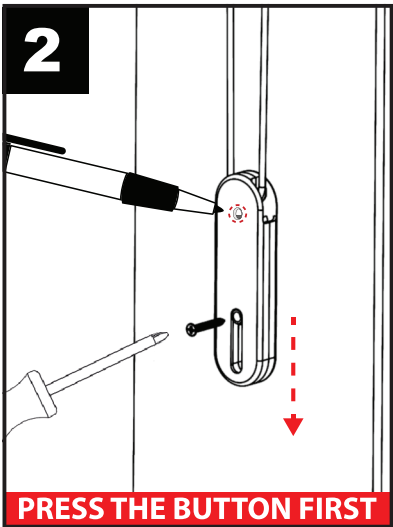


PRESS THE BUTTON FIRST

PRESS THE BUTTON WITH A PEN OR PENCIL.
THEN INSERT THE SCREW AND PULL DOWN.

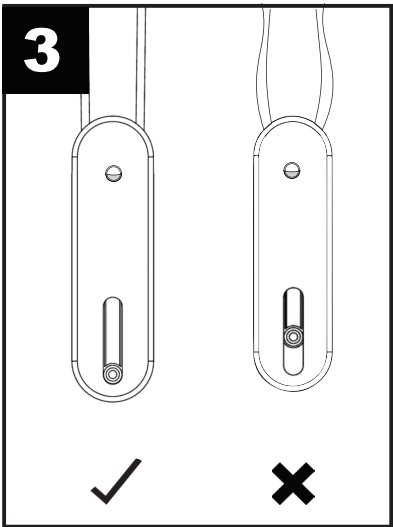


MAKE SURE THERE IS NO SLACK
AND TIGHTEN THE SCREW SECURELY.


OUTSIDE MOUNT

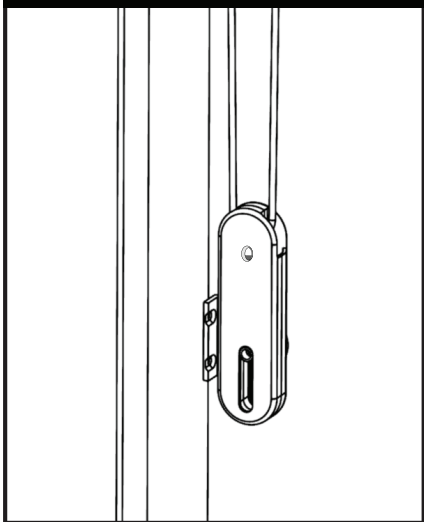


PLACE DEVICE AND WALL BRACKET
OUTSIDE WINDOW FRAME.

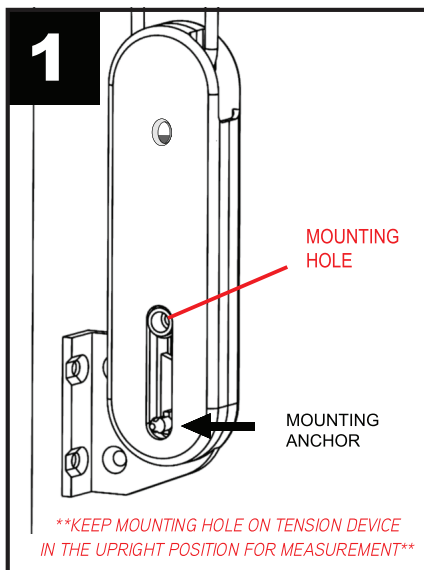


*ENSURE THE TENSION IS TIGHT AND
THE **MOUNTING ANCHOR** IS AT
THE BOTTOM OF THE DEVICE.*

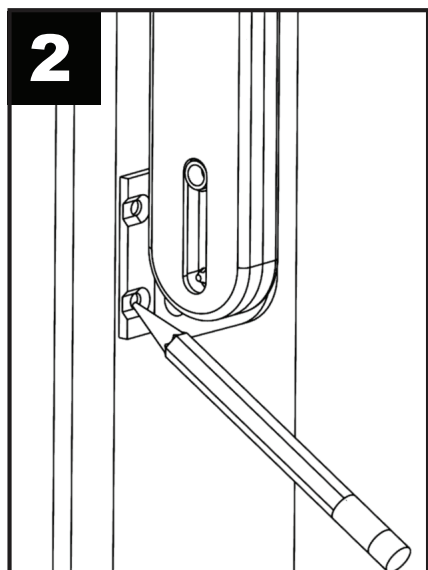


MARK THE PILOT HOLES
WITH A PEN OR PENCIL.

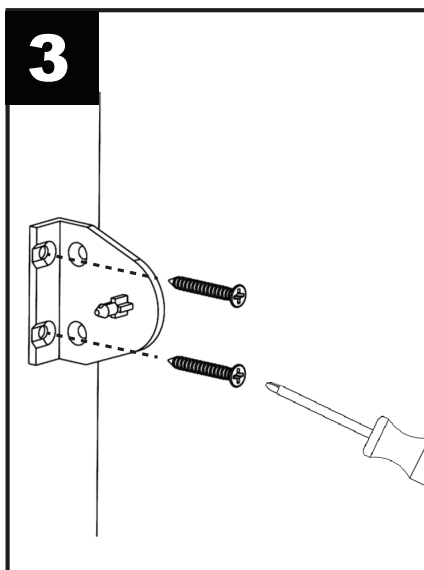


SCREW THE BRACKET INTO THE
WALL USING YOUR MARKS.

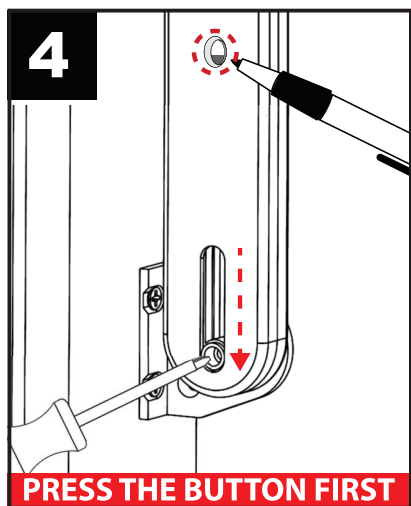

PULLDOWN THE **MOUNTING HOLE**
TO MATCH THE **MOUNTING ANCHOR**.

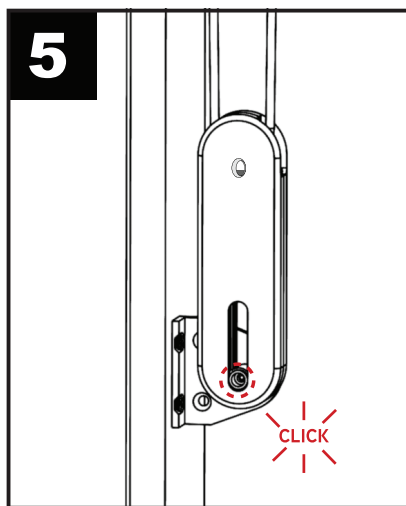

INSERT **ANCHOR** INTO **MOUNTING HOLE**
ON TENSION DEVICE UNTIL YOU HEAR A **CLICK**.

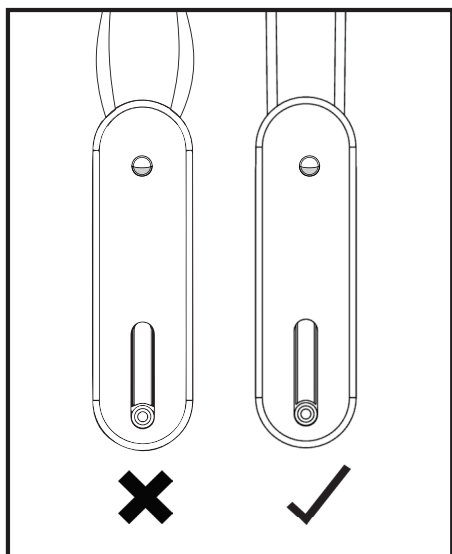

YOUR TENSION DEVICE CORD
SHOULD BE TIGHT AND NOT LOOSE.

****DISCLAIMER****

ONCE SECURED ON THE WALL MOUNT,
TENSION DEVICE WILL BE DIFFICULT TO REMOVE.

IF YOU TRY TO REMOVE,
THIS MIGHT CAUSE THE TENSION DEVICE OR WALL
MOUNT TO SNAP OR BREAK.

ADJUSTING COUNTER BALANCE WEIGHTS

To prevent uneven raising (Telescoping) of your Zebra Shade you can adjust the counter balance weights on the bottom side of the bottom rail.

Zebra Shade Bottom Rail

Counter Balance Weight




To adjust weight, gently unscrew each screw on the ends of each weight. Slide the weight left or right to the desired position, taking care to equally space the weights from the ends. Test by raising the shade and look for an even raise. If shade raises slightly tilted to one side adjust the appropriate weight to the desired position and test the shade again. Once shade is balanced screw weight locks back down.

OPERATING THE SAFETY TENSION DEVICE

Keep cord straight do not pull outward this will engage the pinchers locking the cord in place.

Pull down on the **right (front)** cord to have your shade go up.

(Shade Up)

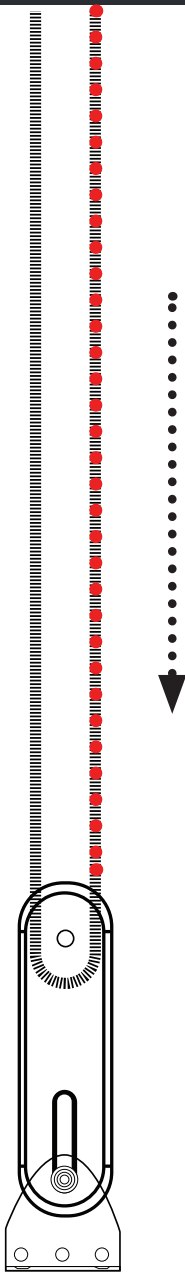


OPERATING THE SAFETY TENSION DEVICE

Keep cord straight do not pull outward this will engage the pinchers locking the cord in place.

Pull down on the **left (back) cord** to have your shade go **down**.

(Shade Down)

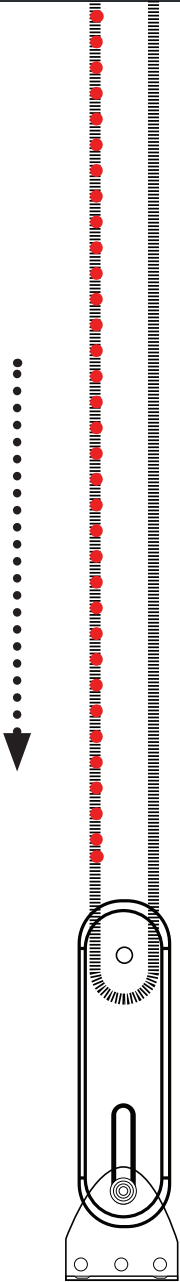



Window Blind Cord Strangulation Risk

A damaged, loose, or missing tension device poses a strangulation risk to children. Remove from use and repair or replace if tension device is damaged, loose, or missing

IMPORTANT SAFETY WARNING:

Window cords can pose a potential strangulation hazard to young children. According to the U.S. Consumer Product Safety Commission, corded window coverings are among the top five hidden hazards in American homes. Check your window coverings for exposed or dangling cords and retrofit or replace them with today's safer products.

Never place a crib, playpen, bed or any type of low-standing furniture near a window. In exploring their surroundings, young children can accidentally fall through an open window or window screen, or become tragically entangled in a nearby window cord. Whenever possible, place cribs and furniture on a non-windowed wall.

Dangling or accessible cords on window coverings can pose an accidental strangulation hazard to infants and young children. For your safety, replace older corded window coverings with today's safer products.

The Window Covering Safety Council (WCSC) and government safety officials recommend that you only use cordless window products in homes with young children.

CHOKING HAZARD:



- Keep cord out of reach from children.
- Remove objects below window.
- Do not tie cords together.
- Make sure safety cords are located 1-2 inches below the headrail.
- Please reference all warning tags in the instructions and on the shade.
- Please keep cords out of children and pets reach, a cord cleat or a cord tensioner device can be found at a local window covering store.



EMERGENCY / FIRST AID

- Remove cord from child's neck
- Call 911 or an Emergency Call Center
- Clear the throat
- Check breathing and heartbeat
- Begin CPR if trained

THIS PRODUCT IS...



ZEBRA SHADE

Lift Control:

Continuous Cord Loop

L I M I T E D 3 Y E A R W A R R A N T Y

The Manufacturers Collection will be free from defects in materials and workmanship for as long as the original purchaser owns the product, provided that the product was installed properly. The limited 3 year warranty is extended to the original purchaser only, in the original window for which it was intended.

The warranty does not include any condition or damage resulting from accidents, alterations, misuse, failure to install properly, or others instances outside of Manufacturers control. This warranty also does not apply to conditions resulting from normal wear and tear.

To obtain service, contact the dealer from whom you purchased the product. Manufacturer will repair or replace defective parts or components at no charge.

This warranty is exclusive and in lieu of all other obligations, liabilities or warranties. In no event shall Manufacturers be liable for incidental or consequential damages, or for any other damage, loss or expense, cost or fees associated with such damage. In some states, exclusion for incidental or consequential damages are not allowable. This warranty does not cover any transport, removal, or re-installation charges which may occur as a result of defects in materials or workmanship.

This warranty gives you specific legal rights, and may also have other rights, which vary from state to state.