

MATRIX G7-S70 OWNER'S MANUAL



Quick Links

[Safety, General Care & Maintenance](#)

[Assembly Information](#)

[Parts List](#)

[Part 1 Weight Stack & Frame Assembly](#)

[Part 2 Cable Assembly](#)

[Cam](#)

Table of Contents

- Table of Contents
- Safety, General Care & Maintenance
- Getting Started (Product Specifications)
- Assembly Information
- Markings
- Parts List
 - M10 X 30L Socket Head Cap Screw
 - Part 1 Weight Stack & Frame Assembly
 - M10 Flat Washer (25 mm Diameter)
 - User Frame
 - M10 Saddle Washer
 - M10 Flat Washer (22 mm Diameter)
 - Footplate Assembly
 - Part 2 Cable Assembly
 - Footplate Cover
 - M6 Flat Washer
 - CAM
 - Part 3 Seat Assembly
 - M8 Nylock Nut
 - M8 Flat Washer
 - Linear Bearing Block
 - Seat Sled
 - Rubber Bumper Stop
 - End Cap
 - Part 4 Pad Assembly
 - Part 5 Plastics Assembly
- Other ManualsLib Projects

MATRIX
Strong • Smart • Beautiful



OWNERS MANUAL

ULTRA Single-Station Strength
G7-S70 Leg Press

Table Of Contents

Safety, General Care & Maintenance	3
Getting Started (Product Specifications)	5
Assembly Information	6
Markings	7
Parts List	8

Installation & Assembly: Value Line

Part 1 Weight Stack & Frame Assembly	10
Part 2 Cable Assembly	13
Part 3 Seat Assembly	16
Part 4 Pad Assembly	21
Part 5 Plastics Assembly	23

IMPORTANT SAFETY INSTRUCTIONS

IMPORTANT SAFETY INFORMATION

It is the sole responsibility of the purchaser of Matrix products to instruct all individuals, whether they are the end user or supervising personnel on proper usage of the equipment.

It is recommended that all users of Matrix exercise equipment be informed of the following information prior to its use.

PROPER USAGE

Do not use any equipment in any way other than designed or intended by the manufacturer. It is imperative that Matrix equipment be used properly to avoid injury.

Keep hands and feet clear at all times from moving parts to avoid injury.

CHECK FOR DAMAGED PARTS

1. DO NOT use any equipment that is damaged and or has worn or broken parts. Use only replacement parts supplied by your country's local Matrix dealer.
2. MAINTAIN LABELS AND NAMEPLATES: Do not remove labels for any reason. They contain important information. If unreadable or missing, contact your Matrix dealer for a replacement.
3. SECURING EQUIPMENT: All equipment MUST be secured to the floor to stabilize and eliminate rocking or tipping over. This must be performed by a licensed contractor.
4. MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping your liability to a minimum. Equipment needs to be inspected at regular intervals.
5. Ensure that any person(s) making adjustments or performing maintenance or repair of any kind is qualified to do so. Matrix dealers will provide service and maintenance training at our corporate facility upon request.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.


WARNING: SERIOUS INJURY CAN OCCUR ON THIS EQUIPMENT. FOLLOW THESE PRECAUTIONS TO AVOID INJURY!

1. Never allow children on strength training equipment. Teenagers must be supervised at all times while using this equipment.
2. All warnings and instructions should be read and proper instruction obtained prior to use.
3. Use this equipment for its intended purposes only.
4. NEVER allow resistance straps, ropes or other means be attached to this equipment, as this may result in serious injury.
5. NEVER use this equipment for support during stretching, as this may result in serious injury.
6. Cease exercise if you feel faint or dizzy. Obtain a medical exam before beginning an exercise program.
7. Keep body, hair, clothing and accessories free and clear of all moving parts.
8. Inspect the machine before use. DO NOT use machine if it appears damaged or inoperable.
9. Check to see that the selector pin is completely inserted into the weight stack.
10. NEVER use this machine with the weight stack pinned in an elevated position.
11. NEVER use dumbbells or other means to incrementally increase the weight resistance. Only use the means provided directly from the manufacturer.
12. This equipment should only be used in supervised areas where access and control are regulated by the owner.

GETTING STARTED

EXERCISE PLACARD | PRODUCT SPECIFICATIONS | MAINTENANCE CHECKLIST

EXERCISE PLACARD

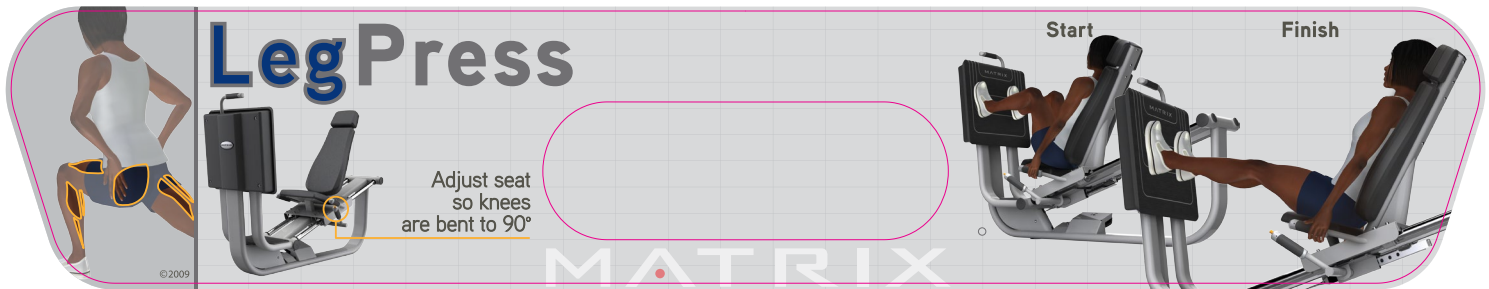

PRODUCT SPECIFICATIONS

TECH SPECS	
Maximum User Weight	136 kg / 300 lbs.
Maximum Training Weight	182 kg / 400 lbs.
Product Weight	404 kg / 891 lbs.
Overall Dimensions (L x W x H)	206.4 x 110.5 x 152.1 cm / 81.2" x 43.5" x 59.9"

WARRANTY (Valid in USA only)	
Frame (not coatings)	10 years
Weight stacks	5 years
Pulleys	5 years
Pivot bearings	5 years
Any items not specified	3 years
Labor (excluding upholstery/cables/grips)	3 years
Upholstery/cables/grips/springs	1 year
Accessories	6 months

MAINTENANCE CHECKLIST

ACTION	FREQUENCY
Clean Upholstery	Daily
Inspect Cables	Daily
Clean Guide Rods	Monthly
Inspect Hardware	Monthly
Inspect Frame	Bi-Annually
Clean Machine	As Needed
Clean Grips	As Needed
Lubricate Guide Rods	As Needed

Upholstery & Grips should be cleaned with a non-ammonia based cleaner or a mild soap and water. Guide rods should be lubricated with Teflon based lubricant. Apply the lubricant to a cotton cloth and then apply up and down the guide rods.

UNPACKING | TOOLS REQUIRED

UNPACKING


Thank you for purchasing a Matrix product. This machine is an EN957-1 and EN957-2 compliant Class S product. Your Matrix product is inspected before it is packaged. It is shipped in multiple pieces to facilitate the compact packaging of the machine. Prior to assembly, confirm all the components by matching them with the exploded diagrams. Carefully unpack the unit from this box and dispose of the packing materials in accordance with your local laws.

CAUTION



The weight of the product is 882 lbs. (400 kg) not including the weight stack. The weight stack for this machine is 400 lbs. (182 kg). To avoid injury to yourself and prevent damage to the frame components, be sure to have proper assistance removing the frame pieces from this box. Please be sure to install the equipment on a stable base, properly level the machine and leave at least two feet of clearance to enter and exit the machine. Maximum user weight for this machine is 300 lbs.

TOOLS REQUIRED FOR ASSEMBLY

3MM L-Shaped Allen Wrench
 4MM L-Shaped Allen Wrench
 5MM L-Shaped Allen Wrench
 6MM L-Shaped Allen Wrench
 8MM L-Shaped Allen Wrench
 10MM L-Shaped Allen Wrench
 Phillips & Standard Screwdrivers
 8MM Open-End Wrench
 13MM Open-End Wrench
 17MM Open-End Wrench.
 19MM Open-End Wrench
 Adjustable Wrench

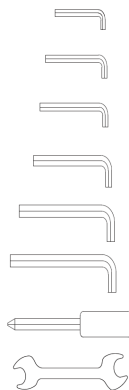

Blue Locktite 242 must be used on all fasteners that are not assembled with Nylock Nuts.

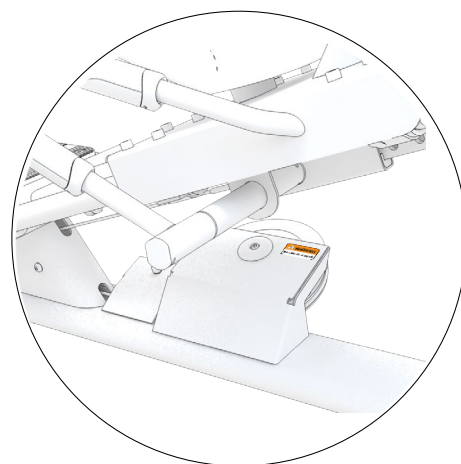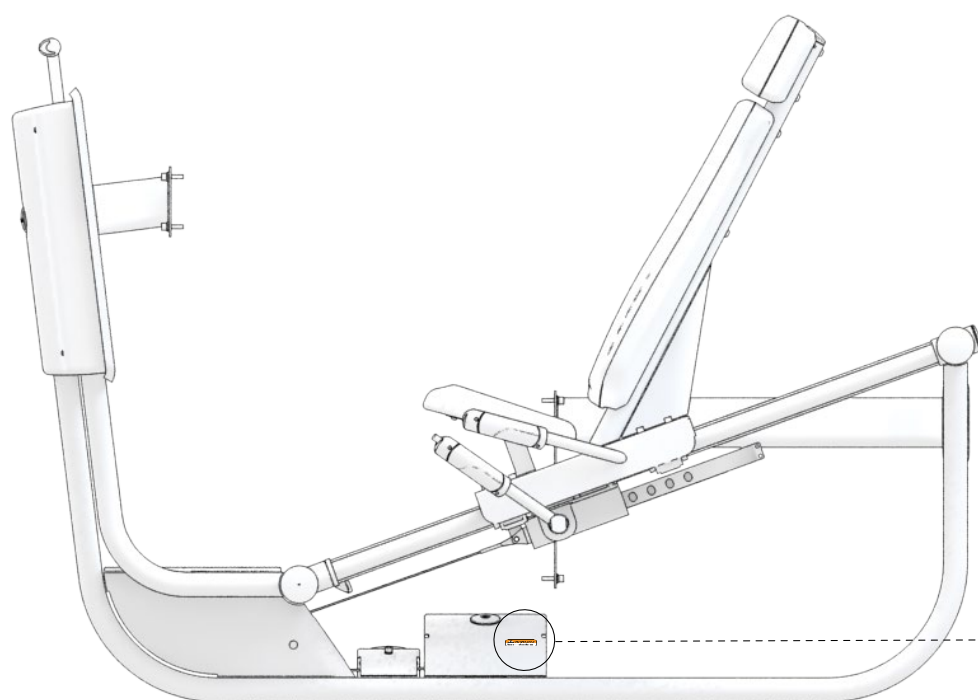


Hazard warning sticker

ID	DESCRIPTION	QTY
1	Lower Connecting Tube	1
2	M10 X 30L Socket Head Cap Screw	6
3	M10 Flat Washer (25 mm Diameter)	22
4	Weight Stack	1
5	M10 Nylock Nut	9
6	M10 X 75L Socket Head Cap Screw	8
7	Upper Connecting Tube	1
8	M10 X 170L Socket Head Cap Screw	2
9	User Frame	1
10	M10 Saddle Washer	2
11	M10 X 25L Socket Head Cap Screw	6
12	M10 Flat Washer (22 mm Diameter)	14
13	Foot Plate Assembly	1
14	Foot Plate Cover	1
15	M6 Flat Washer	4
16	M6 X 16L Button Head Cap Screw	4
17	M10 X 105L Socket Head Cap Screw	1
18	CAM	1
19	M8 Nylock Nut	16
20	M8 Flat Washer	16
21	Linear Bearing Block	4
22	M8 X 30L Socket Head Cap Screw	16
23	Seat Sled	1
24	Rubber Bumper Stop	2
25	Snap Ring	4
26	Disc (45 mm Diameter)	4
27	Guide Rod Sleeve	4
28	Guide Rod	2
29	End Cap	2
30	ROM Assembly	1
31	M10 X 20L Socket Head Cap Screw	6
32	M8 X 25L Shoulder Bolt	1
33	Pad	1

ID	DESCRIPTION	QTY
34	M10 X 15L Socket Head Cap Screw	4
35	Head Rest Assembly	1
36	M10 X 75L Button Head Cap Screw	4
37	Back Pad Assmembly	1
38	Left Front Shroud	1
39	Rear Shroud	1
40	Right Front Shroud	1
41	M8 X 60L Socket Head Cap Screw	4
42	Top Cap	1

STEP 1 | WEIGHT STACK INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
1	Lower Connecting Tube	1
2	M10 X 30L SHC	4
3	M10 Flat Washer (25 mm Diameter)	12
4	Weight Stack	1
5	M10 Nylock Nut	4
6	M10 X 75L SHC	4
7	Upper Connecting Tube	1

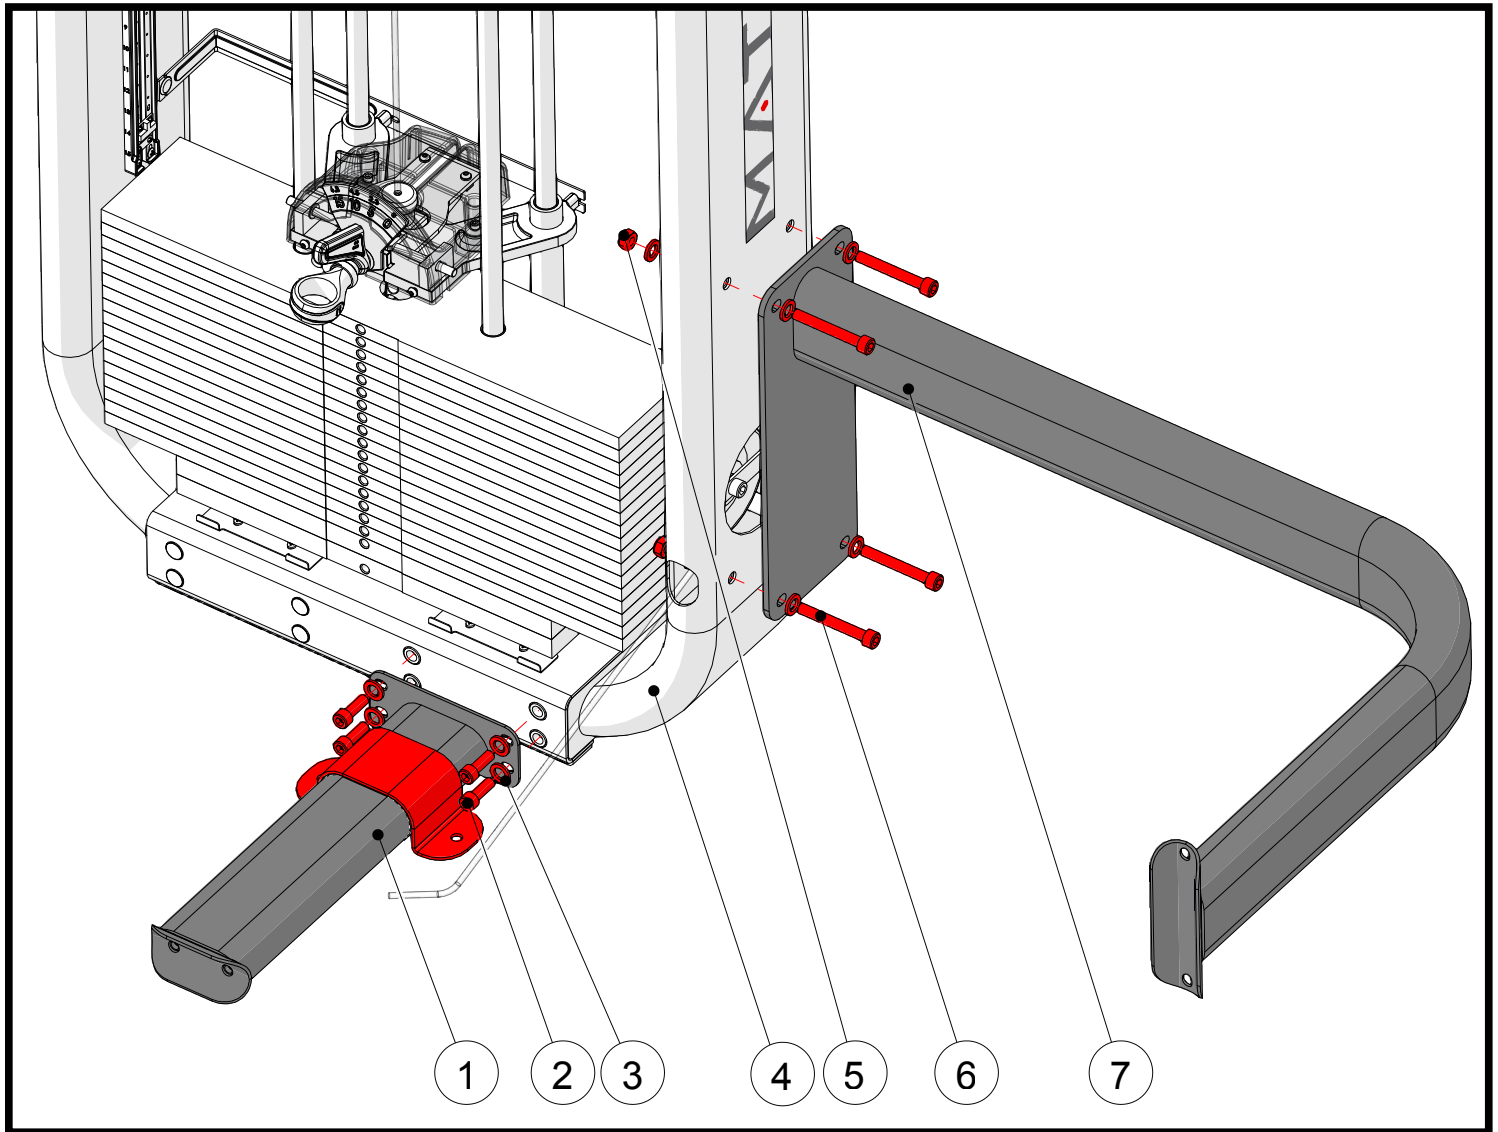

Install the user frame hardware as shown, but **DO NOT FULLY TIGHTEN** .

STEP 2 | USER FRAME INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
2	M10 X 30L SHC	2
3	M10 Flat Washer (25 mm Diameter)	2
8	M10 X 170L SHC	2
9	User Frame	1
10	M10 Saddle Washer	2

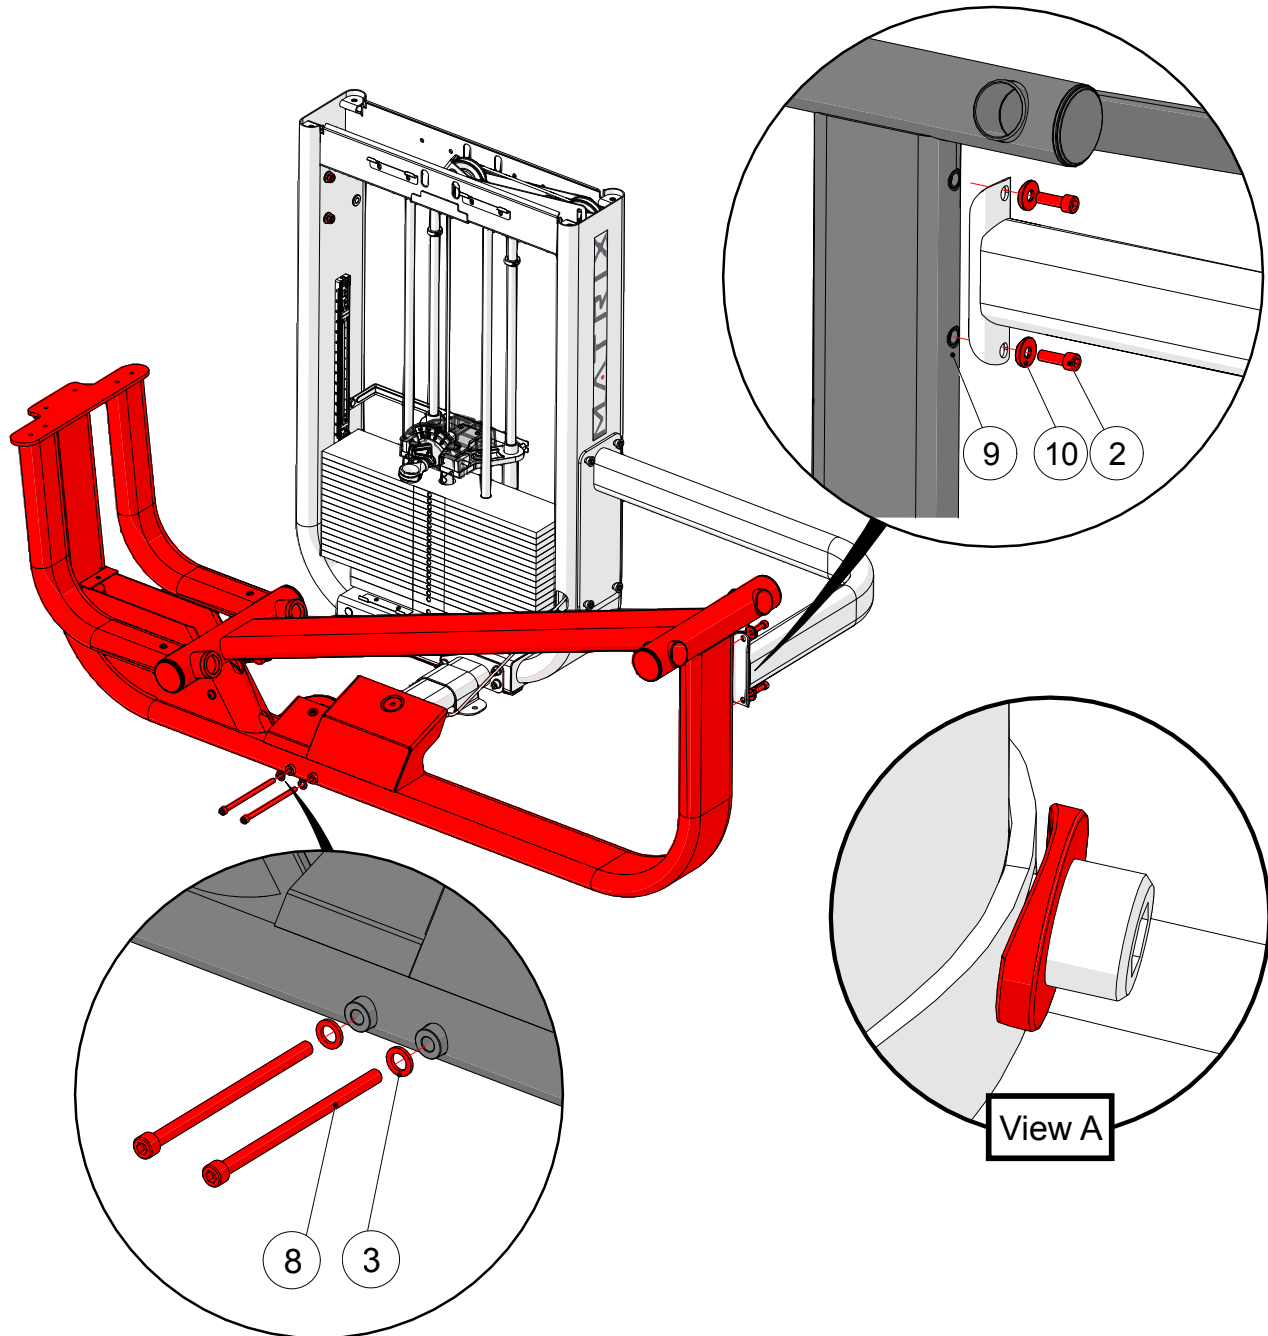

- Ensure that the frame is level and that all floor pads contact the floor equally
- Install the frame hardware as shown, orienting the saddle washers as shown in View A.
- Torque all M10 Frame Hardware on pages 9 & 10 to: 77 N-m/57 ft/lbs.

STEP 3 | FOOT PLATE ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
3	M10 Flat Washer (25 mm Diameter)	8
5	M10 Nylock Nut	4
6	M10 X 75L SHC	4
11	M10 X 25L SHC	6
12	M10 Flat Washer (22 mm Diameter)	6
13	Footplate Assembly	1

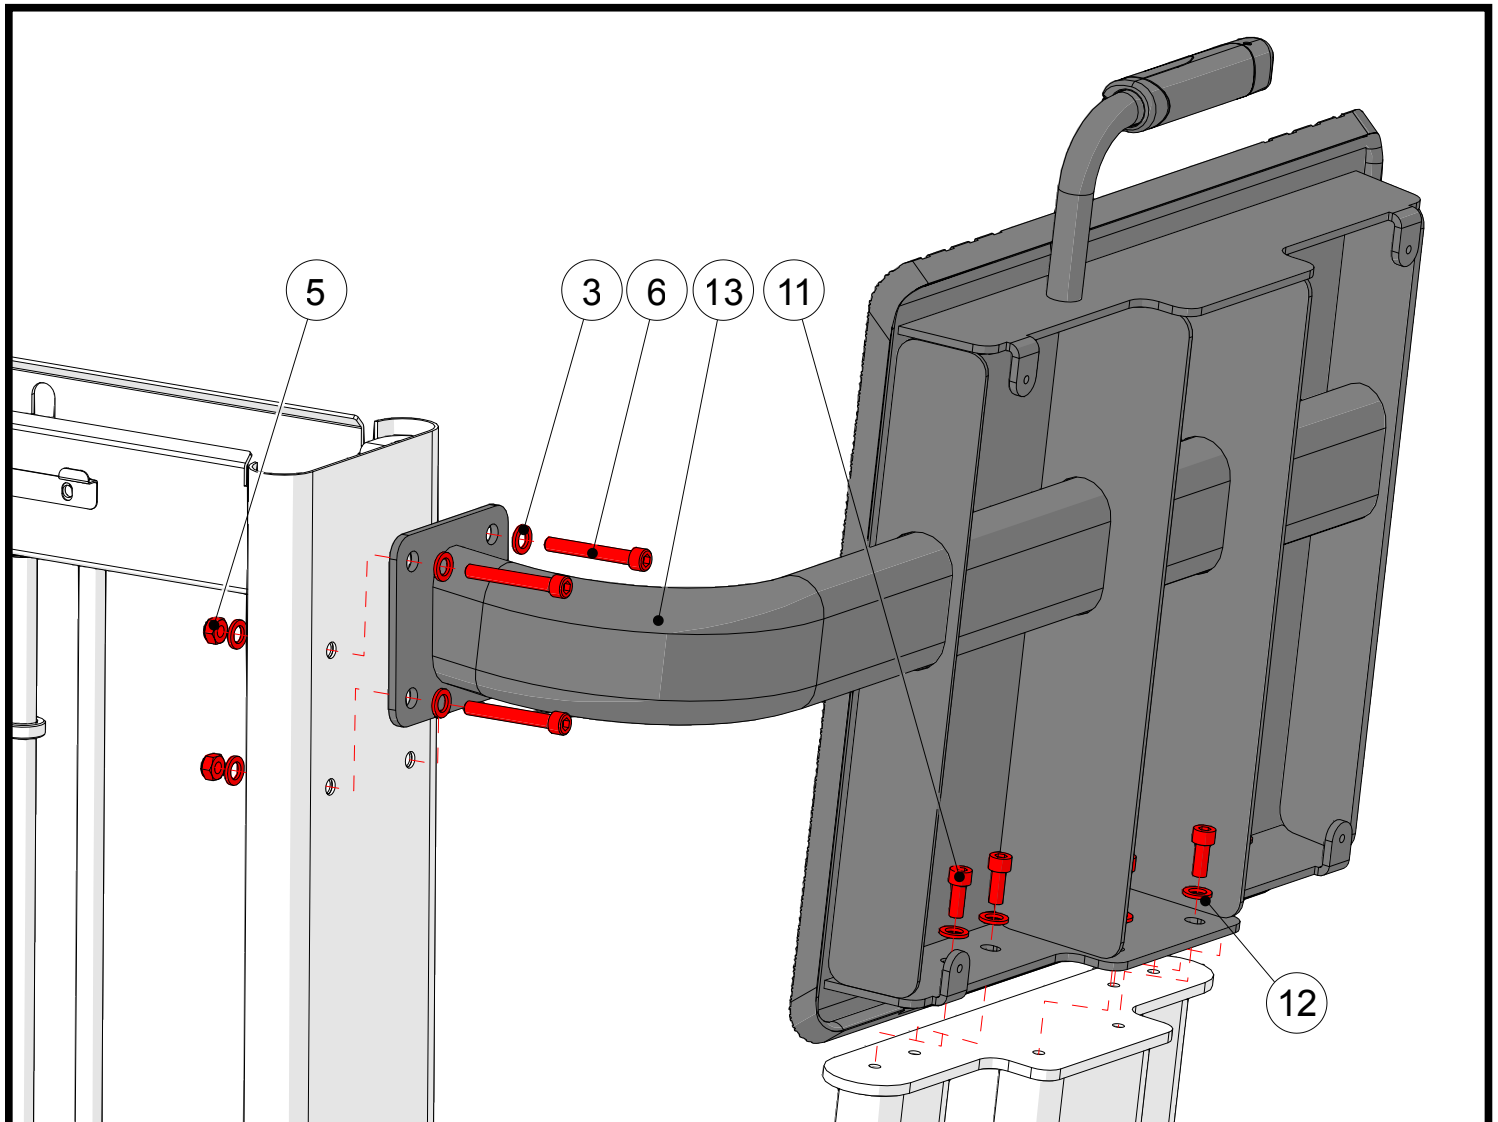

Torque to 77 N-m/57 ft-lbs.


STEP 4 | FOOT PLATE COVER ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
14	Footplate Cover	1
15	M6 Flat Washer	4
16	M6 X 16L BHC	4

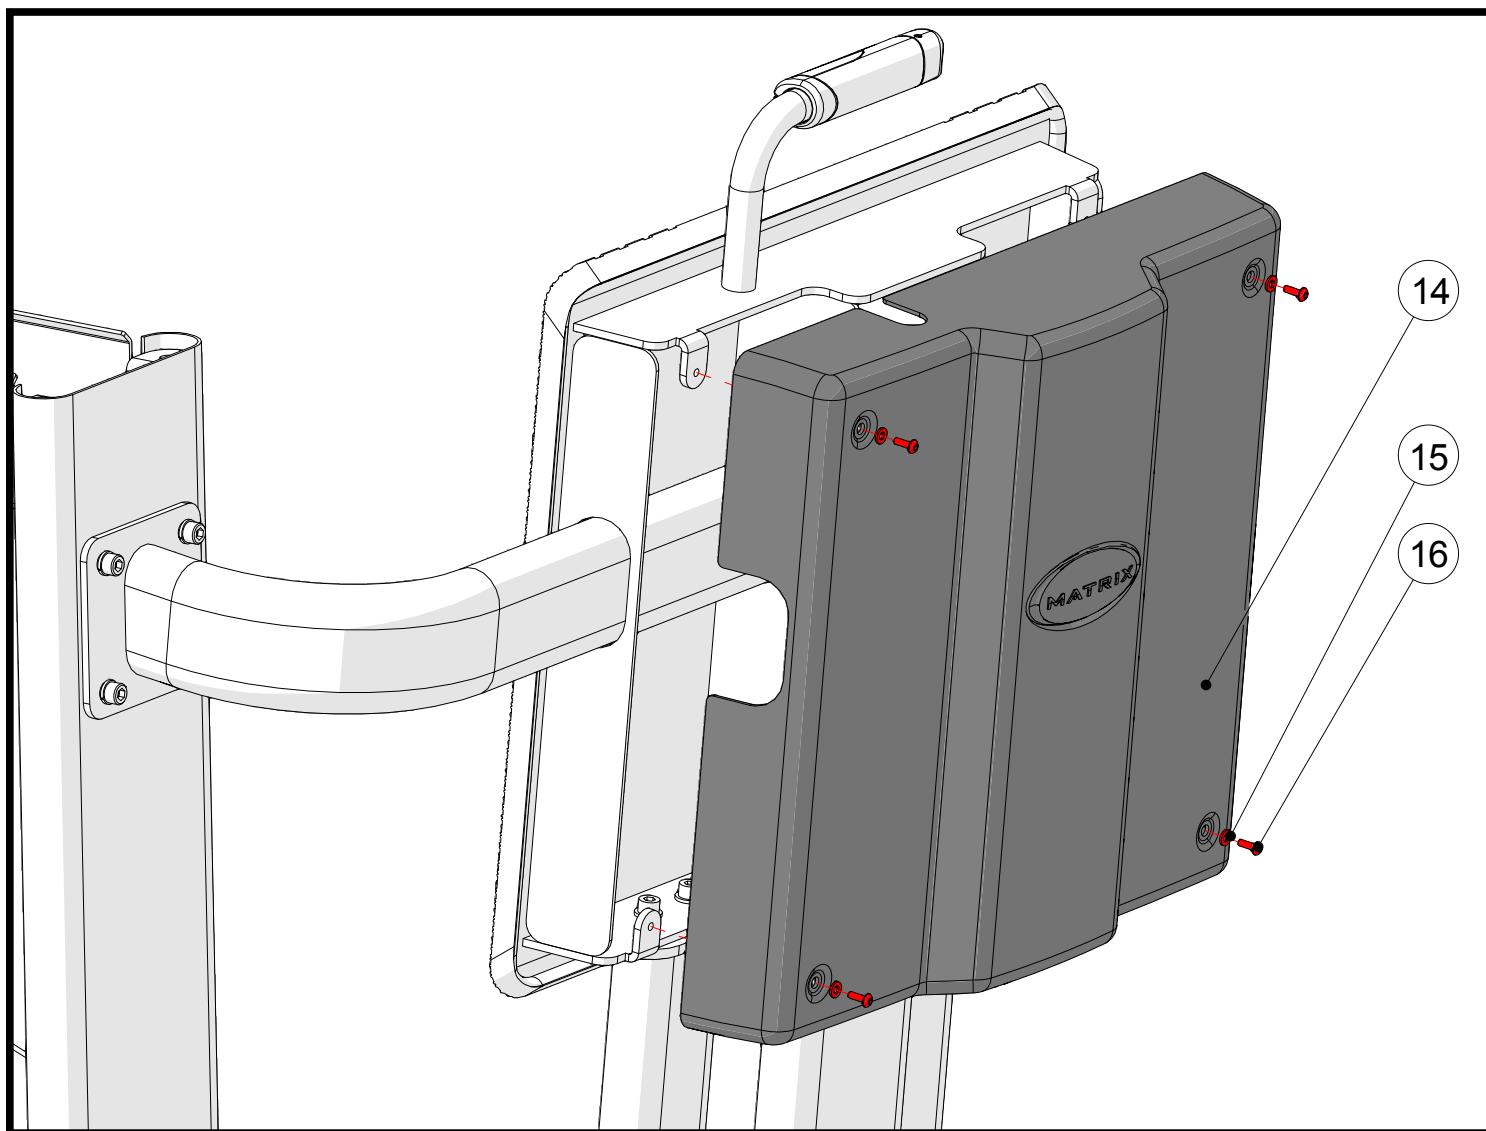


STEP 1 | CAM & CABLE ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
5	M10 Nylock Nut	1
12	M10 Flat Washer (22 mm Diameter)	2
17	M10 X 105L SHC	1
18	CAM (W/User Frame Cable Attached)	1

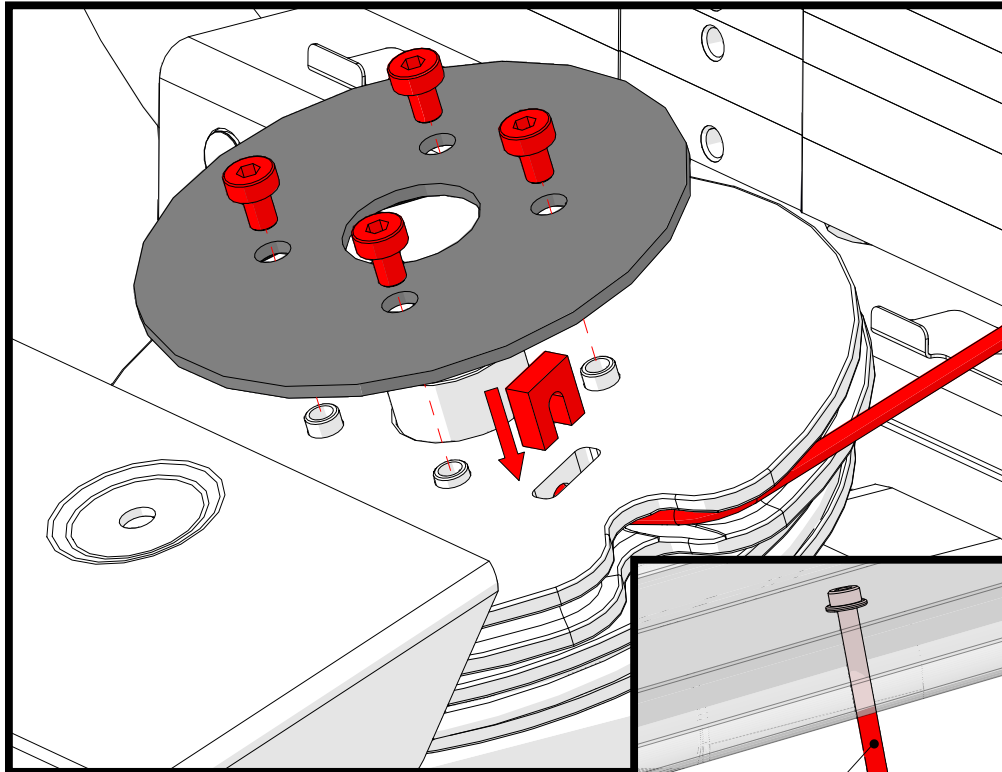


- Remove CAM plate
- Assemble cable into CAM as shown
- Capture cable end with retaining "U" clip
- Using two hex wrenches, reassemble CAM plate and torque fasteners to: 39 N-m/29 ft-lbs.

- Torque M10 center bolt to: 77 N-m/57ft-lbs.

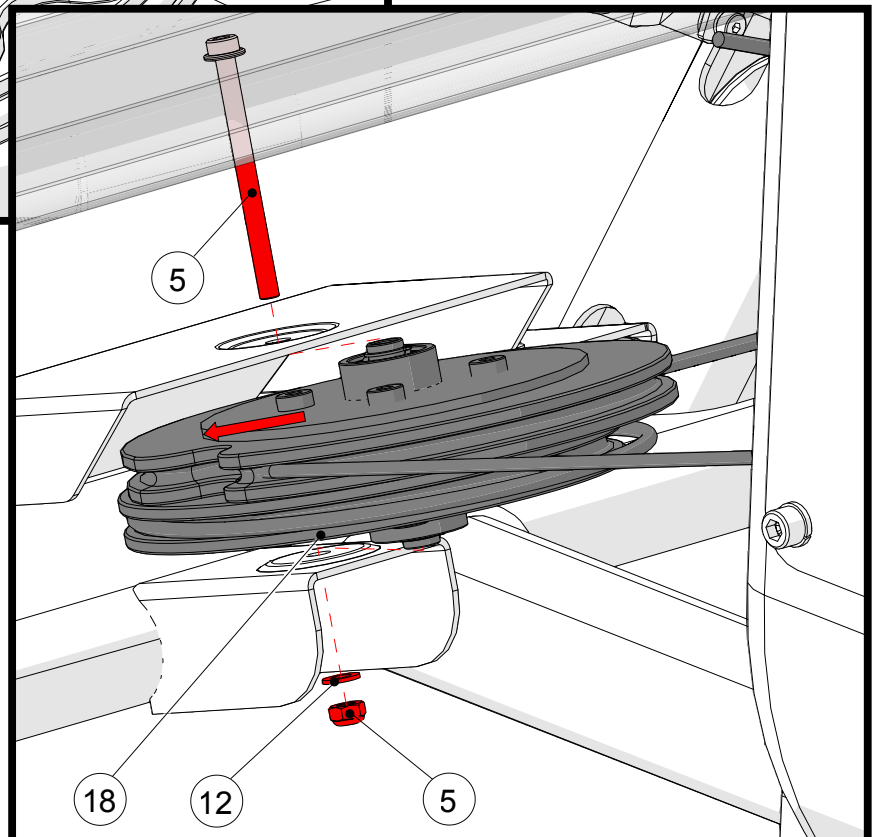


STEP 2 | CABLE ASSEMBLY INSTRUCTIONS & NOTES

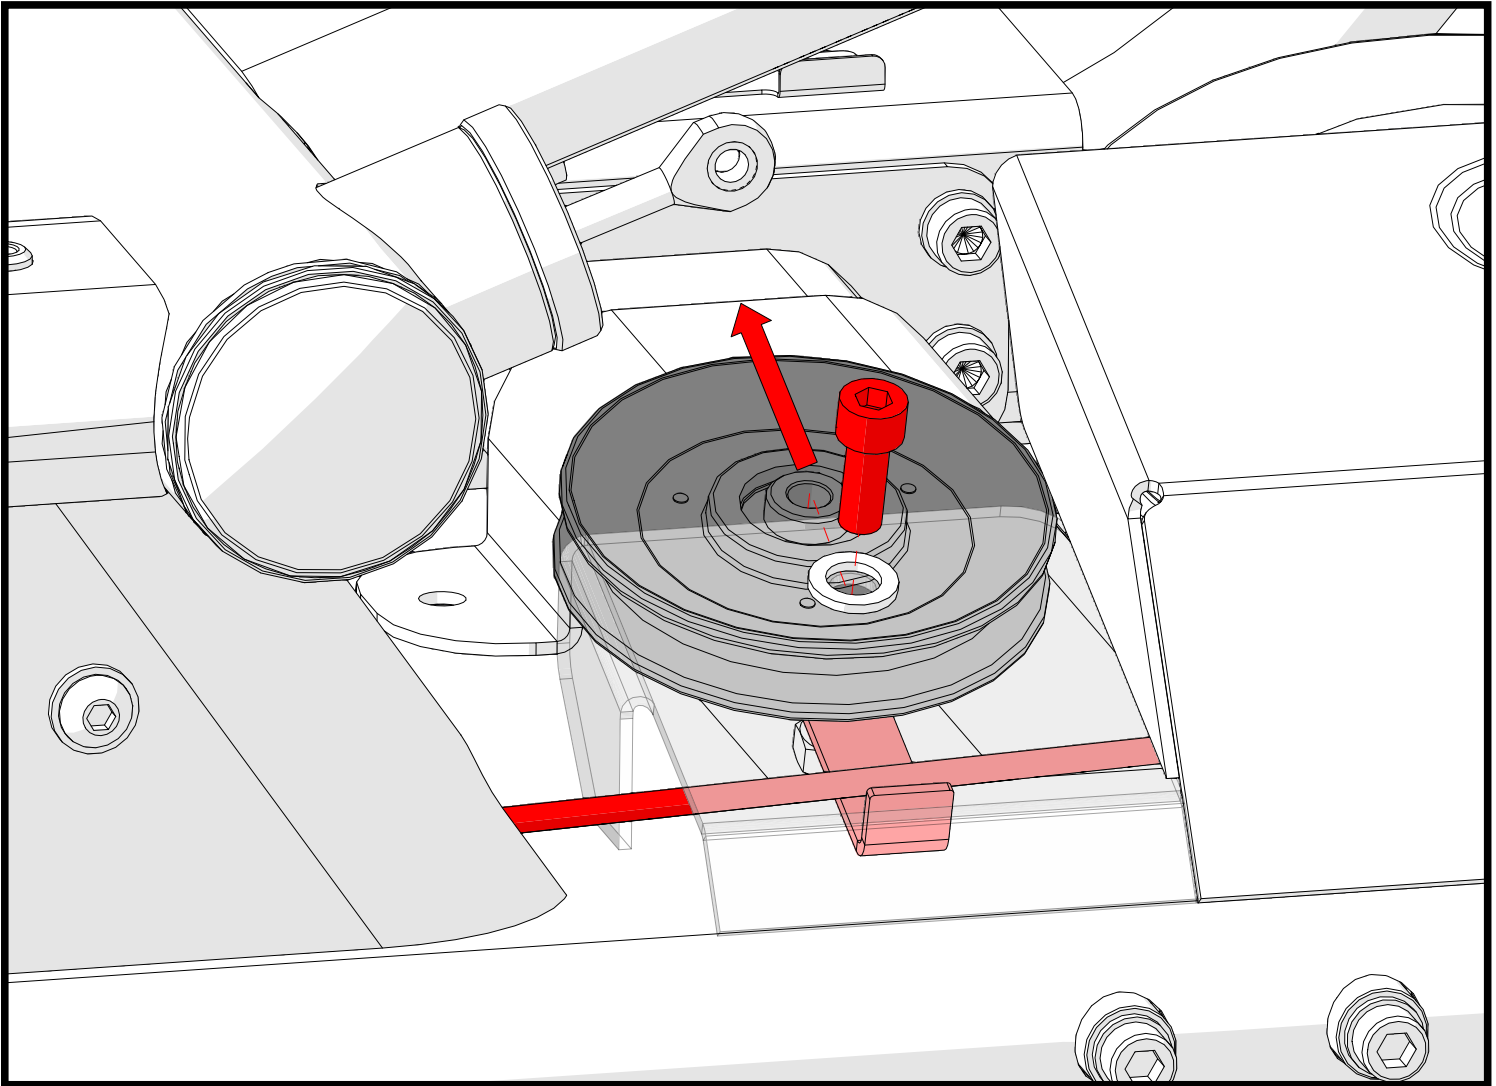

Remove pulley to route cable inside cable keeper as shown and re-torque to 77 N-m/57 ft-lbs.

STEP 1 | SEAT SLED ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
19	M8 Flat Washer	16
20	M8 Nylock Nut	16
21	Linear Bearing Block	4
22	M8 X 30L SHC	16
23	Seat Sled	1

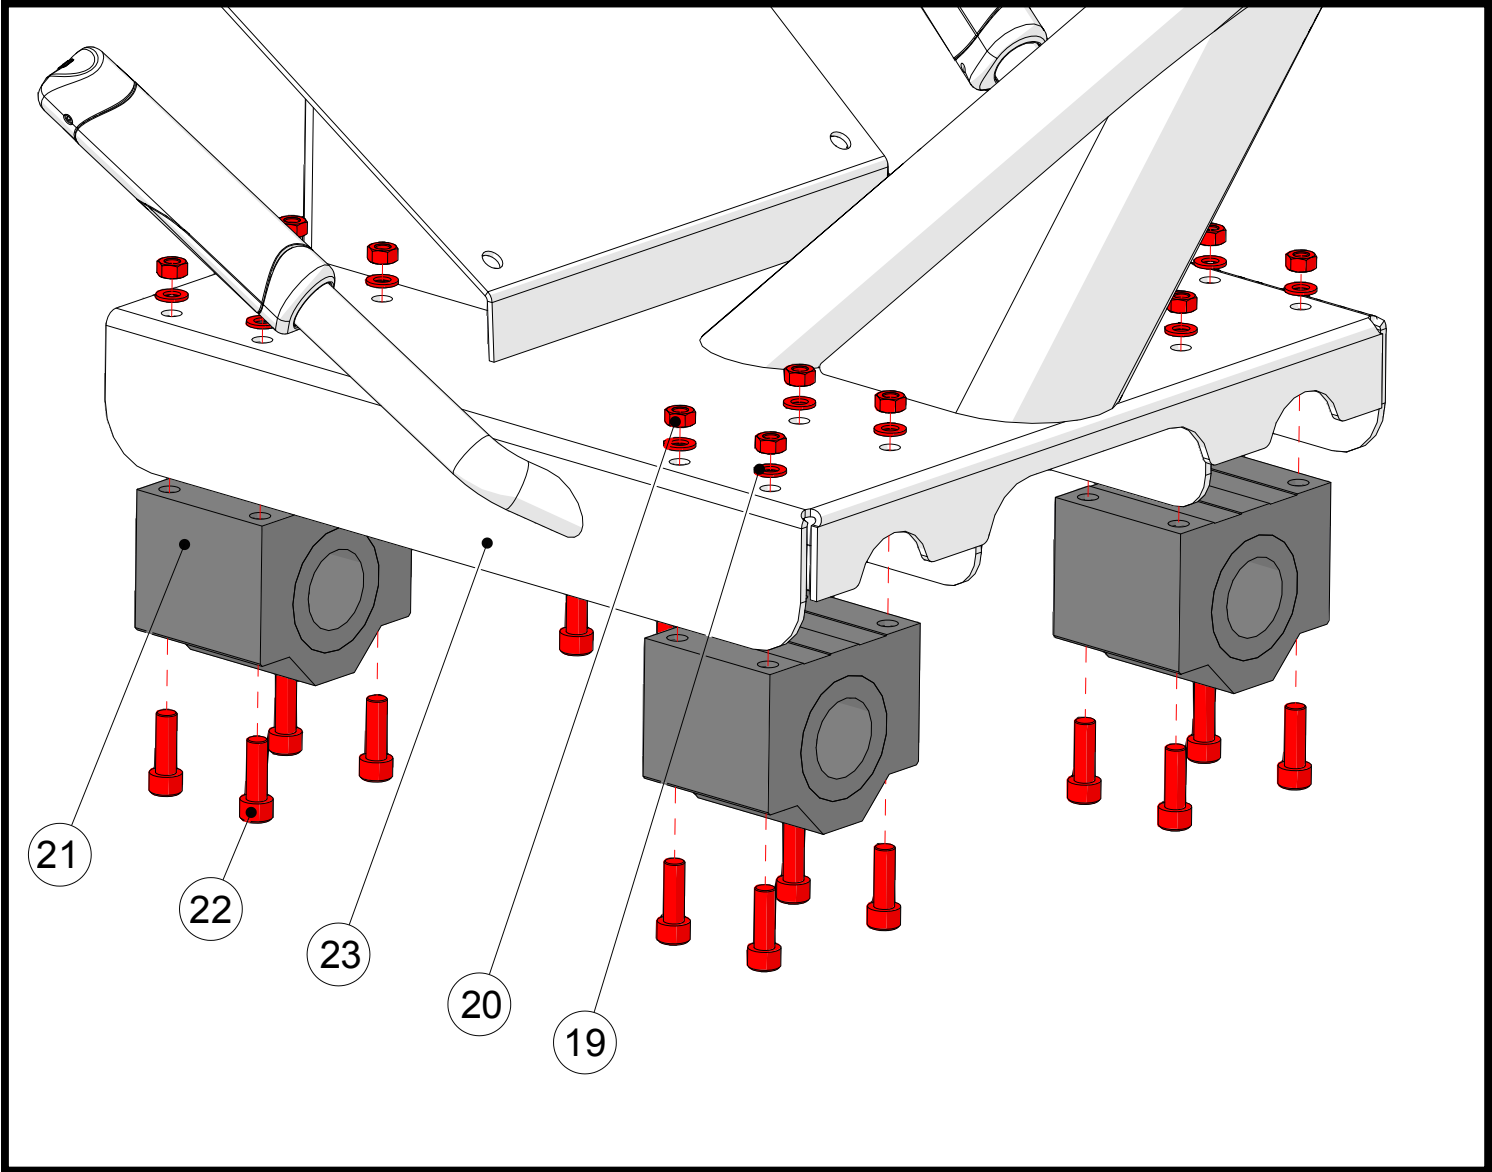

Assemble bearings to sled as shown - DO NOT FULLY TIGHTEN

STEP 2 | SLED AND GUIDE ROD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
23	Seat Sled	1
24	Rubber Bumper Stop	2
25	Snap Ring	2
26	Disc (45 mm Diameter)	2
27	Guide Rod Sleeve	2
28	Guide Rod	2

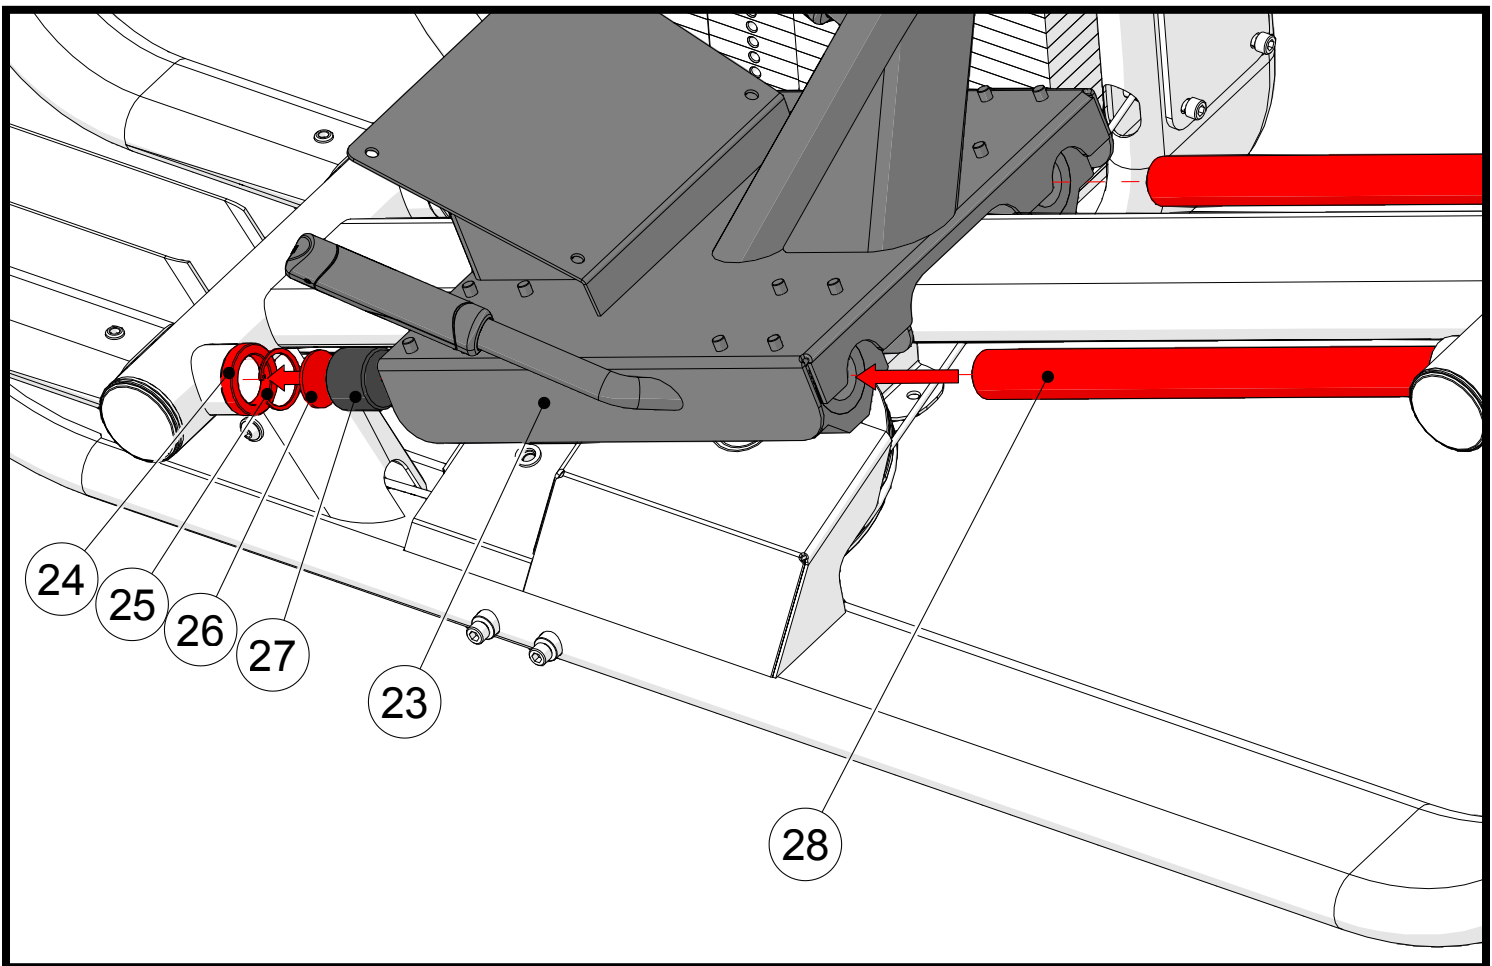

Assemble guide rods onto sled as shown

STEP 3 | SEAT GUIDE ROD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
25	Snap Ring	2
26	Disc (45 mm Diameter)	2
27	Guide Rod Sleeve	2
28	Guide Rod	2
29	End Cap	2

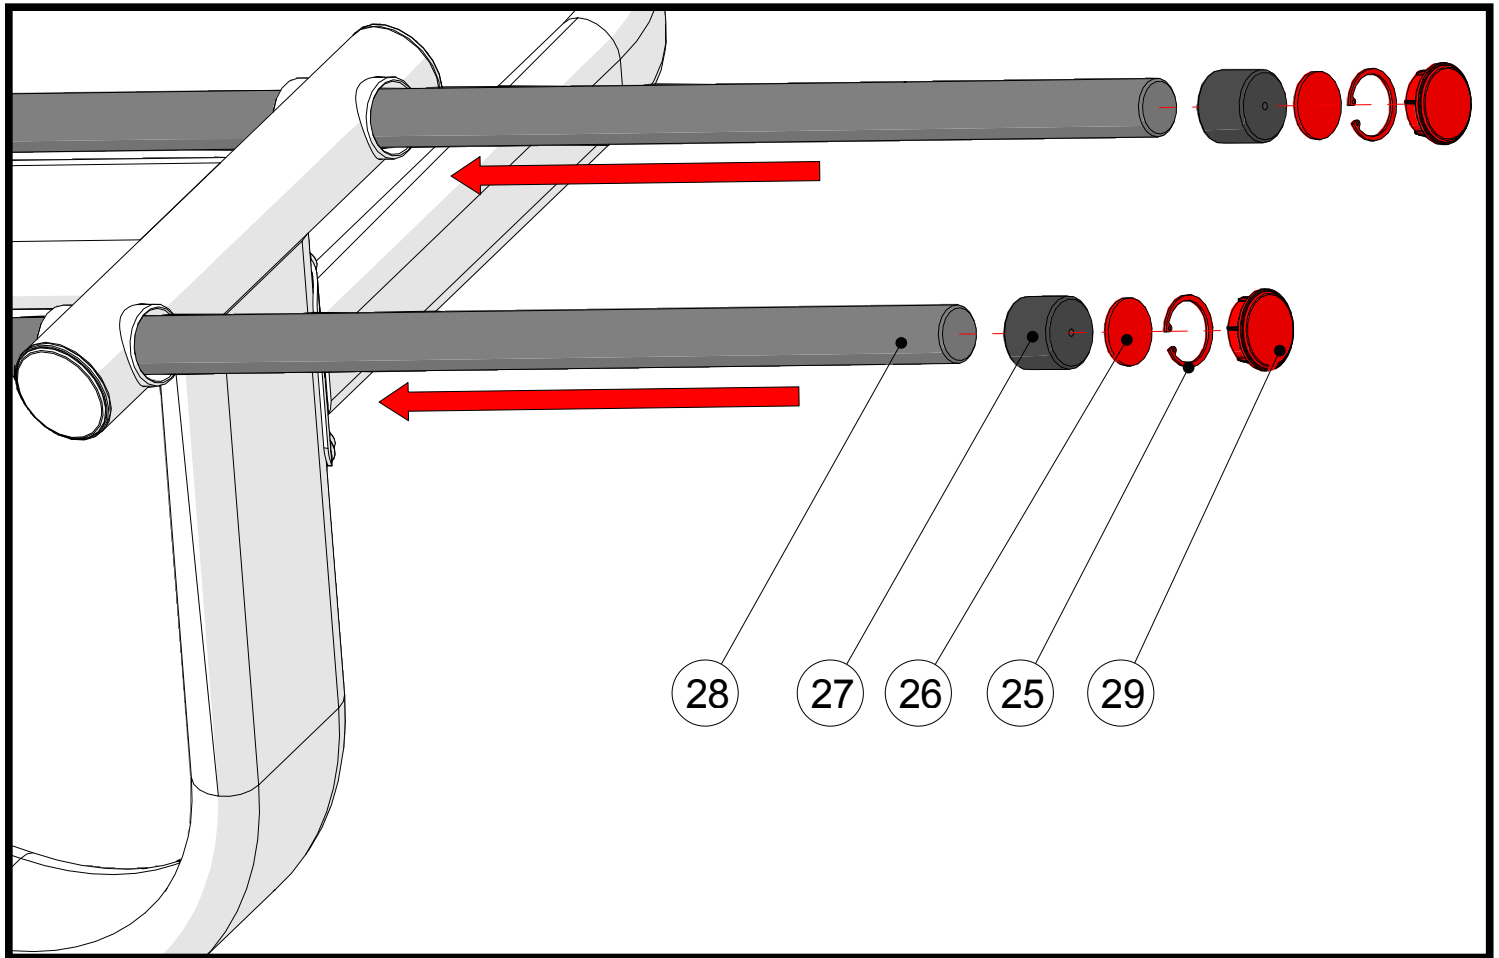

- Assemble components as shown
- Torque linear bearings from page 15 to 77 N-m/57 ft-lbs.

STEP 4 | ROM ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
12	M10 Flat Washer (22 mm Diameter)	6
30	ROM Assembly	1
31	M10 X 20L SHC	6

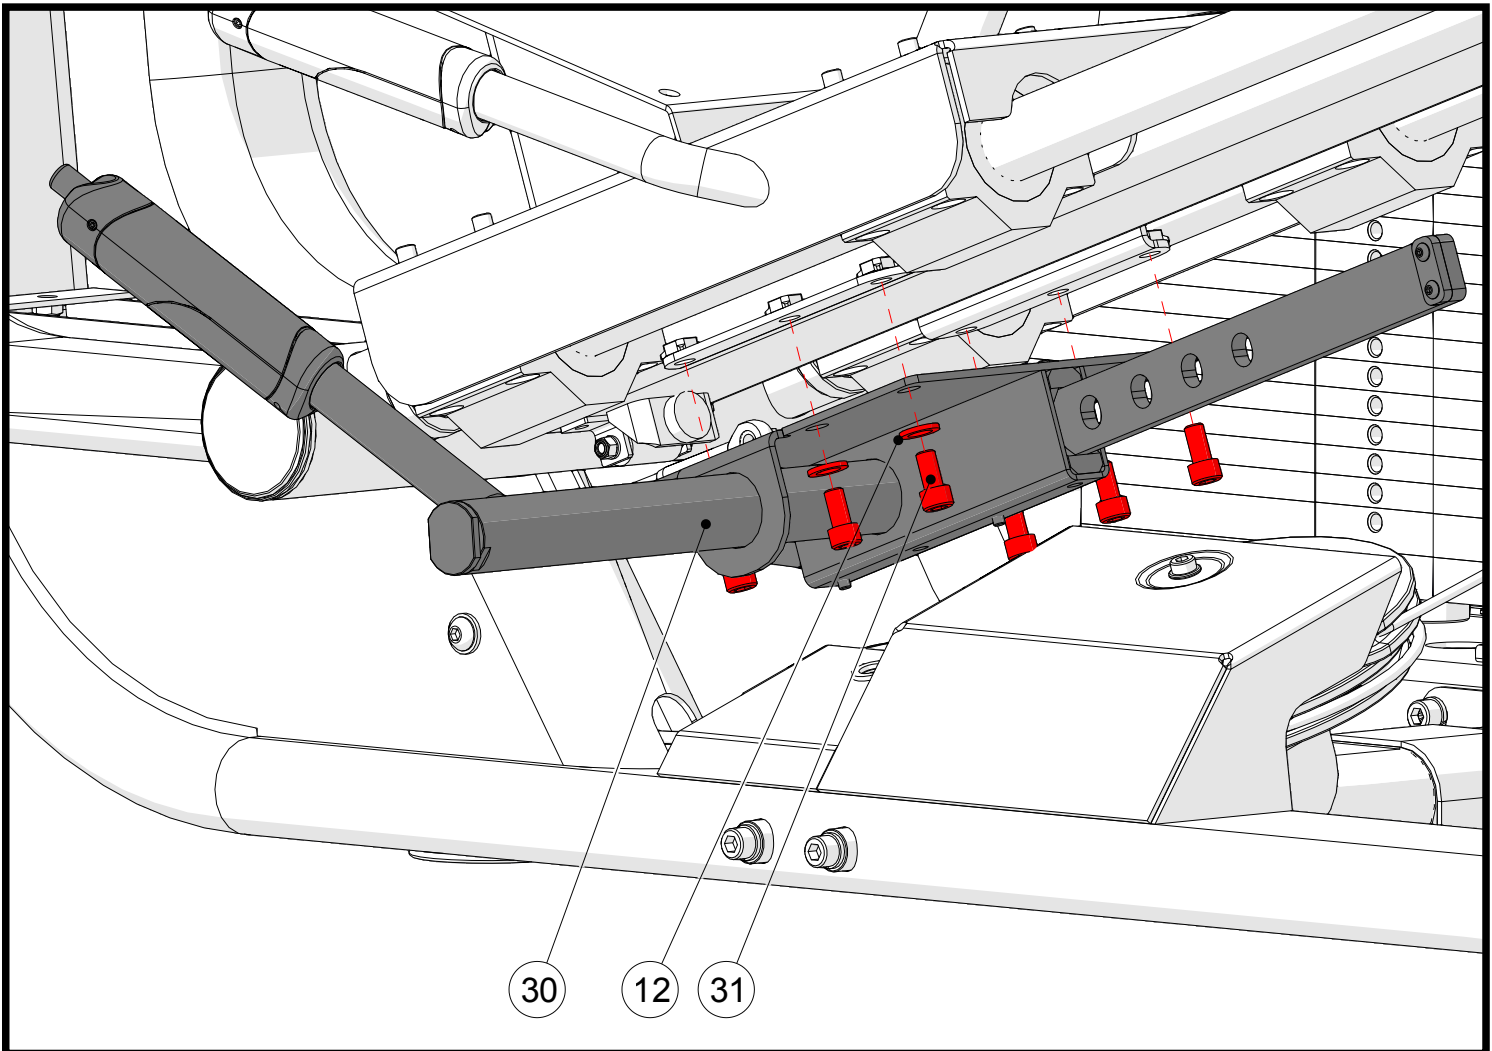


Assemble ROM assembly as shown.
Tighten to 77 N-m/57 ft-lbs.

STEP 5 | CABLE TO SEAT SLED ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
19	M8 Nylock Nut	1
32	M8 Shoulder Bolt	1

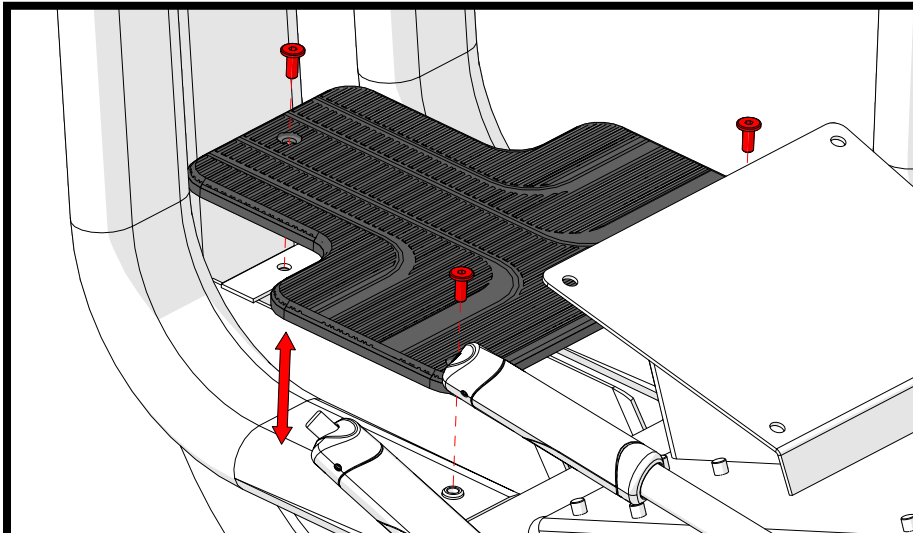


- Remove lower foot plate to gain access to lower pulley and cable end
- Assemble cable end as show
- Torque shoulder bolt to: 16 N-m/142 in-lbs.
- Reassemble foot plate

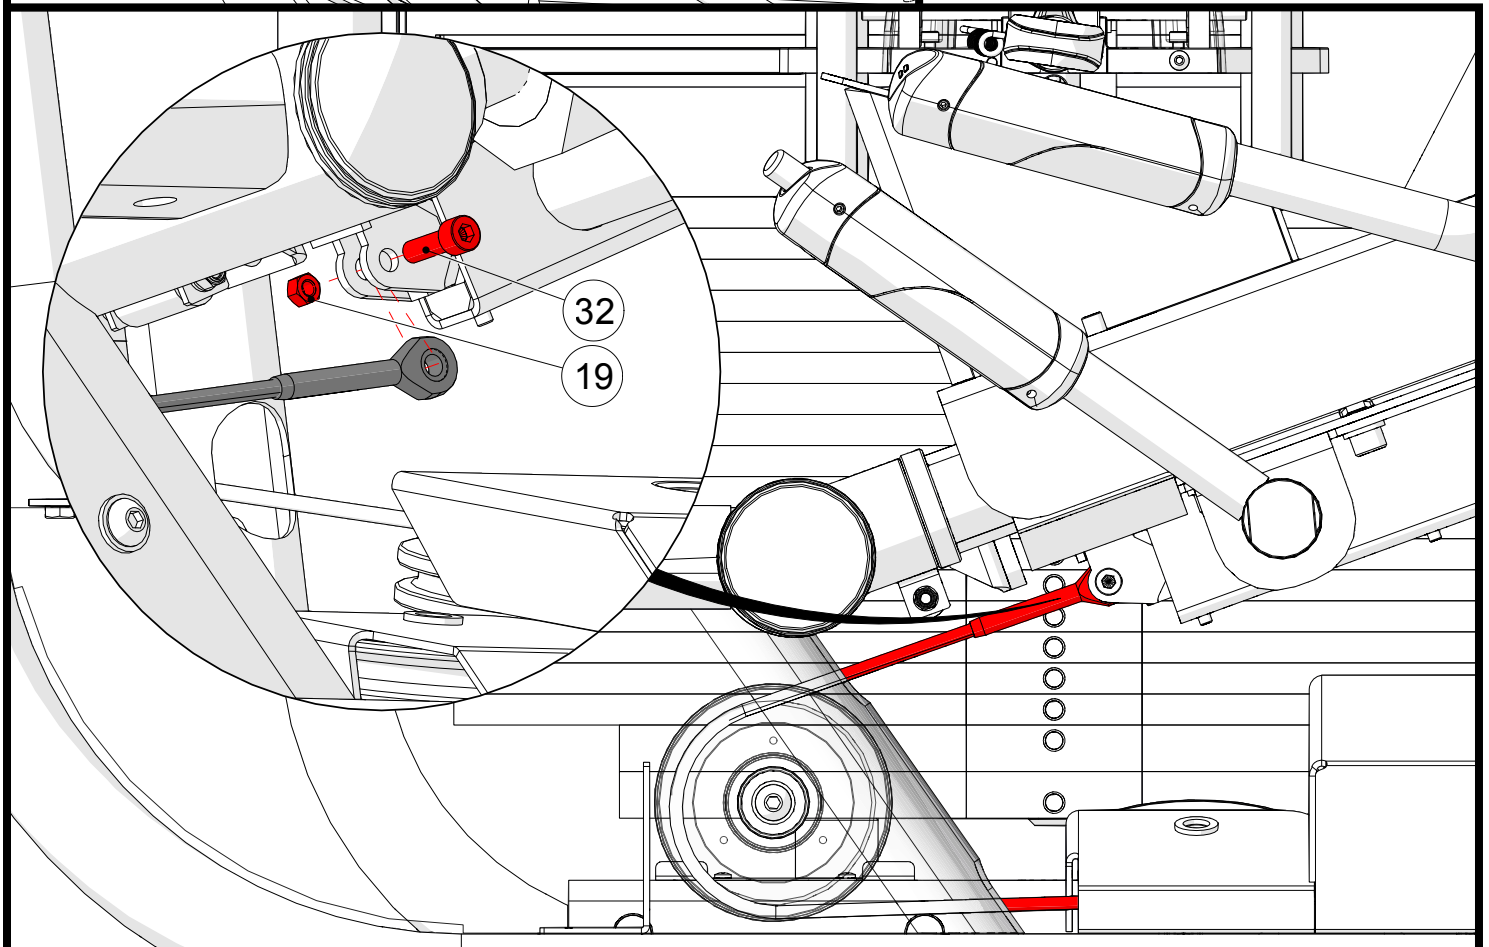

STEP 1 | PAD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
33	M10 X 15L SHC	4
34	Pad	1

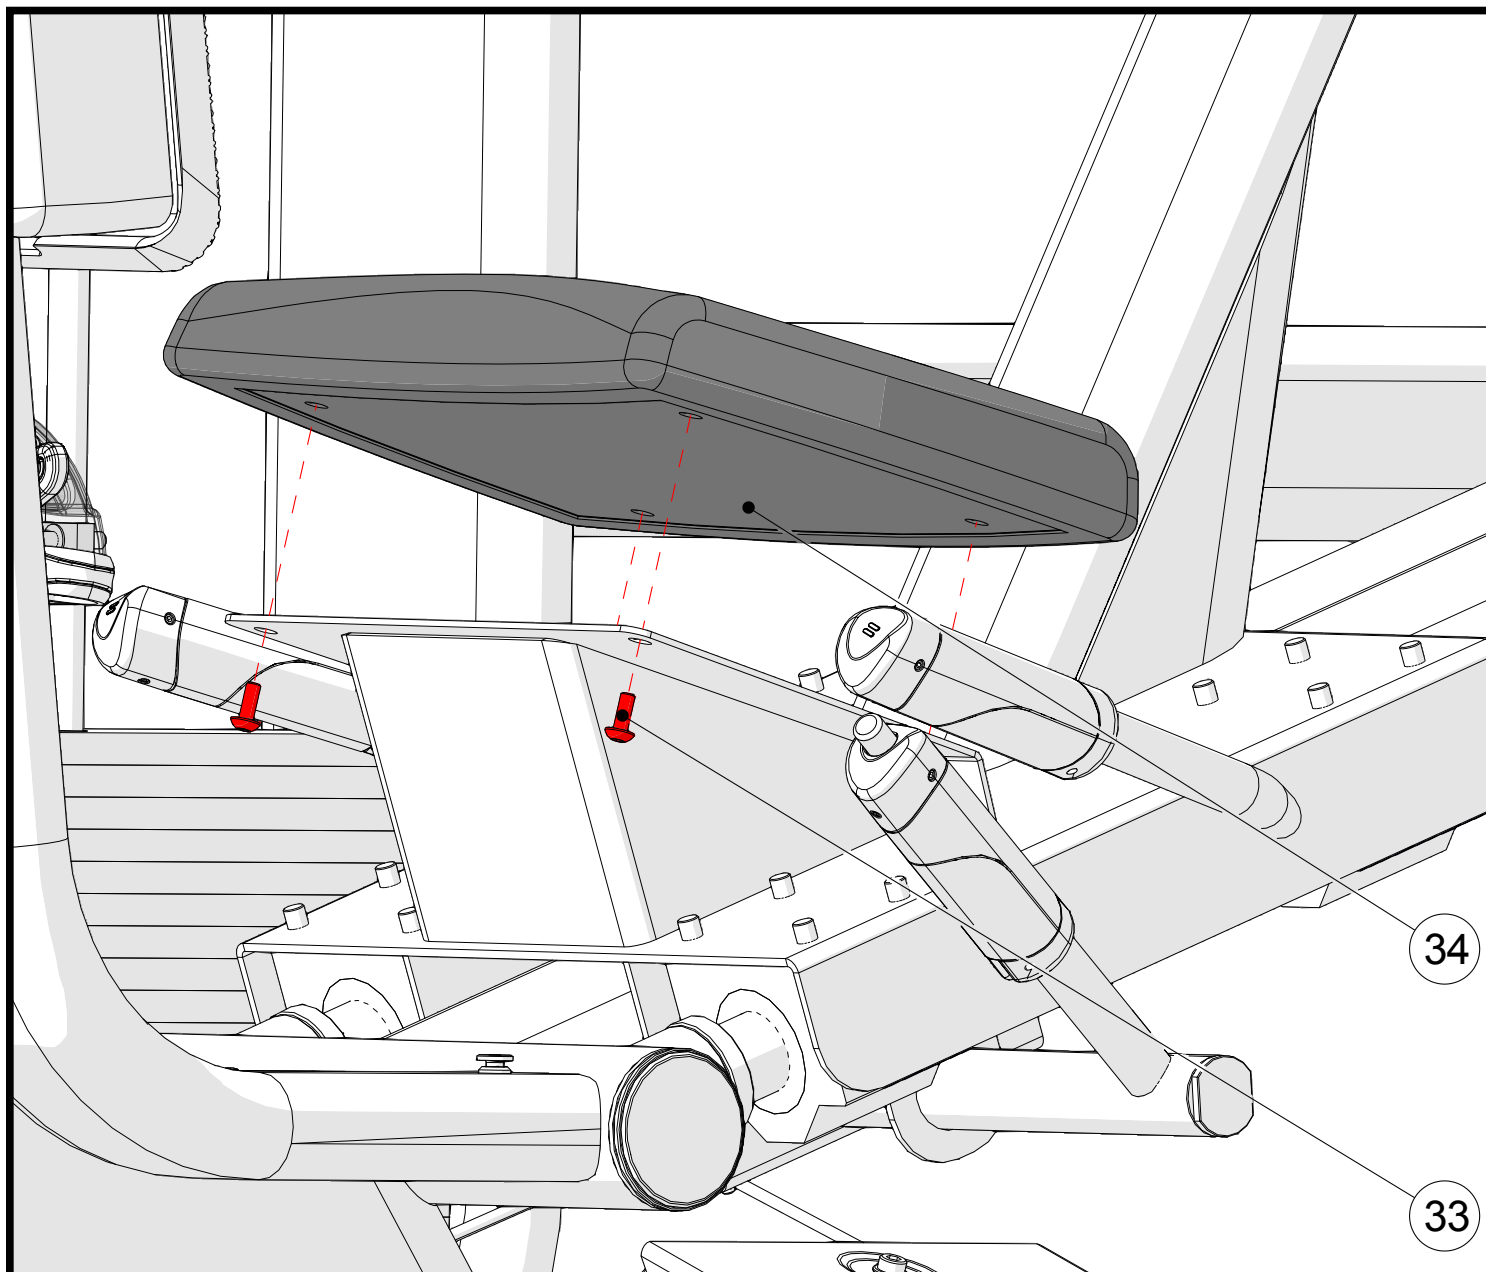

Orient the pad as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 2 | BACK PAD & HEAD PAD ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
35	Head Rest Assembly	1
36	M10 X 75L BHC	4
37	Back Pad Assembly	1

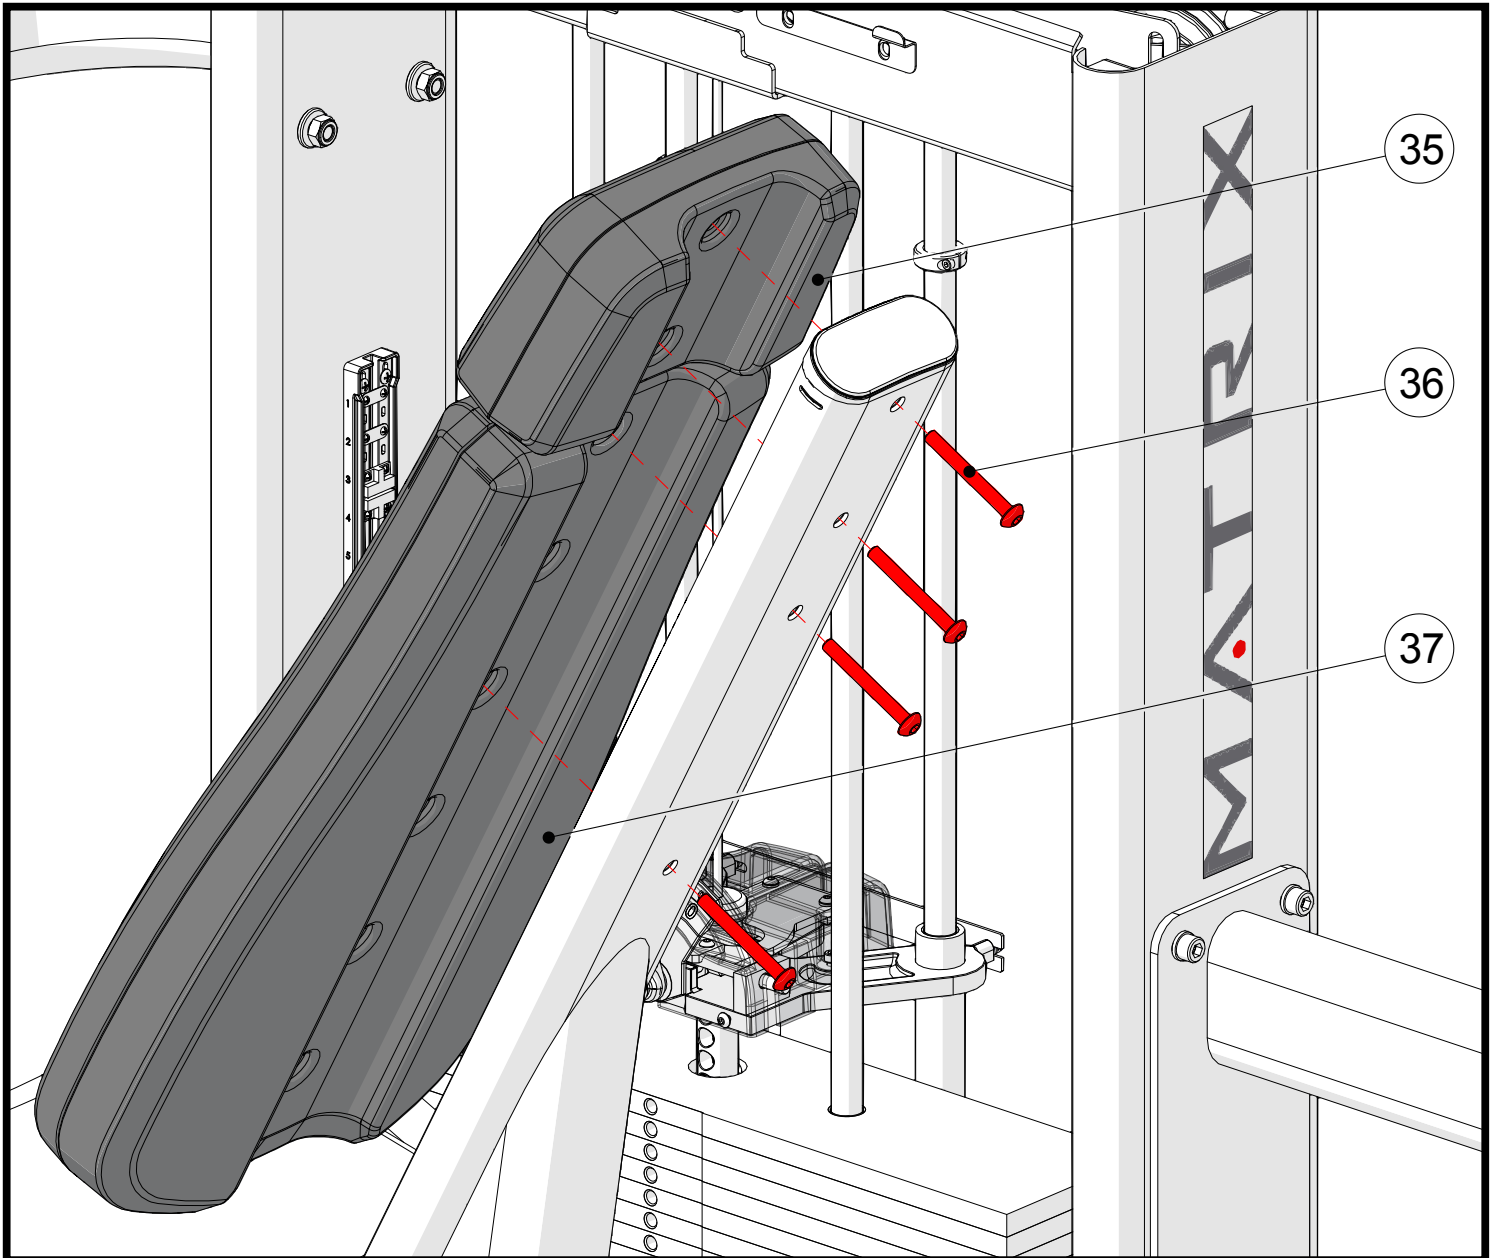

Install the pad as shown.
Tighten to 27 N-m/20 ft-lbs.

STEP 1 | SHROUD ASSEMBLY ASSEMBLY INSTRUCTIONS & NOTES


ID	DESCRIPTION	QUANTITY
38	Left Front Shroud	1
39	Rear Shroud	1
40	Right Front Shroud	1

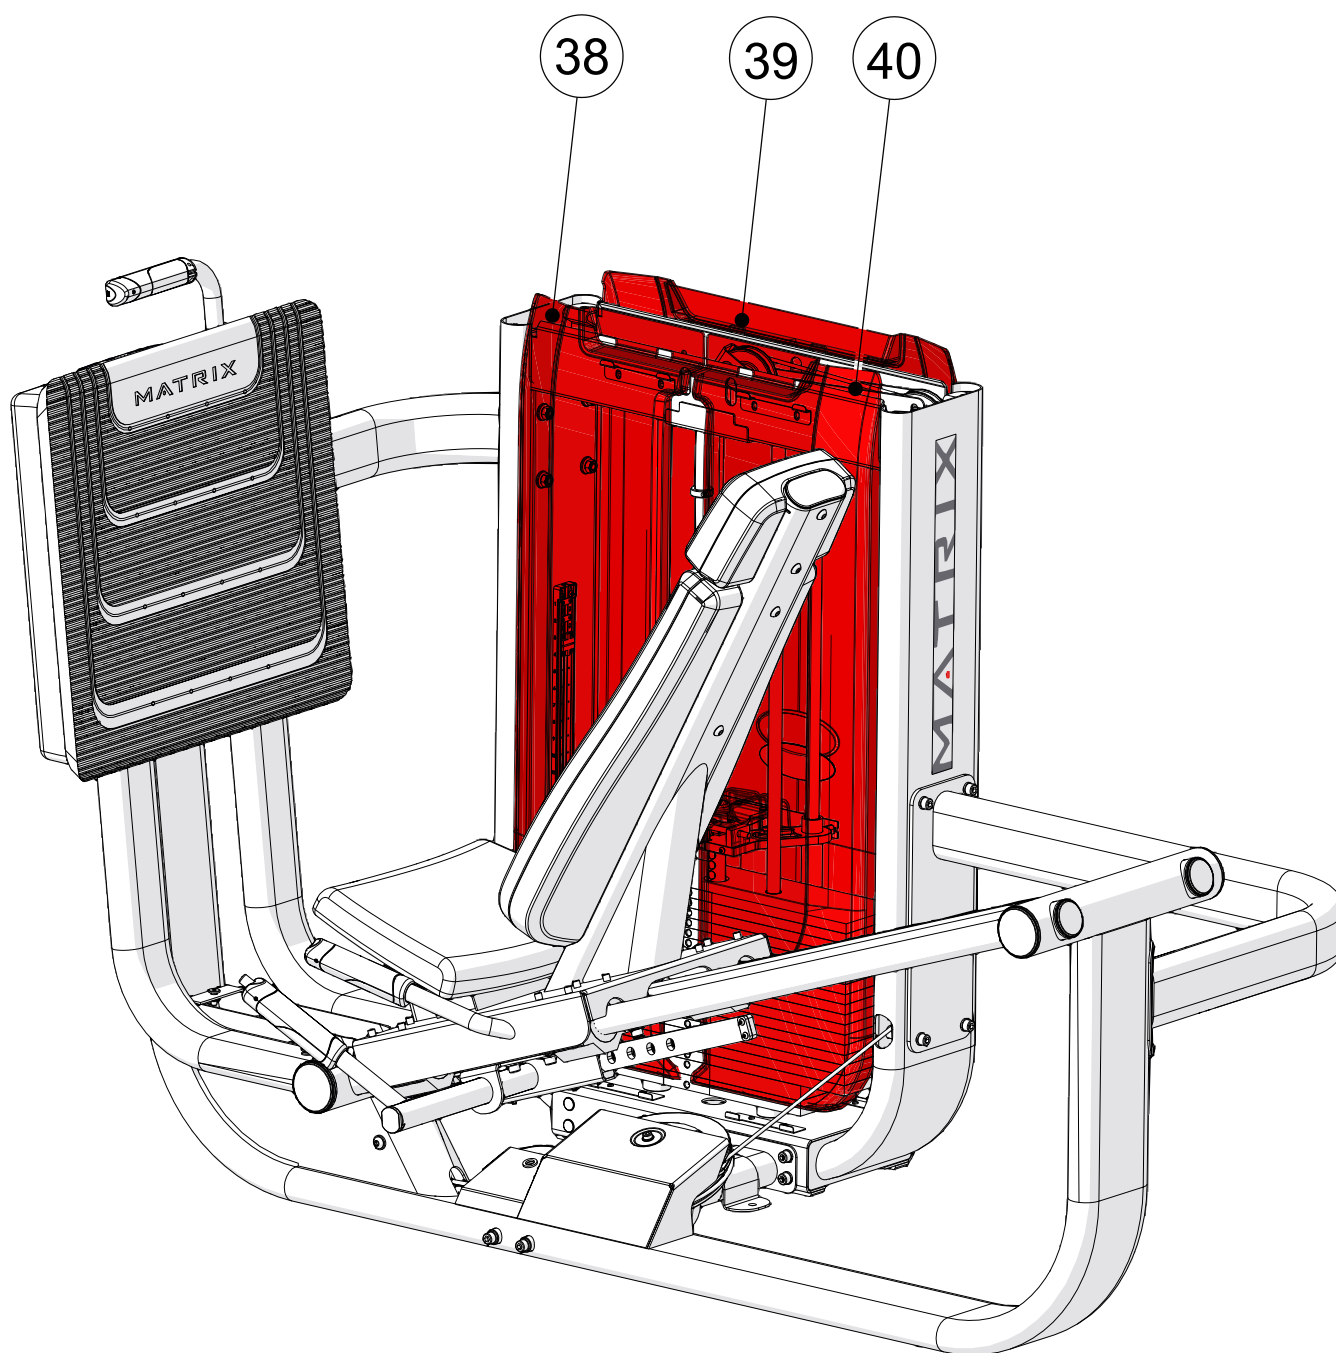

Install the weight stack shrouds as shown.

STEP 2 | TOP CAP ASSEMBLY INSTRUCTIONS & NOTES

ID	DESCRIPTION	QUANTITY
41	M8 X 60L SHC	4
42	Top Cap	1

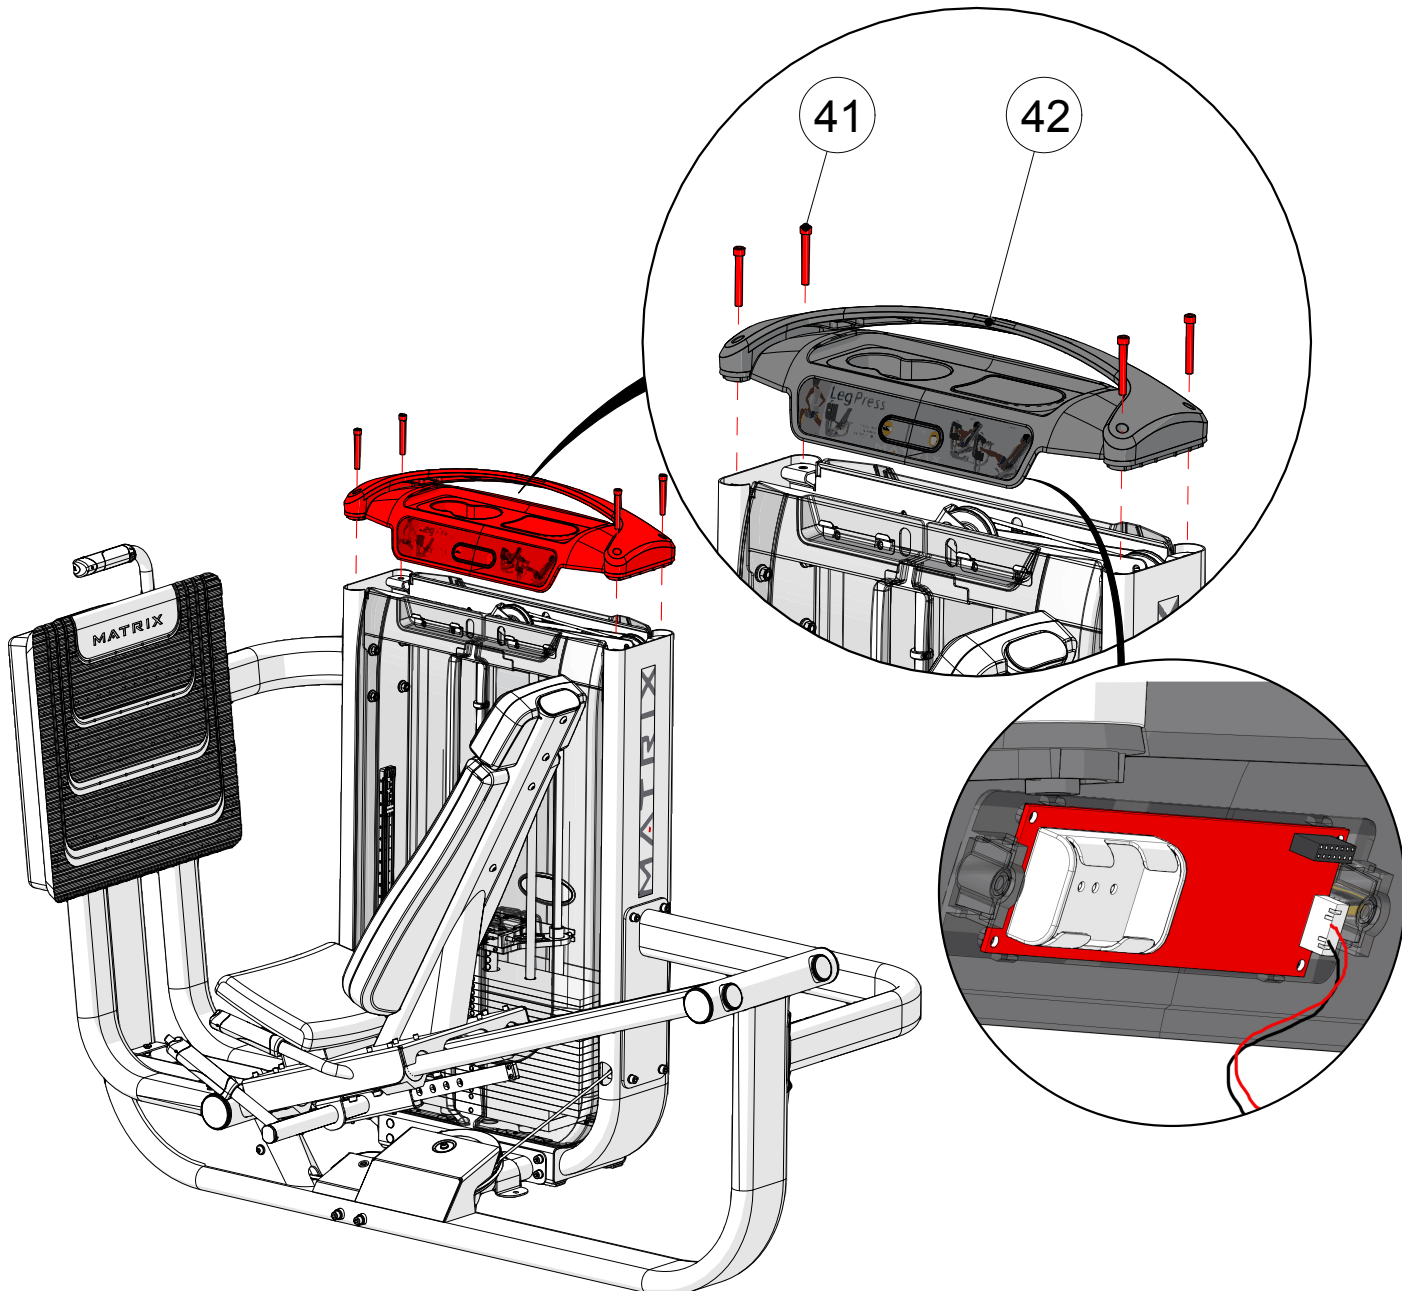


Install the top cap and connect rep counter plug as shown.

Torque to 17 N-m/147 in-lbs.

Position top cap so Rep Counter faces the user.

MATRIX®

IMPORTANT NOTICE

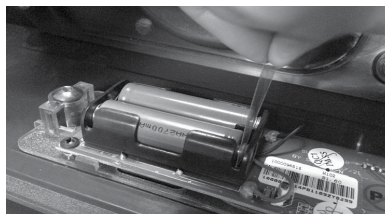

PLEASE NOTE:

Be sure to remove the insulating sheet when installing the Rep Counter.



Matrix Fitness
1600 Landmark Drive
Cottage Grove WI 53527

matrixfitness.com
Toll-free 866.693.4863
Facsimile 608.839.8687

Other ManualsLib Projects

 www.manualslib.com

 www.manualslib.de

 www.manualslib.es

 www.manualslib.fr

 www.manualslib.nl

 www.manualslib.mx

 www.manualslib.tech 30+ Languages