

Print Server

Advanced Print Queue Management for Digital Textile Printing

A step-by-step guide to setting up Print Server, managing print queues, sending jobs from neoStampa, monitoring with Control Center, and integrating via the WebAPI.

TABLE OF CONTENTS

What's inside

1	What is Print Server?	p.3
	How it fits into your neoStampa printing workflow	
2	Launch & Activate Print Server	p.3
	Enable Print Server from neoStampa Printer Configuration	
3	Configure Print Server Settings	p.4
	Default scheme, finished jobs, columns, output options and Log	
4	Creating & Sending Print Jobs	p.5
	From neoStampa and directly in the Print Server queue	
5	Managing the Print Queue	p.6
	Job statuses, queue controls, Activity Log and troubleshooting	
6	Remote Printing & Control Center	p.7
	Connecting remotely and monitoring all queues from one screen	
7	WebAPI — Automate Print Server	p.8
	HTTP commands to control the queue programmatically	

NOTE

This guide covers neoStampa Print Server on Windows. Print Server is included in neoStampa — verify your license includes it before starting.


1

What is Print Server?

How it fits into your neoStampa printing workflow

Print Server is a dedicated print queue application embedded in neoStampa. Rather than printing directly from neoStampa to your printer, Print Server acts as an intelligent intermediary — it receives jobs, rips them (converts image data to printer-ready format), manages the queue, and controls output to one or more printers.

This gives you significantly more control over your production workflow: jobs can be queued, reordered, paused, and monitored in real time. Multiple neoStampa installations on a network can all send jobs to the same Print Server. And with Control Center and the WebAPI, you can manage everything remotely or programmatically.

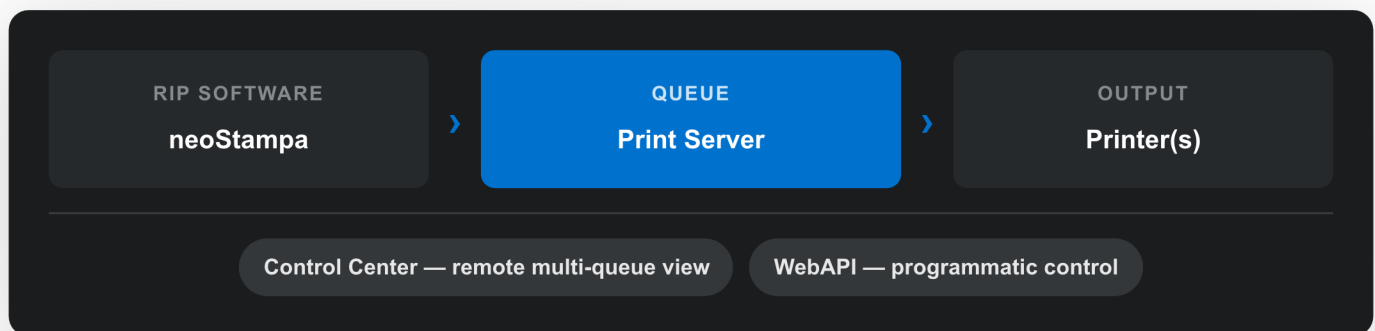

- ✓ Dedicated RIP & print queue
- ✓ Local and remote (network) operation
- ✓ Real-time job monitoring
- ✓ Control Center multi-queue view
- ✓ Color replacement & variations
- ✓ Compatible with all major printer brands
- ✓ Supports JPG, TIF, PDF, XJB and more
- ✓ Hot folders for automatic job loading
- ✓ WebAPI for programmatic control
- ✓ Activity Log for troubleshooting

NOTE

Print Server runs on Windows as part of the neoStampa installation. Your neoStampa license must include Print Server — check under **neoStampa > License** to confirm.

2

Launch & Activate Print Server

Enable Print Server from neoStampa Printer Configuration

The recommended way to launch Print Server is directly from neoStampa's Printer Configuration — this connects it to your printer in one step.

■ Enable from Printer Configuration Recommended

- 1 In neoStampa, open **Printer Configuration** from the menu or toolbar.
- 2 Select your printer from the **List of installed printers**.
- 3 Under Device configuration, find the checkbox labelled **Use local Print Server** and tick it.
- 4 The **Start...** button next to it becomes active. Click Start — Print Server launches immediately.
- 5 Also tick the **Auto** checkbox so Print Server starts automatically every time neoStampa opens.
- 6 Click **Close**. Print Server is now running and receiving jobs from neoStampa.

TIP

The Start button only becomes active after ticking 'Use local Print Server'. If it appears greyed out, make sure the checkbox is enabled first.

■ Alternative: Launch from the Desktop Shortcut

You can create a desktop shortcut for quick access to Print Server. Open Print Server, go to **Configuration** (top-right gear icon), and click **Generate desktop link**. A shortcut named after your configured printer will appear on your desktop.

NOTE

Print Server stays active in the background after you close the window. Access it at any time from the system tray hidden icons — right-click the Print Server icon to Show, Hide, or Quit.

■ Connecting a Remote Print Server Optional

If your printer is on a different machine on the network, you can connect to it remotely instead of using a local Print Server:

- 1 In neoStampa Printer Configuration, set **Connection** to **PRNSVR: (PrintServer)**.
- 2 Click **Options...** and select the IP address of the remote machine from the list.
- 3 Enter the security token if one has been set on the remote Print Server (find it under Print Server Configuration > Log).
- 4 Click **Test...** to verify the connection is reachable.

TIP

If the IP address of the remote machine changes, Print Server updates the connection settings automatically.

3 *Configure Print Server Settings*

Default scheme, finished jobs, columns, output options and Log

Access the configuration dialog by clicking the gear icon in the top-right of the Print Server window. Here you can set defaults that apply to all print jobs.

■ Printer Settings

Current driver	Shows the printer this Print Server instance is managing. To change the printer, click ... to open Printer Configuration.
Default Scheme	The printing scheme (ink, profile, quality) applied to jobs that do not specify their own scheme. Click ... to open the Printer Scheme Manager and select or review available schemes.
Split job pages	Controls how multi-page jobs (e.g. rapport + secondary data) are handled: No (rip as one page), For all jobs, Only for rapport jobs, or Print rapport pages only.
Finished jobs	Choose what happens when a job completes: Delete , Keep in Queue , or Archive .
Retry on error	Automatically retries a job if an error occurs during printing.
Pause between copies	Adds a delay between printed copies for better output control.

■ General Settings

Language	Set the Print Server interface language (shared with neoStampa).
Default units	Choose between centimetres, millimetres, metres, feet, inches, pixels, points, or yards.
Column sort	Enable column header sorting to reorder jobs in the queue by any column.
Append Job ID	Adds the job's unique UUID to the output file name for easier tracking.

■ Log & Connection Settings

Click the **Log...** button in the Configuration dialog to access:

- **WebAPI TCP port** — the port number used for remote API and Control Center connections. Note this value — you will need it when connecting Control Center or setting up the WebAPI.

- **Security token** — an optional token to secure remote connections. Enter a custom token or click the refresh icon to generate a random one.
- **Compute cost** — enables printing cost calculation via neoControl.
- **Notify URL** — a webhook endpoint that receives notifications from Print Server when jobs complete or change status.

TIP

After changing any Printer Settings, restart neoStampa to ensure the new settings take effect.

4 *Creating & Sending Print Jobs*

From neoStampa and directly in the Print Server queue

Method A — Send from neoStampa

This is the standard workflow for most users. With Print Server connected (Section 2), every print job from neoStampa goes directly to the queue:

- 1 Open your design in neoStampa and click **Print!**
- 2 The **RIP Options** dialog opens. Select your printing scheme (controls ink type, color profile, and quality).
- 3 Click **Print!** at the bottom of the dialog.
- 4 The job appears in the Print Server queue with **Idle** status.

Method B — Create a Job Directly in Print Server

You can also create jobs directly inside Print Server without going through neoStampa:

- 1 In the Print Server window, click the **New Job** button (top-left toolbar).
- 2 Click the **+** button under Source files to load one or more image files. Supported formats include JPG, TIF, PDF, PSD, and XJB.
- 3 Configure **Size / Rapport** settings: set width, height, and number of copies or minimum repeats.
- 4 Set the **Drop** and **Start** (XY offset) if needed.
- 5 If working with multichannel or hybrid designs, select the correct **Colorway** from the dropdown.

- 6 Choose an **Output Layout** (Color Printing, Rapport Printing, or None).
- 7 Select a **Printing scheme** or leave as default.
- 8 Optionally add **Comments** that will appear in the queue and can be embedded in the output file.
- 9 Click **Print** — the job is added to the queue.

Method C — Load XJB Files via Drag & Drop

XJB files — the native Inèdit job format — can be dragged and dropped directly onto the Print Server queue window. This is useful when jobs are prepared in other Inèdit applications (such as neoCatalog) and sent to Print Server for output.

■ Exporting Jobs for Later Use

To save a job for later reprinting without keeping it in the active queue, use the **Export job...** button in the New Job editor. This exports the job as an XML or XJB file that can be reloaded into Print Server at any time.

TIP

Enable the **Enabled** option when creating a job to start ripping and printing automatically — without having to tick the checkbox in the queue manually.

5 *Managing the Print Queue*

Job statuses, queue controls, Activity Log and troubleshooting

■ Job Statuses

Each job in the queue shows one of the following statuses:

● Idle	Job is loaded and waiting. Tick the checkbox next to the job name to start ripping and printing.
● Ripping	Print Server is processing the image file and converting it to printer-ready data.
● Printing	The job is actively being sent to the printer. A progress bar shows completion percentage.
● Finished	The job has completed successfully. Handled according to your Finished Jobs setting (Delete / Keep / Archive).
● Error	An error occurred. Check the job status message and the Activity Log for details.
● Loading	The job file is being loaded into the queue.

■ Queue Controls — Top-Left Toolbar

- **Load job** — add a new print job from a file.
- **Erase job** — remove a selected job from the queue.
- **Sort / Search** — find or reorder jobs in the queue.
- **Pause / Start** — pause the entire queue or resume printing.
- **Print mode / Rip-only mode** — switch between printing and ripping without printing (useful for pre-processing jobs in advance).

■ Queue Controls — Top-Right Toolbar

- **Configuration** — open Print Server settings (Section 3).
- **Output options** — set control bars, margins, machine page space, and print statistics.
- **Color replacement** — read and write color substitutions for the queue.
- **Variations** — configure print variations for colorway or size testing.
- **Hot folders** — set up watched folders that automatically add files to the queue when dropped in.
- **Activity Log** — open the log viewer to see a full history of print events and errors.

■ Job Size & Rapport Controls

The **Size / Rapport** panel at the bottom of the queue window shows:

- **Original length** — the full length of the file as loaded.
- **Printed length** — how much has been printed so far.
- **Programmed length** — how much is scheduled to print. For rapport jobs you can adjust this and click Apply to change the target output length.
- **Width** — for non-rapport jobs you can adjust the print width here.

■ Activity Log & Troubleshooting

If a job fails or behaves unexpectedly, open the Activity Log from the top-right toolbar. The log records all print events, errors, and status changes with timestamps. Log files are also stored on disk at:

```
C:\Users\Public\Documents\neoStampa 10\Debug\
```

NOTE

Each log file is named with the printer name and a timestamp. Send the relevant log file to Inèdit Support when reporting an issue.

6

Remote Printing & Control Center

Connecting remotely and monitoring all queues from one screen

■ How Remote Printing Works

Print Server can act as a network print server — multiple computers running neoStampa can all send jobs to the same Print Server over your local network. Both machines must be on the same network (or the IP and port must be accessible through your firewall).

NOTE

To allow Print Server through the Windows Firewall, go to **Windows Defender Firewall > Allow an app through firewall** and add neoStampa and Print Server. Refer to the Inèdit support article for specific port numbers.

■ What is Control Center?

Control Center is Inèdit's remote management application that lets you view and control all Print Server queues across your production floor from a single screen — without walking to each machine.

- See all printers at a glance — **Online**, **Offline**, or **Idle** — as status cards.
- View active jobs, pending meters, and job count per printer.
- Add, reorder, edit, export, archive, or delete jobs on any queue remotely.
- Start or pause any queue from the same interface.
- Filter the view: show all queues, active queues only, queues with active jobs, or hide offline queues.

■ Connect Control Center to a Print Server Queue

- 1 Open Control Center and go to **Printing Queue** from the left sidebar.
- 2 Click the **+** button to add a new queue.
- 3 Enter the **IP address** of the Print Server machine and the **TCP port** (find the port in Print Server Configuration > Log).
- 4 If the Print Server has a security token configured, enter it in the **Security token** field.
- 5 Click **Add**. The printer card appears in the queue overview.

■ Adding Jobs from Control Center

Click on any queue card to enter the queue detail view. Click **+ Add Job** and fill in:

- **Job File** — path to the image file to print (must be accessible from the Print Server machine's network location).
- **Printer Scheme** — the color and quality profile for this job.
- **Layout** — Color Printing, Rapport Printing, or custom layout.
- **Size** — Image (matches file size), Layout, or Custom with specific width/length.
- **Copies** — number of copies to print lengthwise.
- **Comments** — optional notes visible in the queue.
- **Activate job in queue** — tick this to start printing immediately after adding.

■ Managing Jobs in Control Center

Use the job drop-down menu (three-dot icon next to any job) to:

- **Print Next** — move this job to the front of the queue.
- **Move to Printing Queue / Send to Archived Jobs** — enable or archive the job.
- **Send To** — reposition the job (Top, One step up/down, Bottom).
- **Edit Job** — change the printing scheme or copies.

- **Export Job** — download the job as a compressed XJB file.
- **Archive Job** — store the job locally for later reprinting.
- **Delete Job** — remove the job from the queue permanently.

7

WebAPI — Automate Print Server

HTTP commands to control the queue programmatically

Print Server includes a built-in WebAPI that allows any computer on your network to control it using standard HTTP requests — no software installation required. This is ideal for connecting Print Server to order management systems, e-commerce platforms, or custom production dashboards.

■ Enable the WebAPI

- 1 Open Print Server Configuration (gear icon, top-right).
- 2 Click **Log...**
- 3 Note the **TCP port** (default: 49091). This is the port for all API calls.
- 4 Optionally enter or generate a **Security token** to authenticate requests.
- 5 Click **OK**.

NOTE

The base URL for all API calls is:

```
http://[IP]:[PORT]/?action=[command]
```

Authenticate by sending your token in the HTTP Authorization header, or as a token URL parameter. All responses are in XML format.

■ Key API Actions

All actions use HTTP GET except **addJob** (POST). Every action returns an XML response with **RequestStatus** (OK or Error) and a **RequestMessage**.

?action=printerInfo	Returns full printer status, job list, available schemes and layouts.
?action=jobInfo&UUID=...	Returns all details for a specific job (status, scheme, dimensions, progress).
?action=jobPreview&UUID=...	Returns a PNG preview image of the job encoded in Base64.
?action=addJob	POST method. Adds a new job with Scheme, Title, Enabled, Layout, Width, Height, Copies, and a file upload.
?action=enableJob&UUID=...&Enable=yes	Enables or disables a job in the queue (yes/no).
?action=startQueue	Starts printing all enabled jobs in the queue.
?action=stopQueue	Stops all printing immediately.
?action=setJobParameters	Modifies an existing job's scheme, programmed height, or copies.
?action=moveUpJob	Moves a job one position up in the queue.
?action=moveDownJob	Moves a job one position down in the queue.
?action=moveJob&Position=...	Moves a job to a specific position number.
?action=deleteJob&UUID=...	Removes a job from the queue permanently.
?action=exportJob&UUID=...	Downloads the job as an XJB file (or Base64 in XML if base64 param is set).
?action=exportScheme	Downloads one or all schemes as a ZIP file.
?action=importScheme	Imports schemes from a ZIP file (POST). Use Force=yes to overwrite existing.

[?action=quit](#)

Attempts to close Print Server (will not close if printing or ripping).

TIP

Use **?action=printerInfo** as your first call — it returns the full job list with UUIDs, which you need for all job-specific actions. For webhooks (event-driven notifications), configure the Notify URL in Print Server Configuration > Log.

SUPPORT

Need Help?

DOCUMENTATION

inedit.freshdesk.com/en/support/solutions/folders/14000127397

NEW SUPPORT TICKET

support@inedit.com

CONTACT US

sales@inedit.com

NEOSTAMPA DOWNLOAD

inedit.com/en/descarga-producto/neostampa



Precision Printing. Full Control.