



RX/TX Toggle LEDs

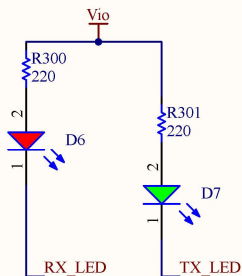

To use this leds, the CP2104 needs to be configured. See "AN721: CP21xx Device Customization Guide" for more information.


USB-TO-UART BRIDGE

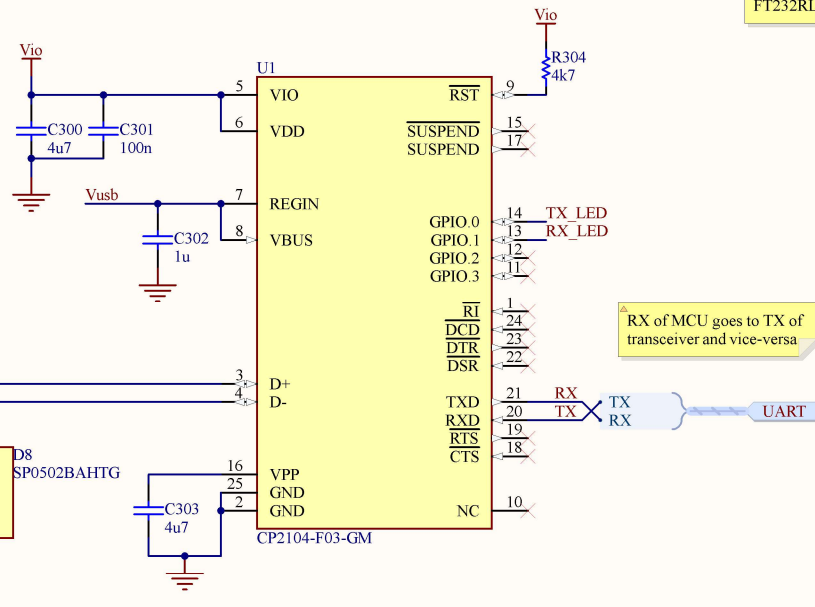


This circuit is only used for debug or GUI readings. It is not necessary for the normal use of this PCB

Alternatively, the connector J10 can be used for the same purpose. Just connect an FT232RL module (or similar).

USB-C conector

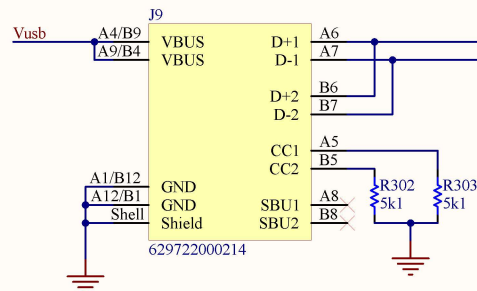


Backup serial adapter

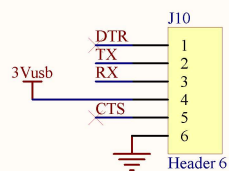

IF The circuit above do not work, use this conectr with a FT232RL module

Power from usb

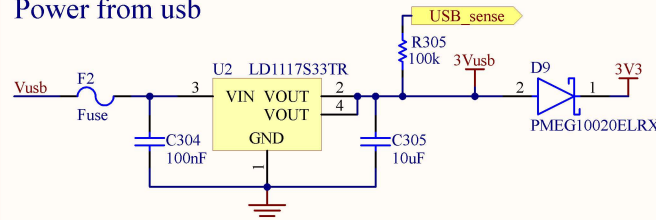

Title: USB

Project: MPPT V1.2 Afonso.PrjPcb Version: 1

Date: 9/26/2026 Author: Afonso Coelho

Company: Técnico Solar Boat

File: USB.SchDoc

Page:3 of 10