

Mediatek Wi-Fi AP Software Programming Guide

Version: 4.11

Release date: 2019-10-04

© 2008 - 2019 MediaTek Inc.

This document contains information that is proprietary to MediaTek Inc.

Unauthorized reproduction or disclosure of this information in whole or in part is strictly prohibited.

Specifications are subject to change without notice.

Document Revision History

Revision	Date	Author	Description
4.5	2015/03/25	Money Wang	Update
			• WPS
			● PMF
			● IEEE802.11h
			Authenticator
			Add
			• ACL
4.6	2015/08/25	Money Wang	Update ACS-related parameters
			ACS stands for Automatic Channel Selection
			Add maximum support rate parameters
			Update CountryRegionABand to support Ch144
			Update MBSSID chapter
			Remove iNIC
4.7	2015/12/18	White Pai	Update TX/RX Stream
			Update DFS
			Add beamforming
			Update Fixed Rate
4.8	2016/03/25	Money Wang	Update FAQ
			Fix some typos
			Fix incorrect flow described in MAC Repeater
		A 627	Update for MT7615
4.9	2017/01/23	Money Wang	Rewrite
			Profile and iwpriv
			• WSC
			• IEEE802.11h
	A G		• IOCTL
			Add
			Intrusion Detection System
			Protection Mechanism
			Update
			MBSSID
	4.0		WscConfMethods/ApCliWscSsid
			• 7615 FixedRate
			AP-Client fixed rate
			• FAQ
	10		Remove
			• WAPI
			SNMP MIB
4.10	2017/11/21	Money Wang	Some minor updates
4.11.1	2019/08/13	Mike Tseng	Update 802.11ax related items
4.11.2	2019/09/09	Bruce Huang	Update profile description for TxPower
4.11.3	2019/09/10	William Dai	Update IEEE802.11h
1.11.0	2017/07/10	, , iiiiwiii Dui	opanic inducation

2019/10/04	Mike Tseng	Update FixedRate for MT7915

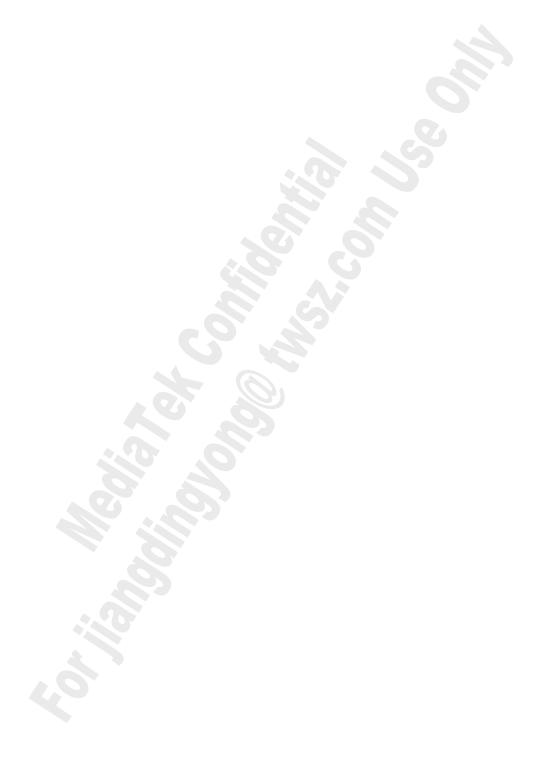


Table of Contents

Doc	ument	Revisior	n History	2
Tab	le of C	ontents		4
1	Intro	duction.		15
2	WLA	AN SoftA	P Driver Profile	16
	2.1	Sample	Profile	16
	2.2	-	rofile Parameter	
		2.2.1	CountryRegion	16
		2.2.2	CountryRegionABand	
		2.2.3	CountryCode	
		2.2.4	SSID	17
		2.2.5	WirelessMode	17
		2.2.6	Channel	18
		2.2.7	VHT_Sec80_Channel	18
		2.2.8	HT_BW	18
		2.2.9	VHT_BW	18
		2.2.10	HT_GI	19
		2.2.11	VHT_SGI	
		2.2.12	HT_MCS	19
		2.2.13	HT_RDG	19
		2.2.14	HT_EXTCHA	20
		2.2.15	HT_AMSDU	20
		2.2.16	AMSDU_NUM	20
		2.2.17	HT_AutoBA	20
		2.2.18	HT_BADecline	20
		2.2.19	HT_DisallowTKIP	21
		2.2.20	HT_STBC	21
		2.2.21	VHT_STBC	21
		2.2.22	HT_LDPC	21
		2.2.23	VHT_LDPC	21
		2.2.24	G_BAND_256QAM	22
		2.2.25	VHT_BW_SIGNAL	22
		2.2.26	HT_TxStream	22
		2.2.27	HT_RxStream	22
		2.2.28	E2pAccessMode	23
	2.3	Advanc	ced Profile Parameter	23
		2.3.1	BeaconPeriod	23
		2.3.2	DtimPeriod	23
		2.3.3	FragThreshold	23
		2.3.4	RTSThreshold	24
		2.3.5	TxPower	24
		2.3.6	TxPreamble	24

		2.3.7	TxBurst	24
		2.3.8	PktAggregate	25
		2.3.9	ShortSlot	25
		2.3.10	MaxStaNum	25
		2.3.11	MbssMaxStaNum	25
		2.3.12	AutoChannelSelect	
		2.3.13	AutoChannelSkipList	
		2.3.14	ACSCheckTime	
		2.3.15	HT_LinkAdapt	26
		2.3.16	HT_OpMode	
		2.3.17	HT_MpduDensity	
		2.3.18	HT_BAWinSize	
		2.3.19	HT_MIMOPSMode	
		2.3.20	VHT_DisallowNonVHT	
		2.3.21	NoForwarding	
		2.3.22	NoForwardingBTNBSSID	28
		2.3.23	NoForwardingMBCast	
		2.3.24	HideSSID	
		2.3.25	StationKeepAlive	
		2.3.26	VLANID	
		2.3.27	VLANPriority	
		2.3.28	EntryLifeCheck	
		2.3.29	EtherTrafficBand	
		2.3.30	WirelessEvent	29
3	WLA		P Driver iwpriv Command	
	3.1	Set		30
		3.1.1	All 1-to-1 command	30
		3.1.2	Debug	31
		3.1.3	ResetCounter	31
		3.1.4	PartialScan	31
		3.1.5	SiteSurvey	31
		3.1.6	HtBw	31
		3.1.7	VhtBw	32
		3.1.8	HtMcs	32
		3.1.9	HtGi	32
		3.1.10	HtStbc	32
		3.1.11	VhtStbc	33
		3.1.12	HtOpMode	33
		3.1.13	HtExtcha	33
		3.1.14	HtMpduDensity	33
		3.1.15	HtRdg	34
		3.1.16	HtAutoBa	34
		3.1.17	BADecline	34
		3.1.18	BASetup	34

		3.1.19	BAOriTearDown	34
		3.1.20	BARecTearDown	35
		3.1.21	HtAmsdu	35
		3.1.22	HtDisallowTKIP	35
		3.1.23	VhtBwSignal	35
		3.1.24	DisConnectSta	35
		3.1.25	DisConnectAllSta	36
		3.1.26	CountryString	36
		3.1.27	AutoChannelSel	38
		3.1.28	KickStaRssiLow	
		3.1.29	AssocReqRssiThres	38
	3.2			
	3.3	Others		
		3.3.1	stat	
		3.3.2	get_site_survey	
		3.3.3	get_mac_table	
		3.3.4	get_ba_table	
		3.3.5	get_wsc_profile	
		3.3.6	e2p	
4	MBS			
	4.1		Enable	
	4.2	Profile I	Parameter	
		4.2.1	BssidNum	
		4.2.2	MacAddress	
	4.3	Importa	ant Note	
		4.3.1	MAC Address Format	
		4.3.2	Old MBSSID Mode	
		4.3.3	New MBSSID Mode	
		4.3.4	Enhanced New MBSSID Mode	
		4.3.5	Address Confliction Problem	44
	4.4	Configu	ıration	45
		4.4.1	Example	45
5	WPS	3		46
	5.1	WPS Sce	enarios	46
	5.2		ctural Overview	
	5.3		Parameter	
		5.3.1	WscConfMode	48
		5.3.2	WscConfStatus	
		5.3.3	WscConfMethods	
		5.3.4	WscKeyASCII	
		5.3.5	WscSecurityMode	
		5.3.6	Wsc4digitPinCode	
		5.3.7	WscVendorPinCode	
		5.3.8	WscDefaultSSID0	

	5.3.9	WscV2Support	50
	5.3.10	WscManufacturer	50
	5.3.11	WscModelName	50
	5.3.12	WscDeviceName	50
	5.3.13	WscModelNumber	50
	5.3.14	WscSerialNumber	51
5.4	iwpriv C	ommand	51
	5.4.1	WscConfMode	51
	5.4.2	WscConfStatus	51
	5.4.3	WscMode	51
	5.4.4	WscGetConf	
	5.4.5	WscStop	52
	5.4.6	WscPinCode	
	5.4.7	WscGenPinCode	52
	5.4.8	WscVendorPinCode	52
	5.4.9	WscSecurityMode	
	5.4.10	WscOOB	
	5.4.11	WscStatus	
	5.4.12	WscMultiByteCheck	
	5.4.13	WscVersion	54
	5.4.14	WscVersion2	54
	5.4.15	WscV2Support	55
	5.4.16	WscFragment	55
	5.4.17	WscFragmentSize	55
	5.4.18	WscSetupLock	55
	5.4.19	WscSetupLockTime	55
	5.4.20	WscMaxPinAttack	56
	5.4.21	WscExtraTlvTag	56
	5.4.22	WscExtraTlvType	56
	5.4.23	WscExtraTlvData	56
5.5	WPS Scen	nario in Practice	56
	5.5.1	Initial WLAN setup with an External Registrar	56
	5.5.2	Adding a member device using a standalone AP/Registrar	57
	5.5.3	Adding a member device using an External Wired Registrar	57
5.6	A Real E	xample	58
	5.6.1	Initial WLAN setup with a wired external Registrar in PIN mode	58
5.7	Notes for	WPS	62
	5.7.1	How to know WPS AP serves as Registrar, Enrollee or Proxy	62
	5.7.2	How to Know WPS AP PIN Code	
	5.7.3	WPS Configuration Status	63
	5.7.4	How to Know WPS process has been triggered	
5.8	UPnP Da	emon HowTo	
Prote	ection Med	rhanism	66
		arameter	

6

		6.1.1	BGProtection	67
		6.1.2	DisableOLBC	67
		6.1.3	HT_PROTECT	67
		6.1.4	HT_BSSCoexistence	67
	6.2	iwpriv Co	ommand	68
		6.2.1	BGProtection	68
		6.2.2	DisableOLBC	68
		6.2.3	HtProtect	68
		6.2.4	HtBssCoex	68
		6.2.5	AP2040Rescan	68
7	WM	M		69
	7.1	Introduct	ion	69
	7.2		ommand	
		7.2.1	WmmCapable	
	7.3	Profile Pa	arameter	
		7.3.1	WmmCapable	69
		7.3.2	APSDCapable	
		7.3.3	APAifsn	
		7.3.4	APCwmin	70
		7.3.5	APCwmax	70
		7.3.6	APTxop	70
		7.3.7	APACM	70
		7.3.8	BSSAifsn	70
		7.3.9	BSSCwmin	71
		7.3.10	BSSCwmax	71
		7.3.11	BSSTxop	71
		7.3.12	BSSACM	71
		7.3.13	AckPolicy	71
	7.4	How to R	Run WMM test	72
8	IEEE	E802.11h		73
	8.1	TPC		73
	8.2			
		8.2.1	Profile Parameter	73
		8.2.2	Profile configuration for DFS test	74
9	SEC	URITY		76
	9.1		ble combinations of security policy	
	9.2	-	ommand	
	•	9.2.1	AuthMode	
		9.2.2	EncrypType	
		9.2.3	DefaultKeyID	
		9.2.4	Kev1	
		9.2.5	Key2	
		9.2.6	Key3	
		9.2.7	Key4	
Med	diaTek	Confidential	5	age 8 of 142

		9.2.8	WPAPSK	78
		9.2.9	WpaMixPairCipher	78
	9.3	Profile P	Parameter	79
		9.3.1	AuthMode	79
		9.3.2	EncrypType	79
		9.3.3	RekeyMethod	79
		9.3.4	RekeyInterval	80
		9.3.5	PMKCachePeriod	80
		9.3.6	WPAPSK	80
		9.3.7	DefaultKeyID	80
		9.3.8	Key1Type	80
		9.3.9	Key1Str	81
		9.3.10	Key2Type	81
		9.3.11	Key2Str	81
		9.3.12	Key3Type	81
		9.3.13	Key3Str	81
		9.3.14	Key4Type	82
		9.3.15	Key4Str	82
		9.3.16	WpaMixPairCipher	82
	9.4	New WI	FA Security Rules	83
	9.5	iwpriv c	ommand examples	83
		9.5.1	OPEN/NONE	83
		9.5.2	SHARED/WEP	83
		9.5.3	WPAPSK/TKIP	84
		9.5.4	WPA2PSK/AES	84
		9.5.5	WPAPSKWPA2PSK/TKIPAES	84
		9.5.6	WPA3PSK/AES	84
		9.5.7	WPA2PSKWPA3PSK/AES	84
10	Auth	nenticator		85
	10 1	Profile P	Parameter	86
	10.1	10.1.1	IEEE8021X	
		10.1.1	RADIUS_Server	
		10.1.2	RADIUS_Port	
		10.1.3	RADIUS_Key	
		10.1.4	own_ip_addr	
		10.1.6	session_timeout_interval	
		10.1.7	PMKCachePeriod	
		10.1.7	EAPifname	
		10.1.9	PreAuth	
		10.1.9	PreAuthifname	
	10.2		pd	
	10.2	10.2.1	How to turn on rt2860apd	
		10.2.1	How to turn on rt2860apd	
	10.2		RADIUS Servers Support	
	10.3	munple	ENADIOS SEIVEIS Support	09

	10.4	Enhance	d Dynamic WEP Keying	90
	10.5	Example	s	90
		10.5.1	Radius-None	90
		10.5.2	Radius-WEP	91
		10.5.3	WPA-TKIP	91
		10.5.4	WPA2-AES	91
		10.5.5	WPA1WPA2-TKIPAES	91
		10.5.6	WPA3-AES	92
		10.5.7	WPA3-192-GCMP256	92
11				
	11.1	AP-Clier	nt Setup	94
	11.2	Profile P	arameter	94
		11.2.1	ApCliEnable	94
		11.2.2	ApCliSsid	94
		11.2.3	ApCliBssid	94
		11.2.4	ApCliAuthMode	95
		11.2.5	ApCliEncrypType	95
		11.2.6	ApCliWPAPSK	95
		11.2.7	ApCliDefaultKeyID	95
		11.2.8	ApCliKey1Type	
		11.2.9	ApCliKey1Str	96
		11.2.10	ApCliKey2Type	96
		11.2.11	ApCliKey2Str	96
		11.2.12	ApCliKey3Type	96
		11.2.13	ApCliKey3Str	97
		11.2.14	ApCliKey4Type	97
		11.2.15	ApCliKey4Str	97
		11.2.16	ApCliTxMode	97
		11.2.17	ApCliTxMcs	98
		11.2.18	ApCliWscSsid	98
	11.3	iwpriv C	Command	98
		11.3.1	ApCliEnable	98
		11.3.2	ApCliSsid	98
		11.3.3	ApCliBssid	99
		11.3.4	ApCliAuthMode	99
		11.3.5	ApCliEncrypType	99
		11.3.6	ApCliWPAPSK	99
		11.3.7	ApCliDefaultKeyID	99
		11.3.8	ApCliKey1	100
		11.3.9	ApCliKey2	100
		11.3.10	ApCliKey3	100
		11.3.11	ApCliKey4	100
		11.3.12	ApCliTxMode	100
		11.3.13	ApCliTxMcs	101

		11.3.14	ApCliWscSsid	101
		11.3.15	ApCliAutoConnect	101
	11.4	AP-Clier	nt normal connection examples	102
		11.4.1	OPEN/NONE	102
		11.4.2	OPEN/WEP	102
		11.4.3	WPAPSK/TKIP	102
		11.4.4	WPA2PSK/AES	
	11.5	AP-Clier	nt WPS connection examples	
		11.5.1	PIN mode	
		11.5.2	PBC Mode	103
12				
	12.1	How to S	Steup WDS	104
	12.2	WDS Sec	curity	104
	12.3	Profile P	arameter	105
		12.3.1	WdsEnable	105
		12.3.2	WdsList	105
		12.3.3	WdsEncrypType	106
		12.3.4	WdsKey	106
		12.3.5	Wds0Key	106
		12.3.6	Wds1Key	107
		12.3.7	Wds2Key	
		12.3.8	Wds3Key	107
		12.3.9	WdsPhyMode	
13	IGM	P SNOOI	PING	108
	13.1	Basic		108
	13.2	Introduc	tion to IGMP Snooping Table	108
	13.3	Multicas	t Packet Parsing Process	108
			arameter	
		13.4.1	IgmpSnEnable	109
	13.5	iwpriv C	Command	109
		13.5.1	IgmpSnEnable	109
		13.5.2	IgmpAdd	110
		13.5.3	IgmpDel	110
14	MAC	Repeate	r	111
	14.1	iwpriv C	Command	111
		14.1.1	MACRepeaterEn	
		14.1.2	Example	
	14.2		arameter	
		14.2.1	MACRepeaterEn	
	14.3		ment Frame Flow	
	-	14.3.1	Wireless client	
		14.3.2	Ethernet client	
	14.4	Data Fra	me Flow	
		14.4.1	Unicast	

		14.4.2	Multicast / Broadcast	114
15	PMF			115
	15.1	iwpriv C	Command	115
		15.1.1	PMFMFPC	115
		15.1.2	PMFMFPR	115
		15.1.3	PMFSHA256	115
	15.2	Profile P	arameter	116
		15.2.1	PMFMFPC	116
		15.2.2	PMFMFPR	116
		15.2.3	PMFSHA256	
	15.3	Wi-Fi PM	/IF Testing Note	116
		15.3.1	DUT Requirement	116
		15.3.2	PMF Test Section 4.3.3.3	117
		15.3.3	PMF Test Section 4.4	
16			nforming	
	16.1	Profile Pa	arameter	118
		16.1.1	ETxBfEnCond	118
		16.1.2	ITxBfEn	118
17	Fixed	l Rate		119
	17.1	Profile P	arameter	119
		17.1.1	FixedTxMode	119
		17.1.2	BasicRate	119
		17.1.3	SupportRate	119
		17.1.4	SupportHTRate	120
	17.2	iwpriv C	Command	120
		17.2.1	FixedTxMode	120
		17.2.2	BasicRate	120
	17.3	802.11n I	Data Rate Table	121
	17.4	2.4g		121
		17.4.1	B only	121
		17.4.2	G only	122
		17.4.3	N only	122
		17.4.4	B/G/N mixed	122
	17.5	5g		123
		17.5.1	A only	123
		17.5.2	N only	123
	17.6	AP-Clier	nt	123
	17.7	11ac		124
		17.7.1	VHT Fixed Rate iwpriv command	124
		17.7.2	VHT Fixed Rate example	
	17.8	Fixed Ra	te for MT7615	
		17.8.1	FixedRate	126
		17.8.2	FixedRateFallback	127
	17.9	Fixed Ra	ate for MT7915	127

		17.9.1	Fixed Rate command	127
18	ACL			129
	18.1	Profile I	Parameter	129
		18.1.1	AccessPolicy0	129
		18.1.2	AccessControlList0	129
		18.1.3	AccessPolicy1	
		18.1.4	AccessControlList1	130
		18.1.5	AccessPolicy2	
		18.1.6	AccessControlList2	
		18.1.7	AccessPolicy3	
		18.1.8	AccessControlList3	
	18.2	-	Command	
		18.2.1	AccessPolicy	
		18.2.2	ACLAddEntry	
		18.2.3	ACLDelEntry	
		18.2.4	ACLClearAll	
	40.0	18.2.5	ACLShowAll	
	18.3		ample	
		18.3.1	White List	
		18.3.2	Black List	
19	Intru	ision Det	ection System	133
	19.1		Parameter	
		19.1.1	IdsEnable	
		19.1.2	AuthFloodThreshold	
		19.1.3	AssocReqFloodThreshold	
		19.1.4	ReassocReqFloodThreshold	
		19.1.5	ProbeReqFloodThreshold	
		19.1.6	DisassocFloodThreshold	
			DeauthFloodThreshold	
		19.1.8	EapReqFloodThreshold	
20	IOC	TL I/O Co	ontrol Interface	135
	20.1	Introduc	ction	135
	20.2	IOCTL i	in iwpriv	
		20.2.1	SET	
		20.2.2	GET	
	20.3	Sample	User Space Application	136
21	Q&A	٠		140
	21.1	Why do	oes WPAPSK not work?	140
	21.2	How to	switch driver to operate in 5G band?	140
	21.3	How do	I check my channel list?	140
	21.4	How car	n I know the version of current WLAN Driver?	140
			tAP support Antenna diversity?	
	21.6	TX & RX	X performance is always unbalance	140

21.7	Why can't I configure a SSID containing comma ","?	140
21.8	Why throughput is low when using 1SS to send traffic with legacy rate or MCS0-7?	141
21.9	TGn 4.2.10 failed. Why does DUT not send MC traffic?	141
21.10	TGn 4.2.29 failed. Why the performance cannot reach the criteria?	141
21.11	How to modify a profile with sed?	142
21.12	2 Do you have suggested kernel version for each chipset?	142
21.13	3 Why does debug message not show up?	142

1 Introduction

This document is a software programming guide for Mediatek Wi-Fi SoftAP driver and it teaches you how to configure your own settings. We do provide two kinds of configuration method, profile and iwpriv. Later we show you the profile parameter list, the iwpriv command list, and some OID examples to demonstrate how to fully utilize the WLAN driver.

2.1 Sample Profile

You can find a sample profile in the driver tarball. Also, you can use the reference GUI with pre-built-by-MTK image to create a profile and use it in your project.

2.2 Basic Profile Parameter

In this section, all the common profile parameters would be introduced and they obey the following syntax of assignment.

[Syntax]

Parameter=Value

The WLAN driver needs to be restarted after modifing the profile. Otherwise, settings would not take effect and an interface down/up cycle could help.

ifconfig ra0 down ifconfig ra0 up

2.2.1 CountryRegion

Description: Country region for WLAN radio 2.4 GHz regulation (G band) Value:

CountryRegion=5

Region	Channels		
0	1-11		
1	1-13		
2	10-11		
3	10-13		
4	14		
5	1-14 all active scan		
6	3-9		
7	5-13		
31	1-11 active scan, 12-14 passive scan		
32	32 1-11 active scan, 12-14 passive scan		
33	1-14 all active scan, 14 b mode only		

2.2.2 CountryRegionABand

Description: Country region for WLAN radio 5 GHz regulation (A band) Value:

CountryRegionABand=7

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 16 of 142

Region	Channels
0	36, 40, 44, 48, 52, 56, 60, 64, 149, 153, 157, 161, 165
1	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140
2	36, 40, 44, 48, 52, 56, 60, 64
3	52, 56, 60, 64, 149, 153, 157, 161
4	149, 153, 157, 161, 165
5	149, 153, 157, 161
6	36, 40, 44, 48
7	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 149, 153, 157, 161, 165
8	52, 56, 60, 64
9	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140, 149, 153, 157, 161, 165
10	36, 40, 44, 48, 149, 153, 157, 161, 165
11	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 149, 153, 157, 161
12	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144
13	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 120, 124, 128, 132, 136, 140, 144, 149, 153, 157, 161, 165
14	36, 40, 44, 48, 52, 56, 60, 64, 100, 104, 108, 112, 116, 132, 136, 140, 144, 149, 153, 157, 161, 165

2.2.3 CountryCode

Description: County code for WLAN radio regulation

Value:

CountryCode=

Note:

Default is empy.

2 characters, like TW for Taiwan.

Please refer to the following link for ISO3166 code list for other countries.

http://www.iso.org/iso/prods-services/iso3166ma/02iso-3166-code-lists/country_names_and_code_elements

This parameter can also be configured in EEPROM or eFuse.

Configuration in EEPROM or eFuse has higher priority than that in WLAN Profile.

2.2.4 SSID

Description: Configure AP SSID

Value:

SSID=Mediatek-AP

0~z, 1~32 ASCII characters

2.2.5 WirelessMode

Description: Wireless mode configuration

Value:

WirelessMode=9

- 0: legacy 11b/g mixed
- 1: legacy 11b only
- 2: legacy 11a only

MediaTek Confidential

- 4: legacy 11g only
- 6: 11n only in 2.4g band
- 7: 11gn mixed
- 8: 11an mixed
- 9: 11bgn mixed
- 11: 11n only in 5g band
- 14: 11A/AN/AC mixed 5G band only
- 15: 11AN/AC mixed 5G band only
- 16: 11bgn/AX mixed 2.4G band only
- 17: 11A/AN/AC/AX mixed 5G band only

2.2.6 Channel

Description: WLAN primary channel configuration (2.4G or 5G band)

Value:

Channel=0

Note:

The range of configurable values depends on CountryRegion or CountryRegionABand. Its default value is zero and the driver automatically selects a random working channel.

2.2.7 VHT_Sec80_Channel

Description: WLAN primary channel configuration for the 2^{nd} VHT80 group (5G band only)

Value:

VHT_Sec80_Channel=0

Note: Same as Channel

2.2.8 HT BW

Description: HT channel bandwidth configuration

Value:

HT_BW=1

0: 20 MHz 1: 20/40 MHz

2.2.9 VHT BW

Description: 11ac channel bandwidth configuration

Value:

VHT_BW=1

- 0: disable
- 1:80M
- 2: 160M
- 3:80M+80M

2.2.10 HT_GI

Description: HT guard interval configuration

Value:

HT_GI=1

0: Long GI 1: Short GI

2.2.11 VHT_SGI

Description: 11ac guard interval configuration

Value:

VHT_SGI=1

0: Long GI

1: Short GI

2.2.12 HT_MCS

Description: Modulation and Coding Scheme (MCS) configuration

Value:

HT_MCS=33

0 ~15, 32: Fix MCS rate for HT rate 33: Auto Rate Adaption, recommended

2.2.13 HT_RDG

Description: Enable or disable Reverse Direction Grant

Value:

HT_RDG=1

0: disable 1: enable

2.2.14 HT_EXTCHA

Description: Locate the 40MHz extension channel in combination with the main channel Value:

HT_EXTCHA=0

0: Below

1: Above

2.2.15 HT_AMSDU

Description: Enable or disable A-MSDU transmission

Value:

HT_AMSDU=1

0: disable 1: enable

2.2.16 AMSDU_NUM

Description: Set supported A-MSDU number when transmission

Value:

AMSDU_NUM=4

1~4: means supported AMSDU number.

2.2.17 HT AutoBA

Description: Enable or disable automatically building Block Ack session with the peer Value:

HT_AutoBA=1

0: disable

1: enable

2.2.18 HT BADecline

Description: Configure whether always declining Block Ack Request sent from the peer Value:

HT_BADecline=0

0: disable 1: enable

2.2.19 HT_DisallowTKIP

Description: Enable or disable 11N rate with 11N AP when cipher is TKIP or WEP

Value:

HT_DisallowTKIP=1

0: disable 1: enable

2.2.20 HT_STBC

Description: Enable or disable HT STBC

Value:

HT_STBC=0

0: disable 1: enable

2.2.21 VHT_STBC

Description: Enable or disable 11ac STBC

Value:

VHT_STBC=1

0: disable 1: enable

2.2.22 HT_LDPC

Description: Enable or disable HT LDPC

Value:

HT_LDPC=0

0: disable 1: enable

Note: MT76x2E/MT7615 only

2.2.23 VHT_LDPC

Description: Enable or disable 11ac LDPC

Value:

VHT_LDPC=1

0: disable

1: enable

Note: MT76x2E/MT7615 only

2.2.24 G_BAND_256QAM

Description: Enable or disable 256-QAM support for MT7615 2.4g

Value:

 $G_BAND_256QAM=1$

0: disable

1: enable

2.2.25 VHT BW SIGNAL

Description: Enable or disable 11ac bandwidth signaling

Value:

VHT_BW_SIGNAL=0

0: disable

1: static

2: dynamic

2.2.26 HT_TxStream

Description: Configure the number of spatial streams for transmission

Value:

HT_TxStream=2

1~2: valid spatial streams

Note: 4ss is MT7615 only

The TX path settings in E2P offset 0x34 [7:4] has higher priority than HT_TxStream.

2.2.27 HT_RxStream

Description: Configure the number of spatial streams for reception

Value:

HT_RxStream=2

1~2: valid spatial streams

Note: 4ss is MT7615 only

The RX path settings in E2P offset 0x34 [3:0] has higher priority than HT_RxStream.

2.2.28 E2pAccessMode

Description: Configure the storage of EEPROM

Value:

E2pAccessMode=2

- 0: NONE
- 1: EFUSE mode
- 2: FLASH mode
- 3: EEPROM mode
- 4: BIN FILE mode

2.3 Advanced Profile Parameter

2.3.1 BeaconPeriod

Description: Beacon period (ms) configuration

Value:

BeaconPeriod=100

20 ~ 1024 (unit is in milli-seconds)

2.3.2 DtimPeriod

Description: DTIM period configuration and it stands for Delivery Traffic Indication Map Value:

DtimPeriod=1

1~255 (unit is Beacon count)

2.3.3 FragThreshold

Description: Fragment threshold configuration

Value:

FragThreshold=2346

256~2346

2.3.4 RTSThreshold

Description: RTS threshold configuration

Value:

RTSThreshold=2347

1~2347

2.3.5 TxPower

Description: Configure transmission power in percentage

Value:

TxPower=100

1~100 (%)

Note: PERCENTAGEenable=1 is also required when using this function in MT7615, MT7915

 $91 \sim 100\%$, treat as 100% in terms of mW

 $61 \sim 90\%, \text{ treat as } 75\% \text{ in terms of mW} \qquad -1 \text{dBm} \\ 31 \sim 60\%, \text{ treat as } 50\% \text{ in terms of mW} \qquad -3 \text{dBm} \\ 16 \sim 30\%, \text{ treat as } 25\% \text{ in terms of mW} \qquad -6 \text{dBm} \\ 10 \sim 15\%, \text{ treat as } 12.5\% \text{ in terms of mW} \qquad -9 \text{dBm} \\ 1 \sim 9\%, \text{ treat as MIN}(\sim 3\%) \text{ in terms of mW} \qquad -12 \text{dBm}$

2.3.6 TxPreamble

Description: Tx preamble configuration

Value:

TxPreamble=1

0: Long preamble

1: Short preamble

2: Auto

2.3.7 TxBurst

Description: Enable or disable Tx Burst (Mediatek-proprietary acceleration method)

Value:

TxBurst=1

0: disable

1: enable

2.3.8 PktAggregate

 $Description: Enable\ or\ disable\ piggyback\ packet\ aggregation\ (Mediatek\ proprietary)$

Value:

PktAggregate=0

0: disable 1: enable

2.3.9 ShortSlot

Description: Enable or disable short slot time (9us) for backward-compatibility with 11b Value:

ShortSlot=1

0: disable 1: enable

2.3.10 MaxStaNum

Description: Configure the maximum number of station that could connect with this AP Value:

Not support

2.3.11 MbssMaxStaNum

Description: Configure the maximum number of station that could connect with this AP (MT7615) Value:

MbssMaxStaNum=255

0: disable 1~255

2.3.12 AutoChannelSelect

Description: Configure Automatic Channel Selection Algorithm

Value:

AutoChannelSelect=1

- 0: Disable
- 1: Old CSA (AP count)
- 2: New CSA (CCA)
- 3: MT7615/MT7915 CSA (Busy time)

2.3.13 AutoChannelSkipList

Description: Configure channels you want to skip when Auto Channel Selection is enabled Value:

AutoChannelSkipList=<channel_list>

Example:

<channel_list>=2;3;4;5;7;8;10;

2.3.14 ACSCheckTime

Description: Configuration of periodic check time for automatic channel selection Value:

ACSCheckTime=1

0: Disable

Note: Unit is hour

2.3.15 HT_LinkAdapt

Decription: Enable or disable HT Link Adaptation Control

Value:

HT_LinkAdapt=0

0: disable

1: enable

2.3.16 HT_OpMode

Description: HT operation mode configuration

Value:

HT_OpMode=0

0: Mixed mode (MM)

1: Greenfield mode (GF)

2.3.17 HT_MpduDensity

Description: Minimum separation of MPDUs in an A-MPDU

Value:

HT_MpduDensity=4

0: no restriction

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 26 of 142

- $1: 1/4 \mu s$
- $2:1/2 \, \mu s$
- 3: 1 µs
- 4: 2 µs
- 5: 4 µs
- 6:8 µs
- 7: 16 µs

2.3.18 HT BAWinSize

Description: Block Ack window size configuration

Value:

HT BAWinSize=64

1~256

2.3.19 HT_MIMOPSMode

Description: Spatial Multiplexing (SM) power save mode configuration

Value:

HT_MIMOPSMode=3

- 0: Static
- 1: Dynamic
- 2: Reserved
- 3: Disable (AP behaves according to the capability announced by STA)

Note:

Please use HT_MIMOPSMode=3 to pass the TGn 4.2.28 Spatial Multiplexing Power Save Operation.

2.3.20 VHT DisallowNonVHT

Description: Enable or disable the function of rejecting connection attempt from non-VHT STA Value:

VHT_DisallowNonVHT=0

0: disable 1: enable

2.3.21 NoForwarding

Description: Enable or disable No-Packet-Forwarding within a BSSID

Value:

NoForwarding=0

0: disable

1: enable

2.3.22 NoForwardingBTNBSSID

Description: Enable or disable No-Packet-Forwarding between each BSSID

Value:

NoForwardingBTNBSSID=0

0: disable 1: enable

2.3.23 NoForwardingMBCast

Description: Enable or disable No-MC-BC-Packet-Forwarding within a BSSID

Value:

NoForwardingMBCast=0

0: disable 1: enable

2.3.24 HideSSID

Description: Enable or disable configuring an empty SSID

Value:

HideSSID=0

0: disable 1: enable

2.3.25 StationKeepAlive

Description: Enable or disable auto detection of aliveness of connected stations periodically

Value:

StationKeepAlive=0

0: disable

1~65535 seconds

2.3.26 VLANID

Description: VLAN ID configuration

Value:

VLANID=0

0: Disable

2.3.27 VLANPriority

Description: VLAN priority configuration

Value:

VLANPriority=0

0: Disable

2.3.28 EntryLifeCheck

Description: Configure how many consecutive failed Tx packets sent to a STA can be ignored before AP sends Deauth to it

Value:

EntryLifeCheck=20

1 ~ 65535

2.3.29 EtherTrafficBand

Description: Configure Ethernet packets binding with specific RF band

Value:

EtherTrafficBand=2G

2G: Ethernet packets bind with 2.4GHz 5G: Ethernet packets bind with 5GHz

Note: Forwarding Module should be also enabled

2.3.30 WirelessEvent

Description: Enable or disable sending wireless event to the system log

Value:

WirelessEvent=0

0: disable 1: enable

3 WLAN SoftAP Driver iwpriv Command

3.1 **Set**

[Syntax]

iwpriv ra0 set [parameters]=[Value]

Note: Execute one iwpriv/set command at a time.

3.1.1 All 1-to-1 command

You can check the definition of all commands listed here in the Profile section since they have one-to-one mapping and the terminology is completely identical.

- **3.1.1.1** SSID
- 3.1.1.2 WirelessMode
- **3.1.1.3** Channel
- 3.1.1.4 BeaconPeriod
- 3.1.1.5 DtimPeriod
- **3.1.1.6** FragThreshold
- 3.1.1.7 RTSThreshold
- **3.1.1.8** TxPower
- 3.1.1.9 TxPreamble
- 3.1.1.10 TxBurst
- 3.1.1.11 PktAggregate
- **3.1.1.12** ShortSlot
- 3.1.1.13 NoForwarding
- 3.1.1.14 NoForwardingBTNBSSID
- 3.1.1.15 NoForwardingMBCast
- **3.1.1.16** HideSSID

3.1.2 Debug

Description: Configure the printing level of debug message

Value:

iwpriv ra0 set Debug=3

0~5

- 0: Debug Off
- 1: Debug Error
- 2: Debug Warning
- 3: Debug Trace
- 4: Debug Info
- 5: Debug Loud

3.1.3 ResetCounter

Description: Reset all statistics counters

Value:

iwpriv ra0 set ResetCounter=1

3.1.4 PartialScan

Description: Configure scanning behavior of site survey

Value:

iwpriv ra0 set PartialScan=1

0: Full scan (scan would finish at once)

1: Partial scan (scan would be divided into multiple sub-scan)

3.1.5 SiteSurvey

Description: Manually trigger a site survey to scan all available channels

Value:

iwpriv ra0 set SiteSurvey=

Note:

Passive scan: "iwpriv ra0 set SiteSurvey="

Active scan: "iwpriv ra0 set SiteSurvey=Target_SSID"

3.1.6 HtBw

Description: HT channel bandwidth configuration

Value:

iwpriv ra0 set HtBw=1

0: 20 MHz

1: 20/40 MHz

3.1.7 VhtBw

Description: 11ac channel bandwidth configuration

Value:

iwpriv ra0 set VhtBw=1

0: disable

1:80M

2: 160M

3:80M+80M

3.1.8 HtMcs

Description: Modulation and Coding Scheme (MCS) configuration

Value:

iwpriv ra0 set HtMcs=33

0 ~15, 32: Fix MCS rate for HT rate 33: Auto Rate Adaption, recommended

3.1.9 HtGi

Description: HT guard interval configuration

Value:

iwpriv ra0 set HtGi=1

0: Long GI

1: Short GI

3.1.10 HtStbc

Description: Enable or disable HT STBC

Value:

iwpriv ra0 set HtStbc=1

0: disable

1: enable

3.1.11 VhtStbc

Description: Enable or disable 11ac STBC

Value:

iwpriv ra0 set VhtStbc=1

0: disable 1: enable

3.1.12 HtOpMode

Description: HT operation mode configuration

Value:

iwpriv ra0 set HtOpMode=0

0: Mixed mode (MM)

1: Greenfield mode (GF)

3.1.13 HtExtcha

Description: Locate the 40MHz extension channel in combination with the main channel Value:

iwpriv ra0 set HtExtcha=0

0: Below

1: Above

3.1.14 HtMpduDensity

Description: Minimum separation of MPDUs in an A-MPDU

Value:

iwpriv ra0 set HtMpduDensity=4

0: no restriction

 $1: 1/4 \mu s$

2: 1/2 µs

3: 1 µs

4: 2 μs

5: 4 μs

6:8 µs

 $7{:}~16~\mu s$

3.1.15 HtRdg

Description: Enable or disable HT Reverse Direction Grant

Value:

iwpriv ra0 set HtRdg=1

0: disable 1: enable

3.1.16 HtAutoBa

Description: Enable or disable automatically building Block Ack session with the peer Value:

iwpriv ra0 set HtAutoBa=1

0: disable 1: enable

3.1.17 BADecline

Description: Configure whether always declining Block Ack Request sent from the peer Value:

iwpriv ra0 set BADecline=0

0: disable 1: enable

3.1.18 BASetup

Description: Add an Originator BA entry into the BA table manually Value:

iwpriv ra0 set BASetup=00:0c:43:01:02:03-0

- → The six 2-digit hex-decimal numbers composes the STA MAC address
- → The seventh decimal number is the TID value

3.1.19 BAOriTearDown

Description: Remove an Originator BA entry from the BA table manually Value:

iwpriv ra0 set BAOriTearDown=00:0c:43:01:02:03-0

- ightarrow The six 2-digit hex-decimal numbers composes the STA MAC address
- → The seventh decimal number is the TID value

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 34 of 142

3.1.20 BARecTearDown

Description: Remove an Recipient BA entry from the BA table manually Value:

iwpriv ra0 set BARecTearDown=00:0c:43:01:02:03-0

- \rightarrow The six 2-digit hex-decimal numbers composes the STA MAC address
- → The seventh decimal number is the TID value

3.1.21 HtAmsdu

Description: Enable or disable A-MSDU transmission

Value:

iwpriv ra0 set HtAmsdu=0

0: disable 1: enable

3.1.22 HtDisallowTKIP

Description: Enable or disable 11N rate with 11N AP when cipher is TKIP or WEP Value:

iwpriv ra0 set HtDisallowTKIP=0

0: disable 1: enable

3.1.23 VhtBwSignal

Description: Enable or disable 11ac bandwidth signaling

Value:

iwpriv ra0 set VhtBwSignal=1

0: disable1: static

2: dynamic

3.1.24 DisConnectSta

Description: Disconnect one specific connected STA

Value:

iwpriv ra0 set DisConnectSta=00:11:22:33:44:55

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 35 of 142

3.1.25 DisConnectAllSta

Description: Disconnect all connected STAs

Value:

iwpriv ra0 set DisConnectAllSta=1

1: disconnect all STAs

3.1.26 CountryString

Description: Country string configuration

Value:

iwpriv ra0 set CountryString=TAIWAN

32 characters, ex:Taiwan, case insensitive

Note: Please refer to ISO3166 code list for other countries and can be found at

http://www.iso.org/iso/en/prods-services/iso3166ma/02iso-3166-code-lists/list-en1.html#sz

Country		Country Name		802.11A	Support	802.11G
Number	Name	(CountryString)	802.11A	Country Region		Country Region
0	DB	Debug	Yes	A_BAND_REGION_7	Yes	G_BAND_REGION_5
8	AL	ALBANIA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
12	DZ	ALGERIA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
32	AR	ARGENTINA	Yes	A_BAND_REGION_3	Yes	G_BAND_REGION_1
51	AM	ARMENIA	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
36	AU	AUSTRALIA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
40	ΑT	AUSTRIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
31	ΑZ	AZERBAIJAN	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
48	ВН	BAHRAIN	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
112	BY	BELARUS	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
56	BE	BELGIUM	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
84	ΒZ	BELIZE	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
68	ВО	BOLIVIA	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
76	BR	BRAZIL	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
96	BN	BRUNEI DARUSSALAM	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
100	BG	BULGARIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
124	CA	CANADA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
152	CL	CHILE	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_1
156	CN	CHINA	Yes	A_BAND_REGION_4	Yes	G_BAND_REGION_1
170	CO	COLOMBIA	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
188	CR	COSTA RICA	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
191	HR	CROATIA	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
196	CY	CYPRUS	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
203	CZ	CZECH REPUBLIC	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
208	DK	DENMARK	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
214	DO	DOMINICAN REPUBLIC	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
	EC	ECUADOR	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
818	EG	EGYPT	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
	SV	EL SALVADOR	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
233	EE	ESTONIA	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1

246	FI	FINLAND	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
250	FR	FRANCE	Yes	A BAND REGION 2 Yes	G BAND REGION 1
268	GE	GEORGIA	Yes	A BAND REGION 2 Yes	G BAND REGION 1
276	DE	GERMANY	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
300	GR	GREECE	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
320	GT	GUATEMALA	Yes	A_BAND_REGION_0 Yes	G BAND REGION 0
340	HN	HONDURAS	No	A BAND REGION 0 Yes	G_BAND_REGION_1
344	HK	HONG KONG	Yes	A BAND REGION 0 Yes	G BAND REGION 1
348	HU	HUNGARY	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
352	IS				
356	IN	ICELAND INDIA	Yes Yes	A_BAND_REGION_1 Yes A_BAND_REGION_0 Yes	G_BAND_REGION_1 G_BAND_REGION_1
	ID			A_BAND_REGION_0 res A_BAND_REGION_4 Yes	G BAND REGION 1
360		INDONESIA	Yes		
364	IR	IRAN	Yes	A_BAND_REGION_4 Yes	G_BAND_REGION_1
372	IE	IRELAND	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
376	IL	ISRAEL	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
380	IT	ITALY	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
392	JP	JAPAN	Yes	A_BAND_REGION_9 Yes	G_BAND_REGION_1
400	JO	JORDAN	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_1
398	KZ	KAZAKHSTAN	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
408	KP	KOREA DEMOCRATIC	Yes	A_BAND_REGION_5 Yes	G_BAND_REGION_1
410	KR	KOREA REPUBLIC OF	Yes	A_BAND_REGION_5 Yes	G_BAND_REGION_1
414	KW	KUWAIT	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
428	LV	LATVIA	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
422	LB	LEBANON	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
438	LI	LIECHTENSTEIN	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
440	LT	LITHUANIA	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
442	LU	LUXEMBOURG	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
446	MO	MACAU	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_1
807	MK	MACEDONIA	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
458	MY	MALAYSIA	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_1
484	MX	MEXICO	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_0
492	MC	MONACO	Yes	A_BAND_REGION_2 Yes	G_BAND_REGION_1
504	MA	MOROCCO	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
528	NL	NETHERLANDS	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
554	NZ	NEW ZEALAND	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_1
578	NO	NORWAY	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_0
512	OM	OMAN	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_1
586	PK	PAKISTAN	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
591	PA	PANAMA	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_0
604	PE	PERU	Yes	A_BAND_REGION_4 Yes	G_BAND_REGION_1
608	PH	PHILIPPINES	Yes	A_BAND_REGION_4 Yes	G_BAND_REGION_1
616	PL	POLAND	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
620	PT	PORTUGAL	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
630	PR	PUERTO RICO	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_0
634	QA	QATAR	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
642	RO	ROMANIA	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
643	RU	RUSSIA FEDERATION	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
682	SA	SAUDI ARABIA	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
702	SG	SINGAPORE	Yes	A_BAND_REGION_0 Yes	G_BAND_REGION_1
703	SK	SLOVAKIA	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
705	SI	SLOVENIA	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
710	ZA	SOUTH AFRICA	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
724	ES	SPAIN	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
752	SE	SWEDEN	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
756	CH	SWITZERLAND	Yes	A_BAND_REGION_1 Yes	G_BAND_REGION_1
760	SY	SYRIAN ARAB REPUBLIC	No	A_BAND_REGION_0 Yes	G_BAND_REGION_1
158	TW	TAIWAN	Yes	A_BAND_REGION_3 Yes	G_BAND_REGION_0
764	TH	THAILAND	No	A_BAND_REGION_0 Yes	G BAND REGION 1
780	TT	TRINIDAD AND TOBAGO		A_BAND_REGION_2 Yes	G_BAND_REGION_1
1.00			1		1

788	TN	TUNISIA	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
792	TR	TURKEY	Yes	A_BAND_REGION_2	Yes	G_BAND_REGION_1
804	UA	UKRAINE	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
784	AE	UNITED ARAB EMIRATES	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
826	GB	UNITED KINGDOM	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_1
840	US	UNITED STATES	Yes	A_BAND_REGION_0	Yes	G_BAND_REGION_0
858	UY	URUGUAY	Yes	A_BAND_REGION_5	Yes	G_BAND_REGION_1
860	UZ	UZBEKISTAN	Yes	A_BAND_REGION_1	Yes	G_BAND_REGION_0
862	VE	VENEZUELA	Yes	A_BAND_REGION_5	Yes	G_BAND_REGION_1
704	VN	VIET NAM	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
887	YE	YEMEN	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1
716	ZW	ZIMBABWE	No	A_BAND_REGION_0	Yes	G_BAND_REGION_1

3.1.27 AutoChannelSel

Description: Configure Automatic Channel Selection Algorithm

Value:

iwpriv ra0 set AutoChannelSel=3

0: Disable

1: Old CSA (AP count)

2: New CSA (CCA)

3: MT7615/MT7915 CSA (Busy time)

3.1.28 KickStaRssiLow

Description: Configure the weakest signal threshold that AP would disconnect the STA Value:

iwpriv ra0 set KickStaRssiLow=0

0: Disable

0 ~ -100

3.1.29 AssocReqRssiThres

Description: Configure the weakest signal threshold that AP would reject the Association Request Value:

iwpriv ra0 set AssocReqRssiThres=0

0: Disable

0 ~ -100

3.2 Show

You could use iwpriv ra0 show command to display general or specific information. As to specific information, you have to turn on the corresponding function in driver config.

[Format]

iwpriv ra0 show [parameter]

[Parameter list]

- 1. driverinfo show driver version
- 2. stat show statistics counter
- 3. stainfo show MAC address of associated STAs
- 4. stacountinfo show TRx byte count of associated STAs
- 5. stasecinfo show security information of associated STAs
- 6. bainfo show BlockAck information
- 7. connStatus show AP-Client connection status
- 8. reptinfo show MAC Repeater information
- 9. wdsinfo show WDS link list
- 10. igmpinfo show all entries in the IGMP Snooping Table
- 11. mbss show MBSS PHY mode information
- 12. blockch show DFS blocked channel list

[Example]

iwpriv ra0 show driverinfo

Driver version: 2.7.1.6

3.3 Others

3.3.1 stat

Description: Show WLAN statistics

Value:

iwpriv ra0 stat

Note:

You can use "iwpriv ra0 set ResetCounter=1" to reset statistics

Also, you can use the following command line shell script to get per-second statistics.

while [1]; do iwpriv ra0 set ResetCounter=1; sleep 1; iwpriv ra0 stat; done;

3.3.2 get_site_survey

Description: Show site survey result

Value:

iwpriv ra0 get_site_survey

Note: You need to use "iwpriv ra0 set SiteSurvey=" to collect information first

3.3.3 get_mac_table

Description: Show MAC addresses of connected stations

Value:

iwpriv ra0 get_mac_table

3.3.4 get_ba_table

Description: Show raw data of the BlockAck table

Value:

iwpriv ra0 get_ba_table

3.3.5 get_wsc_profile

Description: Show WPS profile information

Value:

iwpriv ra0 get_wsc_profile

3.3.6 e2p

```
Description: Read/Write EEPROM content
```

Value:

```
// Read
iwpriv ra0 e2p offset
//Read rage (the maximum displayed range is 1K bytes)
iwpriv ra0 e2p start:end
// Write
iwpriv ra0 e2p offset=value
```

Note:

```
offset = hexidecimal address
value = hexidecimal value (4 hexs)
```

Example:

```
# iwpriv ra0 e2p 0=7622
ra0 e2p:
[0x00]:7622
# iwpriv ra0 e2p 0
ra0 e2p:
[0x0000]:0x7622
iwpriv ra0 e2p 400:416
[0x0400]:0000 [0x0402]:0000 [0x0404]:0000 [0x0406]:0000
[0x0408]:0000 [0x040A]:0000 [0x040C]:0000 [0x040E]:0000
[0x0410]:0000 [0x0412]:0000 [0x0414]:0000
```

MediaTek Confidential

4 MBSSID

The Multiple BSSID (MBSSID) function is a feature providing additional virtual WLANs which look like real WLANs to users. Its common application is to create one Main and several Guest Networks simultaneously. You may configure each BSSID with different settings.

4.1 How to Enable

Please turn on MBSS_SUPPORT in driver config.



We also suggest turn on NEW_MBSSID_MODE which changes how the driver creates extended MAC addresses for these virtual BSSID.

4.2 Profile Parameter

4.2.1 BssidNum

Description: Multiple BSSID number configuration

Value:

BssidNum=1

1~16

Note:

- 1. It depends on MBSS_SUPPORT
- 2. It should be placed before other configuration in the profile
- 3. 16-BSSID is supported only in new products (MT7612 & MT7615)

4.2.2 MacAddress

Description: Direct assignment of MAC address

Value:

MacAddress=00:0c:43:11:22:33

Note:

This is only supported in MT7615 and you have to take care of the address confliction problem on your own if using this parameter to assign a MAC address to your device. As to other BSSID, you can use MacAddress1 ~ MacAddress15 to configure the MAC address assignment.

Example: BssidNum=4

If you want to do the following assignment,

ra0	00:0c:43:11:22:33
ra1	00:0c:43:11:22:34
ra2	00:0c:43:11:22:35
ra3	00:0c:43:11:22:36

then you can use the following configuration in your profile.


```
MacAddress=00:0c:43:11:22:33
MacAddress1=00:0c:43:11:22:34
MacAddress2=00:0c:43:11:22:35
MacAddress3=00:0c:43:11:22:36
```

MT7615 would use Enhanced New MBSSID Mode by default if you do not want to use MacAddress.

4.3 Important Note

4.3.1 MAC Address Format

The following MAC address format figure is from http://en.wikipedia.org/wiki/MAC_address and all subsequent discussion is based on this format.

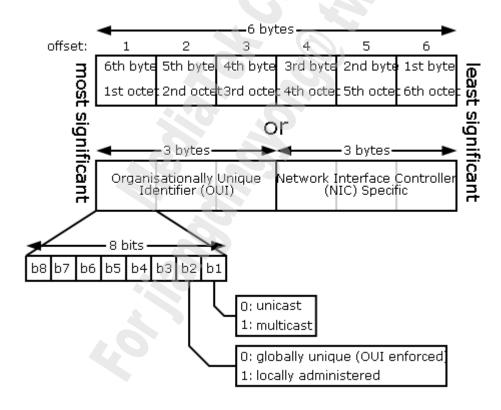

4.3.2 Old MBSSID Mode

As to main BSSID, the 1st byte of its MAC address should be:

- Multiple of 2 for 2-BSSID
- Multiple of 4 for 4-BSSID
- Multiple of 8 for 8-BSSID

Taking BssidNum=4 for example, address extension would be done on 1st byte.

ra0: 00:0c:43:00:00:00
 ra1: 00:0c:43:00:00:01
 ra2: 00:0c:43:00:00:02
 ra3: 00:0c:43:00:00:03
 ra3: 00:0c:43:00:00:03
 ra4: 00:0c:43:00:00:03
 ra5: 00:0c:43:00:00:03
 ra6: 00:0c:43:00:00:02
 ra7: 00:0c:43:00:00:03
 ra8: 00:0c:43:00:00:03
 ra9: 00:0c:43:00:00:00:00:00:00
 ra9: 00:0c:43:00:00:00
 ra9: 00:0c:43:00:00:00
 ra9: 00:0c:43:00:00
 ra9: 00:0c:43:00:00
 ra9: 00:0c:43:00:00
 ra9: 00:0c:43:00:00
 ra9: 00:0c:43:00:00
 ra9: 00:0c:43:00

Other possible address extension:

Multiple of 4	1st BSSID	2nd BSSID	3rd BSSID	4th BSSID
0x00	00-0C-43-DD-EE-F0	00-0C-43-DD-EE-F1	00-0C-43-DD-EE-F2	00-0C-43-DD-EE-F3
0x04	00-0C-43-DD-EE-F4	00-0C-43-DD-EE-F5	00-0C-43-DD-EE-F6	00-0C-43-DD-EE-F7
0x08	00-0C-43-DD-EE-F8	00-0C-43-DD-EE-F9	00-0C-43-DD-EE-FA	00-0C-43-DD-EE-FB
0x0C	00-0C-43-DD-EE-FC	00-0C-43-DD-EE-FD	00-0C-43-DD-EE-FE	00-0C-43-DD-EE-FF

Please be noted that all these MAC addresses should be reserved because they are global MAC addresses.

4.3.3 New MBSSID Mode

Since there is a MAC address reservation problem in the old MBSSID mode, we provide the new MBSSID mode which will utilize **b2 of 6**th **byte** of a virtual MAC address to claim it as locally administered. Address extension would be done on 6th byte. This is supported in 5-series products.

Taking BssidNum=4 for example:

ra0: 00:0c:43:00:00:00
 ra1: 02:0c:43:00:00:00
 02 comes from (6th byte 0x00 | b'00000010)
 ra2: 06:0c:43:00:00:00
 ra3: 0a:0c:43:00:00:00
 0a comes from (6th byte 0x00 | b'0000110)
 ra3: 0a:0c:43:00:00:00

4.3.4 Enhanced New MBSSID Mode

The enhanced new MBSSID mode removes the restriction of using the 6th byte since OUI (Consists of 6th, 5th, 4th bytes) is not controllable. Local Administration bit would be turned on and address extension would be done on 3rd byte. The extension algorithm is (3rd Byte & MacMSK) + (idx). BssidNum will affect MacMSK. This is supported only in new 7-series products and will be turned on by default.

```
if (BssidNum <= 2) { MacMSK = b'11111110;}
else if (BssidNum <= 4) { MacMSK = b'11111100;}
else if (BssidNum <= 8) { MacMSK = b'11111000;}
else if (BssidNum <= 16) { MacMSK = b'11110000;}
```

Taking BssidNum=4 for example:

```
    ra0: 00:0c:43:00:00:00
    ra1: 02:0c:43:00:00:00
    ra2: 02:0c:43:01:00:00
    ra3: 02:0c:43:02:00:00
    ra3: 02:0c:43:02:00:00
    ra4 byte 0x00 & 0xfc) + 0x01
    ra5: 02:0c:43:02:00:00
    ra6: 02:0c:43:02:00:00
    ra7: 02:0c:43:02:00:00
    ra7: 02:0c:43:02:00:00
```

MT7603, MT7628 and MT7615 make a different policy which uses **first 4 bits** of 3rd byte to do address extension. The extension algorithm is (3rd Byte & MacMSK) + (idx << 4).

```
if (BssidNum <= 2) { MacMSK = b'11101111;}
else if (BssidNum <= 4) { MacMSK = b'11001111;}
else if (BssidNum <= 8) { MacMSK = b'10001111;}
else if (BssidNum <= 16) { MacMSK = b'00001111;}
```

Taking BssidNum=4 for example:

```
    ra0: 00:0c:43:00:00
    ra1: 02:0c:43:10:00:00
    ra2: 02:0c:43:20:00:00
    ra3: 02:0c:43:30:00:00
    ra4 byte 0x00 & 0xcf) + (0x01 << 4)</li>
    ra5: 02:0c:43:30:00:00
    ra6 byte 0x00 & 0xcf) + (0x02 << 4)</li>
    ra7 dybyte 0x00 & 0xcf) + (0x03 << 4)</li>
```

4.3.5 Address Confliction Problem

In this section, we'll explain the address conflication problem. Suppose we have four DUTs with the following global MAC addresses.

```
DUT-A: 00:0c:43:10:22:33
DUT-B: 00:0c:43:11:22:33
DUT-C: 00:0c:43:12:22:33
DUT-D: 00:0c:43:13:22:33
```

Each DUT turns on MBSSID and configures its BssidNum=4. As a result, you will get the following total 16 MAC addresses.

	1st BSSID	2nd BSSID	3rd BSSID	4th BSSID
DUT-A	00:0c:43:10:22:33	02:0c:43:11:22:33	02:0c:43:12:22:33	02:0c:43:13:22:33
DUT-B	00:0c:43:11:22:33	02:0c:43:11:22:33	02:0c:43:12:22:33	02:0c:43:13:22:33
DUT-C	00:0c:43:12:22:33	02:0c:43:11:22:33	02:0c:43:12:22:33	02:0c:43:13:22:33
DUT-D	00:0c:43:13:22:33	02:0c:43:11:22:33	02:0c:43:12:22:33	02:0c:43:13:22:33

The 2^{nd} , 3^{rd} and 4^{th} BSSID are exactly identical for these DUTs. So, the address conflict problem does exist but the conflicting rate is extremely low. Using local MAC address as BSSID, this problem is inevitable.

4.4 Configuration

BssidNum can be configured only through profile and you must restart the interface to make it to work. Other parameters can be configured dynamically through iwpriv command per interface. MBSSID-supported parameters are SSID, AuthMode, EncrypType, WPAPSK, etc.

4.4.1 Example

BssidNum=4
SSID=SSID_A;SSID_B;SSID_C;SSID_D
AuthMode=OPEN;SHARED;WPAPSK;WPA2PSK
EncrypType=NONE;WEP;TKIP;AES

5 WPS

Wi-Fi Protected Setup (WPS) also known as Wi-Fi Simple Configuration (WSC) is a standard feature which simplifies the process of setting up protected connections for the various Wi-Fi devices connecting to APs. Without WPS, a user should manually configure SSID and security to create a WLAN. Unfortunately, most users do not know how it works and the configuration process becomes nightmare to them.

5.1 WPS Scenarios

There are two kinds of WPS scenarios. One is to set up a new WLAN and the other is to add new member devices to an existed WLAN. **Initial WLAN Setup** is that a user must do after buying a new AP device. After finishing initial WLAN setup, AP is ready to accept connection requests from client devices and here comes **Adding Member Devices**. The following list decribes all the possible scenarios when using WPS. The terminology used here would be introduced in the next section.

- Initial WLAN Setup
 - Standalone AP with a built-in Registrar
 - ♦ WPS is not needed in this case
 - AP and an External Registrar
 - ◆ EAP-based setup of External Wireless Registrar
 - [AP as Enrollee] --- EAP --- [Wireless Registrar]
 - UPnP-based setup of External Wired Registrar
 - [AP as Enrollee] --- UPnP --- [Wired Registrar]
- Adding Member Devices
 - In-band setup using a standalone AP/Registrar
 - ♦ [STA Enrollee] --- EAP --- [AP/Registrar]
 - In-band setup using an External Registrar
 - ◆ UPnP-based setup of External Wireless Registrar
 - [STA Enrollee] --- EAP --- [AP] --- UPnP --- [Wireless Registrar]
 - ♦ UPnP-based setup of External Wired Registrar
 - [STA Enrollee] --- EAP --- [AP] --- UPnP --- [Wired Registrar]

https://en.wikipedia.org/wiki/Extensible Authentication Protocol

*UPnP stands for Universal Plug and Play

https://en.wikipedia.org/wiki/Universal_Plug_and_Play

^{*}EAP stands for Extensible Authentication Protcol

5.2 Architectural Overview

This section presents high-level description of the Wi-Fi Simple Configuration architecture. Most material is taken directly from the WSC specification. In the following figure, you can see that there are three logical components involved in WSC: the Registrar, the access point (AP), and the Enrollee.

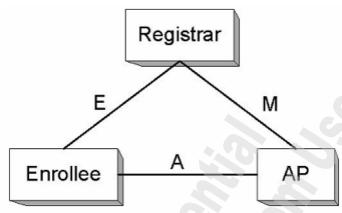


Figure 1: Components and Interfaces

[Component]

The **Enrollee** is a device seeking to join a WLAN domain. Once an Enrollee obtains a valid credential, it becomes a member.

The **Registrar** is an entity with the authority to issue and revoke domain credentials. A registrar may be integrated into an AP, or it may be separate from the AP.

The **AP** is an infrastructure mode 802.11 Access Point. We also call it **Proxy**.

[Interface]

Interface E is logically located between the Enrollee and the Registrar and its purpose is to enable the Registrar to discover and issue WLAN credentials to the Enrollee.

Interface M is between the AP and the Registrar and it enables an external Registrar to manage a WSC AP.

Interface A is between the Enrollee and the AP and it enables discovery of the WSC WLAN and communication between the Enrollee and IP-only Registrars.

5.3 Profile Parameter

5.3.1 WscConfMode

Description: Configure WPS role (bitwise OR)

Value:

WscConfMode=7

b'000: 0 Disable b'001: 1 Enrollee b'010: 2 Proxy b'100: 4 Registrar

5.3.2 WscConfStatus

Description: Configure WPS state

Value:

WscConfStatus=1

1: AP is unconfigured2: AP is configured

5.3.3 WscConfMethods

Description: Configure the configuration methods which Enrollee or Registrar supports Value:

WscConfMethods=238c

Note:

Hexadecimal value only.

 $0x238c = 0x2008 \mid 0x0280 \mid 0x0100 \mid 0x0004 \quad //Bitwise-OR all values which DUT supports Virtual Display PIN + Virtual Push Button + Keypad + Label PIN$

Config Method	Value
Label PIN	0x0004
External NFC Token	0x0010
Integrated NFC Token	0x0020
NFC Interface	0x0040
Keypad	0x0100
Virtual Push Button	0x0280
Physical Push Button	0x0480
Virtual Display PIN	0x2008
Physical Display PIN	0x4008

5.3.4 WscKeyASCII

Description: Choose the format/length of a generated key for an un-configured AP (internal registrar) Value:

WscKeyASCII=0

0: Hex (64-bytes)

1: ASCII (Random length)

8 ~ 63: ASCII length

5.3.5 WscSecurityMode

Description: Configure the security mode which AP would use when being configured Value:

WscSecurityMode=0

0: WPA2PSK AES

1: WPA2PSK TKIP

2: WPAPSK AES

3: WPAPSK TKIP

5.3.6 Wsc4digitPinCode

Description: Configure whether to use 4-digit PIN code

Value:

Wsc4digitPinCode=1

0: 8-digit PIN code

1: 4-digit PIN code

5.3.7 WscVendorPinCode

Description: Configure a fixed PIN code which AP would use as an Enrollee Value:

WscVendorPinCode=[xxxx|yyyyyyy]

xxxx is a 4-digit PIN code yyyyyyyy is a 8-digit PIN code

5.3.8 WscDefaultSSID0

Description: Configure the SSID which AP would use after being configured Value:

WscDefaultSSID0=SSID

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

5.3.9 WscV2Support

Description: Enable or disable WPS v2.0 support

Value:

WscV2Support=1

0: disable 1: enable

5.3.10 WscManufacturer

Description: WPS manufacturer string

Value:

WscManufacturer=

Less than 64 characters

5.3.11 WscModelName

Description: WPS model name string

Value:

WscModelName=

Less than 32 characters

5.3.12 WscDeviceName

Description: WPS device name string

Value:

WscDeviceName=

Less than 32 characters

5.3.13 WscModelNumber

Description: WPS model number string

Value:

WscModelNumber=

Less than 32 characters

5.3.14 WscSerialNumber

Description: WPS serial number string

Value:

WscSerialNumber=

Less than 32 characters

5.4 iwpriv Command

5.4.1 WscConfMode

Description: Configure WPS role (bitwise OR)

Value:

iwpriv ra0 set WscConfMode=7

b'000: 0 Disable b'001: 1 Enrollee b'010: 2 Proxy b'100: 4 Registrar

5.4.2 WscConfStatus

Description: Configure WPS state

Value:

iwpriv ra0 set WscConfStatus=1

1: AP is unconfigured2: AP is configured

5.4.3 WscMode

Description: Configure WPS mode

Value:

iwpriv ra0 set WscMode=1

1: PIN Mode 2: PBC Mode

5.4.4 WscGetConf

Description: Trigger WPS action

Value:

iwpriv ra0 set WscGetConf=1

5.4.5 WscStop

Description: Stop WPS process

Value:

iwpriv ra0 set WscStop=1

5.4.6 WscPinCode

Description: Enter Enrollee's PIN code which AP with built-in Registrar would use Value:

iwpriv ra0 WscPinCode=[xxxx|yyyyyyy]

xxxx is a 4-digit PIN code yyyyyyy is a 8-digit PIN code

5.4.7 WscGenPinCode

Description: Generate a random PIN code for DUT as an Enrollee

Value:

iwpriv ra0 set WscGenPinCode=1

Note:

PIN code can be either 4-digit or 8-digit depending on Wsc4digitPinCode One of the digits in the 8-digit PIN code is used as a checksum

5.4.8 WscVendorPinCode

Description: Configure an assigned PIN code for DUT as an Enrollee Value:

iwpriv ra0 set WscVendorPinCode=[xxxx|yyyyyyy]

xxxx is a 4-digit PIN code yyyyyyyy is a 8-digit PIN code

5.4.9 WscSecurityMode

Description: Configure the security mode which AP would use when being configured Value:

iwpriv ra0 set WscSecurityMode=0

0: WPA2PSK AES 1: WPA2PSK TKIP 2: WPAPSK AES 3: WPAPSK TKIP

5.4.10 WscOOB

Description: Reset WPS AP to the OOB (out-of-box) state

Value:

iwpriv ra0 set WscOOB=1

Note:

<OOB settings>

SSID MediatekInitailAPxxxxxx (last 3 bytes of ra0 MAC 00:0c:43:xx:xx:xx)

AuthMode WPA2PSK

EncrypType AES

WPAPSK MediatekInitialAPxx1234 WscConfStatus 1 (AP is unconfigured)

5.4.11 WscStatus

Description: Get current WPS status

Value:

iwpriv ra0 set WscStatus=0

- 0: Not Used
- 1: Idle
- 2: WSC Process Fail
- 3: Start WSC Process
- 4: Received EAPOL-Start
- 5: Sending EAP-Req (ID)
- 6: Received EAP-Rsp (ID)
- 7: Received EAP-Req with wrong WSC SMI Vendor ID
- 8: Received EAP-Req with wrong WSC Vendor Type
- 9: Sending EAP-Req (WSC_START)
- 10: Sending M1
- 11: Received M1
- 12: Sending M2
- 13: Received M2
- 14: Received M2D
- 15: Sending M3
- 16: Received M3
- 17: Sending M4
- 18: Received M4

- 19: Sending M5
- 20: Received M5
- 21: Sending M6
- 22: Received M6
- 23: Sending M7
- 24: Received M7
- 25: Sending M8
- 26: Received M8
- 27: Processing EAP Response (ACK)
- 28: Processing EAP Request (Done)
- 29: Processing EAP Response (Done)
- 30: Sending EAP-Fail
- 31: WSC_ERROR_HASH_FAIL
- 32: WSC_ERROR_HMAC_FAIL
- 33: WSC_ERROR_DEV_PWD_AUTH_FAIL
- 34: WSC configured

5.4.12 WscMultiByteCheck

Description: Enable or disable multi-byte check

Value:

iwpriv ra0 set WscMultiByteCheck=0

0: disable 1: enable

5.4.13 WscVersion

Description: Set WPS support version

Value:

iwpriv ra0 set WscVersion=10

0x10: Hexadecimal

5.4.14 WscVersion2

Description: Set WPS version of V2 support

Value:

iwpriv ra0 set WscVersion2=20

0x20: Hexadecimal

5.4.15 WscV2Support

Description: Enable or disable WPS V2.0 support

Value:

iwpriv ra0 WscV2Support=1

0: disable 1: enable

5.4.16 WscFragment

Description: Enable or disable WPS fragmentation

Value:

iwpriv ra0 WscFragment=0

0: disable 1: enable

5.4.17 WscFragmentSize

Description: Configure the size of WPS fragmentation

Value:

iwpriv ra0 set WscFragmentSize=128

128~300

5.4.18 WscSetupLock

Description: Enable or disable WPS setup lock

Value:

iwpriv ra0 set WscSetupLock=1

0: disable 1: enable

5.4.19 WscSetupLockTime

Description: Configure WPS setup lock time

Value:

iwpriv ra0 set WscSetupLockTime=0

0: lock forever Unit: minute

5.4.20 WscMaxPinAttack

Description: Configure WPS PIN attack MAX time

Value:

iwpirv ra0 set WscMaxPinAttack=10

0: disable

1-10

5.4.21 WscExtraTlvTag

Description: Add extra TLV tag to Beacon, probe response and WSC EAP messages Value:

iwpriv ra0 set WscExtraTlvTag=1088

Hex value: 0000 ~ FFFF

Example: 1088

5.4.22 WscExtraTlvType

Description: Define data format of extra TLV value

Value:

iwpriv ra0 set WscExtraTlvType=1

0: ASCII string

1: Hex string

5.4.23 WscExtraTlvData

Description: Add extra TLV data to Beacon, probe response and WSC EAP messages Value:

iwpriv ra0 set WscExtraTlvData=

ASCII string or Hex string

5.5 WPS Scenario in Practice

5.5.1 Initial WLAN setup with an External Registrar

[Unconfigured AP] \leftarrow EAP \rightarrow [Wireless Registrar]

[Unconfigured AP] ← UPnP → [Wired Registrar]

Please make sure that the UPnP deamon has been lanuched in AP since UPnP is the protocol used to communicate with Wired Registrar. After WPS registration succeeds, the AP turns into Configured state and will work as a Proxy forwarding EAP and UPnP messages between Enrolle and Registrar.

- AP Enrollee command sequence
 - PIN
 - ♦ iwpriv ra0 set WscConfMode=1
 - ♦ iwpriv ra0 set WscConfStatus=1
 - ♦ iwpriv ra0 set WscMode=1
 - ♦ iwpriv ra0 set WscGenPinCode=1 (Optional if PIN code is fixed)
 - iwpriv ra0 set WscGetConf=1
 - PBC
 - ♦ iwpriv ra0 set WscConfMode=1
 - ♦ iwpriv ra0 set WscConfStatus=1
 - ♦ iwpriv ra0 set WscMode=2
 - ♦ iwpriv ra0 set WscGetConf=1

5.5.2 Adding a member device using a standalone AP/Registrar

[STA] ← EAP → [AP/Registrar]

In this case, AP within a builtin Registrar could directly respond to the STA Enrollee.

- AP Registrar command sequence
 - PIN
 - ♦ iwpriv ra0 set WscConfMode=7
 - ◆ iwpriv ra0 set WscPinCode=xxxxxxxx (Mandatory, xxxxxxxx is Enrollee's PIN code)
 - ♦ iwpriv ra0 set WscMode=1
 - ♦ iwpriv ra0 set WscGetConf=1
 - PBC
 - ♦ iwpriv ra0 set WscConfMode=7
 - ♦ iwpriv ra0 set WscMode=2
 - ♦ iwpriv ra0 set WscGetConf=1

5.5.3 Adding a member device using an External Wired Registrar

 $[STA] \leftarrow EAP \rightarrow [AP] \leftarrow UPnP \rightarrow [External Registrar]$

In this case, AP just plays as a Proxy and almost does nothing.

- PIN
 - Registrar side
 - ♦ When prompted for the enrollee's PIN, enter it


- ◆ The registration process will begin, and the application will display the result of the process on completion
- Enrollee side
 - ◆ Trigger PIN process
 - ♦ The application will display the result of the process on completion
- PBC
 - Registrar side
 - ◆ Select "push-button"
 - ◆ The registration process will begin, and the application will display the result of the process on completion
 - Enrollee side
 - ◆ Trigger PBC process
 - ◆ The application will display the result of the process on completion


5.6 A Real Example

5.6.1 Initial WLAN setup with a wired external Registrar in PIN mode


- 1. [AP] Power on
- 2. [AP] Connect the Ethernet cable between AP and external Registrar (Windows) and make sure you can ping AP from external Registrar first!
- 3. [AP] Execute "iwpriv ra0 set WscConfMode=1" to configure AP as an Enrollee
- 4. [AP] Execute "iwpriv ra0 set WscConfStatus=1" to configured AP to un-configured state
- 5. [AP] Execute "iwpriv ra0 set WscMode=1" to run in PIN mode
- 6. [AP] Execute "iwpriv ra0 set WscGetConf=1" to trigger WPS process
- 7. [ER] The external Registrar on Microsoft STA will be configured with the new parameters (SSID = "scaptest4.1.3ssid" and WPA2PSK="scaptest4.1.3psk")
- 8. [ER] Read AP PIN code from console and enter it at the ER on Microsoft STA
- 9. [STA] Manually configure a STA with the new credential parameters (SSID="scaptest4.1.3ssid" and WPA2PSK passphrase="scaptest4.1.3psk")
- 10. [STA] Check whether ping can reach the AP


As to details of step-7, please refer to the following figures from [7-1] to [7-6].

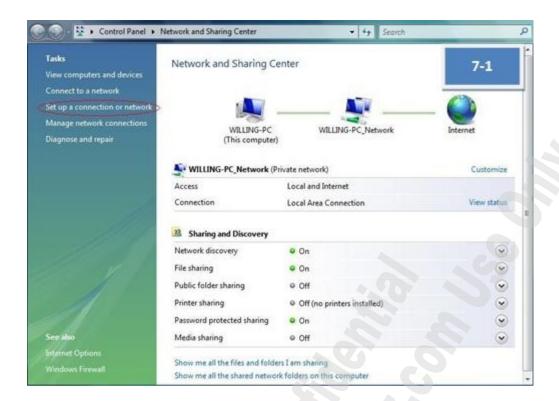


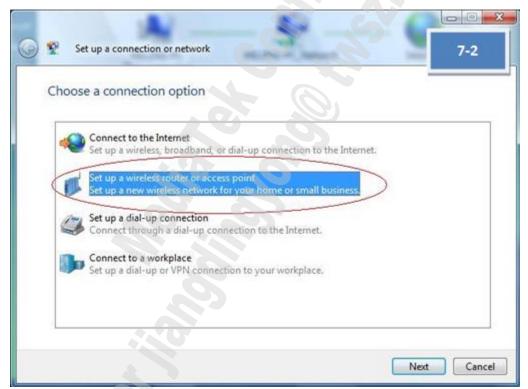



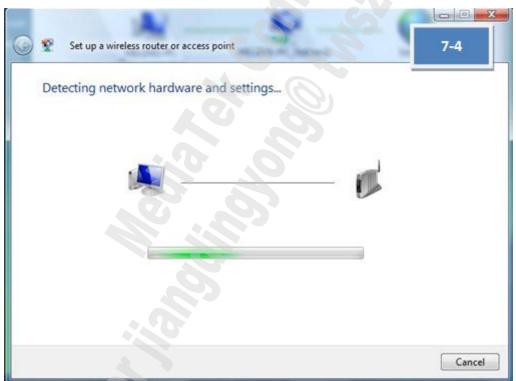


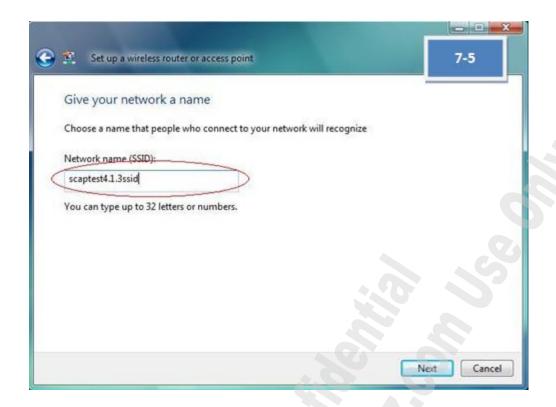

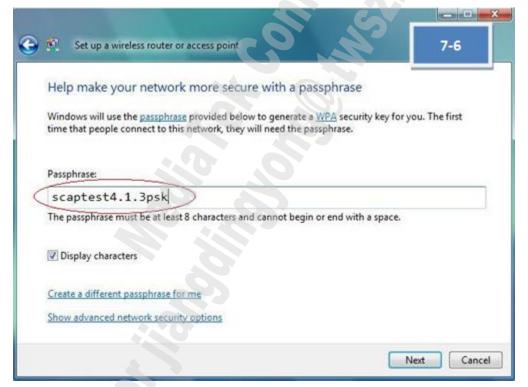

As to details of step-8, please refer to the following figures from [8-1] to [8-2].



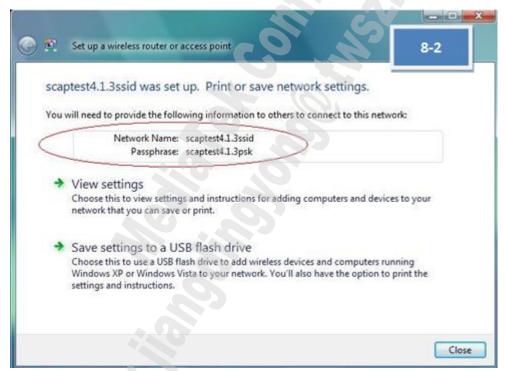

5.7 Notes for WPS

5.7.1 How to know WPS AP serves as Registrar, Enrollee or Proxy

It depends on the content of EAP-Response/Identity sent from WPS STA. You can check this in the packet trace recorded by a wireless sniffer. The following snapshots provide an example.

<EAP-Request/Identity sent by WPS AP>

```
■ ¶ 802.1x Authentication
```

 ③ Code:
 2 Response [38]

 ⑤ Identifier:
 0 [39]

 ⑤ Length:
 34 [40-41]

 ⑥ Type:
 1 Identity [42]

▼ Type-Data: WFA-SimpleConfig-Enrollee-1-0 [43-71]

- ➤ When WPS STA responds with identity being "WFA-SimpleConfig-Enrollee-1-0" WPS AP serves as Registrar. If AP does not trigger WPS, WPS AP serves as proxy only.
- ➤ When WPS STA responds with identity being "WFA-SimpleConfig-Registrar-1-0" WPS AP serves as Enrollee.

5.7.2 How to Know WPS AP PIN Code

You can use IOCTL to make a query with OID **RT_OID_WSC_PIN_CODE** to retrieve AP PIN Code directly. In case of MT7615, you can use "**iwpriv ra0 show WscPin**" to dump the PIN code.

5.7.3 WPS Configuration Status

The WPS attribute "Simple Configuration (SC) State" in WPS IEs (contained in beacon and probe response) indicates whether an AP DUT is configured.

```
□ 

WPS

     Element ID:
                        221 WPS [184]
    Length:
                        49 [185]

    ○ OUI:    ○
                        00-50-F2 Microsoft [186-188]

◊ OUI Type:

                        4 Wi-Fi Protected Setup [189]
                        0x10 1.0 [194]
    Version:
    0xCF5CF3F41F6C678D5C7CE365ABF7D300 [204-219]
    🗑 UUID-E:
    RF Bands:
                        0x03 [224]
    Vendor Extension: 0x00372A000120 [229-234]
```

If an AP is shipped from the factory in an un-configured state (SC State is 0x01), then the AP must change to the configured state (SC State is 0x02) if any of the following occurs.

1. Automatic configuration via WPS by an external Registrar

The AP sends the WSC_Done message in the External Registrar configuration process.

2. Automatic configuration via WPS by an internal Registrar

The AP receives the WSC_Done response in the Enrollee Registration Process from the first Enrollee. The internal registrar waits until successful completion of the protocol before applying the automatically generated credentials to avoid an accidental transition from un-configured to configured one in the case that a neighbouring device tries to run WSC before the real enrollee, but fails. A failed attempt does not change the configuration of the AP, nor the Simple Config State.

3. Manual configuration by an user

One user manually configures the AP using whatever interface(s) it provides to modify any one of the followings:

- SSID
- Encryption method
- Authentication method
- Any key or pass phrase

If an AP is shipped from the factory in an un-configured state (SC State 0x01), then a Factory Reset must revert the Simple Config State to be un-configured. If an AP is shipped from the factory pre-configured with WPA2PSK and a randomly generated key, the SC State must be 'Configured' (0x02) so as to prevent an external Registrar from overwriting the default factory settings. A factory reset must restore the DUT to the same configuration as what it was when shipped.

5.7.4 How to Know WPS process has been triggered

You can check the WPS IE in beacons sent by the AP to differentiate whether a WPS process is ongoing.

<Normal>

```
🗏 🟋 WPS
     🗑 Element ID:
                            221 WPS [184]
     Length:
                            49 [185]
     OUI:
                            00-50-F2 Microsoft [186-188]
     🗑 OUI Type:
                            4 Wi-Fi Protected Setup [189]
                            0x10 1.0 [194]
     Wi-Fi Protected Setup: 2 Configured [199]
     🗑 UUID-E:
                            0xCF5CF3F41F6C678D5C7CE365ABF7D300 [204-219]
     RF Bands:
                            0x03 [224]
     Vendor Extension:
                           0x00372A000120 [229-234]
```

<Ongoing> The key is that Selected Registrar should be TRUE.

```
WPS
🗑 Element ID:
                        221 WPS [184]
  Length:
                        74 [185]
                        00-50-F2 Microsoft [186-188]
  OUI:
  OUI Type:
                        4 Wi-Fi Protected Setup [189]
                        0x10 1.0 [194]
  Version:
  Wi-Fi Protected Setup:2 Configured [199]
  Selected Registrar:
                        1 True [204]
  Device Password ID:
                        0x0004 PushButton [209-210]
  Selected Reg. CM:
                        0x2688 [215-216]
  UUID-E:
                        0xCF5CF3F41F6C678D5C7CE365ABF7D300 [221-236
RF Bands:
                        0x03 [241]
                        0x00372A0001200106FFFFFFFFFF [246-259
  Vendor Extension:
```

5.8 UPnP Daemon HowTo

In our reference design, we use miniupnpd to work as a daemon for WPS proxy function. The path in our SDK is **source/user/miniupnpd-1.6**. You can study the "**miniupnpd.sh**" inside to write your own startup script. If you want to run it with MBSSID, you have to launch multiple miniupnpds for each BSSID.

[Example]

```
miniupnpd -m 1 -I ra0 -P /var/run/miniupnpd.ra0 -i $WAN_IF -a $LAN_IPADDR -n 7777 miniupnpd -m 1 -I rai0 -P /var/run/miniupnpd.rai0 -i $WAN_IF -a $LAN_IPADDR -n 8888
```

6 Protection Mechanism

Protection in Wi-Fi is one kind of backward-compatibile mechanism to make sure that the operation of old devices would not be affected by new devices and vice versa. Since the Wi-Fi technology evolves from the legacy CCK to the VHT, protection mechanism becomes complex and mandatory.

BG protection means that an 11g station should be aware that a legacy 11b station would exist and send frames with protection, like RTS/CTS or CTS-to-Self, enabled to prevent interference from happening. Mediatek provides a parameter named BGProtection to configure the above-mentioned behavior. When configuring BGProtection=0 and DisableOLBC=0, AP would automatically turn on the protection when either an 11b station connected to it or receiving Beacon/Probe Response frames from an 11b AP working nearby. When there is no 11b device around, AP would automatically turn off the protection. This protection mechanism applies to 2.4G only.

HT protection means that a HT station should be aware that a legacy 11bg station would exist and adopt necessary protection if necessary. In the SPEC IEEE Std 802.11-2012, there are four modes for HT protection.

Encoding	Mode	Scenario
B'00	No protection	No non-HT station exists at all
B'01	Nonmember protection	At least one non-HT station exists in a different BSS
B'10	20MHz protection	All HT stations but at least one HT20 station exists
B'11	Non-HT mixed	Otherwise

This protection mechanism would be tested in the WFA TGn Test Plan 4.2.26 Basic Association in 802.11n Environment.

20/40 MHz BSS Coexistence is a mechanism to avoid interference when using 40MHz in the crowded 2.4g band. In fact, using 40MHz is not recommended in 2.4g since multiple unrelated BSSs might easily be overlapped in the same channel and are close enough. This protection mechanism would be tested in the WFA TGn Test Plan 4.2.41 AP 20/40 MHz Coexistence. In the test case, there are 3 scenarios which would make APUT to drops to 20 MHz.

APUT is

- not starting a 40 MHz BSS in presence of an 802.11g BSS.
- appropriately switching from 40 MHz to 20 MHz in presence of 40 MHz intolerant STA.
- appropriately switching from 40 MHz to 20 MHz when receiving frames disallowing the use of 40 MHz channel width.

6.1 Profile Parameter

6.1.1 BGProtection

Description: 11bg protection configuration

Value:

BGProtection=0

- 0: Auto
- 1: Always On
- 2: Always Off

6.1.2 DisableOLBC

Description: Enable or disable detection of OLBC (Overlapping Legacy BSS Condition)

Value:

DisableOLBC=0

0: enable

1: disable

6.1.3 HT PROTECT

Description: Enable or disable 802.11n protection mechanism

Value:

HT_PROTECT=1

0: disable

1: enable

6.1.4 HT_BSSCoexistence

Description: Enable or disable HT BSS coexistence support in 2.4G

Value:

HT_BSSCoexistence=1

0: disable

1: enable

6.2 iwpriv Command

6.2.1 BGProtection

Description: 11bg protection configuration

Value:

iwpriv ra0 set BGProtection=0

0: Auto

1: Always On

2: Always Off

6.2.2 DisableOLBC

Description: Enable or disable detection of OLBC (Overlapping Legacy BSS Condition)

Value:

iwpriv ra0 set DisableOLBC=0

0: enable 1: disable

6.2.3 HtProtect

Description: Enable or disable 802.11n protection mechanism

Value:

iwpriv ra0 set HtProtect=0

0: disable 1: enable

6.2.4 HtBssCoex

Description: Enable or disable HT BSS coexistence support in 2.4G

Value:

iwpriv ra0 set HtBssCoex=0

0: disable 1: enable

6.2.5 AP2040Rescan

Description: Trigger a scan to recheck HT20/40 coexistence

Value:

iwpriv ra0 set AP2040Rescan=1

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 68 of 142

7.1 Introduction

IEEE 802.11e amendment is to provide basic QoS features to 802.11 network and Wi-Fi Multimedia (WMM) is a WFA interoperability certification based on the IEEE 802.11e standard. WMM prioritizes wireless traffic according to four Access Categories, including Voice (VO), Video (VI), Best Effort (BE) and Background (BK).

7.2 iwpriv Command

7.2.1 **WmmCapable**

Description: Enable or disable WMM QoS function

Value:

iwpriv ra0 set WmmCapable=1

0: disable 1: enable

7.3 **Profile Parameter**

WmmCapable 7.3.1

Description: Enable or disable WMM QoS function

Value:

WmmCapable=1

0: disable 1: enable

Note: Only WmmCapable has iwpriv command support

7.3.2 **APSDCapable**

Description: WMM Automatic Power Save Delivery (APSD) function configuration

Value:

APSDCapable=0

0: disable 1: enable

7.3.3 APAifsn

Description: AP arbitration interframe space number configuration

Value:

APAifsn=3;7;1;1

AC_BE;AC_BK;AC_VI;AC_VO

7.3.4 APCwmin

Description: AP contention window minimum (exponent) configuration

Value:

APCwmin=4;4;3;2

AC_BE;AC_BK;AC_VI;AC_VO

7.3.5 APCwmax

Description: AP contention window maximum (exponent) configuration

Value:

APCwmax=6;10;4;3

AC_BE;AC_BK;AC_VI;AC_VO

7.3.6 APTxop

Description: AP Transmit Opportunity configuration (unit: 32µs)

Value:

APTxop=0;0;94;47

AC_BE;AC_BK;AC_VI;AC_VO

7.3.7 APACM

Description: AP Admission Control Mandatory configuration

Value:

APACM=0;0;0;0

AC_BE;AC_BK;AC_VI;AC_VO

7.3.8 BSSAifsn

Description: STA arbitration interframe space number configuration

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 70 of 142

Value:

BSSAifsn=3;7;2;2

AC_BE;AC_BK;AC_VI;AC_VO

7.3.9 BSSCwmin

Description: STA contention window minimum (exponent) configuration

Value:

BSSCwmin=4;4;3;2

AC_BE;AC_BK;AC_VI;AC_VO

7.3.10 BSSCwmax

Description: STA contention window maximum (exponent) configuration

Value:

BSSCwmax=10;10;4;3

AC_BE;AC_BK;AC_VI;AC_VO

7.3.11 BSSTxop

Description: STA Transmit Opportunity configuration (unit: 32µs)

Value:

BSSTxop=0;0;94;47

AC_BE;AC_BK;AC_VI;AC_VO

7.3.12 BSSACM

Description: STA Admission Control Mandatory configuration

Value:

BSSACM=0;0;0;0

AC BE;AC BK;AC VI;AC VO

7.3.13 AckPolicy

Description: Acknowledgement policy configuration

Value:

AckPolicy=0;0;0;0

- 0: Normal Ack or Implicit Block Ack Request
- 1: No Ack
- 2: No explicit acknowledgement
- 3: Block Ack

AC_BE;AC_BK;AC_VI;AC_VO

7.4 How to Run WMM test

- 1. WmmCapable=1
- 2. TxBurst=0
- 3. HT RDG=0
- Parameters for AP // AC_BE;AC_BK;AC_VI;AC_VO APAifsn=3;7;1;1 // AC_BE;AC_BK;AC_VI;AC_VO APCwmin=4;4;3;2 APCwmax=6;10;4;3 // AC_BE;AC_BK;AC_VI;AC_VO APTxop=0;0;94;47 // AC_BE;AC_BK;AC_VI;AC_VO APACM=0;0;0;0 // AC_BE;AC_BK;AC_VI;AC_VO Parameters for all STAs BSSAifsn=3;7;2;2 // AC_BE;AC_BK;AC_VI;AC_VO BSSCwmin=4;4;3;2 // AC_BE;AC_BK;AC_VI;AC_VO BSSCwmax=10;10;4;3 // AC_BE;AC_BK;AC_VI;AC_VO BSSTxop=0;0;94;47 // AC_BE;AC_BK;AC_VI;AC_VO BSSACM=0;0;0;0 // AC_BE;AC_BK;AC_VI;AC_VO 6. Ack policy AckPolicy=0;0;0;0 // AC_BE;AC_BK;AC_VI;AC_VO;

All default values comply with the Wi-Fi specification.

8.1 TPC

We do not support Transmission Power Control (TPC) and we provide a more flexible feature named Single SKU for fulfillment of the similar request. You can also consider TxPower to manually change the power in run-time.

8.2 DFS

DFS stands for Dynamic Frequency Selection and this function is only applicable in 5G band. We just list the basic settings for DFS here. You can check *DFS Debug Guideline* for further information.

8.2.1 Profile Parameter

8.2.1.1 IEEE80211H

Description: Enable or disable IEEE 802.11h support (DFS)

Value:

IEEE80211H=1

0: disable 1: enable

8.2.1.2 DfsEnable

Description: Enable or disable DFS

Value:

DfsEnable=1

0: disable 1: enable

Note: MT7615/MT7915 only

To turn on DFS, you must have IEEE80211H=1 and DfsEnable=1.

8.2.1.3 RDRegion

Description: Configure the area/type of DFS regulation

Value:

RDRegion=JAP

CE/FCC/JAP

8.2.1.4 DfsDedicatedZeroWait

Description: Enable dedicated path for DFS function

Value:

DfsDedicatedZeroWait=1

0: disable 1: enable

Note: MT7915 only

8.2.1.5 DfsZeroWaitDefault

Description: Enable default zero wait DFS flow

Value:

DfsZeroWaitDefault=1

0: disable 1: enable


To turn on zero-wait DFS, you must have DfsDedicatedZeroWait =1 and DfsZeroWaitDefault =1.

Note: MT7915 only

8.2.2 Profile configuration for DFS test

- (1) IEEE80211H=1
- (2) **DfsEnable=1** (MT7615 only)
- (3) RDRegion=CE / FCC / JAP
 - i. CE is for Europe
 - ii. FCC is for USA
 - iii. JAP is for Japan
- (4) Channel is set to a DFS channel
 - i. Band 2/W53: Ch52 Ch64
 - ii. Band 3/W56: Ch100 Ch144

From http://wifinigel.blogspot.tw/2014/05/80211ac-5ghz-emperors-new-clothes-part-2.html

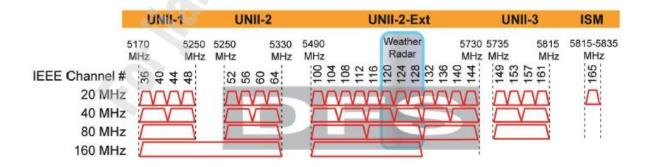


From https://community.aerohive.com/aerohive/topics/effect_of_dfs_on_802_11ac Matthew Gast's book, "802.11ac: A Survival Guide".

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 74 of 142

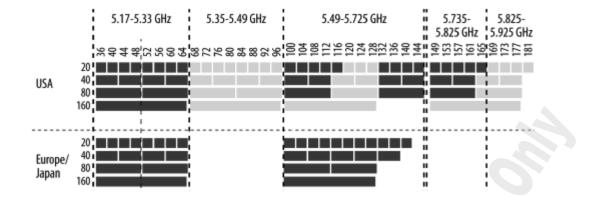

9.1 All possible combinations of security policy

Type I. Without Radius

(IEEE8021X has to be False)

	OPEN	SHARED	WEPAUTO
NONE	V	X	X
WEP	V	V	V
802.1x daemon	Off	Off	Off

Type II. With Radius (Non-WiFi standard)

(IEEE8021X has to be True)

	OPEN
NONE	V
WEP	V
802.1x daemon	On

Type III. With WFA WPA/WPA2

(IEEE8021X has to be False)

	WPAPS K	WPA2PS K	WPAPSK WPA2PS K	WPA	WPA2	WPA WPA2
TKIP	V	V	V	V	V	V
AES	V	V	V	V	V	V
TKIPAES	V	V	V	V	V	V
802.1x daemon	Off	Off	Off	On	On	On

9.2 iwpriv Command

9.2.1 AuthMode

Description: WLAN security authentication mode

Value:

iwpriv ra0 set AuthMode=OPEN

OPEN Open system
SHARED Shared key system

WEPAUTO Auto switch between OPEN and SHARED

OWE Enhanced Open

WPAPSK WPA Pre-Shared Key (Infra) WPA2PSK WPA2 Pre-Shared Key (Infra)

WPA3PSK WPA3 SAE (Infra)

WPAPSKWPA2PSK WPAPSK/WPA2PSK mixed mode (Infra)
WPA2PSKWPA3PSK WPA2PSK/WPA3PSK mixed mode (Infra)

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 76 of 142

WPA WPA Enterprise mode
WPA2 WPA2 Enterprise mode
WPA3 WPA3 Enterprise mode

WPA3-192 WPA3 Suite B 192 bit Enterprise mode

WPA1WPA2 WPA/WPA2 mixed mode

Noted: Make sure WPA3 is supported on your using driver version before you setup WPA3 related settings.

9.2.2 EncrypType

Description: WLAN security encryption type

Value:

iwpriv ra0 set EncrypType=NONE

NONE No encryption

WEP Wired Equivalent Privacy

TKIP Temporal Key Integrity Protocol
AES Advanced Encryption Standard

TKIPAES Mixed cipher

GCMP256 Galois/Counter Mode Protocol - 256 bit

9.2.3 DefaultKeyID

Description: Default key ID (WEP only)

Value:

iwpriv ra0 set DefaultKeyID=1

The ID range is 1~4

9.2.4 Key1

Description: Key 1 string (WEP only)

Value:

iwpriv ra0 set Key1=aaaaa

10 or 26 hexadecimal characters 5 or 13 ASCII characters

9.2.5 Key2

Description: Key 2 string (WEP only)

Value:

iwpriv ra0 set Key2=aaaaa

9.2.6 Key3

Description: Key 3 string (WEP only)

Value:

iwpriv ra0 set Key3=aaaaa

10 or 26 hexadecimal characters 5 or 13 ASCII characters

9.2.7 Key4

Description: Key 4 string (WEP only)

Value:

iwpriv ra0 set Key4=aaaaa

10 or 26 hexadecimal characters 5 or 13 ASCII characters

9.2.8 WPAPSK

Description: WLAN security password for TKIP/AES/GCMP256

Value:

iwpriv ra0 set WPAPSK=12345678

8~63 ASCII characters 64 hexadecimal characters

9.2.9 WpaMixPairCipher

Description: Providing more flexible combination of cipher suite (NOT recommended) Value:

iwpriv ra0 set WpaMixPairCipher=WPA_TKIP_WPA2_AES

WPA_AES_WPA2_TKIPAES

WPA_AES_WPA2_TKIP

WPA_TKIP_WPA2_AES

WPA_TKIP_WPA2_TKIPAES

WPA_TKIPAES_WPA2_AES

WPA_TKIPAES_WPA2_TKIPAES

WPA_TKIPAES_WPA2_TKIP

9.3 Profile Parameter

9.3.1 AuthMode

Description: WLAN security authentication mode

Value:

AuthMode=OPEN

OPEN Open system
SHARED Shared key system

WEPAUTO Auto switch between OPEN and SHARED

OWE Enhanced Open

WPAPSK WPA Pre-Shared Key (Infra) WPA2PSK WPA2 Pre-Shared Key (Infra)

WPA3PSK WPA3 SAE (Infra)

WPAPSKWPA2PSK WPA2PSK mixed mode (Infra)
WPA2PSKWPA3PSK WPA2PSK/WPA3PSK mixed mode (Infra)

WPA WPA Enterprise mode
WPA2 WPA2 Enterprise mode
WPA3 WPA3 Enterprise mode

WPA3-192 WPA3 Suite B 192 bit Enterprise mode

WPA1WPA2 WPA/WPA2 mixed mode

Noted: Make sure WPA3 is supported on your using driver version before you setup WPA3 related settings.

9.3.2 EncrypType

Description: WLAN security encryption type

Value:

EncrypType=NONE

NONE No encryption

WEP Wired Equivalent Privacy

TKIP Temporal Key Integrity Protocol
AES Advanced Encryption Standard

TKIPAES Mixed cipher

GCMP256 Galois/Counter Mode Protocol – 256 bit

9.3.3 RekeyMethod

Description: Configuration of rekey method for WPA/WPA2

Value:

RekeyMethod=DISABLE

TIME: Time rekey
PKT: Packet rekey
DISABLE: Disable rekey

9.3.4 RekeyInterval

Description: Rekey interval configuration for WPA/WPA2

Value:

RekeyInterval=0

The value range is $0 \sim 0x3FFFFF$. (Unit: 1 second or 1000 packets) Use 0 to disable rekey

9.3.5 PMKCachePeriod

Description: PMK cache life time configuration for WPA/WPA2

Value:

PMKCachePeriod=10

The value range is $0 \sim 65535$. (Unit: minute)

9.3.6 WPAPSK

Description: WLAN security password for TKIP/AES/GCMP256

Value:

WPAPSK=01234567

8~63 ASCII characters 64 hexadecimal characters

9.3.7 DefaultKeyID

Description: Default key ID (WEP only)

Value:

DefaultKeyID=1

The ID range is 1~4

9.3.8 Key1Type

Description: Key 1 type

Value:

Key1Type=0

0: Hexadecimal

1: ASCII

9.3.9 Key1Str

Description: Key 1 string

Value:

Key1Str=

10 or 26 hexadecimal characters 5 or 13 ASCII characters

9.3.10 Key2Type

Description: Key 2 type

Value:

Key2Type=0

0: Hexadecimal

1: ASCII

9.3.11 Key2Str

Description: Key 2 string

Value:

Key2Str=

10 or 26 hexadecimal characters 5 or 13 ASCII characters

9.3.12 Key3Type

Description: Key 3 type

Value:

Key3Type=0

0: Hexadecimal

1: ASCII

9.3.13 Key3Str

Description: Key 3 string

Value:

Key3Str=

9.3.14 Key4Type

Description: Key 4 type

Value:

Key4Type=0

0: Hexadecimal

1: ASCII

9.3.15 Key4Str

Description: Key 4 string

Value:

Key4Str=

10 or 26 hexadecimal characters 5 or 13 ASCII characters

9.3.16 WpaMixPairCipher

Description: Providing more flexible combination of cipher suite

Value:

WpaMixPairCipher=WPA_TKIP_WPA2_AES

WPA_AES_WPA2_TKIPAES

WPA_AES_WPA2_TKIP

WPA_TKIP_WPA2_AES

WPA_TKIP_WPA2_TKIPAES

WPA_TKIPAES_WPA2_AES

WPA_TKIPAES_WPA2_TKIPAES

WPA_TKIPAES_WPA2_TKIP

9.4 New WFA Security Rules

		2013/12/31	2014/1/1		
Personal					
WPA-PSK Only	TKIP	V	X		
WFA-F5K Offiy	AES	Δ	X		
WPA2-PSK Only	TKIP	Δ	X		
WFAZ-F5K Offily	AES	V	V		
WPA-PSK/WPA2-PSK Mixed	WPA-PSK/WPA2-PSK Mixed				
WPA-PSK	TKIP	V	V		
WIA-F3M	AES	Δ	X		
WPA2-PSK	TKIP	Δ	X		
WFAZ-F3K	AES	V	V		
Enterprise	Enterprise				
WPA Only	TKIP	V	X		
WFA Offiny	AES	Δ	X		
WPA2 Only	TKIP	Δ	X		
WFA2 Offiy	AES	V	V		
WPA/WPA2 Mixed					
WPA	TKIP	V	V		
WIA	AES	Δ	X		
WPA2	TKIP	Δ	X		
WFAZ	AES	V	V		

V = Allowed by WFA

X = Prohibited by WFA

 Δ = It was not prohibited by WFA, but no test case use it.

Note: Please check 9.5.5 for the correct settings of mixed mode.

9.5 iwpriv command examples

Please specify SSID at last step to trigger the AP restart procedure which would reload new security settings.

9.5.1 OPEN/NONE

- 1. iwpriv ra0 set AuthMode=OPEN
- 2. iwpriv ra0 set EncrypType=NONE
- 3. iwpriv ra0 set IEEE8021X=0
- 4. iwpriv ra0 set SSID=myownssid

9.5.2 SHARED/WEP

- 1. iwpriv ra0 set AuthMode=SHARED
- 2. iwpriv ra0 set EncrypType=WEP
- 3. iwpriv ra0 set Key1=0123456789
- 4. iwpriv ra0 set DefaultKeyID=1
- 5. iwpriv ra0 set IEEE8021X=0

6. iwpriv ra0 set SSID=myownssid

9.5.3 WPAPSK/TKIP

- 1. iwpriv ra0 set AuthMode=WPAPSK
- 2. iwpriv ra0 set EncrypType=TKIP
- 3. iwpriv ra0 set SSID=myownssid
- 4. iwpriv ra0 set WPAPSK=myownpresharedkey
- 5. iwpriv ra0 set SSID=myownssid

Note: Deprecated by WFA since 2014.01.01

9.5.4 WPA2PSK/AES

- 1. iwpriv ra0 set AuthMode=WPA2PSK
- 2. iwpriv ra0 set EncrypType=AES
- 3. iwpriv ra0 set SSID=MySsid
- 4. iwpriv ra0 set WPAPSK=MyPassword
- 5. iwpriv ra0 set SSID=MySsid

9.5.5 WPAPSKWPA2PSK/TKIPAES

- 1. iwpriv ra0 set AuthMode=WPAPSKWPA2PSK
- 2. iwpriv ra0 set EncrypType=TKIPAES
- 3. iwpriv ra0 set SSID=MySsid
- 4. iwpriv ra0 set WpaMixPairCipher=WPA_TKIP_WPA2_AES
- 5. iwpriv ra0 set WPAPSK=MyPassword
- 6. iwpriv ra0 set SSID=MySsid

9.5.6 WPA3PSK/AES

- 1. iwpriv ra0 set AuthMode=WPA3PSK
- 2. iwpriv ra0 set EncrypType=AES
- 3. iwpriv ra0 set WPAPSK=MyPassword
- 4. iwpriv ra0 set SSID=MySsid

9.5.7 WPA2PSKWPA3PSK/AES

- 5. iwpriv ra0 set AuthMode= WPA2PSKWPA3PSK
- 6. iwpriv ra0 set EncrypType=AES
- 7. iwpriv ra0 set WPAPSK=MyPassword
- 8. iwpriv ra0 set SSID=MySsid

10 Authenticator

IEEE Std. 802.1X-2001 is a standard for port-based network access control. It introduces an extensible mechanism for authenticating and authorizing users. There are 3 major components which includes **Supplicant**, **Authenticator** and **Authentication Server** (AS).

The following material is from http://tldp.org/HOWTO/html_single/8021X-HOWTO/

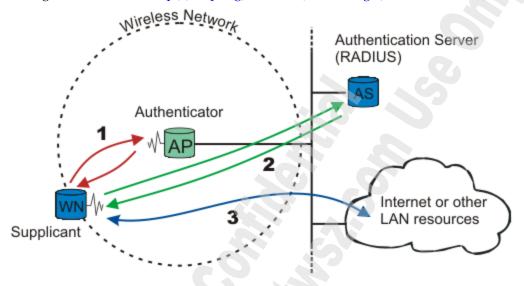


Figure: A wireless node must be authenticated before it can gain access to other LAN resources.

When a new wireless node (WN) requests access to a LAN resource, the access point (AP) asks for the WN's identity. No other traffic than EAP is allowed before the WN is authenticated.

The wireless node that requests authentication is often called **Supplicant**, although it is more correct to say that the wireless node contains a Supplicant. The Supplicant is responsible for responding to Authenticator data that will establish its credentials. The same goes for the access point; the access point contains an **Authenticator**. The Authenticator does not even need to be in the access point; it can be an external component.

After the identity has been sent, the authentication process begins. The protocol used between the Supplicant and the Authenticator is EAP, or more correctly, EAP encapsulation over LAN (EAPoL). The Authenticator re-encapsulates the EAP messages to Radius format, and passes them to the Authentication Server.

During authentication, the **Authenticator** just relays packets between the **Supplicant** and the **Authentication Server**. When the authentication process finishes, the Authentication Server sends a success message (or failure message if the authentication failed). The Authenticator then opens the "port" for the Supplicant. After a successful authentication, the Supplicant is granted access to other LAN resources or Internet.

10.1 Profile Parameter

10.1.1 IEEE8021X

Description: Enable or disable 802.1X-WEP/802.1X-NONE mode

Value:

IEEE8021X=0

0: disable 1: enable

Note: It is enabled only when using Radius-WEP or Radius-NONE.

10.1.2 RADIUS Server

Description: RADIUS server IP address configuration

Value:

RADIUS_Server=10.10.10.253

Note: IPv4 only

10.1.3 RADIUS_Port

Description: RADIUS server port number configuration

Value:

RADIUS_Port=1812

10.1.4 RADIUS Key

Description: RADIUS key configuration

Value:

RADIUS_Key=password

10.1.5 own_ip_addr

Descripion: Configure SoftAP its own IP address

Value:

own_ip_addr=10.10.10.254

10.1.6 session_timeout_interval

Descripion: Configure the timeout interval for re-authentication

Value:

MediaTek Confidential

session_timeout_interval=120 (unit: second)

Note:

0: Disable re-authentication service

It must be larger than 60. Every session would be re-authenticated for a regular interval defined by this parameter.

10.1.7 PMKCachePeriod

Description: PMK Cache period configuration

Value:

PMKCachePeriod=10 (unit: minutes)

Note:

Default is 10 minutes.

10.1.8 EAPifname

Description: EAPifname is assigned as the binding interface for EAP negotiation

Value:

EAPifname=

Example:

EAPifname=br0

Note:

Its default value is "br0". However, if the wireless interface is not attached to the bridge interface or the name of the bridge interface is not "br0", please modify it.

10.1.9 PreAuth

Description: Enable or disable WPA2 pre-authentication mode

Value:

PreAuth=0

0: disable 1: enable

10.1.10 PreAuthifname

Description: PreAuthifname is assigned as the binding interface for **WPA2** pre-authentication Value:

PreAuthifname=

MediaTek Confidential

Example:

PreAuthifname=br0

10.2 rt2860apd

rt2860apd - IEEE 802.1X Authenticator (user space utility)
Source folder in reference SDK: RT288x_SDK/source/user/802.1x
Binary location in reference image: /bin/rt2860apd

rt2860apd implements part of IEEE 802.1X which helps the Authentication Server (AS) authorizing the Supplicant and also prove itself a valid Authenticator to AS. Please be noted that rt2860apd does not include the state machine for Key Management. Instead, the Key Management function is included in the wireless driver. Actually, rt2860apd relays EAP frames between the Supplicant and the AS. The port control entity is also implemented in the wireless driver.

10.2.1 How to turn on rt2860apd

```
Mediatek Linux SDK Configuration
    Arrow keys navigate the menu. <Enter> selects submenus
    Highlighted letters are hotkeys. Pressing <Y> includes, <N> excludes,
    <M> modularizes features. Press <Esc> to exit, <?> for Help.
    Legend: [*] built-in [ ] excluded <M> module
                                                     < > module capable
         ptp
         ipd-zebra (RIP)
         p-12tp
    [ ]
         advd (Router Advertisement Daemon)
           advd dump
        rt2860apd (802.1x Authenticator)
         t61apd (Legacy 802.1x Authenticator)
         nort (IDS)
         nmpd(v1)
    [ ]
         otd (DNS proxy)
    [ ]
                       <<mark>S</mark>elect>
                                   < Exit >
                                               < Help >
```

10.2.2 How to configure rt2860apd

When rt2860apd starts, it will read settings from the driver profile. For any changes to make, you need to edit the configuration file, and then restart both the wireless interface and rt2860apd. Actually, the command "iwpriv ra0 set SSID=XXXX" would do the job.

The following four parameters in the configuration file are mandatory for rt2860apd. You should configure them correctly according to your own setup.

- RADIUS Server='10.10.10.253'
- RADIUS_Port='1812'
- RADIUS_Key='password'
- own_ip_addr='10.10.10.254'

10.3 Multiple RADIUS Servers Support

As to MBSSID, you can use ";" to separate the settings for each BSSID. Example is as follows.

RADIUS_Server=192.168.2.1;192.168.2.2;192.168.2.3;192.168.2.4

RADIUS_Port=1811;1812;1813;1814

RADIUS_Key=ralink_1;ralink_2;ralink_3;ralink_4

This implies,

The RADIUS server IP for ra0 is 192.168.2.1, its port is 1811 and its secret key is ralink_1.

The RADIUS server IP for ra1 is 192.168.2.2, its port is 1812 and its secret key is ralink_2.

The RADIUS server IP for ra2 is 192.168.2.3, its port is 1813 and its secret key is ralink_3.

The RADIUS server IP for ra3 is 192.168.2.4, its port is 1814 and its secret key is ralink_4.

Also, we have **Failover** mechanism and it means you can have a backup Radius server for each BSSID. Example is as follows. Both of them are written in the same profile.

<Default>

RADIUS_Server=192.168.2.1;192.168.2.2;192.168.2.3;192.168.2.4

RADIUS_Port=1811;1812;1813;1814

RADIUS_Key=ralink_1;ralink_2;ralink_3;ralink_4

<Failover>

RADIUS_Server=10.10.10.1; 10.10.10.2; 10.10.10.3; 10.10.10.4

RADIUS_Port=1812;1812;1812;1812

RADIUS_Key=ralink_5;ralink_6;ralink_7;ralink_8

You may use iwpriv command to do the same thing for each BSSID.

iwpriv ra0 set RADIUS_Server="192.168.1.1;192.168.1.2"

iwpriv ra0 set RADIUS Port="1812;1813"

iwpriv ra0 set RADIUS_Key="mediatek123;mediatek456"

For backward compatibility, "RADIUS_Key" and "RADIUS_Key%d" are both accepted by the driver for key configuration. You may use either one of them but the paramter "RADIUS_Key" has higher priority.

<Default>

RADIUS_Key1=ralink_1

// ra0

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 89 of 142

```
RADIUS_Key2=ralink_2 // ra1
RADIUS_Key3=ralink_3 // ra2
RADIUS_Key4=ralink_4 // ra3

<Failover>
RADIUS_Key1=ralink_5
RADIUS_Key2=ralink_6
RADIUS_Key3=ralink_7
RADIUS_Key4=ralink_8
```

10.4 Enhanced Dynamic WEP Keying

In **Radius-WEP**, the authentication process also generates keys for both broadcast and unicast. The unicast key is unique for every individual client so it is always generated randomly by 802.1X daemon. However, the broadcast key is shared among all associated clients and it can be manually configured by User or still generated randomly by 802.1X daemon just like the unicast key does.

802.1X daemon would use the following parameters in the profile as material to "manually" generate the broadcast key.

- DefaultKeyID
- Key0Type, Key1Type, Key2Type, Key3Type
- Key0Str, Key1Str, Key2Str, Key3Str

The 802.1X daemon needs to read the profile to decide whether the broadcast key is generated randomly or not, but if the Key%dStr is empty or incorrectly configured, the broadcast key would be generated randomly by 802.1X daemon instead.

10.5 Examples

In the following examples, we all assume that DUT has IP address 192.168.1.138 and the Authentication Server has IP address 192.168.1.1. Also, we assume that Radius secret is "myownkey".

10.5.1 Radius-None

RADIUS_Server=192.168.1.1 RADIUS_Port=1812 RADIUS_Key=myownkey own_ip_addr=192.168.1.138 AuthMode=OPEN EncrypType=NONE IEEE8021X=1

10.5.2 Radius-WEP

RADIUS_Server=192.168.1.1 RADIUS_Port=1812 RADIUS_Key=myownkey own_ip_addr=192.168.1.138 AuthMode=OPEN EncrypType=WEP IEEE8021X=1

10.5.3 WPA-TKIP

RADIUS_Server=192.168.1.1 RADIUS_Port=1812 RADIUS_Key=myownkey own_ip_addr=192.168.1.138 AuthMode=WPA EncrypType=TKIP IEEE8021X=0

Note: Deprecated by WFA since 2014.01.01

10.5.4 WPA2-AES

RADIUS_Server=192.168.1.1 RADIUS_Port=1812 RADIUS_Key=myownkey own_ip_addr=192.168.1.138 AuthMode=WPA2 EncrypType=AES IEEE8021X=0

10.5.5 WPA1WPA2-TKIPAES

RADIUS_Server=192.168.1.1
RADIUS_Port=1812
RADIUS_Key=myownkey
own_ip_addr=192.168.1.138
AuthMode=WPA1WPA2
EncrypType=TKIPAES
WpaMixPairCipher=WPA_TKIP_WPA2_AES
IEEE8021X=0

10.5.6 WPA3-AES


RADIUS_Server=192.168.1.1 RADIUS_Port=1812 RADIUS_Key=myownkey own_ip_addr=192.168.1.138 AuthMode=WPA3 EncrypType=AES IEEE8021X=0

10.5.7 WPA3-192-GCMP256

RADIUS_Server=192.168.1.1 RADIUS_Port=1812 RADIUS_Key=myownkey own_ip_addr=192.168.1.138 AuthMode=WPA3-192 EncrypType=GCMP256 IEEE8021X=0

11 AP-CLIENT

The AP-Client function provides a simulated and virtual STA interface while the original AP interface is working simultaneously. Its application is usually a wireless repeater or a wireless extender. AP-Client mainly provides a 1-to-N MAC address mapping mechanism such that multiple stations connected to the AP can transparently communicate with another AP, which we usually call RootAP. When AP-Client function is enabled, besides the original AP interface named ra0, a virtual interface named apcli0 will be created. In a repeater application, the software bridge, like br0, is used to relay packets between these two interfaces. The following figure shows the common network topology and operation module of our AP-Client function.

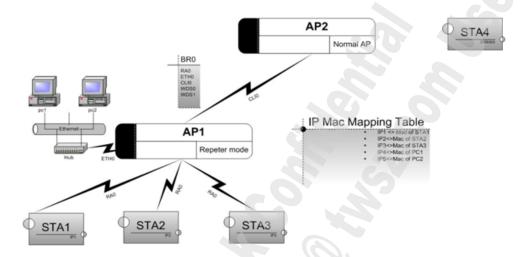

AP1 is an Access Point which enabled AP-Client and therefore has two wireless interfaces, ra0 and apcli0, providing the AP and station function respectively. AP2 is just a tranditional Access Point that provides normal AP function. In the figure, you can see that STA1 associated to AP1 and STA4 associated to AP2. In the old days, if STA1 wants to communicate with STA4, AP1 and AP2 must have some kind of connection between them to relay traffic, like Ethernet LAN (wired) or WDS (wireless). Now with the new AP-Client feature, AP1 can use the simulated STA interface apcli0 to connect to AP2, thus creating the link, and then STA1 can communicate with STA4 transparently and wired stations connected to AP1 through Ethernet could also communicate with STA4.

Here are some reminders for you before using AP-Client.

- AP-Client only supports the following protocols due to the limitation of 1-to-N MAC address mapping mechanism
 - All IP-based network applications
 - ARP
 - DHCP
 - PPPoE

11.1 AP-Client Setup

- Turn on **APCLI_SUPPORT** in driver config
- Use "ifconfig apcli0 up" to bring up your AP-Client interface
- In a repeater application, you may use the following commands to bridge ra0 and apcli0
 - brctl addif br0 ra0
 - brctl addif br0 apcli0
- The security policy support for AP-Client include
 - OPEN
 - SHARED (WEP)
 - WPAPSK (TKIP, AES)
 - WPA2PSK (TKIP, AES)
- Please be noted that AP-Client is also a virtual interface. When you use AP-Client and MBSSID simultaneously, AP-Client will consume one slot for MBSSID and the parameter "BssidNum" should be larger than 1 and less than 7 (1 < BssidNum < 7)

 [Note for MT7915] Yellow mark part could be ignored since it is for old project <= 7621
- Use "iwpriv apcli0 show connStatus" to display connection status with RootAP

11.2 Profile Parameter

11.2.1 ApCliEnable

Description: Enable or disable AP-Client function

Value:

ApCliEnable=1

0: disable 1: enable

11.2.2 ApCliSsid

Description: Configure the target/RootAP SSID which AP-Client wants to connect with Value:

ApCliSsid=target_ssid

target_ssid: 1~32 characters

11.2.3 ApCliBssid

Description: Configure the target BSSID which AP-Client wants to join Value:

ApCliBssid=00:11:22:33:44:55

Note: It is an optional command. Users can use this command to indicate the desired BSSID. Otherwise, AP-Client would get correct BSSID according to configured SSID automatically.

11.2.4 ApCliAuthMode

Description: AP-Client authentication mode configuration

Value:

ApCliAuthMode=OPEN

OPEN

SHARED

WPAPSK

WPA2PSK

11.2.5 ApCliEncrypType

Description: AP-Client encryption type configuration

Value:

ApCliEncrypType=NONE

NONE

WEP

TKIP

AES

11.2.6 ApCliWPAPSK

Description: WPA/WPA2 Pre-Shared Key configuration

Value:

ApCliWPAPSK=12345678

8~63 ASCII characters

64 hexadecimal characters

11.2.7 ApCliDefaultKeyID

Description: Default key index configuration

Value:

ApCliDefaultKeyID=1

The ID range is 1~4

11.2.8 ApCliKey1Type

Descripion: Set the WEP key type of AP-Client for key index 1 Value:

ApCliKey1Type=0

0: Hexadecimal

1: ASCII

11.2.9 ApCliKey1Str

Description: Set the WEP key string of AP-Client for key 1 Value:

ApcliKey1Str=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.2.10 ApCliKey2Type

Descripion: Set the WEP key type of AP-Client for key index 2 Value:

ApCliKey2Type=0

0: Hexadecimal

1: ASCII

11.2.11 ApCliKey2Str

Description: Set the WEP key string of AP-Client for key 2 $\,$

Value:

ApcliKey2Str=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.2.12 ApCliKey3Type

Descripion: Set the WEP key type of AP-Client for key index 3 Value:

ApCliKey3Type=0

0: Hexadecimal

1: ASCII

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 96 of 142

11.2.13 ApCliKey3Str

Description: Set the WEP key string of AP-Client for key $3\,$

Value:

ApcliKey3Str=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.2.14 ApCliKey4Type

Descripion: Set the WEP key type of AP-Client for key index 4 Value:

ApCliKey4Type=0

0: Hexadecimal

1: ASCII

11.2.15 ApCliKey4Str

Description: Set the WEP key string of AP-Client for key 4

Value:

ApcliKey4Str=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.2.16 ApCliTxMode

[Note for MT7915] Discussed with Chien-hao Hsu/Money Wang, 11.2.16/11.2.17 can be merged and use "iwpriv ra0 set FixedRate=[WCID]-[Mode]-[BW]-[MCS]-[VhtNss]-[SGI]-[Preamble]-[STBC]-[LDPC]-[SPE_EN], 填 apcli wcid 即可" to replace

Description: Fixed transmission mode configuration

Value:

ApCliTxMode=HT

cck | CCK, ofdm | OFDM, ht | HT

11.2.17 ApCliTxMcs

[Note for MT7915] Discussed with Chien-hao Hsu/Money Wang, 11.2.16/11.2.17 can be merged and use "iwpriv ra0 set FixedRate=[WCID]-[Mode]-[BW]-[MCS]-[VhtNss]-[SGI]-[Preamble]-[STBC]-[LDPC]-[SPE_EN], 填 apcli wcid 即可" to replace

Description: AP-Client Tx MCS configuration

Value:

ApCliTxMcs=33

0~15, 32: Fixed MCS 33: Auto MCS

11.2.18 ApCliWscSsid

Description: Configure the SSID which AP-Client wants to do WPS negotiation Value:

ApCliWscSsid=target_ssid

targer_ssid: 1~32 characters

Note: This must be configured in PIN mode and PIN mode only since there is no overlapping check in PIN mode. User may have to collect the potential WPS registrar list in user space (through site survey) and try the SSID in the list one by one

11.3 iwpriv Command

11.3.1 ApCliEnable

Description: Enable or disable AP-Client function

Value:

iwpriv apcli0 set ApCliEnable=0

0: disable 1: enable

11.3.2 ApCliSsid

Description: Configure the target/RootAP SSID which AP-Client wants to connect with Value:

iwpriv apcli0 set ApCliSsid=target_ssid

target_ssid: 1~32 characters

11.3.3 ApCliBssid

Description: Configure the target BSSID which AP-Client wants to join Value:

iwpriv apcli0 set ApCliBssid=00:11:22:33:44:55

Note: It is an optional command. Users can use this command to indicate the desired BSSID. Otherwise, AP-Client would get correct BSSID according to configured SSID automatically.

11.3.4 ApCliAuthMode

Description: AP-Client authentication mode configuration Value:

iwpriv apcli0 set ApCliAuthMode=OPEN

OPEN

SHARED

WPAPSK

WPA2PSK

11.3.5 ApCliEncrypType

Description: AP-Client encryption type configuration

Value:

iwpriv apcli0 set ApCliEncrypType=NONE

NONE

WEP

TKIP

AES

11.3.6 ApCliWPAPSK

Description: WPA/WPA2 Pre-Shared Key configuration

Value:

iwpriv apcli0 set ApCliWPAPSK=12345678

8~63 ASCII characters

64 hexadecimal characters

11.3.7 ApCliDefaultKeyID

Description: Default key index configuration

Value:

MediaTek Confidential

iwpriv apcli0 set ApCliDefaultKeyID=1

The ID range is 1~4

11.3.8 ApCliKey1

Description: Set the WEP key string of AP-Client for key 1 Value:

iwpriv apcli0 set ApcliKey1=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.3.9 ApCliKey2

Description: Set the WEP key string of AP-Client for key 2 Value:

iwpriv apcli0 set ApcliKey2=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.3.10 ApCliKey3

Description: Set the WEP key string of AP-Client for key 3 Value:

iwpriv apcli0 set ApcliKey3=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.3.11 ApCliKey4

Description: Set the WEP key string of AP-Client for key 4 Value:

iwpriv apcli0 set ApcliKey4=012345678

10 or 26 hexadecimal characters 5 or 13 ASCII characters

11.3.12 ApCliTxMode

[Note for MT7915] Discussed with Chien-hao Hsu/Money Wang, 11.3.12 can be removed.

Description: Fixed transmission mode configuration

Value:

iwpriv apcli0 set ApCliTxMode=HT

CCK

OFDM

HT

11.3.13 ApCliTxMcs

[Note for MT7915] Discussed with Chien-hao Hsu/Money Wang, 11.3.13 can be removed.

Description: Fixed Tx MCS configuration

Value:

iwpriv apcli0 set ApCliTxMcs=33

0~15, 32: Fixed MCS 33: Auto MCS

11.3.14 ApCliWscSsid

Description: Configure the SSID which AP-Client wants to do <u>PIN mode</u> WPS negotiation Value:

iwpriv apcli0 set ApCliWscSsid=target_ssid

targer_ssid: 1~32 characters

Note: This must be configured in PIN mode and PIN mode only since there is no overlapping check in PIN mode. User may have to collect the potential WPS registrar list in user space (through site survey) and try the SSID in the list one by one

11.3.15 ApCliAutoConnect

Description: Enable or disable the auto-connection function to find the configured SSID Value:

iwpriv apcli0 set ApCliAutoConnect=1

0: disable1: enable

Note: APCLI_AUTO_CONNECT_SUPPORT must be turned on

11.4 AP-Client normal connection examples

11.4.1 OPEN/NONE

iwpriv apcli0 set ApCliEnable=0 iwpriv apcli0 set ApCliAuthMode=OPEN iwpriv apcli0 set ApCliEncrypType=NONE iwpriv apcli0 set ApCliSsid=ROOTAP_SSID iwpriv apcli0 set ApCliEnable=1

11.4.2 OPEN/WEP

iwpriv apcli0 set ApCliEnable=0 iwpriv apcli0 set ApCliAuthMode=OPEN iwpriv apcli0 set ApCliEncrypType=WEP iwpriv apcli0 set ApCliDefaultKeyID=1 iwpriv apcli0 set ApCliKey1=1234567890 iwpriv apcli0 set ApCliSsid=ROOTAP_SSID iwpriv apcli0 set ApCliEnable=1

11.4.3 WPAPSK/TKIP

iwpriv apcli0 set ApCliEnable=0 iwpriv apcli0 set ApCliAuthMode=WPAPSK iwpriv apcli0 set ApCliEncrypType=TKIP iwpriv apcli0 set ApCliSsid=ROOTAP_SSID iwpriv apcli0 set ApCliWPAPSK=12345678 iwpriv apcli0 set ApCliSsid=ROOTAP_SSID iwpriv apcli0 set ApCliEnable=1

11.4.4 WPA2PSK/AES

iwpriv apcli0 set ApCliEnable=0
iwpriv apcli0 set ApCliAuthMode=WPA2PSK
iwpriv apcli0 set ApCliEncrypType=AES
iwpriv apcli0 set ApCliSsid=ROOTAP_SSID
iwpriv apcli0 set ApCliWPAPSK=12345678
iwpriv apcli0 set ApCliSsid=ROOTAP_SSID → [Note for MT7915] can be removed
iwpriv apcli0 set ApCliEnable=1

11.5 AP-Client WPS connection examples

11.5.1 PIN mode

11.5.2 PBC Mode

^{*}Input the generated PIN code in the Registrar

^{*}You have to collect all PIN WPS Registrar in advance and try each of them as <target_AP> one by one

12 WDS

A Wireless Distribution System is a system enabling the wireless interconnection of acess points. Each WDS AP needs to be in the same channel, using the same encryption type. Actually, there is no official specification and test plan to ensure the inter-operability of all WDS products from different Vendors. Therefore, the WDS link could be only created between two peers using identical solution.

Mediatek's implementation provides two modes of AP-to-AP connectivity. One is **Bridge mode**, in which WDS APs communicate only with each other and do not allow wireless stations to access them. The other is **Repeater mode**, in which WDS APs communicate with each other and also accepts connection requests from wireless stations.

In case you want to have an auto-learning WDS peer, we also provide the **Lazy mode** in which you do not need to thoroughly configure the WDS settings. However, please be noted that you cannot configure all APs to be in Lazy mode, otherwise no 4-address frame will be transmitted at all and auto-learning would be impossible. This means that there should be at least one AP being configured in Bridge mode or Repeater mode.

12.1 How to Steup WDS

- 1. Edit the driver profile in each WDS peer
 - WDS Peer-A with the MAC address 00:0C:43:aa:bb:cc
 - WdsEnable=3
 - WdsPhyMode=HTMIX;
 - WdsList=00:0C:43:11:22:33;
 - WdsEncrypType=NONE;

WDS Peer-B with the MAC address 00:0C:43:11:22:33

- WdsEnable=3
- WdsPhyMode=HTMIX;
- WdsList=00:0C:43:aa:bb:cc;
- WdsEncrypType=NONE;
- 2. Edit your networking script file, like bridge_setup.sh, according to the number of WDS link. Add "brctl addif br0 wds0" and "ifconfig wds0 0.0.0.0" to relative places
- 3. Use "iwpriv ra0 show wdsinfo" to display WDS link information

12.2 WDS Security

WDS security is PSK-only, and it does not support mixed mode, like WPAPSKWPA2PSK.

When WDS is in Lazy mode, all WDS links (wds0 ~ wds3) shall share the same encryption type and key material (referring to wds0 settings). Otherwise, each WDS link has its own security settings. No matter what WDS mode you use, it has nothing to do with the encryption of the main BSSID (ra0).

WdsKey:

It is used for all WDS interfaces and supports only AES and TKIP configuration. If you want to use WEP, key settings will be retrieved from the main BSSID.

Wds0Key/Wds1Key/Wds2Key/Wds3Key:

They are used to configure key settings for each WDS interface.

The following example is to create one WDS link (wds0) with AES encryption.

WdsEnable=3

WdsPhyMode=HTMIX;HTMIX;HTMIX;HTMIX

WdsList=00:0c:43:12:34:56;

WdsEncrypType=AES;NONE;NONE;NONE

Wds0Key=12345678

Wds1Key=

Wds2Key=

Wds3Key=

12.3 Profile Parameter

12.3.1 WdsEnable

Description: WDS function configuration

Value:

WdsEnable=0

- 0: Disable Disable WDS function.
- 1: Restrict mode Same as Repeater mode.
- 2: Bridge mode Enable WDS and work like a bridge.

The MAC address of peer WDS APs should be configured in the "WdsList" field. In this mode, AP is just a bridge and will not send any beacon and will not respond to any probe request packet. Therefore STA will not be able to connect with it.

3: **Repeater mode** - Enable WDS and work like a repeater.

The MAC address of peer WDS APs should be configured in the "WdsList" field.

4: Lazy mode - Enable WDS function.

It automatically learns from 4-address format frames sent by the WDS peer and you do not have to configure WdsList manually.

12.3.2 WdsList

Description: WDS peer MAC address configuration

Value:

WdsList=00:10:20:30:40:50;

The maximum WDS link number is 4.

wds0;wds1;wds2;wds3

12.3.3 WdsEncrypType

Description: WDS encryption configuration

Value:

WdsEncrypType=NONE;

The option includes NONE, WEP, TKIP and AES.

Example:

WdsEncrypType=NONE;WEP;TKIP;AES

The encrptytion of wds0 is NONE The encrptytion of wds1 is WEP The encrptytion of wds2 is TKIP The encrptytion of wds3 is AES

12.3.4 WdsKey

Description: WDS key configuration

Value:

WdsKey=12345678

8 ~ 63 ASCII characters (eg: 12345678) for TKIP or AES 64 hexadecimal characters for TKIP or AES

WdsKey is kept for backward-compatibility and it only supports TKIP and AES. You can use either WdsKey or Wds[0-4]Key but not both.

Note: Combinations of WDS security mode

EncrypType	WdsEncrypType	WdsEncrypType of the WDS peer	Note
NONE	NONE	NONE	
WEP	WEP	WEP	Using legacy key setting method
TKIP	TKIP	TKIP	WDS's key is from WdsKey
TKIP	AES	AES	WDS's key is from WdsKey
AES	TKIP	TKIP	WDS's key is from WdsKey
AES	AES	AES	WDS's key is from WdsKey
TKIPAES	TKIP	TKIP	WDS's key is from WdsKey
TKIPAES	AES	AES	WDS's key is from WdsKey

12.3.5 Wds0Key

Description: WDS key for Link-0

Value:

Wds0Key=12345678

10 or 26 hexadecimal characters (eg: 1234567890) for WEP

5 or 13 ASCII characters (eg: 12345) for WEP

8 ~ 63 ASCII characters (eg: 12345678) for TKIP or AES

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 106 of 142

12.3.6 Wds1Key

Description: WDS key for Link-1

Value:

Wds1Key=12345678

12.3.7 Wds2Key

Description: WDS key for Link-2

Value:

Wds2Key=12345678

12.3.8 Wds3Key

Description: WDS key for Link-3

Value:

Wds3Key=12345678

12.3.9 WdsPhyMode

Description: WDS link physical mode configuration

Value:

WdsPhyMode=HTMIX;

The option includes CCK, OFDM, HTMIX and VHT.

Example:

WdsPhyMode=CCK;OFDM;HTMIX;VHT

The PHY mode of wds0 is CCK The PHY mode of wds1 is OFDM The PHY mode of wds2 is HTMIX The PHY mode of wds3 is VHT


13.1 Basic

Please check the following two Wiki links.

- http://en.wikipedia.org/wiki/Multicast address
- http://en.wikipedia.org/wiki/Internet_Group_Management_Protocol

IGMP Snooping provides a mechanism converting multicast traffic into unicast traffic. When AP receives incoming multicast traffic, the conversion would be done based on an IGMP Snooping table (Multicast Filter Table).

13.2 Introduction to IGMP Snooping Table

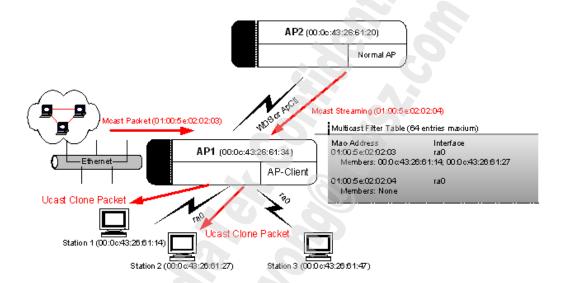

An IGMP Snooping table (a.k.a. Multicast Filter Table) entry consists of 3 components, Group-ID (Multicast MAC Address), Network-Interface and Member-List. Taking above figure for example, you can see that Multicast Filter Table of AP1 has two table entries. One is "01:00:5e:02:02:03" with two members on interface ra0 and the other is "01:00:5e:02:02:04" without any member on interface ra0.

In our implementation, AP will automatically maintain the Multicast Filter Table through packet snooping. The IGMP-Membership-Report packets sent from connected stations would be checked and parsed. You can also manually add and delete an entry through impriv command.

13.3 Multicast Packet Parsing Process

When AP receives multicast packets, it will check whether the multicast destination address matches any Group-ID in the Multicast Filter Table. AP will drop the packet if no match found. Otherwise, there are two cases how AP handles a multicast packet. The first one is that Member-List of the matching entry is empty and then AP just forwards multicast packets to all stations connected to the Network-

Interface. In the second case, there are members in the Member-List and AP will do the MC-to-UC conversion based on the membership.

Taking the previous figure for example, AP1 received an Ethernet multicast packet with Group-ID being 01:00:5e:02:02:03. Firstly AP1 checked the Multicast Filter Table and found the first entry matched. Therefore, AP1 cloned every multicast packet into two unicast packets destined to Station 1 and Station 2 respectively.

In the same figure, a multicast streaming sent from AP2 to AP1 with Group-ID 01:00:5e:02:02:04 was forwarded to all stations connected to AP1 (ra0) since the matching entry had no member at all.

<Multicast Filter Table Example>

Group-ID	Network-Interface	Member-List
01:00:5e:02:02:03	ra0	00:0c:43:26:61:14 (Station 1)
		00:0c:43:26:61:27 (Station 2)
01:00:5e:02:02:04	ra0	

13.4 Profile Parameter

13.4.1 IgmpSnEnable

Description: Enable or disable IGMP Snooping function

Value:

IgmpSnEnable=1

0: disable 1: enable

Note: Please make sure that IGMP_SNOOP_SUPPORT is turned on in driver config

13.5 iwpriv Command

13.5.1 IgmpSnEnable

Description: Enable or disable IGMP Snooping function

Value:

iwpriv ra0 set IgmpSnEnable=1

0: disable1: enable

13.5.2 IgmpAdd

```
Description: Create a new group or add a new member to the existing group
Format:
       // Create a new group <Group-ID> which can be a MAC address or an IP address
       iwpriv ra0 set IgmpAdd=<Group-ID>
       // Add a new member to the existing group. [Member] can only be a MAC address
       iwpriv ra0 set IgmpAdd=<Group-ID-[Member]-...>
Value:
       // Create a new group via either IP or MAC address
       iwpriv ra0 set IgmpAdd=226.2.2.3
       iwpriv ra0 set IgmpAdd=01:00:5e:02:02:03
       // Add a new member to the existing group
       iwpriv ra0 set IgmpAdd=226.2.2.3-00:0c:43:26:61:11
       // Add 2 new members to the existing group
       iwpriv ra0 set IgmpAdd=01:00:5e:02:02:03-00:0c:43:26:61:27-00:0c:43:26:61:28
13.5.3
           IgmpDel
Description: Delete a group or remove a member from the existing group
Format:
       // Delete a group <Group-ID> which can be a MAC address or an IP address
       iwpriv ra0 set IgmpDel=<Group-ID>
       // Remove a member from the existing group. [Member] can only be a MAC address
       iwpriv ra0 set IgmpDel=<Group-ID-[Member]-...>
Value:
       // Delete a new group via either IP or MAC address
       iwpriv ra0 set IgmpDel=226.2.2.3
       iwpriv ra0 set IgmpDel=01:00:5e:02:02:03
       // Remove a member from the existing group
       iwpriv ra0 set IgmpDel=226.2.2.3-00:0c:43:26:61:11
       // Remove members from the existing group
       iwpriv ra0 set IgmpDel=01:00:5e:02:02:03-00:0c:43:26:61:27-00:0c:43:26:61:28
```

14 MAC Repeater

The MAC Repeater is a variation of the original AP-Client funcation and it acts as a wireless proxy for its clients. The repeater will create a corresponding upstream connection to the RootAP for each downstream client connected to it. An upstream connection is created according to its own wireless capability and security mode. When a client disconnects from the repeater, the repeater must also disconnect its corresponding upstream connection with the RootAP. All communication between downstream clients and upstream RootAP utilizes one "AP-Client" interface on the repeater.

For example, if there are 3 clients connected to the repeater, 3 upstream connections will be created accordingly. Besides these "proxy connection", the repeater itself would also create a connection with RootAP. Therefore, in this case there would be totally 3 downstream and 4 upstream connections.

Please be noted that MAC Repeater has the following limitation.

- Roaming of STAs between different BSSs is not supported
- WPA2-Enterprise Security is not supported
- Supported protocols: IPv4 / ARP / DHCP
- The MAC Repeater supports up to 16 clients → [Note for MT7915] support 32 clients per band
- Impact CPU utilization due to parsing all received packets from the STA and all multicast and broadcast packets

14.1 iwpriv Command

14.1.1 MACRepeaterEn

Description: Enable or disable MAC Repeater function

Value:

iwpriv ra0 set MACRepeaterEn=1

0: disable 1: enable

14.1.2 Example

- iwpriv ra0 set MACRepeaterEn=1
- ifconfig apcli0 up
- brctl addif br0 apcli0
- iwpriv apcli0 set ApCliEnable=0
- iwpriv apcli0 set ApCliAuthMode=OPEN
- iwpriv apcli0 set ApCliEncrypType=NONE
- iwpriv apcli0 set ApCliSsid=RootAP_SSID
- iwpriv apcli0 set ApCliEnable=1

14.2 Profile Parameter

14.2.1 MACRepeaterEn

Description: Enable or disable the MAC Repeater function.


Value:

MACRepeaterEn=0


0: disable 1: enable

14.3 Management Frame Flow

14.3.1 Wireless client

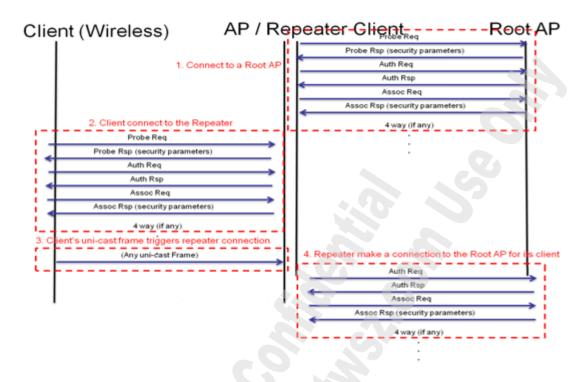


14.3.2 Ethernet client

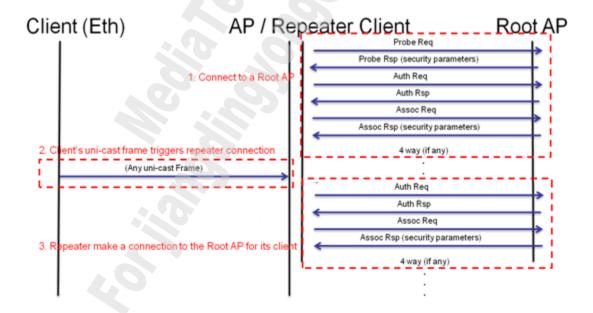


14.4 Data Frame Flow

14.4.1 Unicast

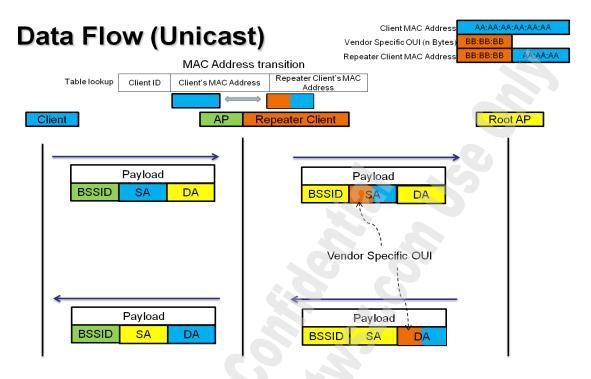

14.4.2 Multicast / Broadcast

Data Flow (Multicast / Broadcast)

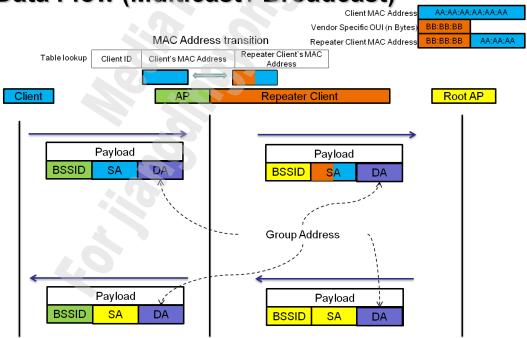

15 PMF

PMF stands for Protected Management Frame and IEEE 802.11w is the PMF standard. Its objective is to increase the security of 802.11 management frames.

Note: Currently supported chips are MT7602E, MT7612E, MT7603E, MT7628.

Note: PMF parameter is useless for new WPA3 security mode due to PMF is default on

15.1 iwpriv Command

15.1.1 PMFMFPC

Description: Enable or disable Protection Management Frame Capable Value:

iwpriv ra0 set PMFMFPC=1

0: disable

1: enable

15.1.2 PMFMFPR

Description: Enable or disable Protection Management Frame Required Value:

iwpriv ra0 set PMFMFPR=1

0: disable

1: enable

15.1.3 PMFSHA256

Description: Enable or disable use SHA256 for Encryption

Value:

iwpriv ra0 set PMFSHA256=1

0: disable 1: enable

Note: SHA stands for Secure Hash Algorithm

15.2 Profile Parameter

15.2.1 PMFMFPC

Description: Disable or enable Protection Management Frame Capable

Value:

PMFMFPC=0

0: Disable 1: Enable

15.2.2 PMFMFPR

Description: Disable or enable Protection Management Frame Required

Value:

PMFMFPR=0

0: Disable 1: Enable

15.2.3 PMFSHA256

Description: Disable or enable use SHA256 for Encryption

Value:

PMFSHA256=0

0: Disable 1: Enable

15.3 Wi-Fi PMF Testing Note

15.3.1 DUT Requirement

PMF is a mandatory testing item to TGac but an optional one to TGn. Actually you can refer to the following table for the correct combination in a dual band AP.

<11ac dual band AP>

Combination	11ac 5GHz	11n 2.4GHz
Correct	PMF supported	PMF supported
Not acceptable	PMF supported	PMF Not Available
Not acceptable	PMF Not Available	PMF supported
Not acceptable	PMF Not Available	PMF Not Available

<11n dual band AP>

Combination	11n 5GHz	11n 2.4GHz
Correct	PMF supported	PMF supported
Not acceptable	PMF supported	PMF Not Available
Not acceptable	PMF Not Available	PMF supported
Correct	PMF Not Available	PMF Not Available

15.3.2 PMF Test Section 4.3.3.3

Verification of CCMP to protect transmitted unicast deauthentication/disassociation frames

- iwpriv ra0 set PMFMFPC=1
- iwpriv ra0 set PMFMFPR=0
- iwpriv ra0 set PMFSHA256=0
- iwpriv ra0 set SSID=PMF-4.3.3.3
- iwpriv ra0 set DisConnectSta=00:0C:43:35:93:00

15.3.3 PMF Test Section 4.4

Verify use of BIP (Broadcast Integrity Protocol) to protect broadcast management frames

- iwpriv ra0 set PMFMFPC=1
- iwpriv ra0 set PMFMFPR=0
- iwpriv ra0 set PMFSHA256=0
- iwpriv ra0 set SSID=PMF-4.4
- iwpriv ra0 set DisConnectAllSta=2

16 Transmit Beamforming

Beamforming is a signal process technique for directional signal transmission and reception. There are two kinds of beamforming, one is **explicit** and the other is **implicit**. The difference between them is that Beamformer requires **explicit** feedback from Beamformee through some protocol packet echange. You could find well-explained details in the following website.

http://chimera.labs.oreilly.com/books/1234000001739/ch04.html

MT7915 supports both explicit and implicit beamforming.

16.1 Profile Parameter

16.1.1 ETxBfEnCond

Description: Enable or disable explicit TX beamforming

Value:

ETxBfEnCond=1

0: Disable 1: Enable

16.1.2 ITxBfEn

Description: Enable or disable implicit TX beamforming

Value:

ITxBfEn=0

0: Disable 1: Enable

Note:

Please be noted that iBF requires further phase calibration procedure. Also, you can turn on both eBF and iBF but eBF has higher priority than iBF if the connected client supports eBF.

17.1 Profile Parameter

17.1.1 FixedTxMode

Description: Fix Tx Mode for testing fixed rate

Value:

FixedTxMode=CCK

CCK

OFDM

HT

17.1.2 BasicRate

Description: Basic rate support

Value:

BasicRate=15

0~4095

Note:

We use a bitmap to configure basic support rate

1: Basic rate-1Mbps

2: Basic rate-2Mbps

3: Basic rate-1Mbps, 2Mbps

4: Basic rate-5.5Mbps

15: Basic rate-1Mbps, 2Mbps, 5.5Mbps, 11Mbps

Examples:

Basic Rate	Bitma	ap										
Bit	11	10	9	8	7	6	5	4	3	2	1	0
Rate	54	48	36	24	18	12	9	6	11	5.5	2	1
Set	0	1	0	1	0	1	0	1	1	1	1	1
Hex	5		S .(96	5				F			
Decimal 1375												

17.1.3 SupportRate

Description: Maximum support rate configuration for 11bg

Value:

SupportRate=0xFFF

Basic Rate	Bitma	ар										
Bit	11	10	9	8	7	6	5	4	3	2	1	0

Rate	54	48	36	24	18	12	9	6	11	5.5	2	1
Set	1	1	1	1	1	1	1	1	1	1	1	1
Hex	F			F				F				

Note:

Unlike BasicRate, the SupportRate bitmap must be composed of consecutive 1s.

For example, if SupportRate=0x7F, it means the maximum support rate is OFDM 12M. Also, this settings will be applied globally which means no per-SSID configuration is allowed.

Only RT5x92 supports this. Its macro is DYNAMIC_RX_RATE_ADJ.

17.1.4 SupportHTRate

Description: Maximum support rate configuration for 11n

Value:

SupportHTRate=0xFFFF

HT Rate Bi	tmap								V	4)						
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
MCS	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Set	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
Hex	F				F				F				F			

Note:

Unlike BasicRate, the SupportHTRate bitmap must be composed of consecutive 1s.

For example, if SupportHTRate=0x7F, it means the maximum support rate is MCS 6.

Also, this settings will be applied globally which means no per-SSID configuration is allowed.

Only RT5x92 supports this. Its macro is DYNAMIC_RX_RATE_ADJ.

17.2 iwpriv Command

17.2.1 FixedTxMode

Description: Fix Tx Mode for testing fixed rate

Value:

iwpriv ra0 set FixedTxMode=CCK

CCK

OFDM

HT

17.2.2 BasicRate

Description: configure basic rate

Value:

17.3 802.11n Data Rate Table

MCS	Smotial.	Modulation	Cadina		Data rate	(Mbit/s)	
index	Spatial streams	type	Coding rate	20 MHz	channel	40 MHz	channel
IIIdex	Sucalis	type	Tate	800 ns GI	400 ns GI	800 ns GI	400 ns G
0	1	BPSK	1/2	6.50	7.20	13.50	15.00
1	1	QPSK	1/2	13.00	14.40	27.00	30.00
2	1	QPSK	3/4	19.50	21.70	40.50	45.00
3	1	16-QAM	1/2	26.00	28.90	54.00	60.00
4	1	16-QAM	3/4	39.00	43.30	81.00	90.00
5	1	64-QAM	2/3	52.00	57.80	108.00	120.00
6	1	64-QAM	3/4	58.50	65.00	121.50	135.00
7	1	64-QAM	5/6	65.00	72.20	135.00	150.00
8	2	BPSK	1/2	13.00	14.40	27.00	30.00
9	2	QPSK	1/2	26.00	28.90	54.00	60.00
10	2	QPSK	3/4	39.00	43.30	81.00	90.00
11	2	16-QAM	1/2	52.00	57.80	108.00	120.00
12	2	16-QAM	3/4	78.00	86.70	162.00	180.00
13	2	64-QAM	2/3	104.00	115.60	216.00	240.00
14	2	64-QAM	3/4	117.00	130.00	243.00	270.00
15	2	64-QAM	5/6	130.00	144.40	270.00	300.00
16	3	BPSK	1/2	19.50	21.70	40.50	45.00
17	3	QPSK	1/2	39.00	43.30	81.00	90.00
18	3	QPSK	3/4	58.50	65.00	121.50	135.00
19	3	16-QAM	1/2	78.00	86.70	162.00	180.00
20	3	16-QAM	3/4	117.00	130.00	243.00	270.00
21	3	64-QAM	2/3	156.00	173.30	324.00	360.00
22	3	64-QAM	3/4	175.50	195.00	364.50	405.00
23	3	64-QAM	5/6	195.00	216.70	405.00	450.00
24	4	BPSK	1/2	26.00	28.80	54.00	60.00
25	4	QPSK	1/2	52.00	57.60	108.00	120.00
26	4	QPSK	3/4	78.00	86.80	162.00	180.00
27	4	16-QAM	1/2	104.00	115.60	216.00	240.00
28	4	16-QAM	3/4	156.00	173.20	324.00	360.00
29	4	64-QAM	2/3	208.00	231.20	432.00	480.00
30	4	64-QAM	3/4	234.00	260.00	486.00	540.00
31	4	64-QAM	5/6	260.00	288.80	540.00	600.00

17.4 2.4g

17.4.1 B only

```
iwpriv ra0 set FixedTxMode=CCK
iwpriv ra0 set WirelessMode=1 // 11b only
iwpriv ra0 set BasicRate=3 // 1, 2 Mbps
iwpriv ra0 set HtMcs=0 // Please check Note-11b
iwpriv ra0 set SSID=11B_only_AP // Restart AP
```

Note-11b:

HtMcs	0	1	2	3
Rate	1 Mbps	2 Mbps	5.5 Mbps	11 Mbps

17.4.2 G only

Note-11g:

HtMcs	0	1	2	3	4	5	6	7
Rate	6 Mbps	9 Mbps	12 Mbps	18 Mbps	24 Mbps	36 Mbps	48 Mbps	54 Mbps

17.4.3 N only

Note-11n:

HtMcs = <0.15 > + HtGi = <0.1 > + HtBw = <0.1 >

Please check all possible combination of above set in the frist section.

17.4.4 B/G/N mixed

```
iwpriv ra0 set FixedTxMode=HT
iwpriv ra0 set WirelessMode=9 // 11bgn mixed
iwpriv ra0 set BasicRate=15 // 1, 2, 5.5, 11 Mbps
iwpriv ra0 set HtMcs=0 // Please check Note-11n
iwpriv ra0 set HtGi=0
iwpriv ra0 set HtBw=0
iwpriv ra0 set SSID=11BGN_mixed_AP // Restart AP
```

Note-11n:

HtMcs=<0-15> + HtGi=<0-1> + HtBw=<0-1>

Please check all possible combination of above set in the first section.

17.5 5g

17.5.1 A only

```
iwpriv ra0 set FixedTxMode=OFDM
iwpriv ra0 set WirelessMode=2 // 11a only
iwpriv ra0 set BasicRate=336 // 6, 12, 24 Mbps
iwpriv ra0 set HtMcs=0 // Please check Note-11a
iwpriv ra0 set SSID=11A_only_AP // Restart AP
```

Note-11a:

HtMcs	0	1	2	3	4	5	6	7
Rate	6 Mbps	9 Mbps	12 Mbps	18 Mbps	24 Mbps	36 Mbps	48 Mbps	54 Mbps

17.5.2 N only

Note-11n:

HtMcs=<0-15> + HtGi=<0-1> + HtBw=<0-1>

Please check all possible combination of above set in the first section.

17.6 AP-Client

```
iwpriv apcli0 set ApCliTxMode=HT
iwpriv apcli0 set ApCliHtMcs=0
iwpriv ra0 set HtGi=0
iwpriv ra0 set HtBw=0
iwpriv ra0 set SSID=11N_only_AP // Restart AP
```

Note-11n:

ApCliHtMcs=<0-15> + HtGi=<0-1> + HtBw=<0-1>

Please check all possible combination of above set in the first section.

17.7 11ac

17.7.1 VHT Fixed Rate iwpriv command

17.7.1.1 fpga_on

Description: Turn on or off VHT fixed rate

Value:

iwpriv rai0 set fpga_on=6

0: Disable

6: Enable

17.7.1.2 dataphy

Description: PHY mode configuration

Value:

iwpriv rai0 set dataphy=4

0 = CCK

1 = OFDM

2 = HT-MM

3 = HT-GF

4 = VHT

17.7.1.3 databw

Description: Bandwidth configuration

Value:

iwpriv rai0 set databw=2

0 = 20M

1 = 40M

2 = 80M

17.7.1.4 datamcs

Description: MCS configuration

Value:

iwpriv rai0 set datamcs=24

Note

bit[3:0] stands for Modulation Coding Scheme (MCS)

Range: 0 - 9

bit[6:4] stands for Number of Spatial Stream (NSS)

0: 1SS

1: 2SS

Example:

datamcs=24 \rightarrow 2SS MCS8

 $24 \text{ (dec)} = 0x18 = b'0\underline{001},\underline{1000}$

 $bit[6:4] = b'001 = 1 (dec) \rightarrow 2SS$

 $bit[3:0] = b'1000 = 8 (dec) \rightarrow MCS8$

1SS & 2SS MCS Rate mapping table:

159

MCS Index	Modulation	Value (Dec)
0	BPSK	0
1	QPSK	1
2	QPSK	2
3	16-QAM	3
4	16-QAM	4
5	64-QAM	5
6	64-QAM	6
7	64-QAM	7
8	256-QAM	8
9	256-QAM	9

288

MCS Index	Modulation	Value (Dec)
0	BPSK	16
1	QPSK	17
2	QPSK	18
3	16-QAM	19
4	16-QAM	20
5	64-QAM	21
6	64-QAM	22
7	64-QAM	23
8	256-QAM	24
9	256-QAM	25

17.7.1.5 datagi

Description: Guard Interval configuration

Value:

iwpriv rai0 set datagi=0

0 = Long GI

1 = Short GI

17.7.2 VHT Fixed Rate example

iwpriv rai0 set WirelessMode=14

iwpriv rai0 set fpga_on=6 // Enable VHT fixed rate

iwpriv rai0 set dataphy=4 // VHT

iwpriv rai0 set databw=2 // 80MHz

iwpriv rai0 set datagi=0 // SGI

iwpriv rai0 set datamcs=25 // 2SS MCS9

The following 802.11ac rate table is from http://www.revolutionwifi.net/.

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 125 of 142

802.11ac OFDM Data Rates

		Bits per	Coding	20-	MHz	40-1	ИНZ	80-M	Hz
MCS	Modulation	Symbol	Ratio	800ns	400ns	800ns	400ns	800ns	400ns
1 Spatial Stream					Data Ra	ite (Mbps)			
MCS 0	BPSK	1	1/2	6.5	7.2	13.5	15.0	29.3	32.5
MCS 1	QPSK	2	1/2	13.0	14.4	27.0	30.0	58.5	65.0
MCS 2	QPSK	2	3/4	19.5	21.7	40.5	45.0	87.8	97.5
MCS 3	16-QAM	4	1/2	26.0	28.9	54.0	60.0	117.0	130.0
MCS 4	16-QAM	4	3/4	39.0	43.3	81.0	90.0	175.5	195.0
MCS 5	64-QAM	6	2/3	52.0	57.8	108.0	120.0	234.0	260.0
MCS 6	64-QAM	6	3/4	58.5	65.0	121.5	135.0	263.3	292.5
MCS 7	64-QAM	6	5/6	65.0	72.2	135.0	150.0	292.5	325.0
MCS 8	256-QAM	8	3/4	78.0	86.7	162.0	180.0	351.0	390.0
MCS 9	256-QAM	8	5/6	N/A	N/A	180.0	200.0	390.0	433.3
2 Spatia	l Streams						Data Ra	ite (Mbps)	
MCS 0	BPSK	1	1/2	13.0	14.4	27.0	30.0	58.5	65.0
MCS 1	QPSK	2	1/2	26.0	28.9	54.0	60.0	117.0	130.0
MCS 2	QPSK	2	3/4	39.0	43.3	81.0	90.0	175.5	195.0
MCS 3	16-QAM	4	1/2	52.0	57.8	108.0	120.0	234.0	260.0
MCS 4	16-QAM	4	3/4	78.0	86.7	162.0	180.0	351.0	390.0
MCS 5	64-QAM	6	2/3	104.0	115.6	216.0	240.0	468.0	520.0
MCS 6	64-QAM	6	3/4	117.0	130.0	243.0	270.0	526.5	585.0
MCS 7	64-QAM	6	5/6	130.0	144.4	270.0	300.0	585.0	650.0
MCS 8	256-QAM	8	3/4	156.0	173.3	324.0	360.0	702.0	780.0
MCS 9	256-QAM	8	5/6	N/A	N/A	360.0	400.0	780.0	866.7

17.8 Fixed Rate for MT7615

17.8.1 FixedRate

Description: MT7615 fixed rate without auto fallback

iwpriv ra0 set FixedRate=

[WCID]-[Mode]-[BW]-[MCS]-[VhtNss]-[SGI]-[Preamble]-[STBC]-[LDPC]-[SPE_EN]

<Total 10 fields>

[WCID] Wireless Client ID

[Mode] CCK=0, OFDM=1, HT=2, GF=3, VHT=4

[BW] 20M=0, 40M=1, 80M=2, 160M=3

[MCS] CCK=0~3, OFDM=0~7, HT=0~32, VHT=0~9

[VhtNss] Nss=1~4

[SGI] Long=0, Short=1
[Preamble] Long=0, Short=1
[STBC] disable=0, enable=1
[LDPC] disable=0, enable=1
[SPE_EN] disable=0, enable=1

Example:

iwpriv ra0 set FixedRate=1-2-1-21-4-0-0-0-0

17.8.2 FixedRateFallback

Description: MT7615 fixed rate with auto fallback

iwpriv ra0 set FixedRateFallback=

[WCID]-[Mode]-[BW]-[MCS]-[VhtNss]-[SGI]-[Preamble]-[STBC]-[LDPC]-[SPE_EN]-[is5G]

<Total 11 fields>

[WCID] Wireless Client ID

[Mode] CCK=0, OFDM=1, HT=2, GF=3, VHT=4

[BW] 20M=0, 40M=1, 80M=2, 160M=3

[MCS] CCK=0~3, OFDM=0~7, HT=0~32, VHT=0~9

[VhtNss] Nss=1~4

[SGI] Long=0, Short=1
[Preamble] Long=0, Short=1
[STBC] disable=0, enable=1
[LDPC] disable=0, enable=1
[SPE_EN] disable=0, enable=1

[is5G] 2G=0, 5G=1

Example:

iwpriv ra0 set FixedRateFallback=1-2-1-21-4-0-0-0-0-0

Note:

You can use "iwpriv ra0 show stainfo" to get WCID (AID) assigned to the connected STA.

17.9 Fixed Rate for MT7915

17.9.1 Fixed Rate command

Iwpriv ra0 set FixedRate=

[WCID]-[Mode]-[BW]-[MCS]-[VhtNss]-[SGI]-[Preamble]-[STBC]-[LDPC]-[SPE-EN]

<Total 10 Fields>:

[WCID] Wireless Client ID

[Mode] CCK=0, OFDM=1, HT=2, GF=3, VHT=4, HE_SU=8, HE_ER=9

[BW] 20M=0, 40M=1, 80M=2, 160M=3

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 127 of 142

[MCS] CCK=0~3, OFDM=0~7, HT=0~32, VHT=0~9, HE_SU=0~11,

HE_ER=0~2(0~2 for 242-RU, 0 for 106-RU)

[VhtNss/HeNss] Nss=1~4, HeNss=1~4, others=ignore

[VhtGI/HeGI] SGI=15, LGI=0 for VhtGI/SGI=0, MGI=85, LGI=170 for HeGI

[Preamble] Long=0, Short=1 (for mode OFDM)

[STBC] disable=0, enable=1

[LDPC] disable=0, enable=7 (should be "enable" for BW>20MHz)

[SPE_EN] disable=0, enable=1

Examples:

iwpriv ra0 set FixedRate=1-8-2-11-1-0-0-0-7-0 (HE_SU MCS11 with 1nss and SGI) iwpriv ra0 set FixedRate=1-8-2-11-2-85-0-0-7-0 (HE_SU MCS11 with 2nss and MGI) iwpriv ra0 set FixedRate=1-4-2-9-2-15-0-0-7-0 (VHT MCS9 with 2nss)

17.9.2 Auto Rate Command

iwpriv ra0 set AutoRate=[WCID]:1 Example:

iwpriv ra0 set AutoRate=1:1

Note: Available on MT7915.

18 ACL

Access Control List (ACL) provides a way to accomplish MAC address filtering. You can use this feature to implement White List or Black List.

18.1 Profile Parameter

18.1.1 AccessPolicy0

Description: ACL access policy configuration for BSSID-0 Value:

AccessPolicy0=0

- 0: Disable
- 1: Allow all entries in the ACL table (white list)
- 2: Reject all entries in the ACL table (black list)

18.1.2 AccessControlList0

Description: ACL table entry configuration for BSSID-0 Value:

AccessControlList0=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: Maximum entry number is 64

18.1.3 AccessPolicy1

Description: ACL access policy configuration for BSSID-1 Value:

AccessPolicy1=0

- 0: Disable
- 1: Allow all entries in the ACL table (white list)
- 2: Reject all entries in the ACL table (black list)

18.1.4 AccessControlList1

Description: ACL table entry configuration for BSSID-1 $\,$

Value:

AccessControlList1=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: Maximum entry number is 64

18.1.5 AccessPolicy2

Description: ACL access policy configuration for BSSID-2 Value:

AccessPolicy2=0

- 0: Disable
- 1: Allow all entries in the ACL table (white list)
- 2: Reject all entries in the ACL table (black list)

18.1.6 AccessControlList2

Description: ACL table entry configuration for BSSID-2 Value:

AccessControlList2=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: Maximum entry number is 64

18.1.7 AccessPolicy3

Description: ACL access policy configuration for BSSID-3

Value:

AccessPolicy3=0

- 0: Disable
- 1: Allow all entries in the ACL table (white list)

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 130 of 142

18.1.8 AccessControlList3

Description: ACL table entry configuration for BSSID-3

Value:

AccessControlList3=

[Mac Address];[Mac Address];...

Example:

00:10:20:30:40:50;0A:0b:0c:0D:0e:0f;1a:2b:3c:4d:5e:6f

Note: Maximum entry number is 64

18.2 iwpriv Command

18.2.1 AccessPolicy

Description: ACL access policy configuration

Value:

iwpriv ra0 set AccessPolicy=0

- 0: Disable
- 1: Allow all entries in the ACL table (white list)
- 2: Reject all entries in the ACL table (black list)

18.2.2 ACLAddEntry

Description: Add new entry (MAC address) into ACL table

Value:

iwpriv ra0 set ACLAddEntry="xx:xx:xx:xx:xx:xx;yy:yy:yy:yy:yy"

[MAC address];[MAC address];...;[MAC address]"

Note: Maximum entry number is 64

18.2.3 ACLDelEntry

Description: Remove old entry (MAC address) from ACL table

Value:

iwpriv ra0 set ACLDelEntry="xx:xx:xx:xx:xx:xx;yy:yy:yy:yy:yy"

18.2.4 ACLClearAll

Description: Remove all entries from ACL table

Value:

iwpriv ra0 set ACLClearAll=1

18.2.5 ACLShowAll

Description: Dump all entries in ACL table

Value:

iwpriv ra0 set ACLShowAll=1

18.3 ACL example

18.3.1 White List

iwpriv ra0 set AccessPolicy=1 iwpriv ra0 set ACLAddEntry="00:0c:43:28:aa:12;00:0c:43:28:aa:11;00:0c:43:28:aa:10" iwpriv ra0 set ACLShowAll=1

18.3.2 Black List

iwpriv ra0 set AccessPolicy=2 iwpriv ra0 set ACLAddEntry="00:0c:43:28:aa:12;00:0c:43:28:aa:11;00:0c:43:28:aa:10" iwpriv ra0 set ACLShowAll=1

19 Intrusion Detection System

Intrusion Detection System (IDS) provides a way to protect your Wi-Fi device from some flooding attack. You have to turn on the macro IDS_SUPPORT to use this function.

19.1 Profile Parameter

19.1.1 IdsEnable

Description: Enable or disable Intrusion Detection System

Value:

IdsEnable=0

0: disable 1: enable

19.1.2 AuthFloodThreshold

Description: Authentication frame flooding threshold configuration

Value:

AuthFloodThreshold=32

0: disable

1~65535 (default=32)

19.1.3 AssocReqFloodThreshold

Description: Assocation request frame flooding threshold configuration

Value:

AssocReqFloodThreshold=32

0: disable

1~65535 (default=32)

19.1.4 ReassocReqFloodThreshold

Description: Reassocation request frame flooding threshold configuration

Value:

ReassocReqFloodThreshold=32

0: disable

1~65535 (default=32)

MediaTek Confidential

© 2016 - 2019 MediaTek Inc.

Page 133 of 142

19.1.5 ProbeReqFloodThreshold

Description: Probe request frame flooding threshold configuration Value:

ProbeReqFloodThreshold=32

0: disable

1~65535 (default=32)

19.1.6 DisassocFloodThreshold

Description: Disassocation frame flooding threshold configuration

Value:

DisassocFloodThreshold=32

0: disable

1~65535 (default=32)

19.1.7 DeauthFloodThreshold

Description: Deauthentication frame flooding threshold configuration

Value:

DeauthFloodThreshold=32

0: disable

1~65535 (default=32)

19.1.8 EapReqFloodThreshold

Description: EAP request frame flooding threshold configuration Value:

EapReqFloodThreshold=32

0: disable

1~65535 (default=32)

20.1 Introduction

IOCTL is one way for a user space application to access the data declaimed and used in a kernel space driver. In case of WiFi, the most common application is to retrieve site survey data in the form of a structure array. It is much easier to manipulate the data retrieved via IOCTL than to parse the output printed by "iwpriv ra0 get_site_survey". One thing you should pay attention to when using IOTCL is that the definition of exchanged data structures must be aligned. We usually copy the definition in driver to the user space application directly.

20.2 IOCTL in iwpriv

```
Parameters:
```

```
int
                       socket id;
                       name[25];
                                                        // interface name
               char
               char
                       data[255];
                                                       // command string
                                                       // defined in linux/wireless.h>
               struct
                       iwreq wrq;
Default values:
                                                        // interface name
               wrq.ifr_name = name = "ra0";
               wrq.u.data.pointer = data;
                                                       // data buffer of command string
               wrq.u.data.length = strlen(data);
                                                        // length of command string
               wrq.u.data.flags = 0;
```

20.2.1 SET

Set Data		
Function Type	Command	IOCTL
RTPRIV_IOCTL_SET	iwpriv ra0 set SSID=RT2800AP	sprintf(name, "ra0"); strcpy(data, "SSID=RT2800AP"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq);

20.2.2 GET

Get Data			
Function Type	Command	IOCTL	
RTPRIV_IOCTL_STATISTICS	iwpriv ra0 stat	<pre>sprintf(name, "ra0"); strcpy(data, "stat"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data);</pre>	

		<pre>wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id,RTPRIV_IOCTL_STATISTICS, &wrq);</pre>
RTPRIV_IOCTL_GSITESURVEY	iwpriv ra0 get_site_survey	<pre>sprintf(name, "ra0"); strcpy(data, "get_site_survey"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id,RTPRIV_IOCTL_GSITESURV EY, &wrq);</pre>
RTPRIV_IOCTL_SHOW	iwpriv ra0 show	sprintf(name, "ra0"); strcpy(data, "show wdsinfo"); strcpy(wrq.ifr_name, name); wrq.u.data.length = strlen(data); wrq.u.data.pointer = data; wrq.u.data.flags = 0; ioctl(socket_id,RTPRIV_IOCTL_SHOW, &wrq);

20.3 Sample User Space Application

```
//
// rtuser:
        1. User space application to demo how to use IOCTL function.
//
        2. Use sscanf to get the raw data back from string message.
         3. The command format "parameter=value" is same as iwpriv command format.
//
//
         4. Remember to insert driver module and bring interface up prior execute rtuser.
// Make:
                 cc -Wall -ortuser rtuser.c
// Run:
//
                  ./rtuser
#include <stdio.h>
#include <string.h>
#include <sys/socket.h>
#include <sys/ioctl.h>
#include <unistd.h>
#include linux/wireless.h>
#if WIRELESS_EXT <= 11
#ifndef SIOCDEVPRIVATE
```

```
#define SIOCDEVPRIVATE
                                               0x8BE0
#endif
#define SIOCIWFIRSTPRIV
                                               SIOCDEVPRIVATE
#endif
#define RT_PRIV_IOCTL
                                               (SIOCIWFIRSTPRIV + 0x01)
#define RTPRIV_IOCTL_SET
                                               (SIOCIWFIRSTPRIV + 0x02)
#define RTPRIV_IOCTL_BBP
                                               (SIOCIWFIRSTPRIV + 0x03)
#define RTPRIV_IOCTL_MAC
                                               (SIOCIWFIRSTPRIV + 0x05)
#define RTPRIV_IOCTL_E2P
                                               (SIOCIWFIRSTPRIV + 0x07)
#define RTPRIV_IOCTL_STATISTICS
                                       (SIOCIWFIRSTPRIV + 0x09)
#define RTPRIV_IOCTL_ADD_PMKID_CACHE (SIOCIWFIRSTPRIV + 0x0A)
#define RTPRIV_IOCTL_RADIUS_DATA
                                               (SIOCIWFIRSTPRIV + 0x0C)
#define RTPRIV_IOCTL_GSITESURVEY
                                       (SIOCIWFIRSTPRIV + 0x0D)
#define RTPRIV_IOCTL_ADD_WPA_KEY
                                               (SIOCIWFIRSTPRIV + 0x0E)
#define RTPRIV_IOCTL_GET_MAC_TABLE(SIOCIWFIRSTPRIV + 0x0F)
#ifndef TRUE
#define TRUE 1
#endif
#ifndef FALSE
#define FALSE 0
#endif
#define MAC_ADDR_LEN
#define ETH_LENGTH_OF_ADDRESS
typedef struct_SITE_SURVEY
       unsigned char
                               channel:
       unsigned short
                               rssi;
       unsigned char
                               ssid[33];
       unsigned char
                               bssid[6];
       unsigned char
                               security[9];
} SITE_SURVEY;
SITE SURVEY
                       SiteSurvey[100];
char
                       data[4096];
int main( int argc, char ** argv )
       char
                       name[25];
                       socket_id;
       struct
                       iwreq wrq;
       int
                       ret;
       // open socket based on address family: AF_INET
       socket_id = socket(AF_INET, SOCK_DGRAM, 0);
       if (socket_id < 0)
               printf("\nrtuser::error::Open socket error!\n\n");
```

```
return -1;
        }
        // interface name as "ra0"
        sprintf(name, "ra0");
        // get wireless name
        strcpy(wrq.ifr_name, name);
        wrq.u.data.length = 255;
        memset(data, 0x00, 255);
        wrq.u.data.pointer = data;
        wrq.u.data.flags = 0;
        ret = ioctl(socket_id, SIOCGIWNAME, &wrq);
        if(ret != 0)
        {
                 printf("\nrtuser::error::get wireless name\n\n");
                 goto rtuser_exit;
        printf("\nrtuser[%s]:%s\n", name, wrq.u.pointer);
        // iwpriv ra0 set WPAPSK=11223344
        memset(data, 0x00, 255);
        strcpy(data, "WPAPSK=11223344");
        strcpy(wrq.ifr_name, name);
        wrq.u.data.length = strlen(data)+1;
        wrq.u.data.pointer = data;
        wrq.u.data.flags = 0;
        ret = ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq);
        if(ret != 0)
                 printf("\nrtuser::error::set\ wpapsk\n\n");
                 goto rtuser_exit;
#if 0
        //iwpriv ra0 set SiteSurvey=1
        memset(data, 0x00, 255);
        strcpy(data, "SiteSurvey=1");
        strcpy(wrq.ifr_name, name);
        wrq.u.data.length = strlen(data)+1;
        wrq.u.data.pointer = data;
        wrq.u.data.flags = 0;
        ret = ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq);
        sleep(10);
#endif
        // iwpriv ra0 get_site_survey
        memset(data, 0x00, 4096);
        strcpy(data, "");
```

```
strcpy(wrq.ifr_name, name);
         wrq.u.data.length = 4096;
         wrq.u.data.pointer = data;
         wrq.u.data.flags = 0;
         ret = ioctl(socket_id, RTPRIV_IOCTL_GSITESURVEY, &wrq);
         if (ret != 0)
                  printf("\nrtuser::error::get site survey\n\n");
                  goto rtuser_exit;
         }
         printf("\n======== Get Site Survey AP List =======");
         if (wrq.u.data.length > 0)
                  printf("%s\n", wrq.u.data.pointer);
                  // You can parse the string here and store the data to the SITE_SURVEY data structure \,
         // iwpriv ra0 set SSID=rtuser
         memset(data, 0x00, 255);
         strcpy(data, "SSID=rtuser");
         strcpy(wrq.ifr_name, name);
         wrq.u.data.length = strlen(data)+1;
         wrq.u.data.pointer = data;
         wrq.u.data.flags = 0;
         ret = ioctl(socket_id, RTPRIV_IOCTL_SET, &wrq);
         if (ret != 0)
         {
                  printf("\nrtuser::error::set SSID\n\n");
                  goto rtuser_exit;
         }
rtuser_exit:
         if (socket_id \ge 0)
                  close(socket_id);
         if (ret)
                  return ret;
         else
                  return 0;
```

}

21.1 Why does WPAPSK not work?

Please make sure the parameter "DefaultKeyID" is set to 2 in the configuration file.

21.2 How to switch driver to operate in 5G band?

Please make sure the IC supports 5G band. Also, please configure the WirelessMode and Channel correctly.

21.3 How do I check my channel list?

Please check CountryRegion or CountryRegionABand.

21.4 How can I know the version of current WLAN Driver?

Please use the following command. # iwpriv ra0 show driverinfo

21.5 Can SoftAP support Antenna diversity?

No, SoftAP do not support antenna diversity even EEPROM has set antenna enabled.

21.6 TX & RX performance is always unbalance

When encounter TX & RX performance unbalance issue during Wi-Fi performance test, please check the TxBurst option is off or on. When TxBurst is on, the TX packets will have higher priority than RX packets. In the result, the WLAN TX performance will be higher than RX. This problem usual appears in Fast Ethernet + WLAN solution. GiGaBit Ethernet + WLAN solution doesn't have such problem.

How to turn off TxBurst?

By profile:

TxBurst=0

By iwpriv command:

iwpriv ra0 set TxBurst=0

21.7 Why can't I configure a SSID containing comma ","?

Please modify your code as follows.

```
INT RTMPAPPrivloctlSet(
    IN RTMP_ADAPTER *pAd,
    IN RTMP_IOCTL_INPUT_STRUCT *ploctlCmdStr)

{
    PSTRING this_char;
    PSTRING value;
    INT Status = NDIS_STATUS_SUCCESS;

    while ((this_char = strsep((char **)&ploctlCmdStr->u.data.pointer, "\0")) != NULL)
    {
        if (!*this_char)
            continue;
        if ((value = strchr(this_char, '=')) != NULL)
            *value++ = 0;
        }
}
```

21.8 Why throughput is low when using 1SS to send traffic with legacy rate or MCS0-7?

Using 2SS to send traffic with legacy rate and MCS0-7 is our design by default. If you intend to change from 2SS to 1SS, please use TC instead of TSSI.

21.9 TGn 4.2.10 failed. Why does DUT not send MC traffic?

4.2.10 Group traffic with WPA2-PSK Only Mode and WPA/WPA2-PSK Mixed Mode If this item fails, please turn off IGMP Snooping first.

21.10 TGn 4.2.29 failed. Why the performance cannot reach the criteria?

Please make sure that the following items are correctly configured.

```
<Profile>
```

TxPreamble=1

PktAggregate=0

```
<Driver Config>
```

- -CONFIG_RA_NETWORK_WORKQUEUE_BH=y
- +CONFIG_RA_NETWORK_TASKLET_BH=y

<Kernel Config>

Please check items in Networking Option & Core Netfilter in your kernel config. Remove those you do not use or know.

21.11 How to modify a profile with sed?

If vi/vim does not exist in your configuration, you can use sed to modify profile as well. The following is an example for your reference. We change HT_LDPC=1 to HT_LDPC=0.

sed -i 's/HT_LDPC=0/HT_LDPC=1/g' RT2860AP.dat

21.12 Do you have suggested kernel version for each chipset?

The following mapping has been fully verified by MTK and please develop your project according to this mapping.





21.13 Why does debug message not show up?

If "iwpriv ra0 set Debug=3" shows nothing, you may have to change the default kmsg printing level and please try to execute "dmesg -n 7" to manually adjust the level.