
Pink cross = where the AFM really was: an example


Designer 2026-11-02a · right and up are as the 100x picture is shown in the designer (in this example the AFM camera shows the chip the same way)

1 · Designer: the AFM list is made

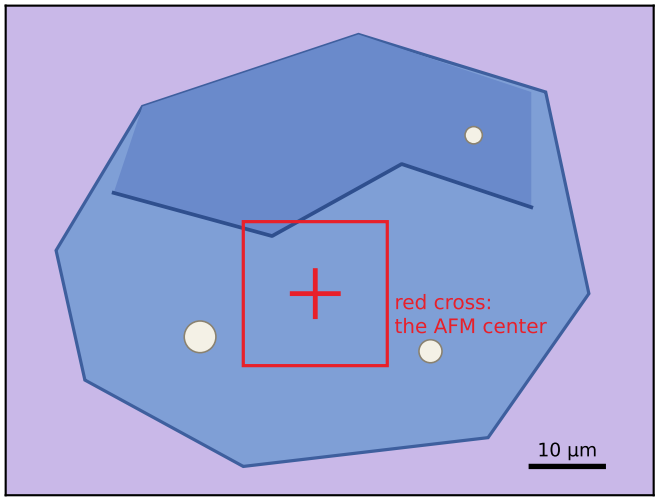


The list sends the AFM to the red cross (the flake's AFM center), its scan square around it.

2 · At the AFM: the crosshair is off

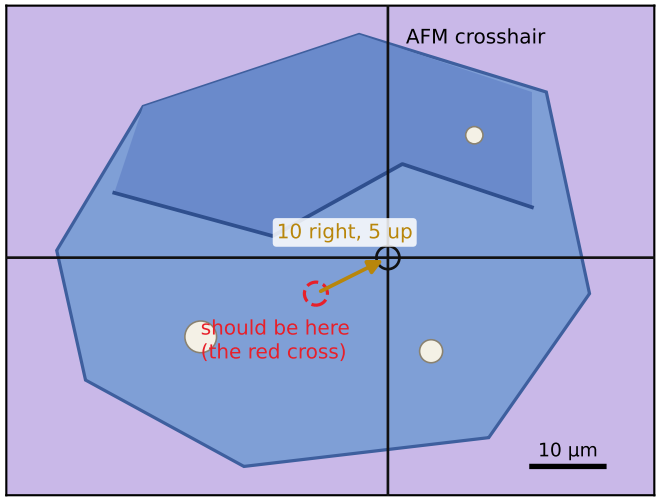


The AFM crosshair sits on another spot of the flake: 10 µm right and 5 µm up of the red cross.

3 · Designer: click where the AFM was

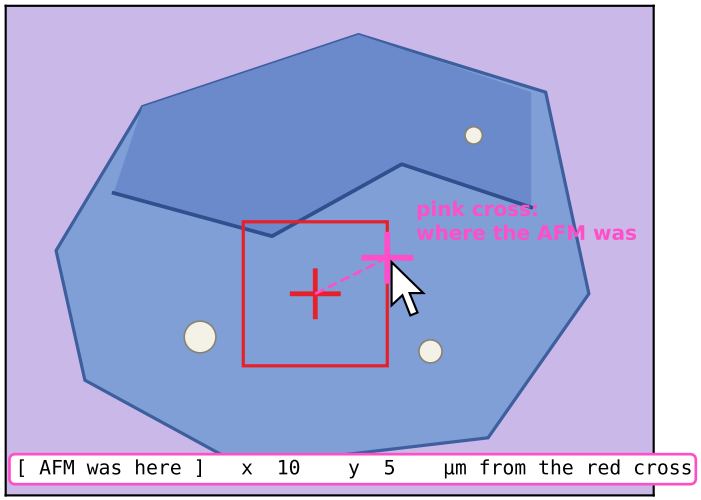

Press AFM was here (or hold Alt) and click that same spot of the flake (by its edges, the step, the dots): the pink cross.

4 · Make the list again → at the AFM

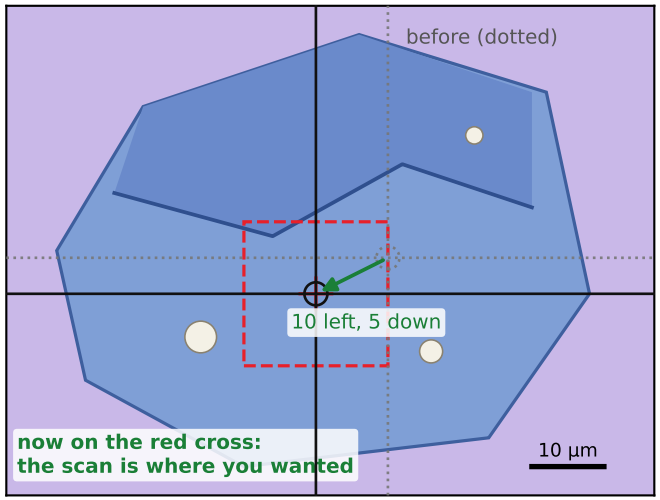


The new list sends the AFM 10 µm left and 5 µm down of before; with the same error it now lands on the red cross.

Checked in the designer itself, with a simulated AFM that always lands 10 µm right and 5 µm up of where it is sent:
the first list missed the red cross by 11.18 µm; the list made again after the click misses it by 0.008 µm (also at view rotations 90° and 0°, with other errors).
The pink cross is put on the flake's own features, so this works whichever way the AFM camera is turned. The x, y numbers are only that point read on the designer's screen (right, up). The red cross does not move; only the AFM list's point is corrected.

The designer window in that test (placeholder picture, view 180°)

Top of the 100x window: the pink button and where the AFM was, from the red cross



The red cross and scan square (the AFM center) and the pink cross 10 µm right, 5 µm up (Alt + click)

