karma

User Guide
Appendix for Partners



Release 1.4.2 | December 2018

© Copyright 2017 by ERM Advanced Telematics Ltd.

ERM Advanced Telematics
16 Haim Shapira st. Rishon LeZion, 7570418 Israel | Phone: 972-3-9413313
www.ermtelematics.com | info@ermtelematics.com

Table of Contents

1. Settings and Management for Partners 3
   1.1 Create a New Fleet 4
   1.2 Add User 4
   1.3 Add a Vehicle 6
   1.4 Add Driver 7
2. Adding the possibility to send commands 8
3. Send commands directly from the Karma to the Device 8
4. DTC events 9
5. Support 10


1. Settings and Management for Partners

This appendix is a supplement to the Karma Manual. It is intended only for Partners and describes how to configure Karma for your customers.


To setup Karma, go to Settings on the Home Page




and proceed with the following steps:

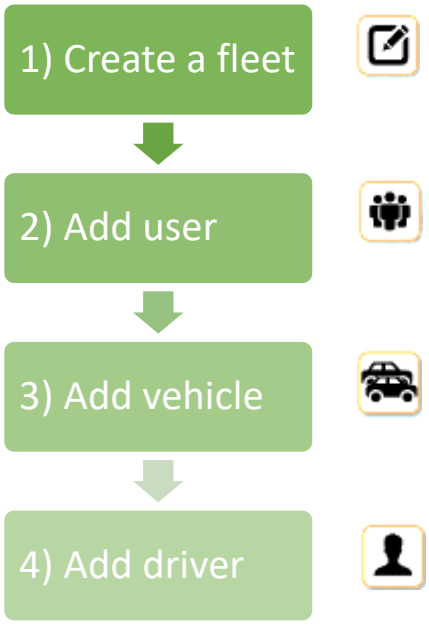

1.1 Create a New Fleet

1. Go to **Settings** > **Fleets**  .
2. Click **Add new fleet**  on the upper left side of the screen.

The following window is displayed.

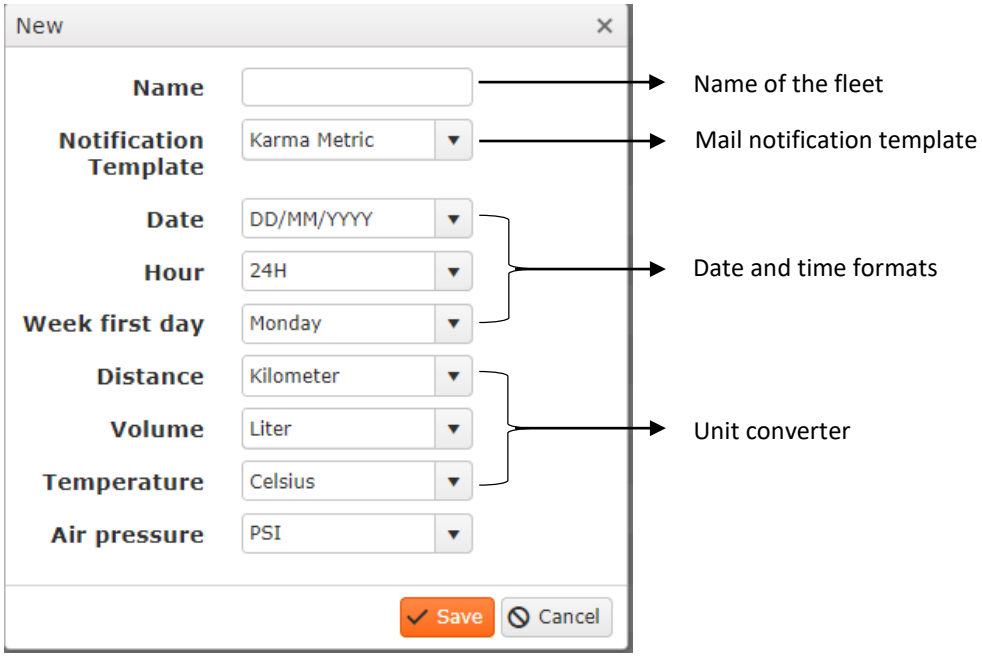

3. Complete all fields, and click **Save**.

Note: Once you create a new fleet, it cannot be deleted.

1.2 Add User

When adding a new user, Karma enables you to define four authorization levels:

- Partner
- Manager
- User
- Viewer


The following table describes the access permissions per account level.

	Create Fleet	Manage Fleet	Create Users	Manage Users	Delete Users	Create Vehicle	Manage Vehicles	Delete Vehicles	Create Drivers	Manage Drivers	Delete Drivers	View
Partner	√	√	√	√	√	√	√	√	√	√	√	√
Manager			√	√	√	√	√	√	√	√	√	√
User							√			√		√
Viewer												√

To add a new user:


1. Go to **Settings** > **Users**  .
2. Click **Add new user**  on the upper left side of the screen.

   The following window is displayed.

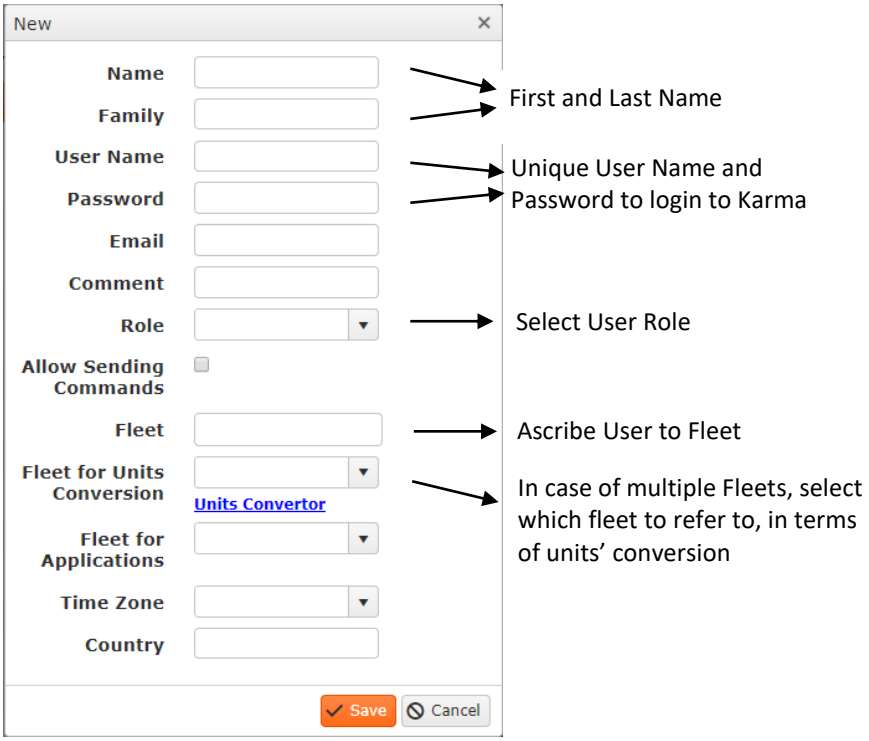


3. Complete all fields, and click **Save**.
   You can also edit or delete in the **Settings** > **Users** page.

1.3 Add a Vehicle

1. Go to **Settings** > **Vehicles**.
2. Click **Add new vehicle** 

on the upper left side of the screen.

   The following window is displayed.

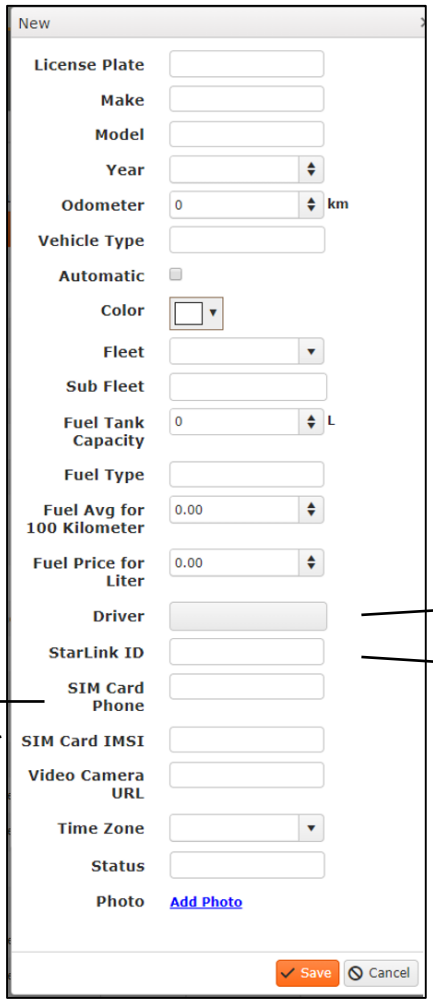


Sim Card phone number

Sim Card S/N

Once you added new drivers, you can assign vehicles to drivers, and vice versa

The unique StarLink ID is 15 digits, located on the unit's back under IMEI

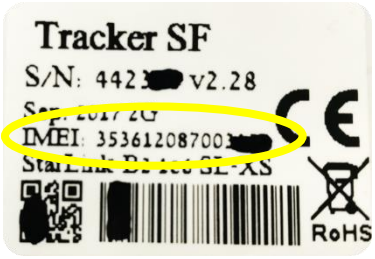


3. Complete all fields, and click **Save**.

   You can also edit and delete vehicle records in the Settings > Vehicles page.

Note: You cannot create a vehicle without a StarLink ID number.
Each ID can be used only once.


1.4 Add Driver

1. Go to **Settings** > **Drivers**.

   Click **Add new driver** 

on the upper left side of the screen.

   The following window is displayed.

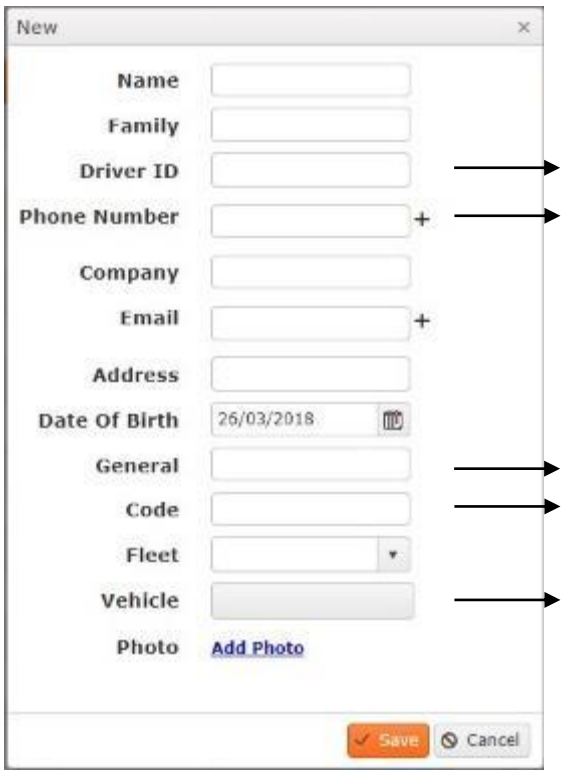

Driver ID must be unique

Press '+' to add more Phone Numbers

Free text comments

Code to be used when entering a vehicle driven by more than one driver (with Dallas/ KeyPad etc.)

Select Vehicle from the Fleet list
* Select more than one if there are multiple vehicles

2. Complete all fields, and click **Save**.

   You can also edit and delete Drivers Records in the Settings > Drivers page.

Note: To assign a driver to a vehicle, or the other way around, both must be assigned to the same fleet.

2. Adding the possibility to send commands


As partner or administrator, a user can permit access to users that are eligible to sending commands.

- Click on "Settings" >>> "Users" >>>
- Once the "Allow Sending Commands" checkbox is checked, clicking on "save" is required to save the changes.



- Once a user is logged in, he is eligible to viewing the vehicle card the commands.
- By clicking on "Read Log", the user can see the commands that were sent to the unit.

Note: It is recommended to grant permission to users that are technically qualify.

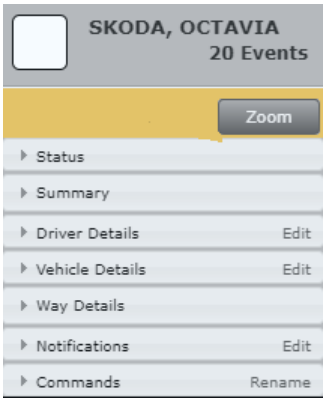


3. Send commands directly from the Karma to the Device

It is possible to send commands to the StarLink device from the Karma UI

- Go to the Commands area.
- Select the Output.
- By clicking on Set/Reset, the user can activate or deactivate an output.




- For the user's convenience, it is possible to rename each output manually.

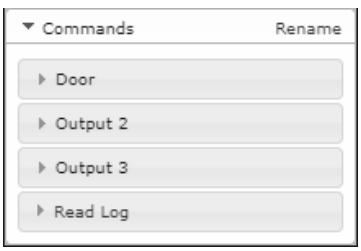


- A log table is attached and includes renamed outputs names.

- The table contains information from the last 30 days.

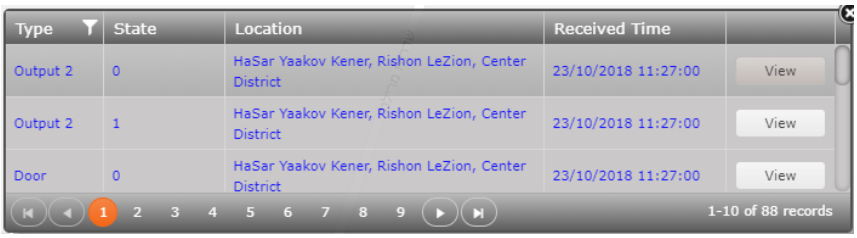

4. DTC events

- Add DTC (only administrator or partners can add applications to the Karma).
- Setting >>> "APP".
- When DTC option is selected, the user chooses an icon and a designated location to display the icon (it is recommended adding the icon to the vehicles reports).
- The user selects the fleet and the vehicles to apply.
- The user selects the trouble codes expected to be received.

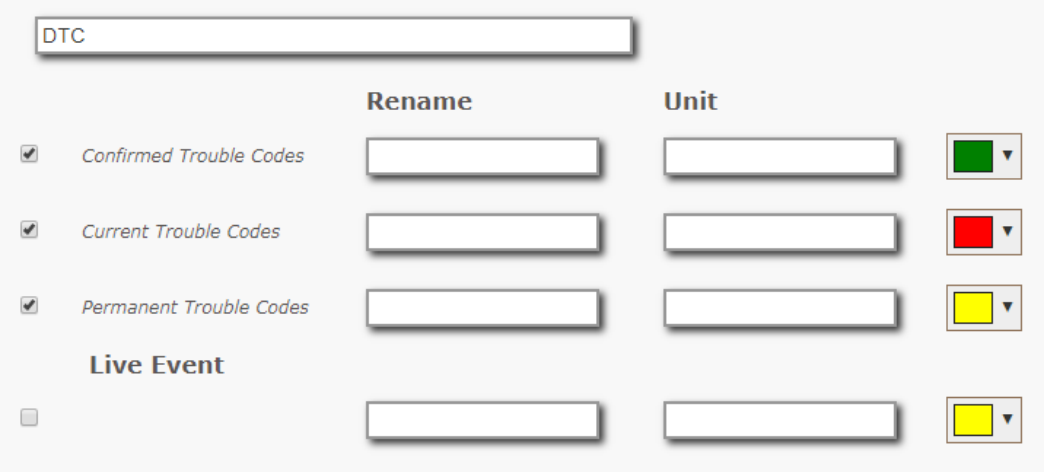

- When DTC report option is clicked,
- A table containing the following fields will appear
    - Vehicle
    - Driver
    - Distance
    - Total events
    - Confirmed trouble codes
    - Current trouble codes
    - Permanent trouble code

In case there are faults from the vehicle, the user will be able to see them on the table.

Note: Verify that Parameter 2069 and 2070 have the value 134217731 at StarLink unit.

5. Support

Karma is designed especially for you, the service provider. The main purpose is to provide you the most intuitive, convenient and simple platform that requires minimal support on your end, as a service provider to your customers and to provide your customers a great experience managing their fleet in a professional, intuitive and enjoyable way.

For any clarifications, questions or to provide feedback, please contact us at:

Email: support@karma.online

Skype: ERM.Support

