


MK-300

Guitar/Bass AMP Modeler&Effects Processor
吉他/贝斯综合效果器

USER MANUAL
说明书

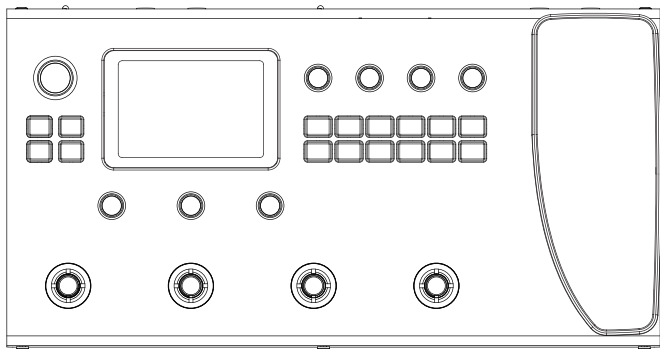

CONTENT / 目录

EN

Cautions	01
Features	02
Top Panel	03-08
Back Panel	09
Screen Introduction	10-14
Main Display Screen	10
TUNER	11
LOOPER	11-13
DRUM	13-14
Effectors chain diagram	15
Global Settings	15-18
Other	19
Technical Specifications	20
FCC Warning Statement	21

CN

注意事项	01
性能概述	02
主面板说明	03-07
接口面板说明	08
界面概览	09-12
主界面	09
调音器	09-10
LOOPER乐句循环功能	10-12
鼓机模块	12
效果模块连接图	13
全局设置	13-16
其他	17
规格参数	18

Please read carefully before proceeding

Upon receipt of the product, please calibrate the Pedal 1 firstly, otherwise Pedal 1 cannot be used normally. For calibrating, see Pedal 1 setting for Global Settings.

Power supply

Please use a 5V 2A Power adapter to charge the device. Failure to do so will result in damage to the device, fire, or other problems. Unplug the device when not in use or during thunderstorms. In order to avoid noise or other interference caused by external power adapter to the product, it is recommended that users unplug the power supply first, and then use the product, because use the built-in battery power supply will allow the product to reduce external interference.

Connections


Always switch off the power supply and other equipment before connecting or disconnecting the device, as this will help to avoid malfunctions and damage to other equipment.

Also. Always disconnect all connections and power cables before moving the device.

Important Safety Instructions

1. Read these user manual
2. Keep these user manual
3. Heed all warnings
4. Follow all instructions
5. Do not use this apparatus near water
6. Clean only with a dry cloth
7. Make sure to use it away from radio and television sets or other devices that generate magnetic fields to avoid interference
8. Do not use switches and controls by force
9. Do not allow paper, metal and other objects to fall into the machine
10. Do not drop the unit or subject it to shocks or excessive pressure

- High-quality 3.5" LCD screen.
- 11 effects modules with 320+ different types of effects in total.
- Up to 160 editable user preset slots.
- Editable effects chain allows users to change the order of 11 modules.
- Extensive I/O that provides flexibility for studio, stage, or practice.
- Under the "Main Display Screen", the functions of the 4 footswitches can be customized and modified.
- 120 Built-in preamp models based on ANN (Audio Neural Net) modelling technology to recreate the feel of an authentic tube amplifier.
- 120 AMP, there are 85 electric guitar AMP, 30 bass AMP, and 5 for acoustic guitar. And the DS module also provides 40 overdrive/distortion/fuzz effects.
- 100 high-quality CAB (1024/2048pts) with support for loading up to third-party impulse response files! There are 65 electric guitar CAB, 25 bass CAB, and 10 for acoustic guitar.
- MIDI port for MIDI IN.
- Global EQ allows user to adjust the tone quickly according to different audio setups.
- Integrated 150s looper, automatic save upon power off, it can be set to Tail mode or Head mode.
- 128 drum machine variations to choose from.
- The 4 footswitches allows user to set the footswitch as the on/off switch or tap tempo switch.
- The Ctrl function can set 4 footswitches to "use foot to Save", "preset ± 4 ", "preset volume ± 5 ", "Pedal 1 A/B", "Pedal 2 A/B", etc.
- Support to set the Pedal to the control module parameters or instrument output volume, and support the external Pedal 2 to use at the same time.
- Battery life: About 10+ hours.
- You can use the accessory recording cable to connect your cellphone and Phone recording jack, then enter any video/audio recording APP for direct recording.
- USB jack: Use to charge the battery/The MK-300 can be a sound card of computer/ Computer software can be connected for interactive data transmission/ Use USB MIDI function/ Firmware updates or factory Settings can be restored in the computer software /Third-party IR files (CAB module) and AMP and DS files can be imported/ OTG recording.
- Designers provide users with a super convenient footswitches-stepping mode called the "PRESET LIST". In this mode, 4 footswitches represent 4 presets, 4 presets as a BANK, with the left two footswitches for BANK- and the right two footswitches for BANK+.
- Under the "Main Display Screen", the color of each preset footswitch-light can be customized. The color can be adjusted in the Save interface by using the Dial3 knob under the screen. In the factory default settings, most of the presets are set to blue.
- This machine provides users with 3 convenient parameter knobs, which can be customized according to different presets.
- Wireless BT function, support for BT music, BLE MIDI and for APP data transfer.
- 44100HZ 24Bit high sampling rate digital signal processor to provide you with a nuanced sound.
- Free download of computer software or mobile APP from our official channels to provide users with more ways of operation and management.
- RE-AMP mode, you can send audio tracks from your computer to be processed and have effects added by the MK-300. For example, a non-processed guitar track could be played through the MK-300 and have AMP and CAB added.
- Official software comes with a community interactive platform to download the sounds shared by the world's top artists.

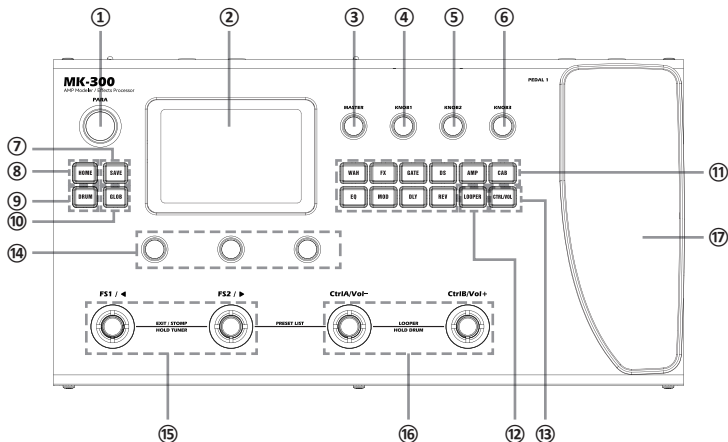

① **PARA: Rotate or press to navigate and select from options.** You can use it to select preset, select and confirm the item on the screen, move modules or edit parameters.

* Tips:

When there are two or more dots icon showing on the screen, it means that under the current item, there are not only 3 parameters that can be adjusted. You can use the PARA button to click the current item again to turn the page of the parameter, and then you can use the three dials under the screen to adjust more parameters.

② **3.5" chromatic LCD screen:** Display the states and detailed information.

③ **MASTER:** Control the output volume.(Applies to the IN interface, DRUM, and LOOP, but does not apply to USB and BT. Please adjust BT & USB VOL in the GLOB interface.)

* Note:

When connecting your mobile phone via BT or your computer via USB to play music, please remember to turn down the volume on your phone/computer or reduce the BT&USB VOL level beforehand to avoid excessively loud sound.

④ **KNOB1 Custom knob:** You can go to the CTRL interface to customize the setting function, which follows the preset. In factory condition, the function is set to the LEVEL-parameter adjustment of the AMP module.

⑤ **KNOB2 Custom knob:** In factory condition, the function is set to the GAIN-parameter adjustment of the AMP module.

⑥ **KNOB3 Custom knob:** In factory condition, the function is set to the MIDDLE-parameter adjustment of the AMP module.

⑦ **SAVE illuminated Button:** Press once to enter the save screen. When in the saving screen, press again to save and exit. On the save screen, hold the PARA key to switch to the SWAP function.

On any other screen, hold the SAVE button to save the preset without switching the current screen. In addition, the SAVE button light blinks to indicate whether the current default parameter has been changed. If the light blinks, it indicates that the parameter has been changed. Before you switch the preset, you'd better save the parameter in time to avoid data loss.

*** Note:**


Preset data and global data are two independent parameter sets. The SAVE button is used to operate preset data, while global data is adjusted via the GLOB button or other methods.

⑧ **HOME illuminated Button:** Click to go to the Main Screen. Click again to go to the STOMP Screen. Hold to turn on the Tuner. After turning on the tuner, the button light will be steady on.

"Main Display Screen" is the home page displayed right after the power is turned on. You can directly see the key information and settings of the current Preset, you can also know about battery conditions and other information and so on.

STOMP interface (as shown in the following figure): On the stomp interface, you can view the connection order and on/off states of 11 Modules, or use PARA to move the order.

The function of the 4 footswitches under the STOMP interface is designed, the left two Footswitches are used to switch the presets, and the right two are used to select and turn on/off the module.

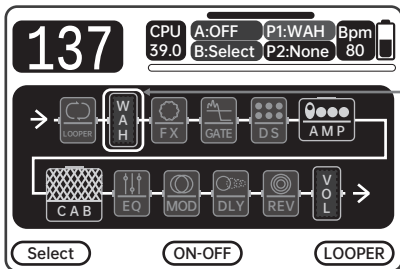

Convenient operation tips:

After you save the current preset, the position of the white box will be saved with the preset. Therefore, users can enter Stomp mode by pressing the left two footswitches and then toggle a specific module on/off by click the third footswitch, without needing to pre-configure the footswitch function in the CTRL interface.

*** Tip:**

We designed a second way to jump the presets with footswitches, which can be implemented in the STOMP/MODULE interface. You can hold the first or second footswitch, the preset number in the upper left corner of the screen will keep flashing to represent what you see, not what you hear.

Then you click the second footswitch to load the Preset of target number, or you can cancel the operation if you click the first footswitch.

⑨ **DRUM illuminated Button:** Click to play or stop the drum machine immediately, and hold to enter the drum machine screen. The button light will be constantly on when the drum machine is playing.

*** Tips:**

As soon as you exit the Drum Interface, the system will perform a global parameter save operation. This enables automatic saving of the drum machine's parameters. This function is the same as pressing the GLOB button twice. However, when exiting the Drum Interface, the message "Global Save OK" will not be displayed.

⑩ **GLOB illuminated Button/BT switch Button(with BT state light):** Click to access the global operation screen, and hold to turn BT on/off. When the light is steady on, it indicates that BT is successfully connected. When the light is flashing, it indicates that BT is enabled but not connected. When the light is off, it indicates that BT is turned off. When in the global interface, if you briefly press this key again, this machine will perform the saving function of global parameters and data once, including the saving of Preset positions.

⑪ **10 effects modules illuminated Button:** These buttons shows the on/off state of the 10 effect modules. If the button is off, the effect is not enabled. If the button is on, the effect is started. If all 10 buttons are Off, the guitar is in Bypass state.

Click to enter the Edit Settings Menu of Module(MODULE interface), then click again to turn on/off Module. At any time, you can hold the button to quickly turn on/off Module, no need to change the interface.

When the Edit Settings Menu is displayed on the screen, you can use the PARA and three dials below the screen to adjust any of the effects and parameters on the screen.

When the Edit Settings Menu is displayed on the screen, at this point, the function of 4 footswitches has been set. The first and second footswitches are used to switch the Presets, use the third to turn the current module on/off, the fourth footswitch in some modules is non-functional. In certain modules where TAP speed retrieval is required on the effect interface, the fourth footswitch can also be used to TAP.

⑫ **LOOPER illuminated Button.**

*** Tips:**

As soon as you exit the LOOPER Interface, the system will perform a global parameter save operation. This enables automatic saving of the LOOPER's parameters. This function is the same as pressing the GLOB button twice. However, when exiting the LOOPER Interface, the message "Global Save OK" will not be displayed.



⑬ **CTRL illuminated Button/The switch-button of VOL module in effects chain (The 11th module):** Click this button to enter the ctrl interface (as shown in the following picture, the first click enters the interface on the right, and the second click enters the interface on the left).

Hold this button to open the VOL module and enable/disable the VOL module functions.

These functions in the CTRL interface are stored independently along with the preset, providing the 9 items of Pedal 1, Pedal 2, Knob 1, Knob 2, Knob 3, FS 1, FS 2, Ctrl A, Ctrl B. Some of these functions are explained below:

On this interface, you can use PARA and the three Dials to modify the functions of the 9 items.

This interface can display the function of 9 Ctrl items in the current state in real time. At this time, PARA and the 3 Dials have no actual function.

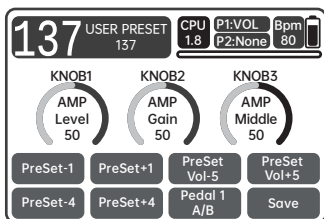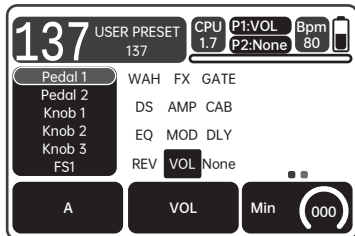

Functions of Pedal 1 and Pedal 2: Each pedal can store parameters of two states A/B, A-state can be set to control one of the parameters of one module, and pedal extremum can also be freely selected. The same can be done for B-state. For further details please refer to Pedal 1 in 17 point and Pedal 2 introduction later.

Knob 1, Knob 2, Knob 3: Three knobs for custom parameters, and optionally select extremes.

Function of FS1, FS2, Ctrl A, Ctrl B: This is the function of Click or Hold the single footswitch when in the "Main Display Screen". The following table describes the meaning of all the functions. (For the sake of convenience and simplicity, only the function of a single footswitch can be customized at preset. Because the function of combination footswitches is already defined by the designer, do not support modification.)

Click: The pressing and releasing actions are completed within 1.5 seconds, it takes effect the moment it's released.

Hold: Hold down the footswitch and release it only after more than 1.5 seconds, it takes effect at this moment of 1.5s.

The custom functions of the single footswitch include:

Function	Description
Module ctrl	Used to enable/disable one or more effect modules
Drum PLAY	Used to start/stop the drum machine
Looper	Play LOOP music or start recording
Looper stop	Stop Looper
tap	Adjust the current Preset bpm
tuner	open the tuner
Preset list	enter the Preset list interface
save	Used to save the current preset
Preset-1 / Preset+1	Used to switch to the previous or next preset
Preset-4 / Preset+4	Switch to the fourth preset above/below
Preset vol-5 / Preset vol+5	Adjust the volume of the current preset
Drum Preset + /Drum Preset-	Used to change the rhythm pattern of the drum machine
BPM- and BPM+	Adjust the current Preset bpm
Pedal 1 A/B / Pedal 2 A/B	Switch pedal A/B states
None	Non-function

14 There are three parameter dials for the Follow Screen function: From left to right are Dial1, Dial2, and Dial3.

15 Preset UP/DOWN illuminated customized footswitch: These two footswitches are Fs1 and Fs2, you can go to the ctrl interface to customize the function of the footswitches. In the factory default state, the function of the two footswitches in the main interface is to switch up or down by Presets. If you long-treading one of these two footswitches, it can be used to jump to the fourth preset above or below. At the drum interface, these two Footswitches are used to adjust the speed. In the Stomp or Module screen, holding one of these two Footswitches are used to preselect Preset and load/cancel.

* Tips:

After you switch the preset, the preset position will not be automatically saved. If you need to store the position, before shutting down the device, you need to click the GLOB button twice manually. Then, the screen will pop up "Global Save OK", and you can get the preset position before shutting down the device in the next startup.

16 CONTROL A/B illuminated customized footswitch: You can go to the ctrl interface to customize the function of the footswitches. In the factory default state, the function of the two footswitches in the main interface is to switch up or down by Preset VOL. If long-treading the one of these two footswitches, it can be used to toggle Pedal 1's A/B states or one foot to save the current preset. In Module or Stomp interface, CTRL A can be used for on/off Modules. When in the STOMP Screen, CTRL B can be used to select Modules. When in some effects of MOD/DLY/FX/WAH Module screen, you can tap the CTRL B footswitch to adjust the effect speed of the current effect. In the DRUM interface, these two Footswitches are responsible for turning on/off the drum machine and TAP function; In the LOOPER interface, the two Footswitches will have different functions in different LOOP states.

* Note:

On some interfaces, the CTRL B footswitch does not work, the CTRL B footswitch-light will turn off.

*** Convenient operation tips for using the Footswitches:**

If you adjust the volume to the maximum with Pedal 1 and still feel it's not loud enough, you can also click the Ctrl B to increase the Preset Vol even more. Then, you can hold the Ctrl B to save the Preset. This ensures that you will get the same volume the next time you reach this Preset. The entire process can be done with your feet, without the need for your hands.

⑰ Expression pedal 1: You can set expression pedal as the volume pedal, wah pedal, or control other parameters. The pedal can be set to A/B states. Step the pedal forward and press down hard for 0.3s to switch the A/B states. Therefore, you can adjust the parameters of two different states with one pedal. The parameters of Pedal1 A/B can be customized in the CTRL interface, beside, the A/B states of the pedal can be changed by the footswitches (By default, holding the third footswitch switches Pedal 1 A/B.).

*** Tip:**

Upon receipt of the product, please calibrate the Pedal 1 firstly, otherwise Pedal 1 cannot be used normally. For correction, see Pedal 1 setting of Global Settings. In the factory preset state, most of the current parameters of the pedal 1 are used to adjust the parameters of the VOL module in the effect chain (Factory in A-state). To prevent accidental activation of the press function, when the pressure on the pedal exceeds the activation threshold, it must be maintained for 0.3s before switching the Pedal A/B state.

In order to take into account the convenience and brief, the function of the combination-footswitches is fixed design, does not support modification, in most of the interface, the function of the combination-footswitches is the same, will not be affected by the Presets-changing. Only the single footswitch function can be modified by going to the CTRL interface. The following is an explanation of the function of combination-footswitches on HOME.

1.EXIT: In most cases, press the two leftmost footswitches to serve as exit keys and exit to the Home (except for Preset List mode).


2.STOMP: The single-block interface function. In the Home interface, press the two leftmost footswitches to enter the STOMP mode (single-block mode).

3.PRESET LIST: In the Home interface, press the middle two footswitches to enter the preset list interface, this is the BANK mode (Note: Do not use this function in the LOOPER and DRUM interfaces, because it will cause conflict of footswitch functions).

After the Preset list mode is opened, all the footswitches are fixed and designed, 4 footswitches represent 4 presets, 4 presets are a Bank. Short press on the left two footswitches is BANK-, short press on the right two footswitches is BANK+. Short press the middle two footswitches to exit the Home screen.

4.LOOPER: In the Home screen, press the two footswitches on the right to enter the LOOPER screen. (Note: Do not use this combination-footswitches on the DRUM screen, because the third footswitch conflict).

5.DRUM: In the Home screen, hold the two footswitches on the right to enter the DRUM screen. (Note: Do not use this combination-footswitches on the LOOP screen, because the third footswitch conflict).

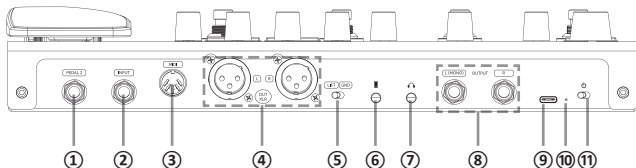

- ① **PEDAL 2:** 1/4" stereo audio input jack, connect to external expression pedal (Notes: please use 1/4" TRS cable.) The pedal can be set to A/B states, you can adjust the parameters of two different states with one pedal. The parameters of Pedal2 A/B can be customized in the CTRL interface, and the A/B states of the pedal can be changed by the footswitches.
- ② **INPUT:** 1/4" mono audio input jack, connect to guitar or to the output of another pedal.
- ③ **MIDI:** 5 PIN MIDI port, MIDI IN.
- ④ **XLR OUT:** XLR stereo audio output for balanced signal, please connect to L for mono setup.
- ⑤ **GND/LIFT:** Ground and lift switch for XLR output.
- ⑥ **Phone recording jack:** It support mobile phone recording or playback to the earphone jack. You can use the accessory recording cable to connect your cellphone and Phone recording jack, then enter any video/audio recording APP for direct recording.
- ⑦ **PHONES:** 1/8" stereo earphone output jack.
- ⑧ **OUTPUT:** 1/4" stereo audio output jack for unbalanced signal, please connect to L(MONO) for mono audio setup.
- ⑨ **USB jack:** Use to charge the battery/ The MK-300 can be a sound card of computer/ Computer software can be connected for interactive data transmission/ Use USB MIDI function/ Firmware updates or factory Settings can be restored in the computer software /Third-party IR files (CAB module) and AMP and DS files can be imported/ OTG recording.

* Tips:


MK-300 can be used as an audio interface with a cellphone, use a OTG converter (separately buying) and accessory USB cable to connect the cellphone, then enter any video/audio recording APP for direct recording.

⑩ **Charging indicator:** When the battery is normally using, the indicator will go off; During charging, the indicator will stay red, then it will change to a different color after fully charging. When the battery is about to run out of power to charge the machine, it takes about 4 hours to full.

⑪ **Power Switch:** Toggle on/off the unit.

Main Display Screen

Main Display Screen is the home page displayed right after the power is turned on. You can directly see the key information and settings of the current preset.

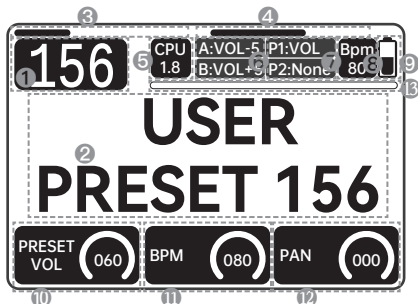

①. Preset number, A total of 160, in factory default, 1-60 for electric guitar design, 61-80 for bass design, 81-160 no effect. On the home screen, rotate PARA to quickly select a target in the preselect state, then press PARA to load the target preset. When you need the factory reset, you can separately reset these 80 Presets to the default values. If you want reset all the 160 Presets, it is also feasible. (Note: Enter the computer software interface to perform this resetting operation.)

②. Preset name.

③. The volume monitor of "IN" jack.

④. The volume monitor of mixed output.

⑤. CPU condition: Warning, when the load rate exceeds 90%, it may cause noise or other problems.

⑥. Under the current interface, click the Ctrl A or Ctrl B once to get this function. Tips: You can only see the single click function on the main screen, and you need to enter the CTRL interface to view the long step function(Hold).

⑦. Pedal 1 and Pedal 2 function at this point, the states of the pedal can also be displayed, with blue as A state and red as B state.

⑧. Preset BPM, adjustable range 40-240.

⑨. Battery display icon.

⑩. This is the display area of 3 fast adjusting Dials, the function of Dial 1 at that time was Preset output volume.


⑪. This is the display area of 3 fast adjusting Dials, the function of Dial 2 at that time was Preset BPM.

⑫. This is the display area of 3 fast adjusting Dials, the function of Dial 3 at that time was Preset PAN, when adjusted to -100, only the left output, the right no sound.

⑬. Looper display bar: If there is audio in the Looper, this display bar will be displayed on the main screen.

TUNER

Long press the first and second footswitches on the home screen to enter tuning mode. You can also turn on tuning mode by holding the HOME button.

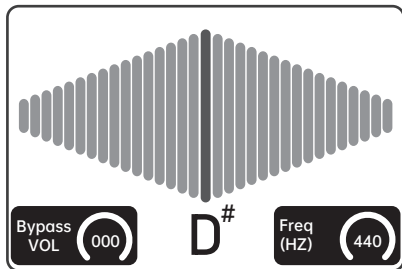

When you pluck a string, the note will appear at The bottom of The screen. Left of center is flat, and right of center is sharp.

Turn the Dial 1 to select the working volume 0-100 of the tuner. Effect chain will be bypassed, and you will only hear the dry guitar sound.

Turn the Dial 3 to change the standard A's frequency ranged from 430Hz to 450Hz, with default set to 440Hz.

Click other footswitches to exit.

* Tips:

As soon as you exit the TUNER Interface, the system will perform a global parameter save operation. This enables automatic saving of the TUNER's parameters. This function is the same as pressing the GLOB button twice. However, when exiting the TUNER Interface, the message "Global Save OK" will not be displayed.


LOOPER (Integrated 150s, automatic save upon power off, it can be set to Tail or Head mode.)

In other interfaces, press the LOOPER button to go to the Looper screen.

In other interfaces, hold the LOOPER button to start the recording directly. Hold again to stop recording and save the audio. If there is audio in the Looper, hold the LOOPER bottom to play the audio, and hold again to stop the audio.

When the screen in LOOP interface, the function of the LOOPER button is the same as the third footswitch.

You can click the two Footswitches on the right on the home screen to access the Looper screen.

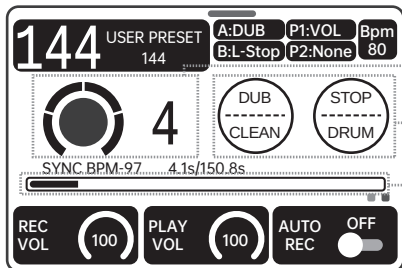

When the drum is playing, drum playing progress is displayed here

Footswitches function display

Looper Display bar

- On the Looper screen, click the two footswitches on the left at the same time to return to the main screen. Step on one of the two footswitches to switch the Preset. (The functions of the two left footswitches follow the CTRL interface and are saved along with the preset.)
- Rotating the PARA on this screen has no practical effect. Pressing PARA makes the display area of the three quick-adjust Dials turn the page and view more optional functions.
- Footswitches function display: Here shows the real-time function of the right two Footswitches, the top corresponding short step, the bottom corresponding long step.
 - ①REC: Start recording, REC will be displayed when there is no music in the LOOPER.
 - ②PLAY: When the music stops, click this footswitch to play music; When recording in double overlay, click this footswitch to stop recording and play music.
 - ③CLEAN: When the music stops, hold this Footswitch to delete the music, empty the LOOPER's music.
 - ④STOP: Click the fourth footswitch to stop the recording and save, or stop playing.
 - ⑤DRUM: Hold the fourth footswitch to enter the DRUM interface.
 - ⑥BACK: It can undo/redo last layer audio unlimited times.
 - ⑦DUB: Double, this function support unlimited overdub.
- Looper Display bar: Red is displayed when the first layer of audio is recording, green is displayed when it is playing, and yellow is displayed when it is overlaying(Double record).

The funtion of 3 fast adjusting Dials:

- 1.REC VOL: Change the recording volume of the looper.
- 2.PLAY VOL: Change the volume of the looper when playing back.
- 3.AUTO REC: Turn on/off the auto-recording, ONCE indicates that only one automatic recording is performed, and HOLD indicates that multiple automatic recordings are performed (Once this funtion is enabled, recording will automatically begin even when you playing guitar in other interfaces).
- 4.AUTO GATE: Automatic recording threshold. The higher the threshold, the less automatic recording is triggered.
- 5.POS, Change the position of the looper in the effects chain."HEAD" records dry sound, the recorded music can be changed with the Presets timbre; "TAIL" records effect sounds to record different timbre.
- 6.DRUM SYNC: After opening, the drum will start simultaneously with LOOP, and the drum and LOOP will be automatically aligned the timeline. The difference between the functions of ON1 and ON2 is that the DRUM in ON2 will pause with the LOOP, while the DRUM in ON1 will not pause with the LOOP.

The funtion of 3 fast adjusting Dials:


- 1.REC VOL: Change the recording volume of the looper.
- 2.PLAY VOL: Change the volume of the looper when playing back.
- 3.AUTO REC: Turn on/off the auto-recording, ONCE indicates that only one automatic recording is performed, and HOLD indicates that multiple automatic recordings are performed (Once this funtion is enabled, recording will automatically begin even when you playing guitar in other interfaces).
- 4.AUTO GATE: Automatic recording threshold. The higher the threshold, the less automatic recording is triggered.
- 5.POS, Change the position of the looper in the effects chain."HEAD" records dry sound, the recorded music can be changed with the Presets timbre; "TAIL" records effect sounds to record different timbre.
- 6.DRUM SYNC: After opening, the drum will start simultaneously with LOOP, and the drum and LOOP will be automatically aligned the timeline. The difference between the functions of ON1 and ON2 is that the DRUM in ON2 will pause with the LOOP, while the DRUM in ON1 will not pause with the LOOP.

If you need to use this function, please turn it on before recording the first layer of audio, and you can achieve perfect alignment of the drums and the audio. If you record the audio first and then turn on this function, it may lead to alignment failure.

DRUM

Click the "DRUM" button to turn on the drum, hold it to enter the DRUM menu. The DRUM button light will keep on when the drum machine is playing, and the light will turn off when the drum machine stops.

In the main screen, long press the two footswitches on the right to enter the DRUM screen.

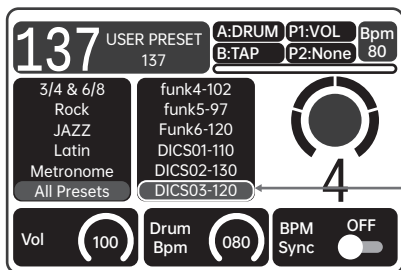

When the position of the white box is in rhythm list, PARA can be rotated to select any rhythm type under the current style.

- Upon entering the drum machine interface, rotating PARA allows you to switch between drum machine styles. Pressing PARA enables switching between the style list and the rhythm list. When the position of the white box is in the rhythm list, PARA can be rotated to select any rhythm type under the current style. It includes 128 drum presets in "All Presets".
- Click on one of the two footswitches on the left to adjust the Drum Bpm.
- Short step on the left two Footswitches to return to the main interface.
- Long press the rightmost CTRL B Footswitch to switch to the LOOPER interface.
- When on the Drum screen, click the third footswitch CTRL A to play/stop the drum; The fourth footswitch can be used to TAP the Drum speed.

The funtion of 3 fast adjusting Dials:


- Turn Quick Access dial 1 to change the volume of the drum, ranged from 0-100.
- Turn Quick Access dial 2 to change the tempo of the drum, ranged from 40-240 BPM.
- Turn Quick Access dial 3 to synchronize the drum tempo with the preset BPM.

* Tips:

When in the DRUM or LOOP interface, avoid using combinations of the third footswitch on the right with other footswitches. This is because the third footswitch function in the Loop and Drum interfaces takes immediate effect upon pressing, which may cause conflicts with the combination footswitch functions. Instead, you can use a long press on the far-right CTRL B footswitch to replace the functionality of the two far-right combined footswitches, then you can switch between the DRUM and LOOP interfaces with your foot.

The order of the 11 effects Modules can be customized.

LOOP position can set to Tail or Head.

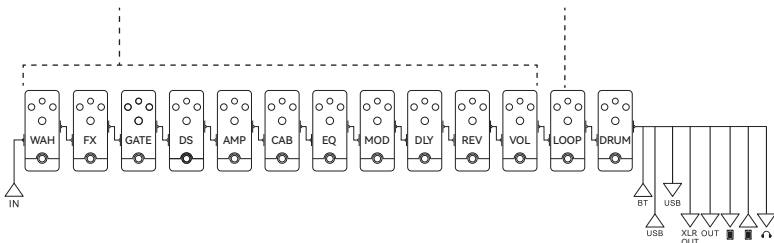

Global Settings

Global Settings, unlike previous ones, will affect the whole states of the MK-300 and not change when the preset has changed. All the settings will immediately function when editing is finished.

* Tips:

As soon as you exit the GLOB Interface, the system will perform a global parameter save operation. This function is the same as pressing the GLOB button twice. However, when exiting the GLOB Interface, the message "Global Save OK" will not be displayed.

Pedal 1 and Pedal 2: Pedal correction function, please follow the steps indicated for pedal correction. After the pedal is calibrated Successfully, the message "Correct Successfully" will be displayed, and the Pedal can be used normally. If the message "Correction Failure" is displayed, start from the beginning and correct the pedal again.

1.A/B Convert: This function is of Pedal 1 turned on by factory default, you must make sure that this function is turned on, and then do the three-step correction of Pedal correction, otherwise the pedal press switch A/B function cannot be used (Pedal 2 does not have this function).

After turning off this function, the pedal does not need the third calibration step, only the maximum and minimum values, there is no press value (if the user feels that the press function is inconvenient to use, you can turn off this function, the user can also use 4 custom Footswitches to switch A/B state).

After turning on this function, the pedal can use the press function to switch A/B states.

Tips: If the function turning on, please do not use similar forces when calibrating the second and third steps, otherwise the difference between the maximum value and the press value will be considered too small, resulting in pedal correction failure.

2.Sync: This is the Auto-Sync Actual Value feature of Pedal. Pedal 1 is equipped with this

function, while Pedal 2 does not have it. After the function is turned off, each time you switch the preset, the machine will not read the pedal value, unless you move the pedal will read the pedal value. This function is turned off by factory default, so as to ensure that the preset effect will not be affected by the pedal each time the preset is change.

When the function is turned on, each time the preset is switched, the machine will immediately read the pedal value. This usage is most appropriate when the customer uses the pedal as a controller for all preset VOL volumes or for a fixed parameter.

3.Pedal State: Please note that this parameter is not a global feature, it is a convenient toggle of the preset A/B states and is put here for ease of use only.

Other:

1.RCH: Right Channel function, This function has three gears, the first gear function represents the left and right channel output content is the same.

The second gear function represents the left and right sound channels are wet sound and dry sound.

The third gear function represents that the left and right channels have CAB effect and no CAB effect respectively.

2.USB Audio: This function has 4 gears, the first gear function is usb audio recording will record the accompaniment and instrument sound(The accompaniment includes BT and USB). This gear indicates that the Loopback function is on. To facilitate users' mobile phone recording, it is set to this gear by default at the factory.

The second gear indicates that the Loopback function is off.

The third gear is RE-AMP mode, you can send audio tracks from your computer to be processed and have effects added by the MK-300. For example, a non-processed guitar track could be played through the MK-300 and have amp models and cabs added.

(Please note: If the Re-Amp function IN the third gear is turned on, the instrument input in the INPUT jack will be blocked, and the sound will not be heard when you playing the guitar.)

The fourth gear is the Dry, which features the function of listening to wet and recording dry. It is mainly used in computer DAW software. When recording, the guitar dry sound in real time through the INPUT jack will be recorded, and the accompanying sound is not included, thus facilitating Re-Amp in the later stage.

* Tips:

Loopback function, a common function on sound cards.

When the function is "Nor" gear, the music in the computer/mobile phone will be recorded at the same time with the instrument sound, it's the same track mixed recording, including USB and BT music.

If the function is "No" gear, when using the MK-300 as a sound card for recording, only the sound of IN-interface and 13 modules can be recorded, which is more convenient for sub-track recording of instrument sounds during computer recording.

3.BT&USB VOL, here adjust the input volume of BT and USB.

4.Pedal 1 Toe Switch and Pedal 2 Toe Switch, this function has three gears, the first gear is the pedal switch state, does not affect the on/off state of any module.

The second Resume gear turns on an effect when the pedal switches to it, and leaves the effect in its original on/off state when it switches away. The factory status is Resume gear, so as to achieve the normal operation logic of the wah pedal, when you go to the ctrl interface to set the pedal function in advance, set the other B state to the WAH module, then you switch the pedal from A to B, you can open/close the WAH module.

The difference between the second Resume gear and the third gear is that, if now in Resume gear, when switching pedal from the A state to the B state, will leave the A state module in its original saved on/off state. This means that if you do not want your original VOL module to be turned off after switching to the WAH pedal, then you need the Resume gear. The third gear is to suddenly close the original VOL module when switching.

The third Disable gear is when the pedal switches to an effect, it turns the effect on, and when it switches away, it turns the effect off.

5.USB REC VOL (Recording Volume): Adjustable range from 0 to 100. A higher value results in greater recorded output volume. The factory default setting is 50, which corresponds to 0 dB.

BT: You can turn BT on or off here, which is the same function as long-pressing GLOB button.

Global EQ

This menu is to control the global equalizer of the MK-300 in order to change the overall tone feel.

* Note:

- Please stay cautious when adjusting your global EQ to protect your hearing and device.
- Global EQ won't affect the USB audio and BT audio output of the MK-300.
- When a preset is using too many modules, or some modules are consumed with too much system resources (such as reverb effect), the system may be overloaded after applying global EQ.
- On computer software, all parameters of the global EQ can be imported/exported for backup purposes. This makes it convenient to import different EQ parameters for use in different scenarios.

ABOUT: Firmware version of the current device.

MIDI: Regarding the MIDI information of this device.

Using the Re-Amp Function in Your DAW to Record or Adjust Tones:

1. Create a new multi-track session in your DAW, import the backing track into Track 1. It is recommended to adjust the BT&USB VOL parameter from 0 to 100 during playback, carefully listening to find a suitable backing track volume level. Crucially, once set, leave the BT&USB Vol at 100. Adjust the final backing track level using the DAW's fader for Track 1 to your preferred listening volume.

2. Navigate to Global > Other > USB Audio. Select the "Dry" position. This configures the USB virtual output channels (Left/Right) to send the unprocessed guitar signal (dry signal).

3. Import the guitar dry signal into Track 2 of your DAW, or you can record the guitar dry signal onto Track 2 while playing along with the backing track on Track 1. This Track 2 guitar dry signal will be the source audio for the subsequent Re-Amp process.

Note: Before recording the guitar, set the "USB Rec Vol" parameter to 50 to ensure the recorded dry signal level is optimal and unaltered.

4. Navigate to Global > Other > USB Audio., select the "Resample" position, mute Track 1 and play only the guitar dry signal from Track 2, arm Track 3 for recording. This captures the processed guitar signal (wet signal) you heard while originally recording the dry track.

Critical: During this Re-Amp process, ensure all preset parameters and Master parameter remain unchanged from the settings used when the dry track (Track 2) was recorded.

5. After the first Re-Amp is complete, navigate to Global > Other > USB Audio and select the "Nor" (Normal) position, play Tracks 1 and 3 (processed guitar) together to hear the final mix.

6. If you are unsatisfied with the processed guitar sound on Track 3, navigate to Global > Other > USB Audio and ensure "Nor" is selected. Then play only Track 1 while playing your guitar, at the same time you browse presets on the MK-300 or adjust Preset parameters to find a tone you prefer.

7. To perform a second Re-Amp: Select the "Resample" position, mute Track 1 and play only the original guitar dry signal from Track 2, arm Track 4 for recording, then you will obtain the wet sound of the guitar after the second Re-Amp. Finally, switch back to the "Nor" position, review the new mix (Tracks 1 & 4), then you will get the work that suits you best.

When you connect your MK-300 with the PC/Mac, you can use the free MK-300 software to manage multiple functions, including adjusting tones, import/export presets, factory data reset, firmware upgrade, loading 3rd party IRs and more.

● APP using tips:

Before operation, make sure that the BT of the cellphone and MK-300 are both turned on, then run the APP and click the "≡" button, click the "Current Device" and select the "MK-300", then scan nearby devices, you can connect to use.

*** Tips:**

Every time you complete a firmware upgrade for the machine, it will cause the pairing of your original mobile phone and the BT function of the machine to fail. Therefore, you need to manually go to the BT interface of your mobile phone, first ignore the device name of the machine, and then re-establish the connection, and it will succeed.



scan the QR code

● We will continue to improve our products and reserve the right to modify certain functions and specifications (including but not limited to appearance, packaging design, operation manual, accessories, dimensions, specifications, displays, etc.) without prior notice. Please confirm the product functions and specifications with the local distributor before the purchase. Product pictures and color due to the light error and screen admiration setting. It may be different from the physical product effect. Please refer to the physical object accordingly.

● The timbre and parameters of all the effects of the 11 modules of this machine are explained here. Please scan the QR code to download the information:



scan the QR code

Technical Specifications

- Dynamic Range: 117dB
- Working current: 350mA
- Sample rate: 44.1KHz/24bit
- Module: 11
- Total effects: 320+
- Preset Memory: 160 Preset slots, 80 Factory Presets
- Looper: Maximum 150s of record time
- Drum Machine: 128 drum presets
- MIDI: 5-pin MIDI connectors or BT MIDI or USB-C

Analog Input Connections

- Guitar Input: 1/4" Unbalanced (TS)

Analog Output Connections

- L/R Unbalanced Outputs: 1/4" TS jacks
- L/R Balanced Outputs: XLR jacks
- Earphone Output: 1/8" Stereo (TRS)
- Phone record Output: 1/8" Stereo (TRS), it can playback to Earphone jack

Digital Connections

- USB Port: USB 2.0 Type-C Port, USB audio, USB MIDI, support LOOPBACK ON/OFF, support RE-AMP

Size and weight

- Unit Dimensions: 330mm(L) x 175mm(W) x 55mm(H)
- Unit Weight: About 1550 g

Battery life (10h)

- Requirements: USB 5V 2A
- Battery capacity: 5000mAh
- Battery Model/Type: 105080
- Battery Nominal Voltage: 3.7V
- Charging current limit: 1A

Community interactive platform: Support

BT Music: Support

Software support: WINDOWS,MAC,IOS,Android

Third-party DS and AMP timbre loading: Support

IR processing (CAB module): 44.1K/24Bit Mono WAV files, 1024/2048 sampling points

Built-in pedal: X1

External pedal jack: X1

Attachment: USB cableX1, User manual X1, Recording cable X1

★ Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation.

请在使用本产品前仔细阅读本文

收到产品第一次开机后，请您先对 Pedal 1 进行矫正，不然 Pedal 1 无法正常使用。矫正方法请看全局设置的 Pedal 1 设置。


电源：如果产品需要充电，请使用5V 2A的电源适配器，否则将会导致设备损坏、着火或者其他问题。不使用时或雷雨天时请拔下电源。为了避免外接电源给产品带来噪音或者其他干扰，建议用户先拔掉电源，再使用产品，用内置电池供电会让产品减少外界干扰。

连接：连接设备或断开连接前，请务必关闭电源及其它设备，这将有助于避免故障和损害其它设备。另外，要确保移动本机前断开所有的连接线和电源线。

安全注意事项：

- 1.请仔细阅读本说明书。
- 2.请保存好本说明书。
- 3.注意所有警告事项。
- 4.遵循说明书指示。
- 5.请勿将设备靠近水源或湿度大的环境。
- 6.用干毛巾擦拭清洁。
- 7.请确保使用时远离收音机和电视机或者其他有磁场产生的设备，以免造成干扰。
- 8.请勿暴力使用开关及控制元件。
- 9.请勿让纸屑、金属制品及其他物体落入机内。
- 10.请勿摔落以及让本机受到冲击和过度按压。

- 搭载3.5英寸屏幕的四踩钉吉他/贝斯综合效果器;
- 包含11个效果模块, 共320+种效果类型;
- 共160个预设音色储存位置;
- 可自定义11个效果模块顺序的效果链;
- 多样的 I/O 设置, 满足了录音、舞台演出或者练习等场景的需求;
- 在主界面下, 4个踩钉的功能都可以自定义修改, 适用于不同的使用需求;
- 基于ANN音频神经网络建模技术的前级模型, 音色更接近真实吉他/贝斯放大器;
- 120个AMP箱头音色, 其中85个电吉他音箱模拟, 30个贝斯音箱模拟, 5个为民谣吉他设计。DS模块还提供了40个过载/失真/法兹等效果;
- 100个1024/2048pts采样长度的高品质CAB, 忠实的还原真实箱体喇叭或民谣吉他琴体的听感, 并可导入第三方IR采样文件。其中65个电吉他箱体模拟, 25个贝斯箱体模拟, 10个为民谣吉他设计;
- MIDI接口支持MIDI接收;
- 全局均衡可针对不同的扩声场景快速调整输出信号频响;
- 内置150秒LOOPER乐句循环模块, 关机自动保存, 并可设置为前置或后置;
- 内置鼓机功能, 包含128个鼓组节奏;
- 4个踩钉都可以设置为控制模块开/关或打点设速功能;
- Ctrl功能也可将4个踩钉设置为“一脚保存”、“预设±4”、“预设音量±5”、“Pedal 1 A/B”、“Pedal 2 A/B”、等等功能;
- 支持设置表情踏板为控制模块参数或乐器输出音量, 并支持外接表情踏板同时使用;
- 电池续航能力: 大概10+小时;
- 手机内录功能: 使用本机附带的录音连接线把1/8"手机内录接口与手机连接, 即可到手机第三方APP软件进行音画同步实时内录;
- USB接口: 用于给电池充电, 可连接上位机编辑参数、备份音色、导入第三方CAB/DS/AMP音色、固件更新、恢复出厂设置、使用USB MIDI、USB AUDIO、电脑声卡、电脑数据交换传输和OTG内录等等功能;
- 设计师为使用者提供一个超方便的踩钉模式, 此模式叫做“PRESET LIST”预设列表模式。在此模式下, 4个踩钉代表4个预设, 以代表4个预设为一个BANK组, 左边两个踩钉用于BANK-, 右边两个踩钉用于BANK+;
- 在HOME界面下, 每个预设的踩钉灯的颜色可自定义修改, 在 Save 界面使用屏幕下的 Dial3 旋钮即可调节颜色, 出厂状态下大部分预设都默认为蓝色;
- 本机给用户id提供3个便捷参数旋钮KNOB, 可根据不同的预设, 自定义选择旋钮的功能;
- 无线BT功能, 支持BT音乐、BLE MIDI 和用于APP数据传输;
- 44100HZ 24Bit高采样率数字信号处理器, 为您提供细致入微的声音;
- 从我司官方渠道免费下载配套的电脑软件或者手机APP软件, 为用户提供更多的操作方式和管理方式。
- Re-Amp功能, 数字音频信号再处理, 可将PC端的干信号轨道通过MK-300的效果模块进行重新录制, 变成另一轨湿声轨道。
- 官方软件自带社区互动平台, 可下载全球顶尖艺术家分享的音色。

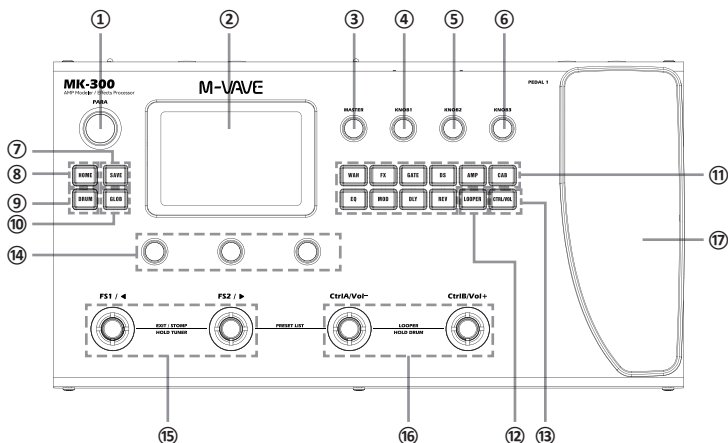

① **PARA**: 带按压功能的编码器，在不同界面可实现预设音色选择，项目的选择或确认、移动模块以及参数编辑等功能。

* 温馨提示:

当屏幕上有显示出翻页的小点点图标，代表在当前的项目下，可调节的参数不只有 3 个，可以用 PARA 按键，再次点击当前的项目，对参数进行翻页，然后才能用屏幕下的三个旋钮去调节更多的参数。

② **3.5" 彩色LCD屏幕**: 显示当前状态及信息。

③ **MASTER**: 输出音量调节旋钮（作用于IN接口和DRUM和LOOP，不作用于USB和BT，BT&USB VOL请到GLOB界面去调节）。**请注意**: 当您用手机 BT 或者电脑 USB 连接本机进行音乐播放时，需要提前把电脑或者手机的音量调小，或者把 BT&USB VOL 调小，避免音量过大。

④ **KNOB1自定义旋钮**: 可到CTRL界面自定义设置功能，此功能跟随预设。在出厂状态时，功能设定为AMP模块的LEVEL参数调节。

⑤ **KNOB2自定义旋钮**: 在出厂状态时，功能设定为AMP模块的GAIN参数调节。

⑥ **KNOB3自定义旋钮**: 在出厂状态时，功能设定为AMP模块的MIDDLE参数调节。

⑦ **SAVE带灯按键**: 短按一次可进入保存界面，在保存界面时再次短按一次即可完成保存并且退出，在保存界面时长按PARA按键可切换到SWAP交换功能。在任何其他的界面时，长按SAVE按键都可以一键保存音色而不需切换当前的界面。另外，SAVE按键灯会通过闪烁来提示当前的预设参数是否已经被改动，如果灯闪烁即代表参数已经被改动，在切换预设之前请及时保存，以免当前的数据被丢失。

* 请注意:


预设的数据和全局的数据是两套独立的参数，SAVE按键用于操作预设数据，而全局的数据是用GLOB 按键或别的方式来操作的。

⑧ **HOME带灯按键**：短按可到主界面，再次短按可到达 STOMP界面。长按可开启调音器，开启调音器后按键灯会常亮。

开机后显示的界面称为“主界面”，在这个界面内可以直观且快速的浏览到当前预设内重要信息的设定情况，还可以了解到电池情况和其他信息等等。

STOMP界面（下图所示）：

在 stomp 界面，可以观察 11 个模块的连接顺序和开关情况，也可以用 para 来移动模块的顺序。Stomp 界面下的四个踩钉的单踩的功能，我们设计为，左边两个是切换预设，右边两个用来选择和开关模块。

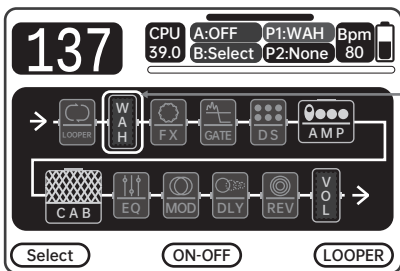

* 便捷操作提示：

对当前预设进行 save 操作后，这个白色框所在的位置会跟随预设进行保存。因此用户可用踩钉进入 stomp 模式然后踩第三个踩钉即可即兴开/关某个模块，而不需要到 CTRL 界面提前设置踩钉功能。

* 温馨提示：

我们还设计了第二种用踩钉来跳跃加载预设的方式，可在 STOMP/MODULE 界面实现，先长踩第一或第二个踩钉，然后屏幕上角的预设编号会持续闪亮，以代表所见非所听到的。然后再单踩第二个踩钉即可加载到目标的预设音色，如果单踩第一个踩钉即可取消操作。

⑨ **DRUM带灯按键**：单击可立即播放/停止鼓机，长按可进入鼓机界面。鼓机播放时候按键灯会持续常亮。

* 温馨提示：

当您退出鼓界面的一瞬间，本机将执行一次全局参数的保存，以此可以对鼓机的参数进行自动保存，这个功能，跟按两下 GLOB 按键的功能是一样的。只是在退出鼓界面的时候，不需显示“Global Save OK”。

⑩ **全局GLOBAL带灯按键/BT开关键（带BT状态灯）**：短按可进入全局操作界面，长按可开/关BT。灯常亮时表示BT已连接成功，灯闪亮时表示BT已开启但未被连接，灯熄灭时表示BT被关闭。在全局界面时，如果您再次短按此按键，本机将执行一次全局参数和数据的保存功能，包含预设位置的保存。

⑪ **10个效果模块带灯按键**：当前预设下，10个效果模块的开关状态。图标熄灭代表效果未开启，图标点亮代表效果已开启，如果这10个图标都是熄灭状态，则代表目前本机处于 Bypass 直通状态。在任何时候，长按按键可以快速开启/关闭模块效果，不需切换界面。单击此按钮可进入模块的

参数菜单 (MODULE界面)，再次单击可开启/关闭模块效果。当屏幕上显示出参数菜单后，您可以使用 PARA 编码器和屏幕下方三个旋钮来调整屏幕上任意一个效果和参数。

当屏幕上显示出参数菜单后，此时，4个踩钉的功能已经被设定好。第一和第二个踩钉用于切换预设，使用第三个踩钉脚踩开/关当前模块的效果，第四个踩钉在某些模块是无功能的。在某些需要 TAP 获取速度的模块的效果界面时，第四个踩钉还可以用于打点获取速度。

⑫ LOOPER带灯按键。


* 温馨提示：

当您退出LOOPER界面的一瞬间，本机将执行一次全局参数的保存，以此可以对LOOPER的参数进行自动保存，这个功能，跟按两下 GLOB 按键的功能是一样的。只是在退出LOOPER界面的时候，不需显示“Global Save OK”。


⑬ CTRL带灯按键/效果链的 VOL 音量模块开关键(第11个模块)：短按此按键可以进入 ctrl 界面 (如下图所示，短按第一次进入右边的界面，短按第二次进入左边的界面)。长按此按键可以打开 VOL 模块并且开/关 VOL 模块的功能。

CTRL界面里的功能是跟随预设独立存储的，提供Pedal 1、Pedal 2、Knob 1、Knob 2、Knob 3、FS 1踩钉、FS 2踩钉、Ctrl A 踩钉、Ctrl B踩钉等9个项目的功能设置。其中的某些功能，下面进行讲解：

在此界面时，可用PARA和下方3个旋钮来修改9个项目的功能

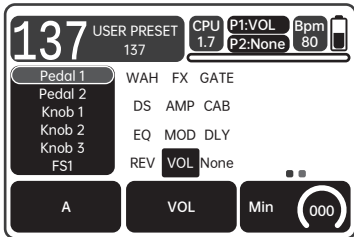

此界面可实时显示出当前状态下，目前的 9 个 Ctrl 项目的功能，此时PARA和下面3个旋钮无实际作用。

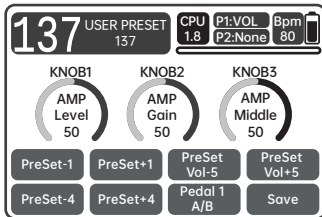

Pedal 1 和 Pedal 2 的功能：每个踏板都可存储 A/B 两个状态的参数，A 状态可设置为控制任意一个模块的其中一个参数，也可自由选择踏板极值。B 状态也可以做同样的设置。其他的细节请参考第17项Pedal 1的讲解和后面的Pedal 2接口的讲解。

Knob 1、Knob 2、Knob 3的功能：三个自定义参数的旋钮，还可以自由选择极值。

FS1、FS2、Ctrl A、Ctrl B的功能：这是4个踩钉在HOME界面时，单踩或者长踩单个踩钉的功能。以下表格介绍了所有的单个踩钉功能的含义。（为了兼顾便捷性和简介性，目前只可自定义单个踩钉的功能，因为组合踩钉的功能已经被固定设计好了）。

单踩Click：踩下动作和抬起动作在1.5s内完成，抬起的一瞬间即生效。

长踩Hold：踩住踩钉，超过1.5s后才抬起，在1.5s的这一瞬间生效。

单脚钉自定义功能包括：

脚钉功能	脚钉功能描述
Module ctrl	用于开启/关闭一个或多个效果模块
Drum PLAY	用于启动/停止鼓机播放
Looper	播放LOOP音乐或者启动录音
Looper stop	停止 Looper 音频播放
tap	控制 Preset BPM
tuner	开启调音器
Preset list	进入预设列表界面
save	用于保存当前 preset
preset-1 / preset+1	用于切换到上一个或者下一个预设
preset-4 / preset+4	切换到下面/上面第四个预设
Preset vol-5 / Preset vol+5	调节当前 preset 的音量
Drum Preset + /Drum Preset-	用于切换鼓机的节奏型
BPM-和 BPM+	调节当前的 Preset bpm
Pedal 1 A/B 和 Pedal 2 A/B	切换踏板A/B状态
None	无功能

⑭ 跟随屏幕功能的三个参数旋钮：从左到右分别是Dial1、Dial2、Dial3。

⑮ 向下/向上带灯自定义踩钉：这两个踩钉为 Fs1 和 Fs2，可以到 ctrl 界面对踩钉的功能进行自定义设置。在出厂默认状态下，这两个踩钉在主界面的功能为上下切换预设；如果长踩踩钉，可以用于跳跃到上面或者下面的第四个预设。在鼓机界面，这两个踩钉用来调节速度。在 Stomp 和 Module 界面，长踩这两个踩钉的其中一个，用于对预设进行预选和加载/取消。

* 温馨提示：

当您切换预设后，预设位置并不会自动保存，如果需要存储位置，在关机前，需要手动按两下 GLOB 按键，然后屏幕会弹出“Global Save OK”，即可在下次开机时得到您关机前的预设位置。

⑯ CONTROL A/CONTROL B带灯自定义踩钉：这两个踩钉可以到 ctrl 界面对踩钉的功能进行自定义设置。在出厂默认状态下，这两个踩钉在主界面的功能为增加预设音量或者减少预设音量；如果长踩踩钉，可以用于切换 Pedal 1 的 A/B 状态或者一脚保存当前预设。在 Stomp 和 Module 界面时，CTRL A可用于开/关模块。在STOMP界面时，CTRL B 可用于挑选模块；在 MOD/DLY/FX/WAH的某些效果菜单时，CTRL B可用于 Tap 打点获取速度。在DRUM界面时，这两个踩钉负责开/关鼓机和TAP功能；而在LOOPER界面时候，这两个踩钉在不同的LOOP状态会有不同的功能。

请知晓：在某些界面时CTRL B不起任何作用，CTRL B的踩钉灯会熄灭。

* 踩钉便捷操作提示：

如果您用 Pedal 1 调节音量到最大值后，依然觉得音量还不够。那你还可以短踩 Ctrl B 把 Preset Vol 调得更大，然后还可长踩 Ctrl B 进行保存。以保证，下次到达这个预设时，依然能得到同样的音量。整个过程，只需要用脚，不需要用手。

⑰ **表情踏板Pedal 1**：可设置为音量、哇音或其他效果参数的控制功能；踏板可设置A/B状态，踏板向前踩，往下稍用力按压0.3s，可切换A/B状态。使用两个状态，即可用一个踏板调节两个不同状态的参数。在CTRL界面可自定义Pedal1 A/B的参数，还可支持用踩钉来切换踏板的A/B状态（出厂时踩第三个踩钉即为Pedal 1 A/B）。

*** 温馨提示：**

收到产品第一次开机后，请您先对 Pedal 1 进行矫正，不然 Pedal 1 无法正常使用。矫正方法请看全局设置的Pedal 1 设置。在出厂预设状态下，大部分预设的Pedal 1参数，都是用于调节效果链里VOL模块的参数（出厂在A状态下）。为了防止按压功能被误操作，当您踩下 Pedal 的力度超过按压值后，需要保持 0.3s，才会切换 Pedal A/B 状态。

下面对HOME界面下的组合踩钉功能进行讲解：

为了兼顾便捷性和简介性，组合踩钉的功能是固定设计好的，不支持修改，在大部分的界面下，组合踩钉的功能都是一样的，也不会受到预设的影响。只有单个踩钉的功能可以到 CTRL 界面进行修改。

1.EXIT：退出键功能，在大部分情况下，短踩最左边的两个踩钉可以充当退出键的功能，可以退出到 Home 界面（除了 Preset List 模式）。


2.STOMP：单块界面功能，在 Home 界面时，短踩最左边的两个踩钉可进入 Stomp模式（单块模式）。

3.PRESET LIST：在 Home 界面时，短踩中间两个踩钉可进入预设列表界面，即是 BANK 模式（注意：请勿在 LOOPER 和 DRUM 界面使用这个组合踩钉功能，因为会引起踩钉功能冲突）。

在 Preset list 模式开启后，所有的踩钉功能都是已经固定设计好的，4个踩钉代表 4 个预设，4个预设为一个 Bank。短踩左边两个踩钉是 BANK-，短踩右边两个踩钉是 BANK+。短踩中间两个踩钉是 EXIT 退出到 Home 界面。

4.LOOPER：在 Home 界面时，短踩最右边两个踩钉，可进入 LOOPER 界面（注意：请勿在 DRUM 界面使用这个组合踩钉功能，因为会引起踩钉功能冲突）。

5.DRUM：在 Home 界面时，长踩最右边两个踩钉，可进入 DRUM 界面（注意：请勿在 LOOPER 界面使用这个组合踩钉功能，因为会引起踩钉功能冲突）。

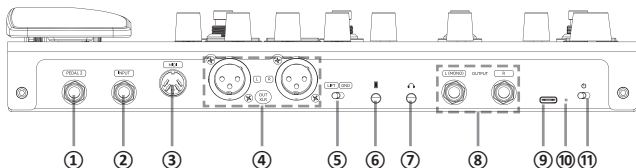

① **PEDAL 2**: 1/4" 立体声接口, 连接外置表情踏板(请使用1/4" 立体声音频线), 踏板可设置A/B状态, 使用两个状态, 即可用一个踏板调节两个不同状态的参数。在CTRL界面可自定义Pedal 2 A/B的参数, 还可支持用踩钉来切换踏板的A/B状态。

② **INPUT**: 1/4" 单声道输入接口, 连接至吉他或其他效果器的输出接口;

③ **MIDI**: 5针MIDI接口, 可接收MIDI。

④ **XLR OUT**: 立体声卡农输出接口, 输出平衡信号, 单声道输出时请连接L接口;

⑤ **GND/LIFT**拨档: 卡农输出接口的接地/抬起拨档。

⑥ **手机接口**: 用于手机内录或者回放至耳机接口进行监听。使用本机附带的录音连接线, 可连接到手机第三方APP软件进行音画同步实时内录。

⑦ **PHONES**: 1/8" 立体声耳机接口。

⑧ **OUTPUT**: 1/4" 立体声输出接口, 输出非平衡信号, 单声道输出时请连接L(MONO)接口。

⑨ **USB接口**: 用于给电池充电, 可连接上位机编辑参数、备份音色、导入CAB/DS/AMP音色、固件更新、恢复出厂设置、使用USB MIDI、USB AUDIO、电脑声卡、电脑数据交换传输和OTG内录等功能。

* 温馨提示:


使用本机附带的USB线和另购的OTG转换器, 可连接到手机第三方APP软件进行音画同步实时内录。

⑩ **充电指示灯**: 开机后, 本机在正常使用时指示灯为熄灭状态。充电时指示灯为红灯常亮, 充满电时灯转色。在电量即将耗尽时对本机进行充电, 大概需要4小时可以充满。

⑪ **电源开关**: 用于开启或关闭设备。

主界面

开机后显示的界面称为“主界面”,在这个界面内可以直观且快速的浏览到当前预设内重要信息的设定情况。

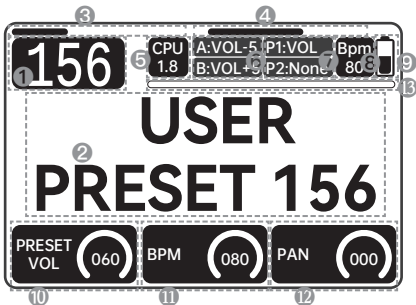

①. 预设编号, 一共 1-160个。其中 1-60 为电吉他音色, 61-80 为贝斯音色, 81-160 无效果。在主界面时, 旋转 PARA 可在预设状态下快速选择目标, 然后按压 PARA 即可加载目标预设。恢复出厂设置时可单独选择前 80 个预设数据恢复到出厂状态, 也可一次恢复全部 160 个预设状态。(注意: 进入电脑软件界面即可进行此操作。)

②. 预设名称

③. INPUT接口输入音量实时展示

④. 混合输出音量实时展示

⑤. CPU 工况: 温馨提示, 当负载率超过 90% 时, 可能会导致杂音或者其他问题。

⑥. 在当前页面下, 单踩Ctrl A或Ctrl B踩钉所获取的功能。温馨提示, 在主界面只能看到单踩的功能, 长踩的功能需自行进入到CTRL界面查看。

⑦. 此时Pedal 1和Pedal 2的功能, 还可显示出踏板的状态, 蓝色为A状态, 红色为B状态。

⑧. 预设速度, 可调节范围 40-240Bpm。

⑨. 电量显示

⑩. 这是快调旋钮的功能显示区, Dial 1 旋钮在当前页面的功能为预设音量。


⑪. 这是快调旋钮的功能显示区, Dial 2 旋钮在当前页面的功能为预设速度。

⑫. 这是快调旋钮的功能显示区, Dial 3 旋钮在当前页面的功能为预设声相, 当调节到-100 时, 只有左声道输出, 右声道无输出。

⑬. Looper 展示条: 如果 Looper 里面存在音频的情况下, 此展示条会显示在主界面。

使用调音表(TUNER)

在主界面长按第一和第二个脚钉, 将进入调音模式。长按HOME键, 也可以打开调音模式。

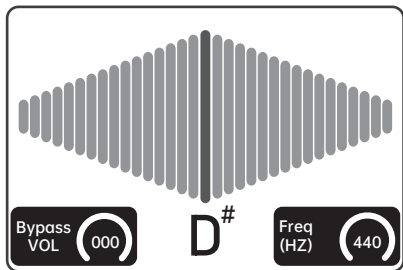

在调音器界面中，屏幕下方的字符代表识别到的音高的音名，左右两侧色块代表琴弦准度，越往左，当前音高越低，则需要拧紧琴弦；越往右，则琴弦音高越高，则需要放松琴弦；在琴弦的音高从偏离到校准的情况下，显示的色块也会逐渐向中间移动，调节到中间时表示琴弦已校准至字符显示的音代表的音高。

- 旋转1号快调旋钮Dial 1以选择调音器的工作音量0-100：旁通校音(Bypass)：此时效果链将会被旁通，您将听到吉他输入的干音。
- 旋转3号快调旋钮Dial 3以改变标准A的参考频率，范围是430Hz到450Hz，默认为440Hz。
- 踩下其他脚钉即可退出调音器。

* 温馨提示：

当您退出调音界面的一瞬间，本机将执行一次全局参数的保存，以此可以对调音器的参数进行自动保存，这个功能，跟按下两下 GLOB 按键的功能是一样的。只是在退出调音界面的时候，不需显示“Global Save OK”。


使用乐句循环功能(LOOPER)（内置150秒LOOPER乐句循环模块，关机自动保存，并可设置为前置或后置）

在其他界面时，短按 LOOPER 按键可进入 Looper 界面。

在其他界面时，长按LOOPER 按键可直接启动录音，再次长按是暂停录音且保存音频。如果Looper 里面存在音频的情况下，长按LOOPER 按键即播放音频，再次长按即暂停播放。

在LOOP界面时，LOOPER按键的功能则与第三个踩钉一致。

在主界面时，同时短踩右边两个踩钉，也可进入 Looper 界面。

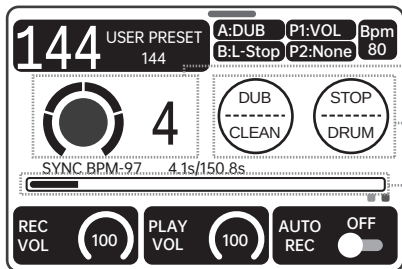

在鼓播放时，显示鼓播放进度

脚钉功能显示区

LOOPER进度显示条

在Looper界面时，同时短踩左边两个踩钉，可操作EXIT功能，即可返回主界面。

在此界面下旋转 PARA 无实际作用，按下PARA可让三个快调旋钮的显示区进行翻页，查看更多可选择的功能。

脚钉功能显示区：这里显示出右边两个踩钉的实时功能，上面的对应短踩，下面的对应长踩。

①REC：Record 启动录音，当 LOOPER 里面没有音乐时候，会显示 REC。

②PLAY：当音乐停止时，踩这个踩钉可播放音乐；在 Double 叠加录音时，踩这个踩钉可以停止录音并且播放音乐。

③CLEAN：当音乐停止时，或者正在录制第一层音频时，长踩这个踩钉可以 delete 删除音乐，清空 LOOPER 的音乐。

④STOP：单踩第四个踩钉可以停止录音并且保存，或者停止播放。

⑤DRUM：长踩第四个踩钉可以进入 DRUM 界面。

⑥BACK：Back就是返回的意思，可无限次数重做或撤销最后一次叠加录制的音轨 (Undo/Redo)。

⑦DUB：Double叠加录音，这个功能可实现无限叠加音轨录音。

LOOPER进度显示条，录制第一层音频时显示红色，在播放时候显示绿色，在DUB叠加录音时显示黄色。

Looper 界面下，踩钉的其他功能提示：

当 Looper 里面已经有音乐，而且音乐停止时，长踩第三个踩钉可以 delete 删除音乐，即为 Clean 功能，但是此功能会导致音乐被播放 1.5 秒后才删除。而且，如果此时 DRUM SYNC 是开启状态的话，它还会导致 Drum 被启动。所以，我们为您贴心地准备了一个直接删除 Looper 音乐的踩钉功能：如果在 Looper 界面时，长踩左边第二个踩钉，可实现这个功能。

另外，我们为了您在 LOOPER 界面能够更方便地操作 Drum，我们还长踩左边第一个踩钉的功能，设定为开启或者关闭鼓的播放。

如果您短踩左边两个踩钉的其中一个，即可用于切换预设音色。

所以，综上所述，在 LOOPER 界面时，四个踩钉的功能，都是已经被固定设计好的。

快调旋钮的功能如下：

1.REC VOL 录音音量：改变乐句循环器的录音音量。

2.PLAY VOL 播放音量：改变乐句循环器的回放音量。

3.AUTO REC 自动录音功能，开启自动录音模式，ONCE代表只自动录音一次，HOLD代表多次自动录音（当开启此功能后，就算在其他的界面弹琴也会自动开始录音）。

4.AUTO GATE自动录音阈值，阈值越高，越不容易触发自动录音。

5.POS 位置, 选择乐句循环器在效果链的首尾位置。“前置”录制干音, 所录制的乐段可随预设改变音色; “后置”录制效果音, 可记录不同的音色。


6.DRUM SYNC鼓机同步: 开启后, 鼓会跟随LOOP同步启动, 鼓和LOOP也会智能自动对齐。ON1和ON2的功能区别是, ON2的DRUM会随LOOP暂停, ON1的DRUM不会随LOOP暂停。

如果您需要使用这个功能, 请在录制第一层音频之前把此功能打开, 即可实现鼓和音频的完美对齐。如果您先录制音频, 再去打开这个功能, 那可能会导致对齐失败。

使用鼓机(DRUM)

在任何界面时, 长按DRUM按键可进入鼓机界面, 短按DRUM按键可直接播放鼓机, 在鼓机播放时候DRUM按键灯会持续常亮, 鼓机停止时灯熄灭。

在主界面长按最右边两个踩钉, 可以进入鼓机界面。

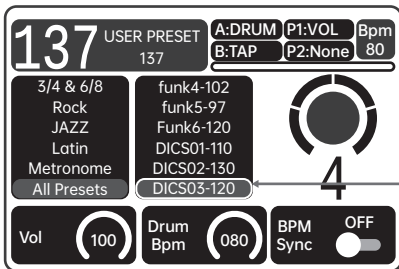

当白色框的位置处于中间的节奏列表时, 可旋转 PARA 选择当前风格下的任一节奏型。

刚进入鼓机界面时, 旋转PARA可切换鼓机风格, 按下PARA可以在风格列表与节奏型列表中切换, 当白色框的位置处于中间的节奏列表时, 可旋转 PARA选择当前风格下的任一节奏型。在All Presets风格列表中一共有128个节奏型(Drum Presets)。

在鼓界面时候, 踩左边两个踩钉的其中一个, 即可用于调节Drum Bpm。踩第三个踩钉 CTRL A 启动/停止鼓机; 第四个踩钉可用于 TAP 打点获取鼓机速度。

同时短踩左边两个踩钉可回到主界面。

长踩最右边的CTRL B踩钉可以一键切换到LOOPER界面。

快调旋钮的功能如下:


- 旋转1号快调旋钮dial 1以改变鼓机的输出音量, 范围是0-100;
- 旋转2号快调旋钮dial 2以改变鼓机的速度, 范围是40-240;
- 旋转3号快调旋钮dial 3以将鼓机速度与预设速度进行同步。

* 温馨提示:

在鼓机或者 Loop 界面时, 请勿使用右边第3个踩钉与其他踩钉的组合功能。因为 Loop 和 Drum 界面下的第三个踩钉功能, 是踩下即马上生效, 所以组合踩钉的操作会引起踩钉功能冲突。可以使用长踩最右边的CTRL B踩钉来代替最右边两个组合踩钉的功能, 即可用脚切换DRUM和LOOP界面。

11个效果模块的顺序可自定义移动

LOOP的位置可前置或后置

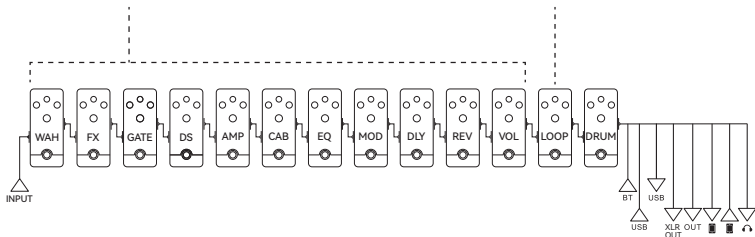

全局设置GLOBAL

本界面中您可以设置全局功能。和前面的设置不同，全局设置会影响整机的工作状态，不随预设的变化而变化。所有设置更改即生效。

* 温馨提示:

当您退出全局界面的一瞬间，本机将执行一次全局参数的保存，以此可以对参数进行自动保存，这个功能，跟按两下 GLOB 按键的功能是一样的。只是在退出全局界面的时候，不需显示“Global Save OK”。

Pedal 1 和 Pedal 2:

踏板矫正功能，请按提示的步骤进行踏板矫正。当踏板被矫正成功后，会提示“Correct Successfully”，踏板即可正常使用。如果提示“Correction Failure”，那请您再次从头开始，再次进行踏板矫正。

1.A/B Convert: Pedal 1 的此功能是出厂默认开启的，您必须要确保这个功能为开启状态后，再去进行踏板矫正的三步矫正，否则踏板按压切换 A/B 功能无法使用（Pedal 2 不具备此功能）。

此功能关闭后，踏板就不需要第三个校准步骤了，就只有最大值和最小值，不具备按压值（如果用户觉得按压功能用起来不方便，即可关闭此功能，用户也可以使用 4 个自定义踩钉去切换 A/B 状态）。

此功能开启后，踏板才可使用按压功能切换 A/B 状态。

* 温馨提示:

如果功能开启后，校准第二个步骤和第三个步骤时，请您不要使用相似的力度，不然本机会计为最大值和按压值区别太小，从而导致踏板矫正失败。

2.Sync: 这是 Pedal 的自动同步实际值功能, Pedal 1 具备此功能, Pedal 2 不具备此功能。功能关闭后, 每次切换预设, 机器不会读取踏板值, 除非您踩动踏板, 机器才会读取踏板值。出厂默认状态下此功能关闭, 这样才能保证每次切换预设时候不会被踏板影响预设的效果。

功能开启后, 每次切换预设, 机器会马上读取踏板值。这种用法比较适用的情况是: 客户使用踏板来当做全部预设的 VOL 音量或者某个固定的参数的控制器。

3.Pedal State: 请注意, 这个参数不属于全局功能, 它是预设中的 A/B 状态的便捷切换键, 放在这里只是为了方便操作。

OTHER:

1.RCH: Right Channel功能, 此功能有三个档位, 第一个档位功能代表左右声道输出的内容是一样的。

第二个档位功能代表左右声道分别是是湿声和干声。

第三个档位功能代表左右声道分别是有 CAB 和无 CAB效果。

2.USB Audio: 此功能有4个档位, 第一个档位功能是Loopback功能, 通过usb 录音时会把伴奏声和乐器声录进去(伴奏声包括USB音乐和BT音乐)。为了方便用户进行手机录音, 所以出厂默认状态下就在这个档位。

第二个档位即是关闭Loopback 功能。

第三个档位即为Re-Amp功能, 数字音频信号再处理, 可将PC端的干信号轨道通过MK-300的效果模块进行重新录制, 变成另一轨湿声轨道。

请注意: 如果第三个档位的Re-Amp功能开启后, INPUT接口的乐器输入会被屏蔽, 此时弹吉他是听不到声音的。

第四个档位即为Dry档位, 听湿录干功能, 主要用于电脑DAW软件, 录音时候会录制到INPUT接口实时输入的吉他干声, 伴奏声不会被录进去, 从而方便后期进行Re-Amp。

* 温馨提示:

Loopback 功能, 是常见的声卡回环功能。功能在Nor档位时, 电脑/手机内的音乐声会与乐器声同时录制, 同一轨道混合录制, 其中包括 USB 和 BT 的音乐声。如果在 NO 档位, 使用MK-300作为声卡进行录音时候, 只能录制到 INPUT 接口和13个模块的声音, 这样更便于电脑录音时候进行乐器声分轨录音。

3.BT&USB VOL, 这里调节 BT 和 USB的输入音量。

4.Pedal 1 Toe Switch 和Pedal 2 Toe Switch, 此功能有三个档位, 第一个档位是踏板切换状态时, 不会影响任何模块的开关状态。

第二个 Resume 档位是踏板切换到某个模块时会把效果打开, 而切走时候会让这个模块保持原来预设的开关状态。出厂状态即为 Resume 档位, 这样才能实现哇音踏板的常规操作逻辑, 当您到ctrl 界面提前设置好踏板的 B 状态为哇音模块的功能后, 然后当踏板从A状态切换到B状态时, 可开启/关闭哇音模块。

第二个Resume档位跟第三个档位的区别是, Resume档位下的踏板, 在从A状态切换到B状态时候, 会让A状态的模块保持它原本保存的开/关状态。意思就是说, 如果您切换到哇音踏板后, 您不希望您原来的VOL模块被关闭, 那您就需要Resume的功能。而第三个档位就是在切换时突然关闭原来的VOL模块。

第三个 Disable 档位是踏板切换到某个模块时会把效果打开，而切走时候会关闭这个效果。

5.USB REC VOL 录音音量，调节区间为0-100，数值越大，录音后得到的音量越大。出厂默认状态下为50，即为0 db。

BT： 这里可以开启或者关闭BT功能，跟长按 GLOB 按键是一样的功能。

全局EQ

本菜单用于设置MK-300的全局均衡功能，可以整体改变本机的效果音色。

* 注意：

- 请谨慎调节全局均衡参数以保护您的设备和听力。
- 全局均衡不会影响MK-300的USB音频和BT音频的输出。
- 当您的某一个预设使用的效果比较多或使用了一些比较耗费系统资源的效果（如混响），此时打开全局均衡可能会导致系统过载。
- 在电脑软件上，可以导入/导出全局EQ的所有参数，以便于备份，方便在不同的场景时导入不同的EQ参数进行使用。

ABOUT： 目前设备的固件版本。

MIDI： 关于本机的MIDI信息。

如何在DAW中使用本机re-amp功能录制或调节音色：

1.在 DAW 中新建多轨录音文件，然后在第一轨中导入伴奏文件，此时建议把BT&USB VOL参数从 0 调节到 100，慢慢试听一下伴奏声的音量大小。最后务必要把BT&USB参数固定在100，再到 DAW 的第一轨中调节伴奏的音量，选择合适自己的音量。

2.在 GLOB-Other-USB Audio，选择最后一个档位 Dry，即可实现 USB 虚拟输出通道的左右声道输出的吉他为干音。

3.在DAW的第二个音轨中导入吉他干轨，或者在播放第一轨的伴奏的同时录入吉他干轨。第二轨的吉他干声作为后面 Re-Amp 原始音频。

注意：在录制吉他之前，建议把 USB Rec Vol 参数调节为 50，才能在录制后得到最原本的吉他音量。

4.在GLOB-Other-USB Audio，选择 Resample 档位，再 mute 第一轨伴奏声，只播放第二轨的吉他干声，然后在第三轨开启录音，即可录制到刚才录制吉他干声时候听到的吉他湿声（注意，在这个 Re-Amp 过程中，要保持效果器的所有 Preset 参数和 Master 参数不被改动，都要跟刚才的是一样的）。

5.第一次 Re-Amp 完成后，在 GLOB-Other-USB Audio，选择 Nor 档位，然后播放第一轨和第三轨，即可听到最终的成品。

6.如果您对第三轨的吉他湿声不满意，那在GLOB-Other-USB Audio，选择 Nor 档位，那现在建议您单独播放第一轨，边听伴奏边弹琴，在 MK-300 上切换预设，或者调节 Preset 参数得到您更满意的音色。

7.选择 Resample 档位，再 mute 第一轨伴奏声，只播放第二轨的吉他干声，然后在第四轨开启录音，即可进行第二次 Re-Amp 和录音。最后，切换到 Nor 档位，试听完毕后，即可得到您最满意的作品。

当您MK-300连接至电脑时，您可以使用免费的MK-300软件来对您的MK-300进行管理如调节音色、导入导出预设文件、恢复出厂设置、固件升级、加载第三方IR文件等。

● 手机 APP 连接步骤：在操作前需确认手机和MK-300的BT功能都已经开启，然后打开M-EFCS，点击左上角“≡”按键，点击“当前设备”选择MK-300，再扫描附近设备，即可连接使用。

*** 温馨提示：**

每次对机器完成固件升级后，会导致您原来的手机和机器的BT功能配对失败。因此，需要您手动到手机BT界面，先对机器的设备名进行忽略，然后重新建立连接，即可成功。



扫描二维码下载

● 我们将不断改进我们的产品并保留修改某些功能和规格(包括但不限于外观、包装设计、操作手册、配件、尺寸、规格参数、显示屏等)的权利，恕不另行通知。购买前请与当地经销商确认产品功能及规格。产品图片及颜色因拍照光线误差及屏幕设定可能与实物产品效果有所差异。请以实物为准。

● 关于本机的 11 个模块的所有效果的音色和参数，在此进行讲解，请扫二维码下载资料：



扫描二维码下载

技术指标

- 动态范围: 117dB
- 工作电流: 350mA
- 采样率: 44.1KHz/24bit
- 效果模块: 11个
- 总效果数: 320+
- 预设数量: 160预设位置, 80个出厂预设
- 乐句循环器最大录制时间: 150秒
- 内置鼓机: 128出厂鼓组
- MIDI: 5-pin标准 MIDI 接口或 BT 或USB-C接口

模拟输入连接

- 吉他输入: 1/4" 非平衡输入 (TS)

模拟输出连接

- 左右非平衡输出: 1/4" TS接口
- 左右平衡输出: XLR接口
- 耳机输出: 1/8" 立体声输出 (TRS)
- 手机内录输出: 1/8" 立体声输出 (TRS) , 可回放至耳机接口进行监听

数字连接

- USB接口: USB2.0 Type-C接口, 支持USB audio, 支持USB MIDI, 支持LOOPBACK开/关, 支持RE-AMP功能

尺寸及重量

- 裸机尺寸: 330mm (长) × 175mm (宽) × 55mm (高)
- 裸机重量: 约1550 g

电池 (10小时续航)

- 供电要求: USB 5V 2A
- 电池容量: 5000mAh
- 电池型号规格: 105080
- 电池标称电压: 3.7V
- 充电电流限制: 1A

社区音色互动平台: 支持**BT伴奏: 支持****音色编辑软件支持: WINDOWS,MAC,IOS,Android****第三方DS和AMP音色加载: 支持****第三方IR文件格式要求(CAB模块): 44.1K/24Bit, 单声道 WAV 文件, 1024/2048采样点****自带表情踏板: 1个****外接踏板接口: 1个****自定义踩钉数量: 4个****自定义参数旋钮数量: 3个****出厂附带: USB连接线X1, 说明书X1, 录音连接线X1****修订: 2025-07-14**