


LOOP II

User Manual

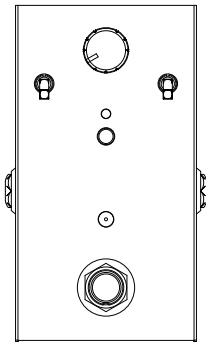

Thank you for purchasing our Looper Effect Pedal. It has the function of loop recording, 3-gears recording storage, 3-gears double speed and other functions and preparation recording function module as one of the audio workstation. Support the use of software to import/export WAV format files, for your performance and practice to bring a richer embodiment! Let me introduce to you this pedal, which is practical and easy to operate.

II.Attentions

■ The power supply:

Please use 9V(+/-10%) adapter (negative inside and positive outside), otherwise it may cause equipment damage. Please unplug the power when not in use or during thunderstorm weather.

■ The connection:

Be sure to turn off the power of related equipment before connecting or disconnecting the device.

■ The electrical interference:

The electromagnetic wave of radio, television and other equipment may cause interference to the equipment, so please try to stay away from radio , television and other equipment.

■ The location:

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- a.Heat sources b.Magnetic fields c.Sunlight
- d.High temperature or moist district
- e.Excessively dusty or dirty locations
- f.Strong vibrations or shocks

Looper

- Ready-record function.
- Ready-record function sensitivity switch.
- 3 loops can be stored, the total recording time is up to 11 minutes.
- The recording time of single loop is up to 5 minutes.
- 3 gear speed changer offers options.
- Each loop support unlimited overdub.
- Each loop can undo and redo last layer audio unlimited times.
- Support using USB cable to export/import WAV audio files from computer.
- One footswitch to control all LOOP functions: record, play, stop, overdub, undo, redo, delete, etc.

IV.Knob and interface introduction

① LOOP knob:

Adjust the playback volume of LOOP.

② Ready-record function:

Click this button to turn on/off the "Ready-Record" function, that is, automatically start loop recording after playing (hold this button to switch the sensitivity of Ready-Record, two sensitivities are available: slow flashing means low sensitivity, fast flashing means high sensitivity).

③ Ready-record indicator:

Blinking blue indicates that the Ready-record function is enabled.

④ Loop status indicator:

Red indicates recording, green steady on indicates playing, and green blinking indicates stop.

⑤ LOOP footswitch:

Controls recording, playback, stop, delete, overlay, undo/restore and other functions.

⑥ Recording storage function:

Three recorded recordings can be stored.

⑦ Variable speed function:

There are 3 speed options when the recording is complete.

⑧ Power interface:

please use 9V DC adapter (negative inside and positive outside).

⑨ Input interface:


1/4" MONO audio input interface.

⑩ Output interface:

1/4" MONO audio output interface.

⑪ TYPE-C jack:

Support power supply, suggest to use 5V 1A adapter (USB interface can also be used to connect the computer for file transfer, but after connecting the computer, the effect will be identified as a storage device, at this time only for computer transmission, other functions are temporarily invalid.).

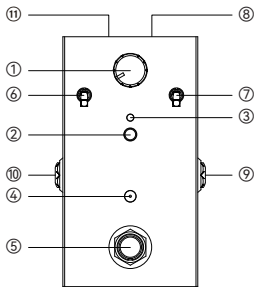

1. Step on nails

Operation (the LOOP footswitch)	Function/ state	LOOP indicator
Power on(no data)	Empty	None
Power on(with data)	Stop	Green light flashing
Click Ready-record key when playing	Prepare to record a new track	Blue light flashing
Click footswitch(no data)	Record	Red light up
Click footswitch when recording/overdubbing	Play	Green light up, flash once each cycle
Click footswitch when playing	Overlay tracks	Red light up, flash once each cycle
Hold footswitch when playing/recording/ overdubbing	Delete/undo/restore tracks (delete for single track; undo/restore last recorded data for overlay tracks)	The green light flashes quickly to remind you that the operation has been completed
Doubel click footswitch when playing/recording /overdubbing	Stop	Green light flashing
After double-clicking during recording/pause, and long pressing the footswitch	Delete	None
Switch recording gear in playback state	Ready to play the next audio	Yellow light flashing

2. Gear indicator operation

Left gear: The three-gear storage function can be stored after recording is completed. When switching gears, the recording of a new gear can be started after the recording of the previous gear is finished, or the recording of a new gear can be switched immediately after double-clicking to pause (After saving the recording of the third gear, the playback can be seamlessly connected when switching gears, and the recording data of the current gear can be deleted by long pressing the footswitch after switching gears)

Right gear: Three speed functions (Note: Pitch changes)
Such as recording in the middle gear – lower gear 2 times speed, middle gear original speed 1, upper gear 0.5 times speed;
if recording in the upper gear – upper gear original speed 1, middle gear 2 times speed, lower gear 4 times;
If you record in lower gear – that is, lower gear original speed 1, middle speed 0.5 times, upper speed 0.25 times.

Input	Standard 1/4" jack-MONO/TS
Output	Standard 1/4" jack-MONO/TS
Power supply 1	DC9V $\geq$ 300mA 
Power supply 2	USB 5V $\geq$ 300mA
Size	112(L)X68(W)X40(H)mm
Weight	About 217g

Disclaimer: Specifications are subject to change without notice.

VII. Software Support

1. You can go to company website, seek out the "**Cubesuite**", then download it to your computer.

2. Audio export function

- ①. The recorded audio track can be exported to the computer in WAV format via USB-C.
- ②. Can import WAV format audio within 5 minutes into the LOOP storage gear (the total duration can be stored for up to 11 minutes, a single file can be stored for up to 5 minutes) automatically stored in the corresponding gear according to the naming method, (example 1XX.WAV automatically stored in the upper file 2XX.WAV stored in the lower file)

★ Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement


The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

LOOP II

使用说明书

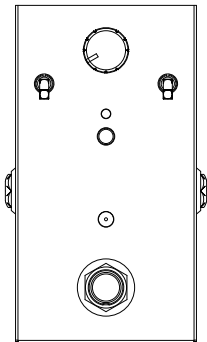

感谢您购买此款Loop II 乐句循环效果器。它具备了循环录音，3档录音存储功能，3档倍速等功能与预备录制功能模块为一体的音频工作站。支持使用软件导入/导出WAV格式文件，为您的表演和练习带来更丰富的体现!接下来为您介绍这款实用且操作便捷的效果器。

二.注意事项

■ 电源供应:

请使用正确的电源适配器，适配器使用内负外正的9V电源，否则可能会导致设备损坏。在不需要使用本设备或雷雨天气时请拔下电源。

■ 连接:

当连接或断开设备前，请先关闭其他相关设备。

■ 电器干扰:

收音机、电视机等电磁波可能会对设备使用造成干扰，因此请尽量远离收音机和电视机等设备。

■ 放置场所:


为防止变形、变色和其他方面等对产品造成损坏，请避免以下情况:

- a. 热源 b. 磁场 c. 阳光直射 d. 高温潮湿
- e. 多尘或不洁地方 f. 强烈震荡或摇晃

LOOP乐句循环录音

- 预备录音按键
- 预备录音灵敏度切换
- 3档LOOP音轨储存位置，录音总时长最大11分钟。
- 单个储存档位最大录音时长为5分钟
- 3档倍速提供选择
- 无限叠加音轨录音。
- 可无限次数撤销或恢复最后一次叠加录制的音轨。
- 支持电脑USB-C导出/导入WAV格式标准音频文件。
- 一个踩钉控制所有的录音功能: 录音、播放、停止、叠加、撤销/恢复、重做、删除等等。

- ① **LOOP音量旋钮**: 调整LOOP播放音量。
- ② **预备录制按钮**: 单击此按键开启/关闭“预备录音”功能, 即弹奏后自动启动LOOP录音 (长按此按键切换预备录音的灵敏度, 两种灵敏度可选: 闪烁速度慢则灵敏度低, 闪烁速度快则灵敏度高)。
- ③ **LOOP状态灯 1 功能介绍**: 蓝色闪烁表示已启动预备录制功能。
- ④ **LOOP状态灯 2 功能介绍**: 红色录制中, 绿色常亮播放中, 绿色闪烁暂停。
- ⑤ **LOOP踩钉**: 控制录音、播放、停止、删除、叠加、撤销/恢复等功能。
- ⑥ **录音存储功能**: 可以长期储存3段录制好的录音。
- ⑦ **倍速功能**: 录音完成后有3档倍速选择。
- ⑧ **电源接口**: 使用9V直流变压器 (外正内负)。
- ⑨ **输入接口**: 1/4" 单声道音频输入接口。
- ⑩ **输出接口**: 1/4" 单声道音频输出接口。
- ⑪ **USB-C 传输接口**: USB插孔支持电源, 建议使用5V1A适配器 (USB接口也可用于连接电脑进行文件传输, 但是连接电脑后, 本机会被识别成储存设备, 本机此时仅用于电脑传输, 其他功能暂时失效。)

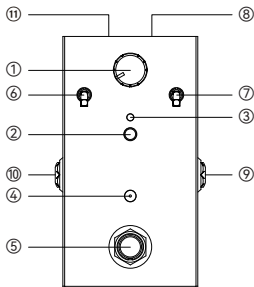

1. 踩钉操作

LOOP/踩钉操作/情景	功能/状态	指示灯状态
开机（无录音数据）	储存空	熄灭
开机（有录音数据）	暂停	绿灯闪烁
在播放时单击预备按键	预备录制新一轨	蓝灯闪烁
在无数据时单击踩钉	录音	亮红灯
在录制音轨完成时单击踩钉	播放	亮绿灯（每个循环闪一下）
在播放状态单击踩钉	叠加音轨（数准节拍后单击踩钉，可无缝连接上一轨录音）	亮红灯（每个循环闪一下）
在录制/播放时长按踩钉	删除/撤销/恢复音轨 （单个音轨时为删除，叠加音轨时为撤销/恢复最后一次录音数据）	绿灯快速闪烁即提示您，已完成操作
在录制/播放时双击踩钉	暂停	绿灯闪烁
在录制/暂停时双击后长按踩钉	删除当前档位所有录音数据	熄灭
在播放状态切换录音档位	预备播放下一档	黄灯闪烁

2. 档位器操作

左侧档位：三档储存功能，录制完成即可存储，档位切换时，须等待上一个档位录音播放完毕即可开始新一档的录音或双击暂停后可即刻切换档位(储存3档录音后，切换档位时可无缝连接的播放，切换档位后长按踩钉会删除当前档位录音数据)

右侧档位：三档倍速功能（注意：音高有变化）

如在中档时录制-即下档2倍速、中档原速1、上档0.5倍速；

如在上档时录制-即上档原速1、中档2倍速、下档4倍数；

如在下档时录制-即下档原速1、中档0.5倍速、上档0.25倍速。

六. 技术参数

CN

输入	标准1/4" 单声道接口/TS
输出	标准1/4" 单声道接口/TS
电源供给1	DC9V $\geq$ 300mA $\ominus \rightarrow \oplus$
电源供给2	USB 5V $\geq$ 300mA
尺寸	112(L)X68(W)X40(H)mm
重量	约217g
修订	2024-12-3

免责声明：参数更新恕不另行通知。

1.电脑软件可进入公司官网“www.m-vave.com”首页，点击Download，寻找Software栏目中的“**CubeSuite**”软件安装包进行下载即可。

2. 音频导出功能

- ①.录制好的音频轨可通过USB-C导出WAV格式文件至电脑。
 - ②.可以导入最大5分钟内的WAV格式音频进LOOP存储档位（总时长最多可存储11分钟，单档最多存储5分钟内）。
- 按命名方式自动存储在对应档位，（例1XX.WAV自动存入上档
2XX.WAV存入中档）。