


User Manual

ABY CHANNEL SWITCH PEDAL

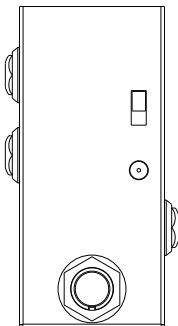

■ The power supply:

Please use 9V(+/-10%) adapter (negative inside and positive outside), otherwise it may cause equipment damage. Please unplug the power when not in use or during thunderstorm weather.

■ The connection:

Be sure to turn off the power of related equipment before connecting or disconnecting the device.

■ The electrical interference:

The electromagnetic wave of radio, television and other equipment may cause interference to the use of equipment, so please try to stay away from radio , television and other equipment.


■ The location:

To avoid deformation, discoloration, or other serious damage, do not expose this unit to the following conditions:

- a. Heat sources
- b. Magnetic fields
- c. Sunlight
- d. High temperature or moist district
- e. Excessively dusty or dirty locations
- f . Strong vibrations or shocks

- 1.The ABY is applicable for the instrument, amplifier, speaker(be sure to use speaker cable) and pedalboard.
- 2.The design of mode-choosing switch, which enable A,B channels transfer from respectively to simultaneously.
- 3.In both the two modes, ABY can be used in both positive and negative directions, the signal path can flow from A/B to C, or from C to A/B.
- 4.ABY can work without power supply (LED will not light up).
- 5.Full metal shell.
- 6.Very small and compact design.
- 7.True bypass switch.

III. Function Area Introduction

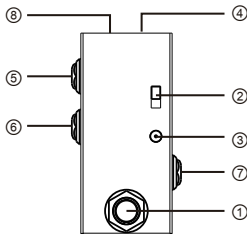

1. Footswitch

Push down the footswitch to toggle between channel A and channel B (in A&B mode, footswitch is invalid).

2. Mode select switch

Select A/B mode or A&B mode.

3.LED

In A/B mode, indicates in A channel or B channel, the red lights mean in A channel, the green lights mean in B channel; In A&B mode, LED lights turn into yellow.

4.DC IN Power Jack

For power supply, use a 9-volt DC regulated AC adapter (plug polarity is positive on the barrel and negative in the center).

5.A Jack

1/4" mono audio jack, connect instruments or speakers and other devices.

6.B Jack

1/4" mono audio jack, connect instruments or speakers and other devices.

7.C Jack

1/4" mono audio jack, connect instruments or speakers and other devices.


8.USB jack

Support power supply, suggest to use 5V 1A adapter.


IV. Use case and connections

EN


1.In A/B mode, follow the below connection, you can push down the footswitch to select an amplifier.

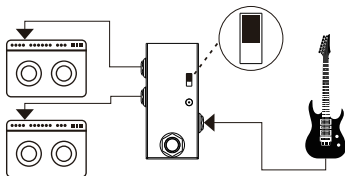

2.In A/B mode, follow the below connection, you can push down the footswitch to select a guitar.

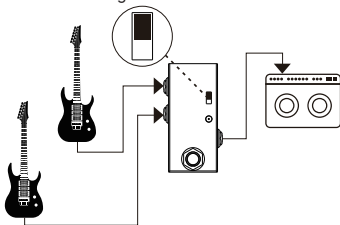

3.In A&B mode, follow the below connection, one guitar can use two amplifiers at the same time.

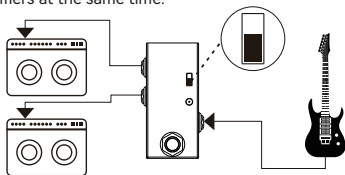

V. Technical parameter

EN

A/B/C Jack	Standard 1/4"jack-MONO/TS
Power supply 1	DC9V $\geq$ 300mA $\ominus \rightarrow \oplus$
Power supply 2	USB5V $\geq$ 300mA
Size	42(H)*48.5(W)*90(L)mm
Weight	149g

Disclaimer:Specifications are subject to change without notice.

★ Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement


The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

使用说明书

ABY线路选择器

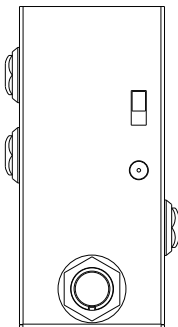

■ 电源供应:

请使用正确的电源适配器，适配器使用内负外正的9V电源，否则可能会导致设备损坏。在不需要使用本设备或雷雨天气时请拔下电源。

■ 连接:

当连接或断开设备前，请先关闭其他相关设备。

■ 电器干扰:

收音机、电视机等电磁波可能会对设备使用造成干扰，因此请尽量远离收音机和电视机等设备。


■ 放置场所:

为防止变形、变色和其他方面等对产品造成损坏，请避免以下情况：

- a. 热源
- b. 磁场
- c. 阳光直射
- d. 高温潮湿
- e. 多尘或不洁地方
- f. 强烈震荡或摇晃

- 1.功能全面的线路选择单块，适用于乐器、音箱、箱体（需用喇叭线）、效果器组合踏板的线路选择。
- 2.模式选择开关设计，可使A/B分别传输，变为A&B同时传输。
- 3.在两种模式下，产品支持正反双向使用，信号可从A、B接口传输到C接口，也可从C传输到A、B接口。
- 4.无需供电时也可使用（LED灯不会点亮）。
- 5.全金属外壳。
- 6.外观小巧精致。
- 7.机械直通脚踏开关。

三、功能区部件介绍

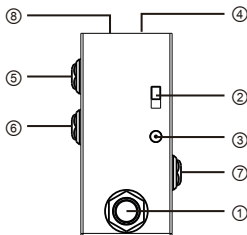

1.踩钉。

踩下踩钉以选择A通道或B通道，（A&B）模式下踩钉无效。

2.模式选择开关。

选择A/B模式或A&B模式。

3.LED指示灯。

在A/B模式时，显示当前使用A通道或B通道，红灯时为A通道，绿灯时为B通道；在A&B模式时，LED 灯变为黄色。

4.电源接口。

电源供给，使用9V直流变压器（内负外正）。

5.A接口。

1/4"单声道音频接口，连接乐器或音箱等设备。

6.B接口。

1/4"单声道音频接口，连接乐器或音箱等设备。

7.C接口。

1/4"单声道音频接口，连接乐器或音箱等设备。


8.USB接口。

支持5V供电。


四、使用场景及连接

CN


1.在A/B模式下，通过以下接法，踩下踩钉可选择一个您想要的音箱。

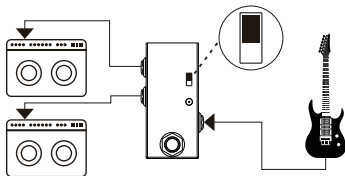

2.在A/B模式下，通过以下接法，踩下踩钉可选择一个您想要的乐器。

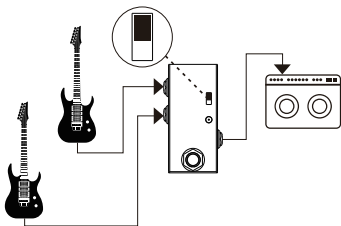

3.在A&B模式下，通过以下接法，单个乐器可使两个音箱同时发声。

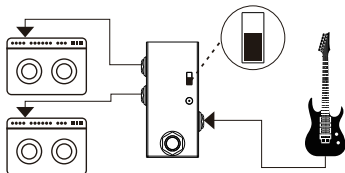

五、技术参数

CN

A/B/C 接口	1/4"单声道音频接口
电源供给1	DC9V $\geq$ 300mA $\ominus \rightarrow \oplus$
电源供给2	USB5V $\geq$ 300mA
尺寸	42(H)*48.5(W)*90(L)mm
重量	149g
修订	2023-06-29

免责声明：参数更新恕不另行通知。