



Sensor 04 out

GND

를 GND

U4 BM06B-SRSS-TB(LF)(SN)

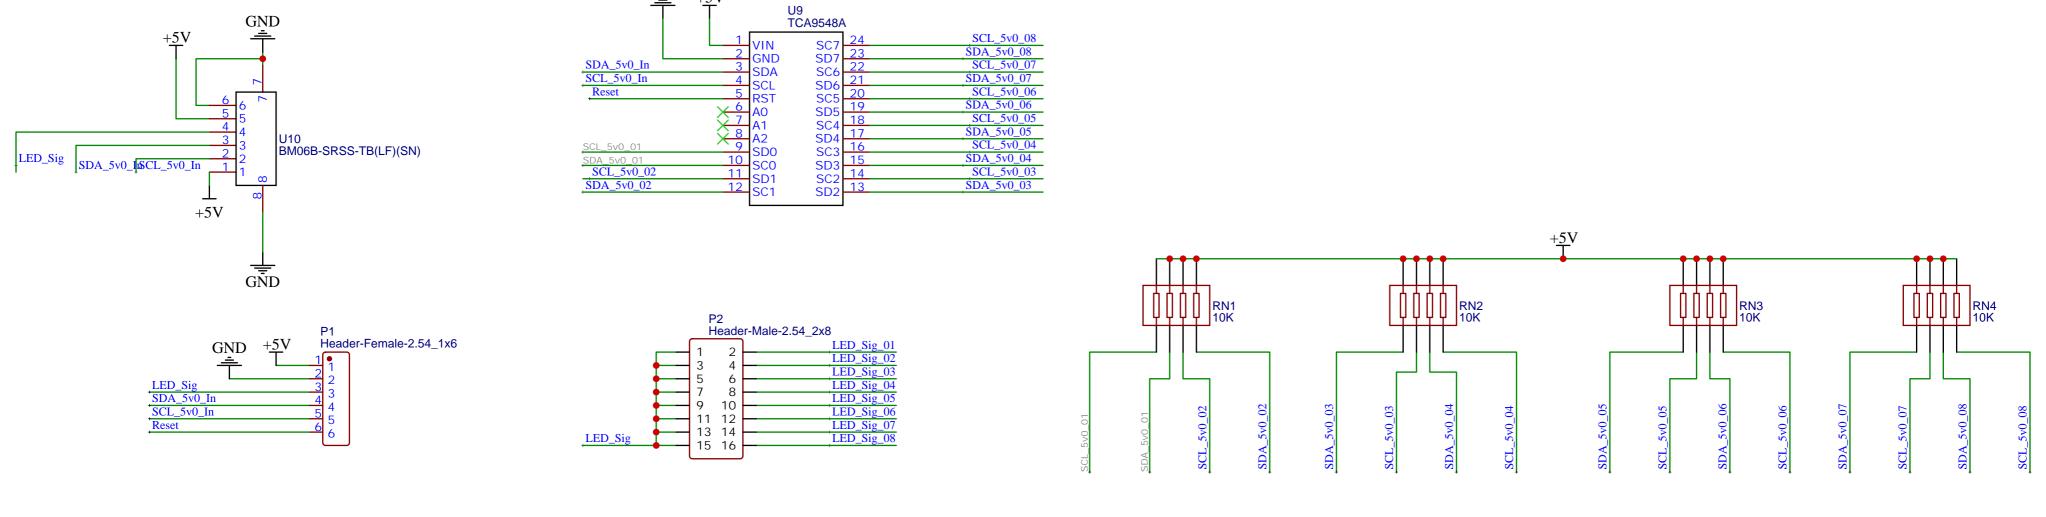

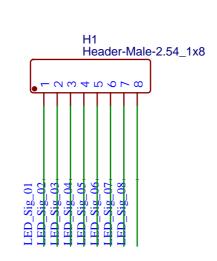

GND

Sensor input